


a Kinfine brand

Open Back 24" Barstool

Style Number: K1401.24

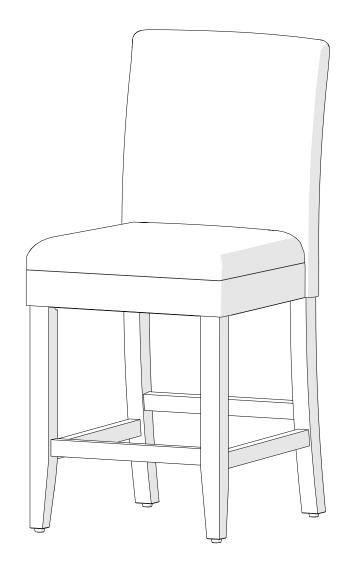

Congratulations on your latest HomePop purchase.

Now what? Don't start sweating over this box of parts. This will be easy. We did the hard work for you. All you need to do is follow our simple instructions and you'll be on your way to transforming your room in no time. Good luck --though we're confident you won't need it.

before you begin

- 1. Check for damaged or missing parts. Customers can email service@kinfine.com or call 1-888-626-0888 to order missing supplies.
- 2. Use the carton as a working surface to prevent product damage during assembly.
- 3. Gather all tools prior to assembly.

table of contents

•••••

introduction 2
hardware 4
parts list 5
assembly 6 - 12


hardware

(C) x 4 (A) x 4 **(B)** x 2 5/16" x 90mm 5/16" x 70mm 5/16" x 60mm round hex screw round hex screw round hex screw **(D)** x 2 **(E)** x 2 **(F)** x 10 (G) x 10 (H) x 4 1/4" x 45mm 1/4" x 20mm Φ8mm lock washer Φ 22mm flat washer Φ 6mm lock washer round hex screw round hex screw (I) x 4 (J) x 2 **(K)** x 1 (L) x 1 $(M) \times 1$ dowel 10x40mm 5mm Ball end 4mm Ball end Φ 15mm flat washer plug Hex wrench Hex wrench


ITEM DESCRIPTION QUANTITY

••••••••••••


| 1 | chair back | 1 |
|------------|--------------|---|
| 2 | seat cushion | 1 |
| 3 | front leg | 1 |
| (4) | bar | 2 |

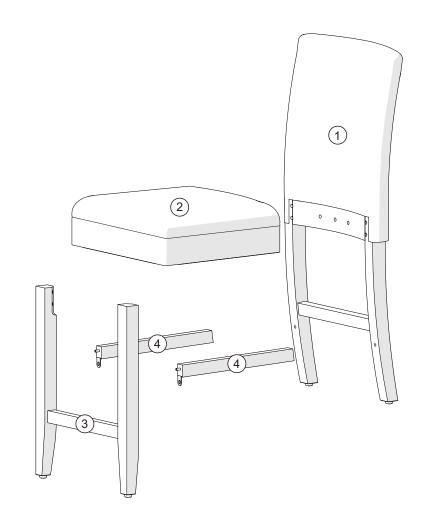


step 1.

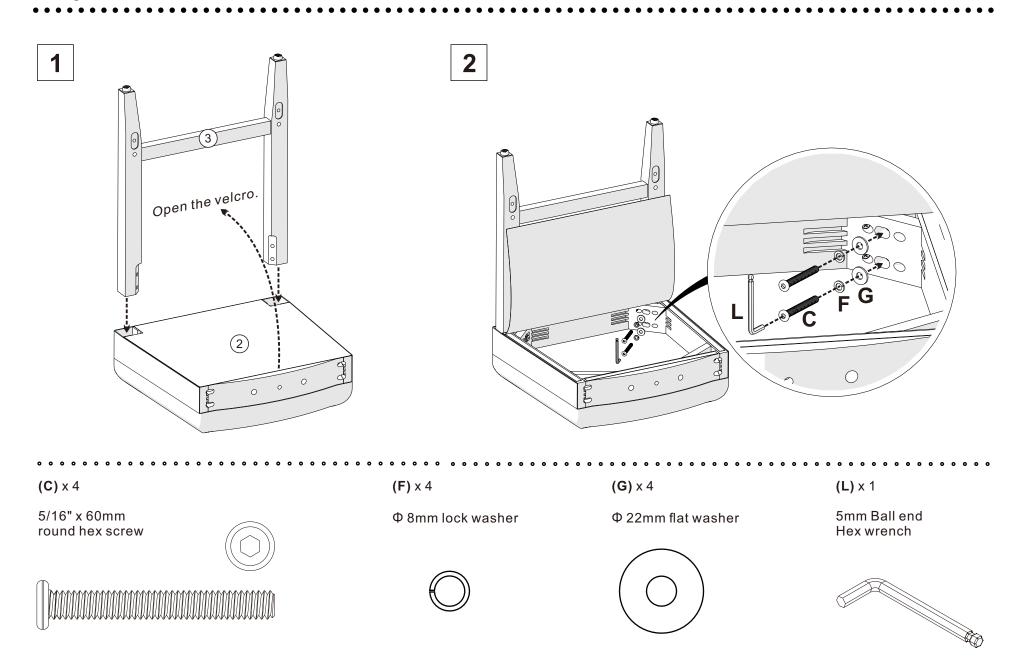

step 2.

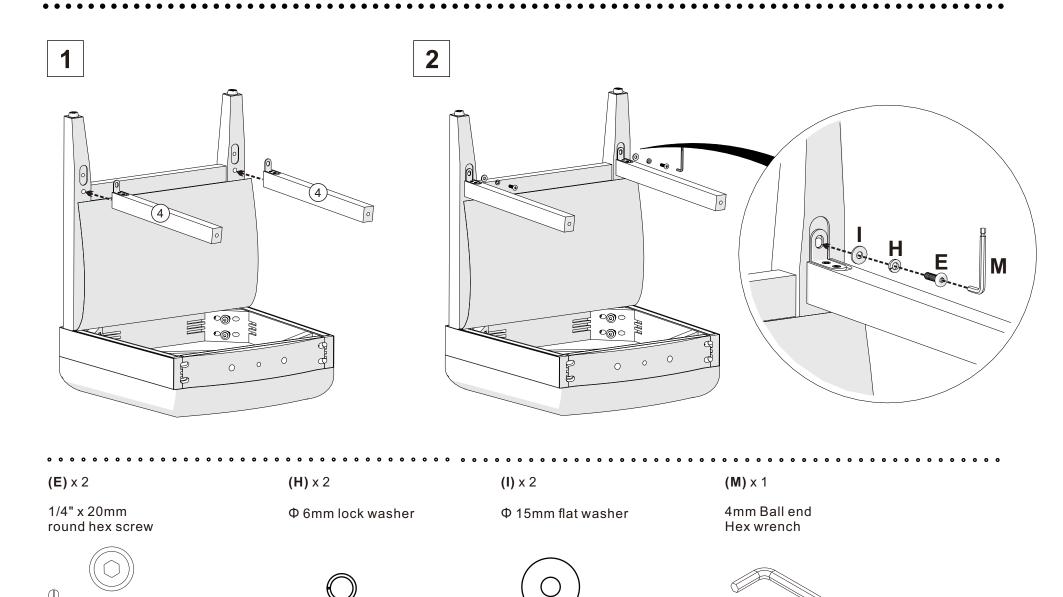


step 3.

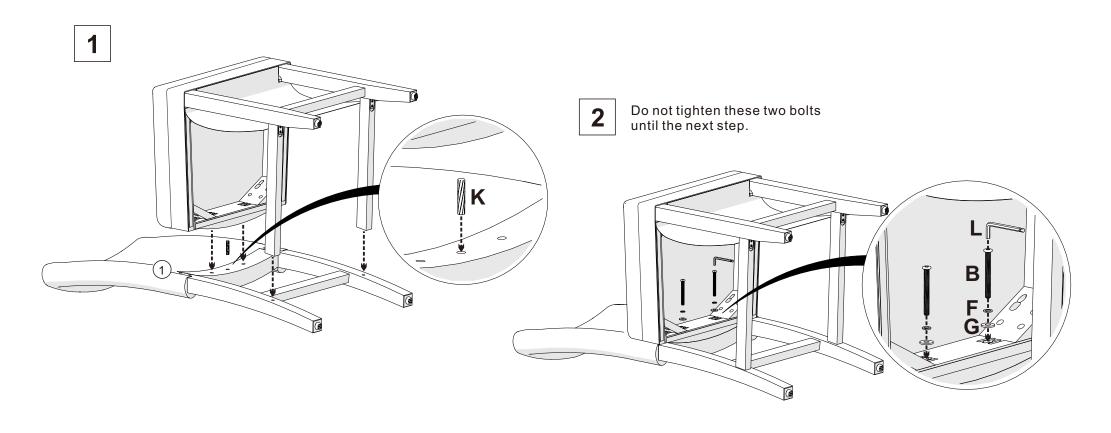

(B) x 2

 5/16" x 70mm round hex screw



(F) x 2

Φ 8mm lock washer

(G) x 2

Φ 22mm flat washer

(K) x 1

dowel 10x40mm

(L) x 1

5mm Ball end Hex wrench






step 4.


1

Now you may tighten all 6 bolts.

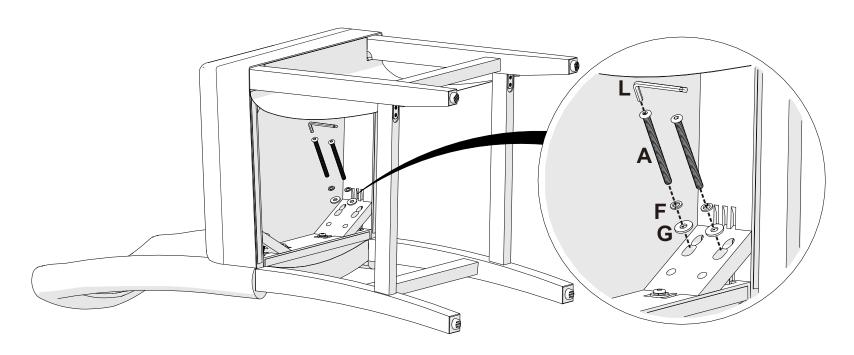

(A) x 4

 5/16" x 90mm round hex screw




(F) x 4

Φ 8mm lock washer




(G) x 4

 Φ 22mm flat washer





(L) x 1

 5mm Ball end Hex wrench



step 5.

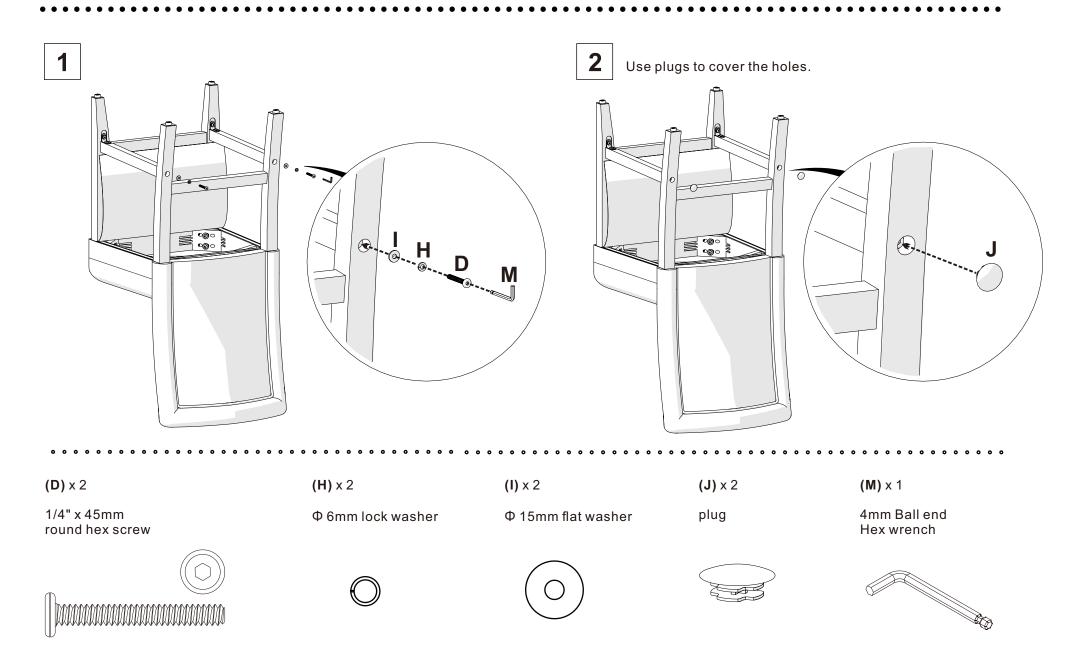

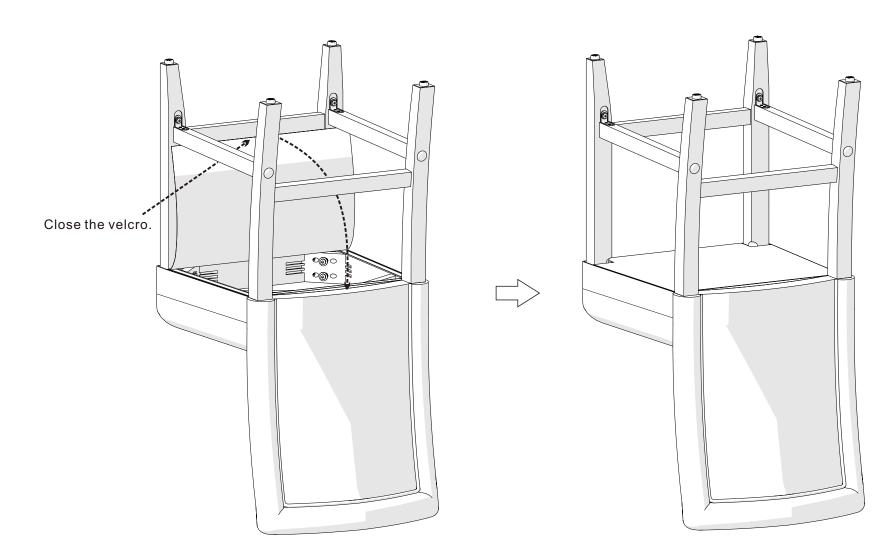


step 7.

A friendly reminder from us:

Please keep the Allen wrench.



After a period of time, there may be a chance the KD furniture may become loose, please use an Allen wrench to tighten the loose bolts.

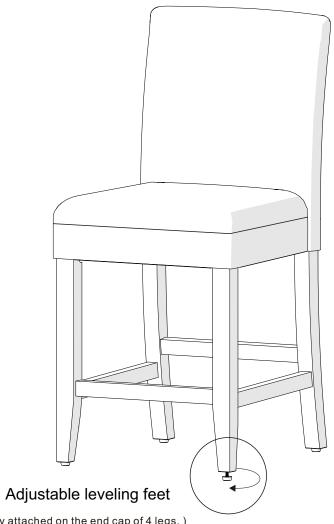

(This part is already attached on the end cap of 4 legs.)

Level the furniture, use leveling feet if needed.