


# SRA07 SIERRA FOYER TABLE OPERATING INSTRUCTIONS

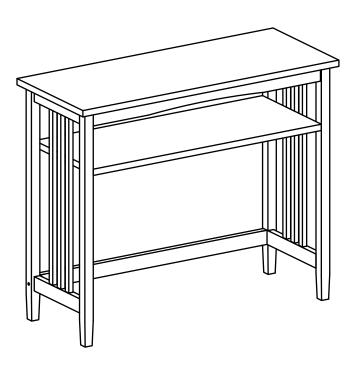

# WARNING

- 1. Do not use this product unless all screws and bolts are securely tightened.
- Check that all screws and bolts are tight every three months or as needed.
- 3. Dispose of packing material properly. Do not use plastic cover as head covering. It may cause suffocation.
- 4. Do not use this product as a stepladder.
- 5. Use this product for its intended purpose only.
- 6. Secure Wood Plugs (9) as they may be a choking hazard for small children.
- 7. Intended for residential use only.

## LIMITED WARRANTY

OSP Designs Warrants, to the original purchaser its products to be free from defects in material and workmanship for a period of 90 days. Defects and damage from misuse, abuse, negligence, alteration, accident, vandalism, rusting, acts of nature or any other event beyond the control of OSP Designs is not covered. The warranty does not cover cosmetic damage that may result from normal use. Liability for incidental or consequential damages is excluded. The user assumes all risk of injury resulting from use of this product. This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

To make a warranty claim, contact Customer Service, provide model number, sales receipt and description of the problem. It is the customer's responsibility to prepay freight on any components returned to the factory. OSP Designs will pay return freight on components covered under terms of warranty.

Our quality standards are among the highest in the industry. Sometimes, no matter how hard we try, there are times when hardware is missing. Our Parts Department will do everything possible to promptly remedy the problem. Contact us via email **parts@officestar.net**, by Fax 1-909-930-5629, or toll free parts number 1-800-950-7262, Monday through Friday 8:00 a.m. - 5:00 p.m. Pacific Time. OSP Designs P.O. Box 3520 Ontario, California 91761 USA.






# SRA07 SIERRA FOYER TABLE


# **ASSEMBLY INSTRUCTIONS**


### **IMPORTANT NOTE:**

- 1. Use hand tools only for assembly as power tools may cause damage.
- 2. Carefully remove any staples used for packaging.
- 3. Phillips Screwdriver also needed for assembly (not provided).

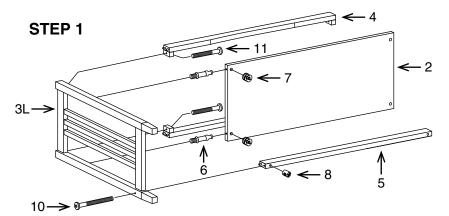

PART QTY
<b>1.</b> Top Panel
<b>2.</b> Shelf
<b>3.</b> Side Frame (L & R)
<b>4.</b> Top Crossbar
5. Rear Crossbar
<b>6.</b> Cam Bolt 8
<b>7.</b> Cam Lock 8
<b>8.</b> Barrel Nut
<b>9.</b> Wood Plug
<b>10.</b> Long Bolt
<b>11.</b> Short Bolt
12. Allen Wrench (not shown) 1

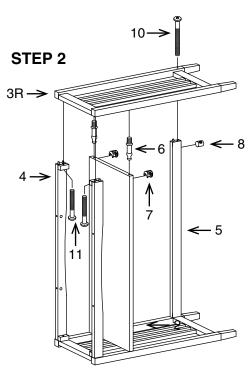

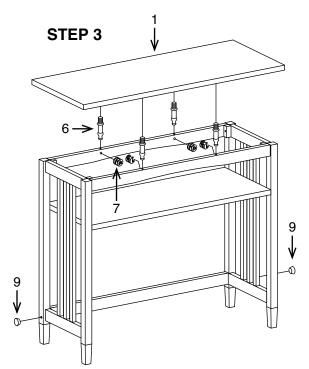

Remove all parts from carton, separate by part numbers indicated on parts list, and verify part quantities.

STEP 1 Attach both Top Crossbars (4) to Side Frame (3L) using two Short Bolts (11), **DO NOT FULLY TIGHTEN BOLTS (11)**. Screw two Cam Bolts (6) into Side Frame (3L). Slide Shelf (2) onto exposed Cam Bolts (6). Insert two Cam Locks (7) into Shelf (2), **FULLY TIGHTEN CAM LOCKS (7)**. Insert one Barrel Nut (8) into Rear Crossbar (5). Attach Rear Crossbar (5) to Side Frame (3L) using one Long Bolt (10), **DO NOT FULLY TIGHTEN BOLT (10)**.

STEP 2 Screw two Cam Bolts (6) into Side Frame (3R). Slide exposed Cam Bolts on Side Frame (3R) into holes in Shelf, making sure dowels on Top and Rear Crossbars (4 & 5) go into holes. Insert two Cam Locks (7) into Shelf, FULLY TIGHTEN CAM LOCKS (7). Secure Side Frame (3R) to Top Crossbars (4) using two Short Bolts (11). Insert one Barrel Nut (8) into Rear Crossbar (5). Secure Rear Crossbar (5) to Side Frame (3R) using one Long Bolt (10), DO NOT FULLY TIGHTEN BOLT (10).

STEP 3 Carefully turn assembly to the upright position, APPLY FIRM PRESSURE TO ALIGN & FULLY TIGHTEN ALL BOLTS. Screw four Cam Bolts (6) into Top Panel (1). Slide exposed Cam Bolts (6) into holes in Top Crossbars. Insert four Cam Locks (7) into Top Crossbars, FULLY TIGHTEN CAM LOCKS (7). Insert two Wood Plugs (9) into Frames.

ATTENTION: MAKE SURE ALL BOLTS (10 & 11) & CAM LOCKS (7) ARE FULLY TIGHTENED BEFORE USING THIS PRODUCT.