


# Assembly Instructions


**Caution : You must read this before you proceed**

## DINING CHAIR

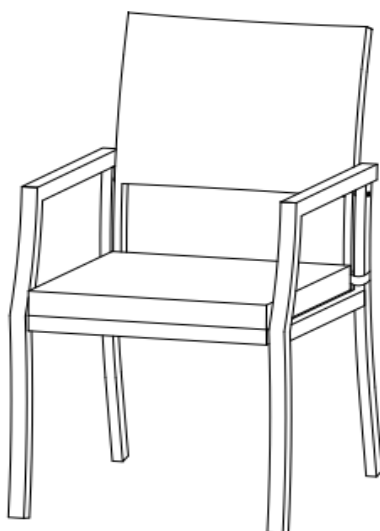


 


### Parts List

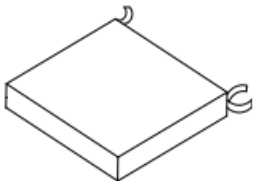
Label	Picture	Description	QTY
A		Left Armrest/Leg	1
B		Right Armrest/Leg	1
C		Seat	1
D		Backrest	1

E		Seat Cushion	1
---	---	--------------	---

## Hardware

Label	Picture	Description	QTY
①		Bolt(M6*35MM)	11
②		Washer	11
③		Nut Cap	4
④		Allen Key	1

## Assembly Preparation

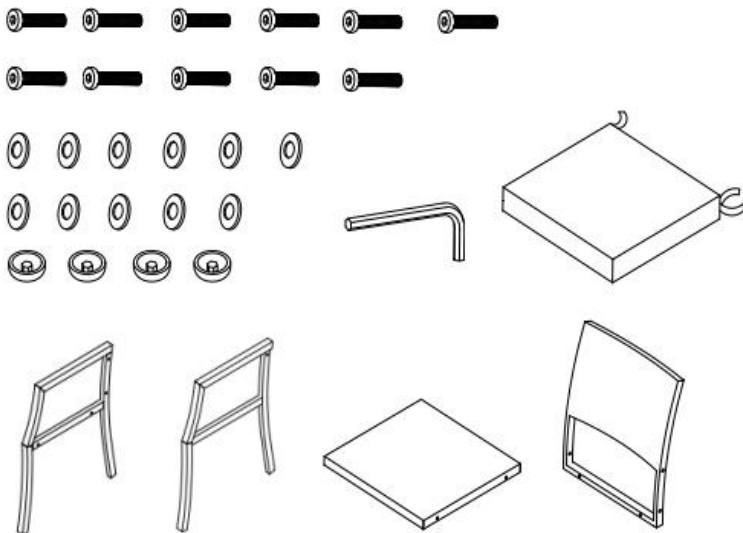Before Beginning Assembly:	 <p>The diagram shows the components laid out for assembly: 11 bolts (M6*35MM) arranged in two rows of six with one extra; 11 washers arranged in two rows of six with one extra; 4 nut caps arranged in a single row of four; 1 Allen key; 1 seat cushion; 2 chair frames; 1 square base plate; and 1 backrest panel.</p>
----------------------------	--



- Read instructions, cover to cover-



- Have 2 adults on hand for assembly-



- Do not assemble on flooring or carpet-




- Assemble on a clean non-marring surface (packing foam)-



- Save all packaging until finished-


# Assembly Steps

## Overview

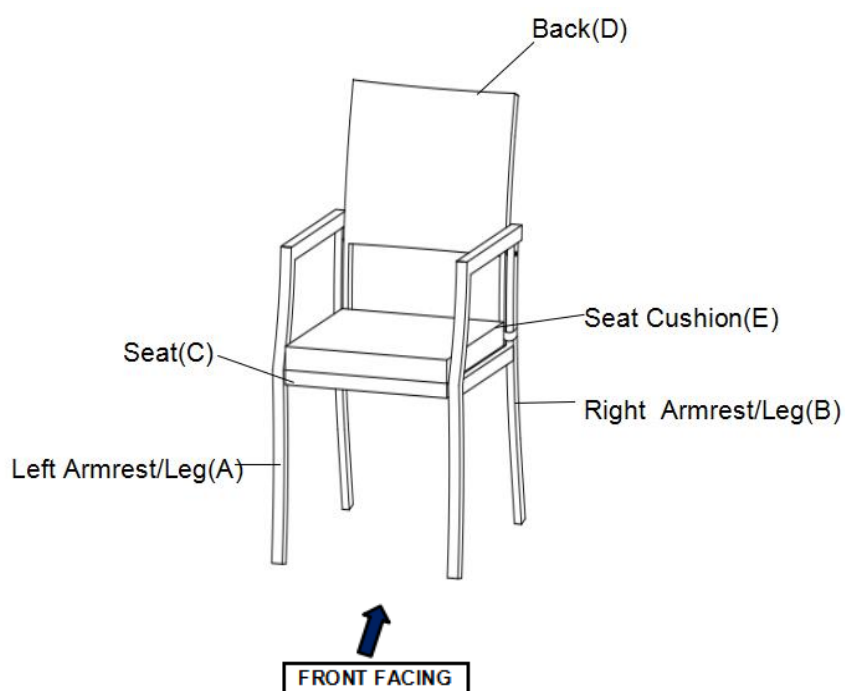

This Chair has multiple parts and may require up to 30 minutes to assemble. To give you an overview of the Chair parts, the above picture is to help you put the various parts into perspective. Please read through the instructions below to familiarise yourself with the parts and steps before assembly.

## Step 1

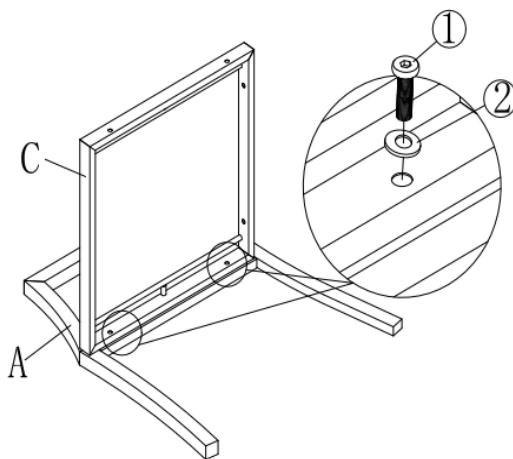

Open the carton and place all the parts onto a clean, non-marring surface.


Place the Left Armrest/Leg(A) face up.

Attach the Seat(C) to Left Armrest/Leg(A) using Bolts(①) and Washers(②) with Allen Key(④) as shown in Picture.

**Do not fully tighten the Bolts.**

**Occasionally some of the PE Wicker shifts and covers the mounting positions preventing easy assembly. The PE Wicker should never be cut, but moved away from the mounting positions.**

## Step 2

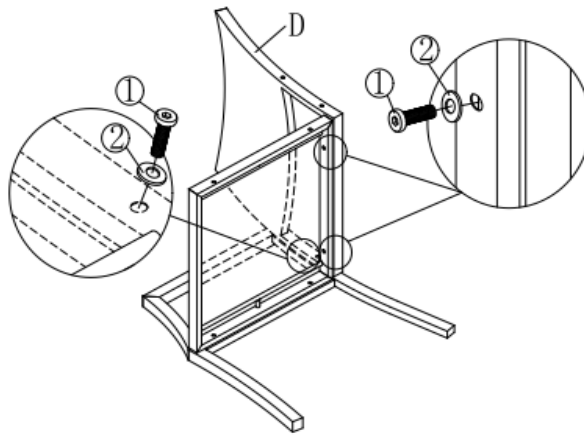


Place the Backrest(D) against the Left Armrest/Leg(A) and the Seat(C).  
Attach the Backrest(D) to the Left Armrest/Leg(A) and Seat(C) using Bolts(①) and Washers(②) with Allen Key(④) as shown in Picture.

**Do not fully tighten the Bolts.**

**Occasionally some of the PE Wicker shifts and covers the mounting positions preventing easy assembly. The PE Wicker should never be cut, but moved away from the mounting positions.**

## Step 3

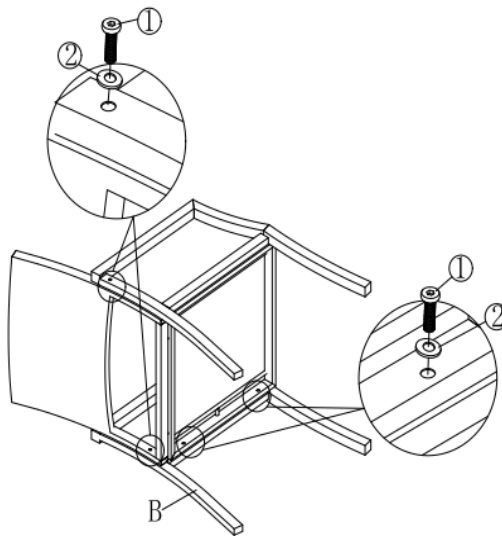


Place the Right Armrest/Leg(B) against the Backrest(D) and Seat(C).  
Attach the Right Armrest/Leg(B) to Backrest(D) and Seat(C) using Bolts(①) and Washers(②) with Allen Key(④) as shown in Picture.

**Do not fully tighten the Bolts.**

**When tightening these Bolts, tighten sequentially.**

**DO NOT tighten any Bolt fully and then move on to the next one. This may cause the frame to warp. If there are still wobbles, loosen the Bolts and execute this same drop test. If the Chair is not stable it could lead to damage to the product.**

## Step 4

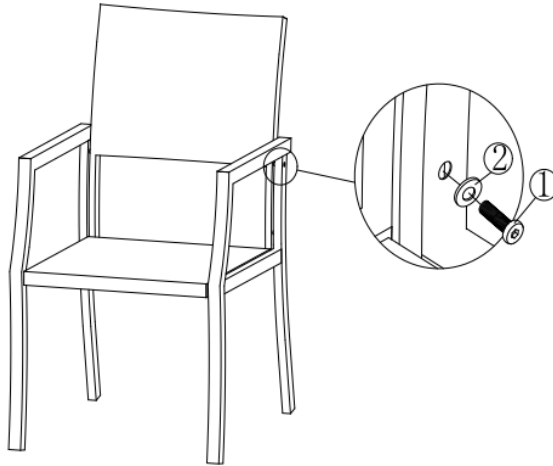


Stand the Chair up, and attach the Right Armrest/Leg(B) to Backrest(D) using Bolt(①) and Washer(②) with Allen Key(④) as shown in Picture.

**Tighten all Bolts at all joints sequentially.**

**DO NOT tighten any Bolt fully and then move on to the next one. This may cause the frame to warp. If the Chair is not stable it could lead to damage to the product.**

Adjust the pre-installed Levelers at the end of each Chair Leg until the Chair is level with the ground.

## Step 5

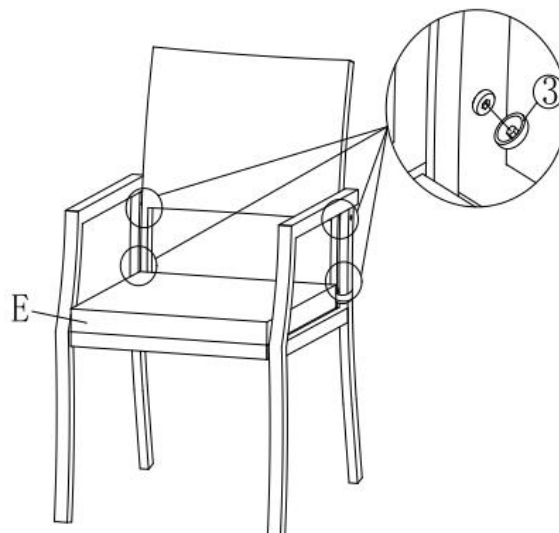



















Put the Nut Cap (③) as shown in Picture.



Then put the Seat Cushion(E) on the Chair.

Your Chair is ready for use.

**This Chair can only be used on the flat and level surface.**

## Care & Maintenance

-   • Do not put hot items directly on furniture surface
-   • Do not clean furniture with harsh cleansers or polish.
-   • To obtain the longest lifespan of your outdoor products, minimizing exposure to direct sunlight is recommended.
-   • Children should not climb or jump on the furniture.
-   • Do not write on furniture without a padded barrier to protect the surface.
-   • To obtain the longest lifespan of your outdoor products, avoid extended and lengthy exposure to rain, snow, and direct sunshine. Whenever possible cover the product and /or place under patio or awnings.
-   • Not for commercial use. For residential use only .
-   • Stains may be removed with mild soap solution and damp cloth.
-   • Keep away from sources of ignition.

-   • Dust and pick-up spills using a clean, non-colored, lint-free cloth .

### What is Proposition 65?

Proposition 65 is a California law that requires warning labels on products that may contain one of more than 800-plus chemicals or ingredients that the California Office of Environmental Health Hazard Assessment (OEHHA) has deemed to cause cancer or other reproductive toxicity. Chemicals and elements on this list include wood dust, brass, and other everyday substances, which can be found in very common household items, such as: lamps, tableware, jewelry, crystal glasses, electric cords, beauty products, automobiles, and furniture.

### Why Did I Find a Proposition 65 Warning on My Home Goods Product?

We include Proposition 65 warnings on all of our products because there is always a chance that one of the 800-plus common chemicals and ingredients listed under this law could potentially be on our furniture or packing materials. We risk large fines under this law, if we don't include this warning.

### Should I worry?

We realize you may be worried finding this warning on our products, but we want to reassure you that the hazardous exposure limits for any of these chemicals have never been found on furniture products that we've shipped to our customers. Additionally, this warning label is very common and can be found on almost every piece of furniture sold in the state of California.

### Just How Common Are Proposition 65 Warnings?

Proposition 65 warnings have become so common in California that it is hard to take a trip to a local bank, grocery store, or restaurant without finding at least one warning. In fact, even the Disney Land Resort has a Proposition 65 warning:

