CARE AND MAINTENANCE

Store outdoor furniture indoors or cover well when not in use.

Remove wooden furniture from standing water. Dust regularly with small brush or vacuum Spills should be taken care of immediately before they harden or stain with a slightly dampened sponge.

SAFAVIEH OUTDOOR

NOTICE

- * Please make sure that you have all parts indicated before you begin assembly of this item
- * This item should be assembled on a soft surface to prevent scratching the finish during assembly
- * This item may require periodic tightening

Model# FOX6007A

Product Dimensions:21.25" W x 29.13" D x 33.25" H

Part List and Hardware List

PIECE	DESCRIPTION	PICTURE	QUANTITY
А	Seat Frame		1X
В	Leg Frame		2X
С	Back frame		1X
D	Cross bar of leg		2X
Е	Screw -1	⊚ M7×90	6X
H1	Screw -2	⊚ M7x70	1X
H2	Screw -3	M4x20	6X
НЗ	Allen bolt L	0 M8x75	4X
H4	Reinforcement plate	·./	3X
H5	Allen key		1X 2X




PREPARATION

Before beginning assembly of product, make sure all parts are present. Compare parts with package contents list and hardware contents list. If any part is missing or damaged, do not attempt to assemble the product.

Estimated Assembly Time: 10 minutes.

Tools Required for Assembly (included): Allen Key

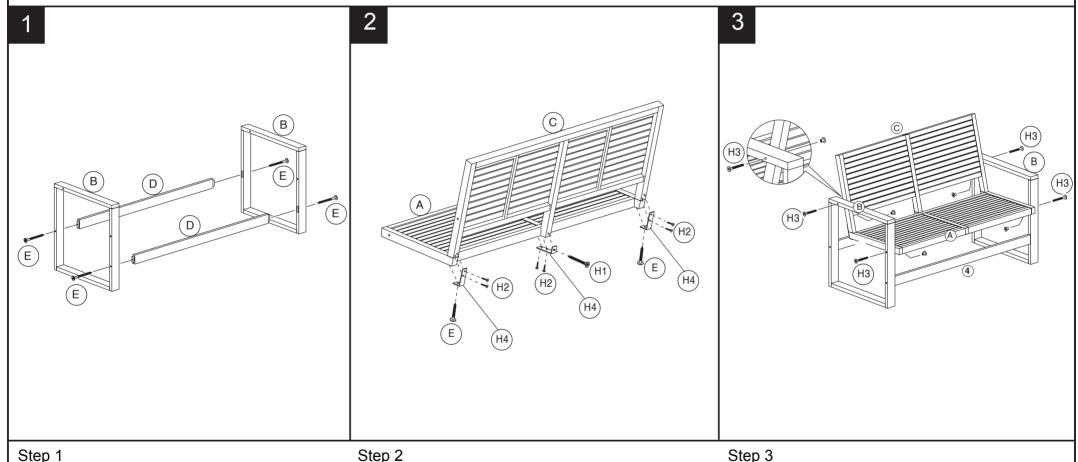

Step 1
Attach front leg (B) to bar (D), using Allen bolt (E), tighten with allen key (H5).

Attach Seat (A) to Back ©, taken Allen bolt (H1)&(E) to Reinforcement plate (H4) &(A), using allen key (H5) to tighten(H1)&(E).

Using (H2) attach (H4) & ©, using screwdriver to tighten.

© & (A) attached to legs (B), using Allen bolt (H3) connected © & (A), tighten (H3) by (H1). Completed product.