


ASSEMBLY INSTRUCTIONS

MODEL : 10018 SHAKER DINING CHAIR

IMPORTANT NOTE:


- * PLACE ALL WOODEN PARTS ON A CLEAN AND SMOOTH SURFACE SUCH AS A RUG OR CARPET TO AVOID THE PARTS FROM BEING SCRATCHED.
- * BEFORE YOU BEGIN, KINDLY FOLLOW THE ASSEMBLY INSTRUCTIONS STEP BY STEP.

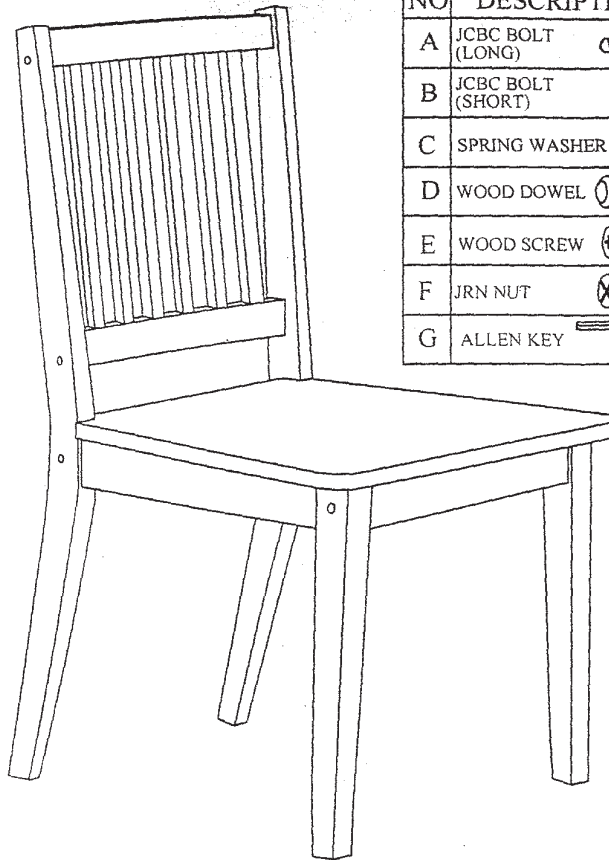

HARDWARE LIST (FOR ONE CHAIR)		
NO	DESCRIPTION	QTY
A	JCBC BOLT (LONG)	4 PCS
B	JCBC BOLT (SHORT)	10 PCS
C	SPRING WASHER	6 PCS
D	WOOD DOWEL	12 PCS
E	WOOD SCREW	4 PCS
F	JRN NUT	8 PCS
G	ALLEN KEY	1 PC


PART LIST (FOR ONE CHAIR)		
NO	DESCRIPTION	QTY
1	CHAIR BACK	1 PC
2	LEFT & RIGHT BACK LEG	2 PCS
3	LEFT & RIGHT FRONT LEG	2 PCS
4	SIDE RAIL	2 PCS
5	FRONT RAIL	1 PC
6	BACK RAIL	1 PC
7	SEAT	1 PC

TOOLS REQUIRED (NOT PROVIDED):

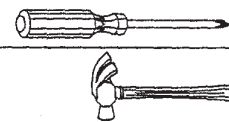

* DO NOT USE POWER TOOLS FOR ASSEMBLY


Step 1

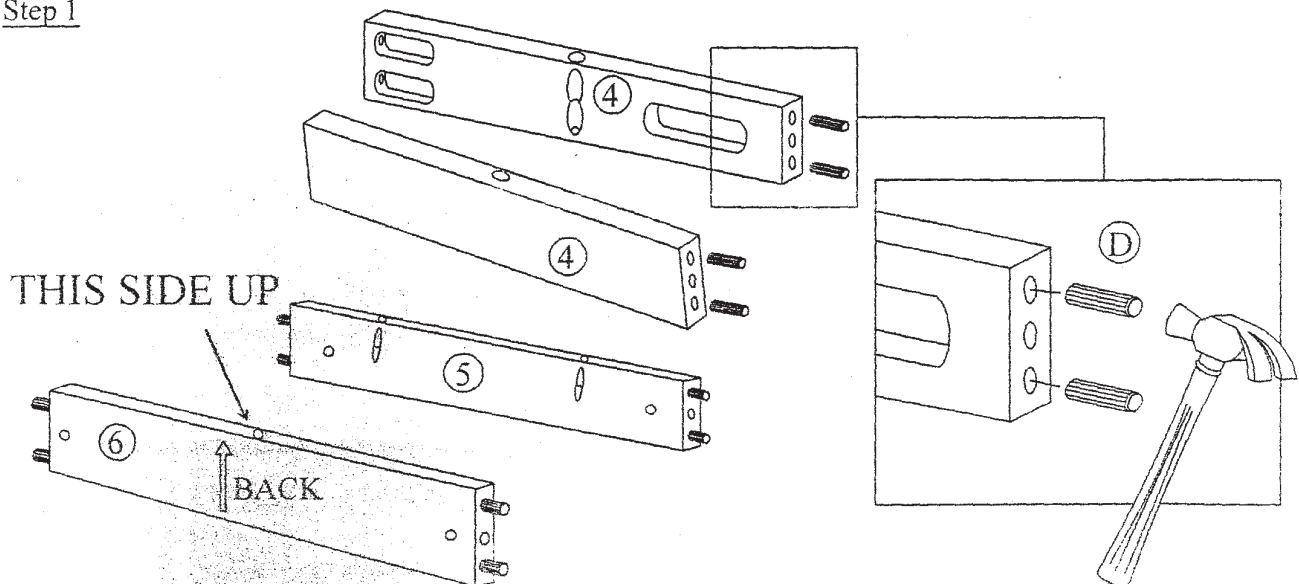


ASSEMBLY INSTRUCTIONS

MODEL : 10018 SHAKER DINING CHAIR


Step 2

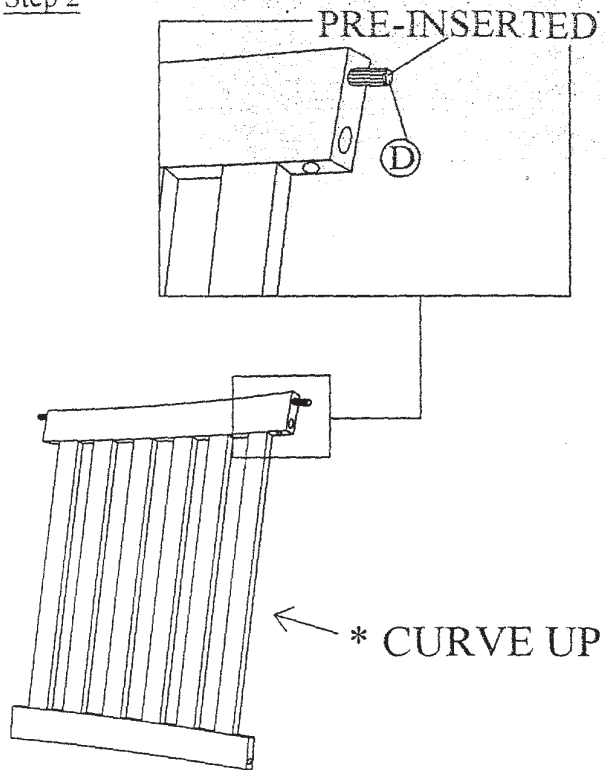


Step 3

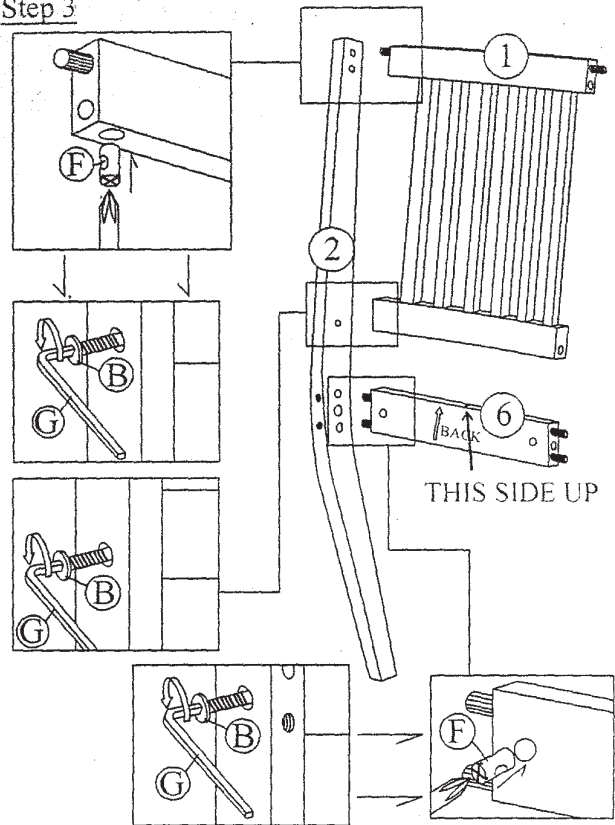

Step 4

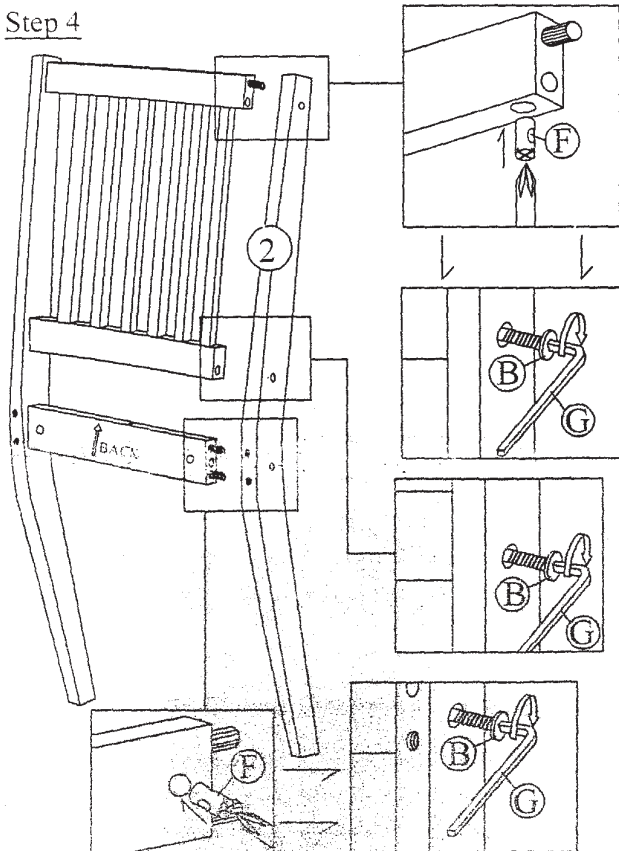


Step 5

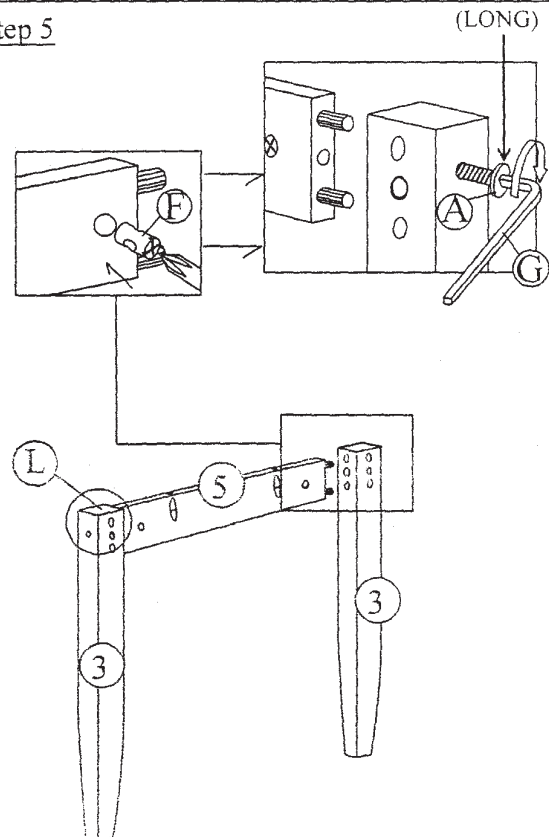


ASSEMBLY INSTRUCTIONS

MODEL : 10018 SHAKER DINING CHAIR


Step 6

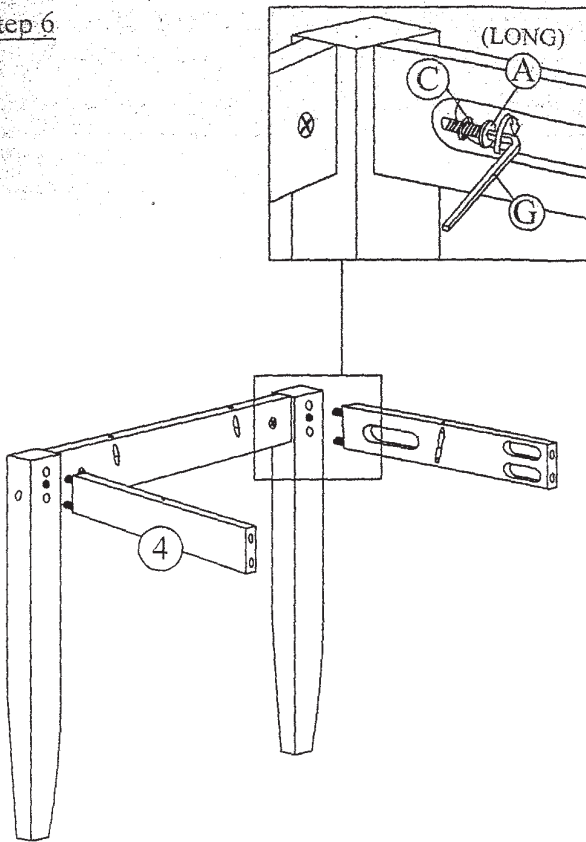

Step 7

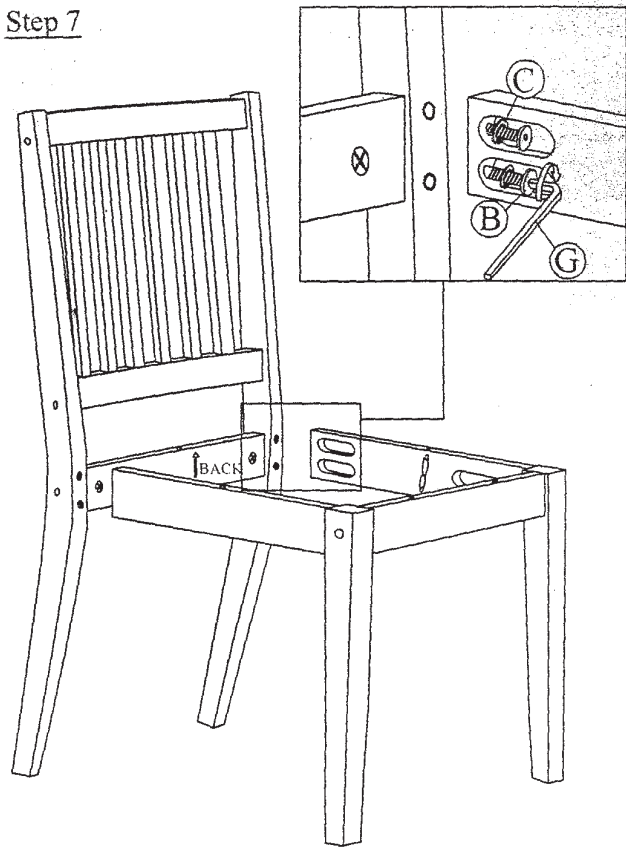


Step 8

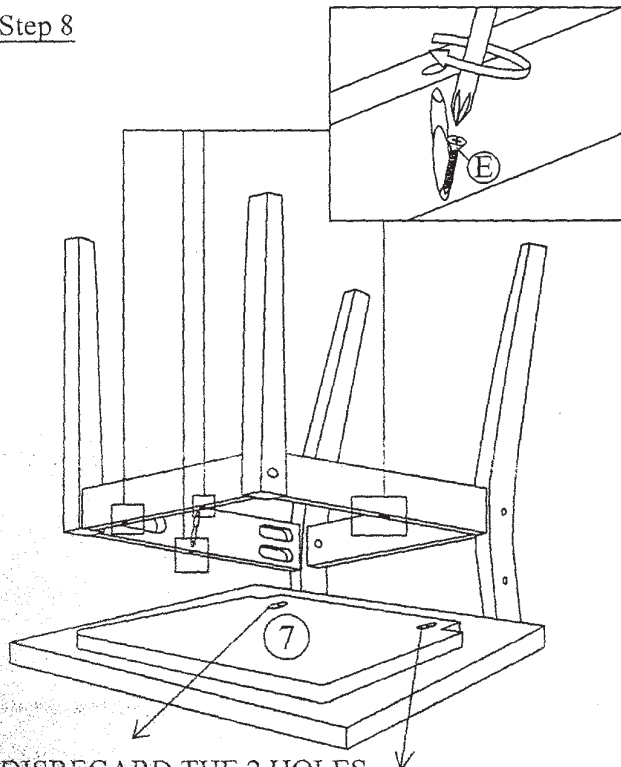

DISREGARD THE 2 HOLES ,
THESE ARE NOT PART OF ANY ASSEMBLY
*INSERT THE SEAT BEFORE FULLY TIGHT UP

Step 9

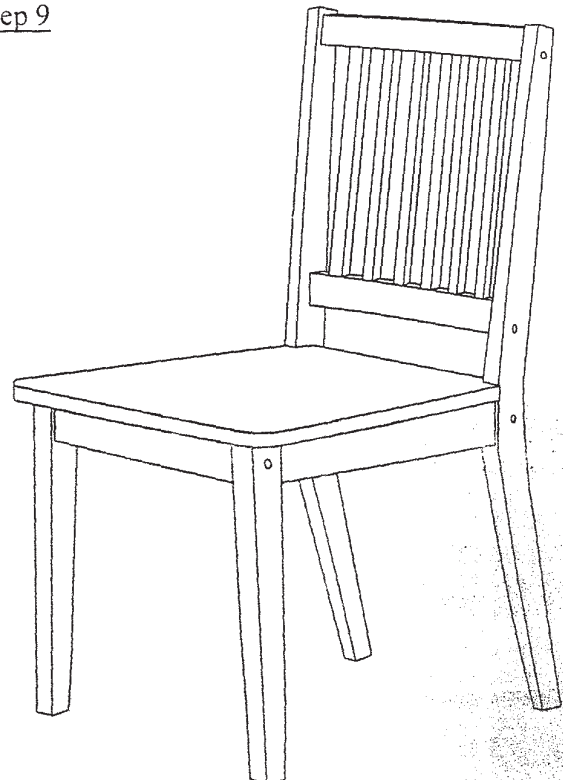

FULLY SET UP