 



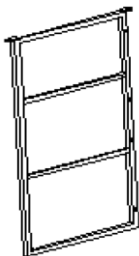 
Assembly Instructions



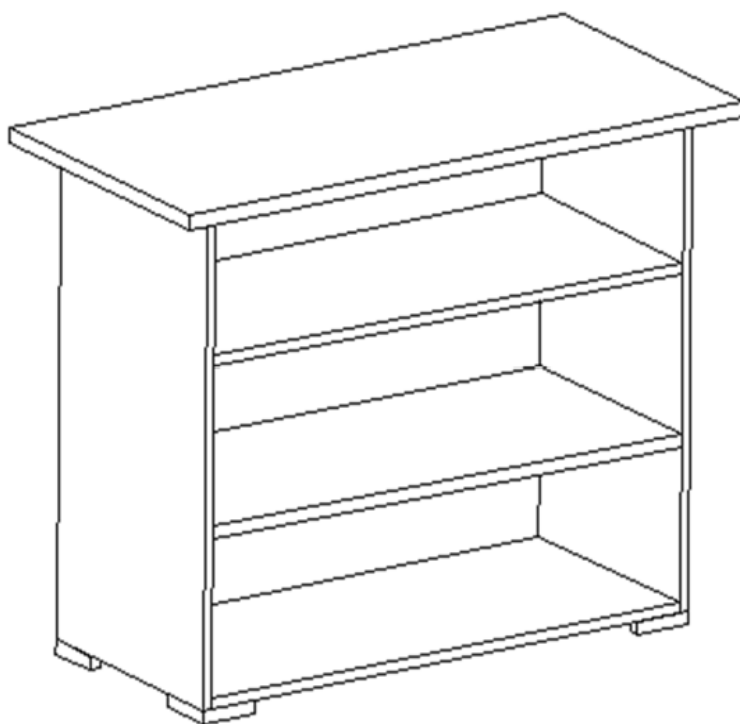



Caution : You must read this before you proceed

   Shelf

 
 

 


Parts List

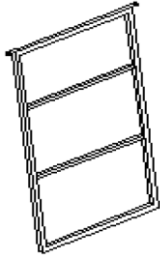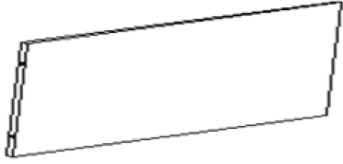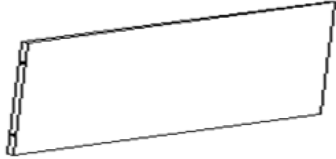Label	Picture	Description	QTY
A		Top of Shelf	1
B		Left Panel	1


C		Right Panel	1
D		Top Back Panel	1
E		Bottom Back Panel	1
F		Shelf	2
G		Bottom Plate	1
H		Feet Cap	4

Hardware

Label	Picture	Description	QTY
I		Bolt M6*45mm	21
J		Bolt M8*20mm	5
K		Spring washer	25
M		Allen Key	1

Assembly Preparation

 Before Beginning
Assembly:

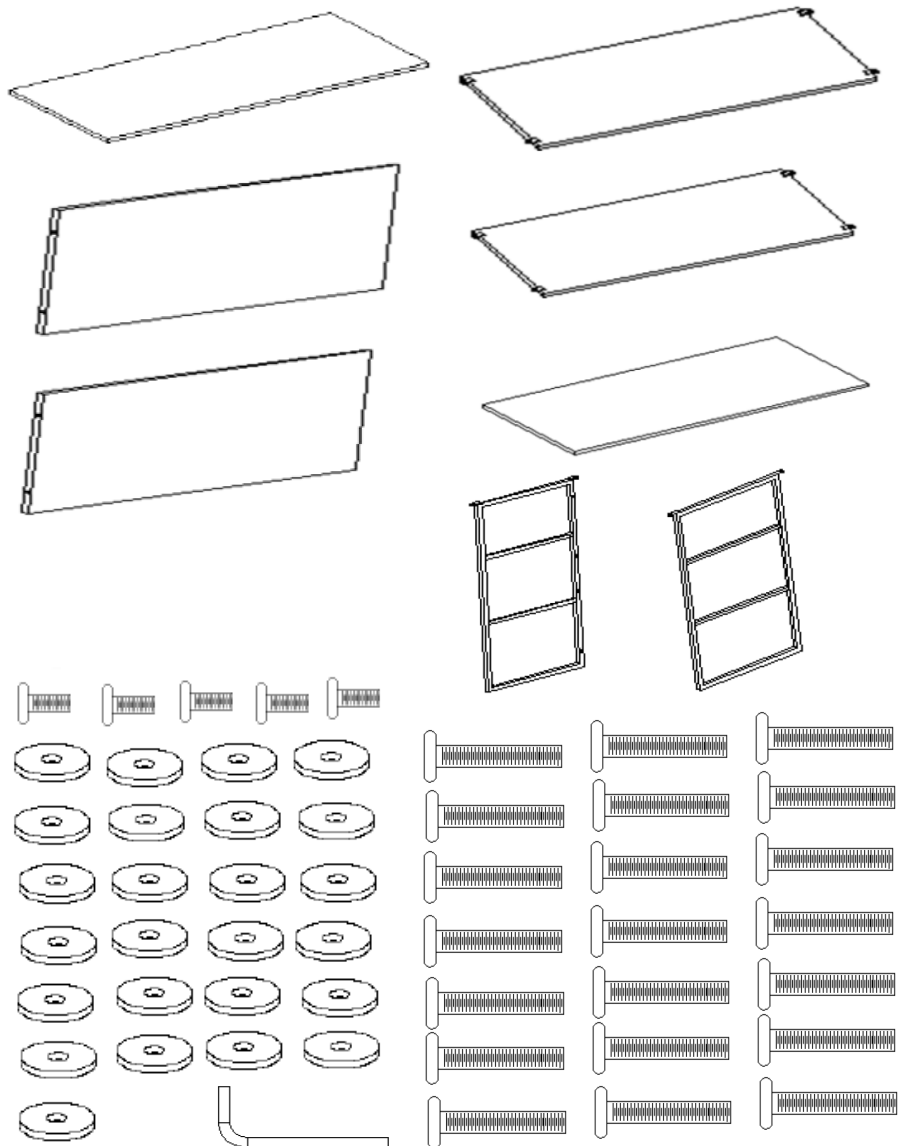

- Read instructions, cover to cover-



- Have 2 adults on hand for assembly-



- Do not assemble on flooring or carpet-



 
- Assemble on a clean non-marring surface (packing foam)-



- Save all packaging until finished-


Assembly Steps

Overview

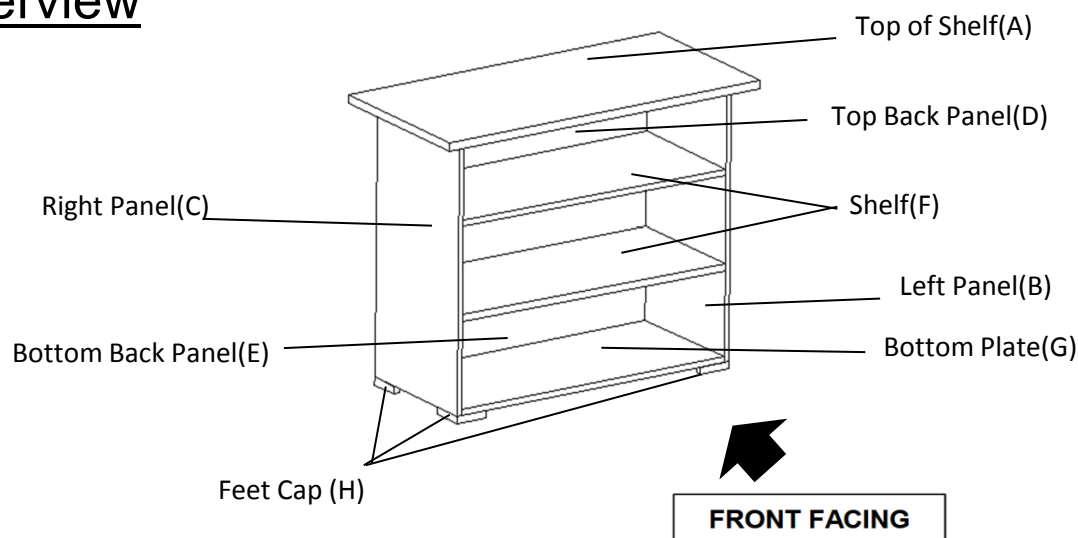

This Shelf has multiple parts and may require up to some 30 minutes to assemble. To give you an overview of the Shelf parts, the above picture is to help you put the various parts into perspective. Please read through the instructions here below to familiarise yourself with the parts and steps before assembly.

 Step 1

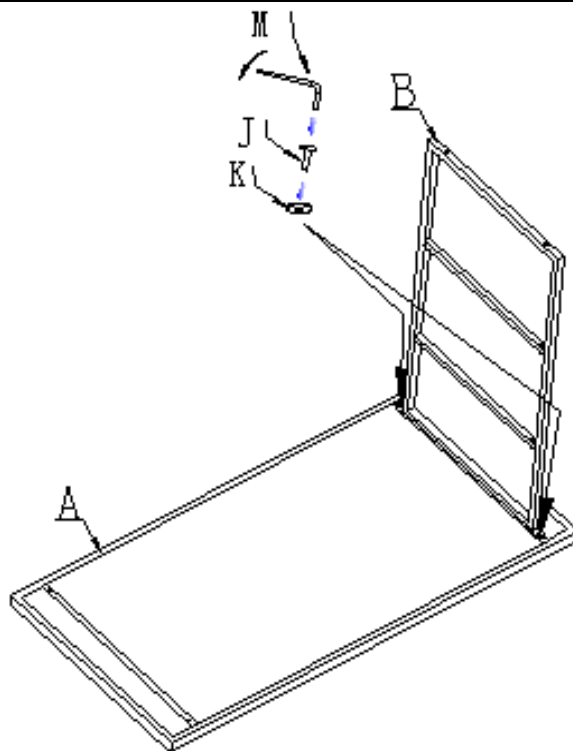

Open the carton and place all the parts onto a clean and soft surface.

 
Unpack all packages of hardware.

Then place Shelf Top(A) facedown on a clean, non-marring surface.

Attach the Left Panel(B) to the Table Top(A) using hardware(K,J) with Allen Key(M).


DO NOT FULLY TIGHTEN THE BOLTS.

Step 2

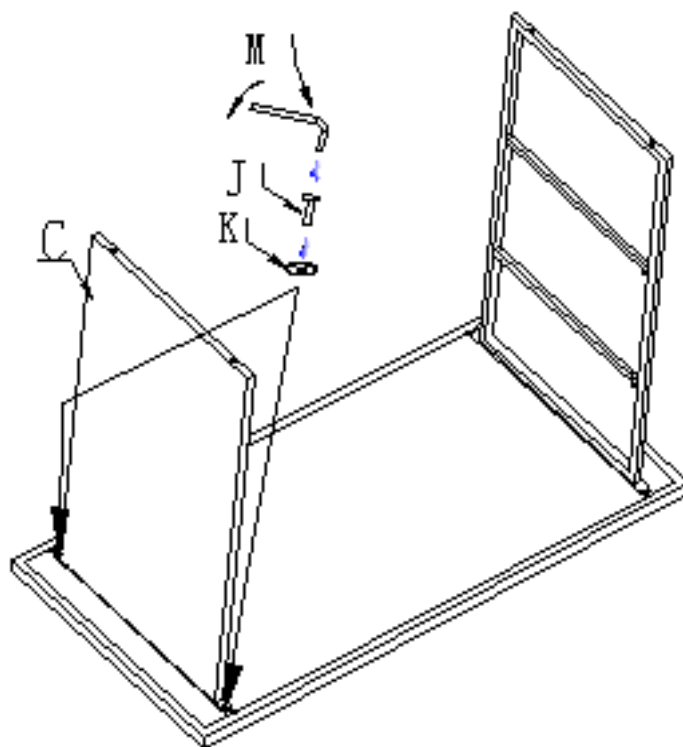


Repeat Step 1 attaching the Right Panel(C) to the Shelf Top(A).
DO NOT FULLY TIGHTEN THE BOLTS.

 Step3

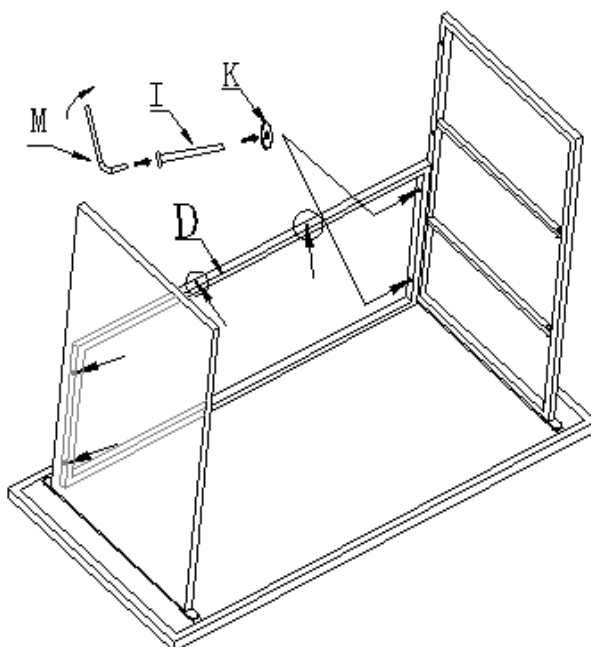

Attach the Top Back Panel(D) between the side panels using hardware(K, I) with Allen Key(M).
The bolts mounting position on long side of the Top Back Panel(D) should be on the upside.
DO NOT FULLY TIGHTEN THE BOLTS.

 
Step 4

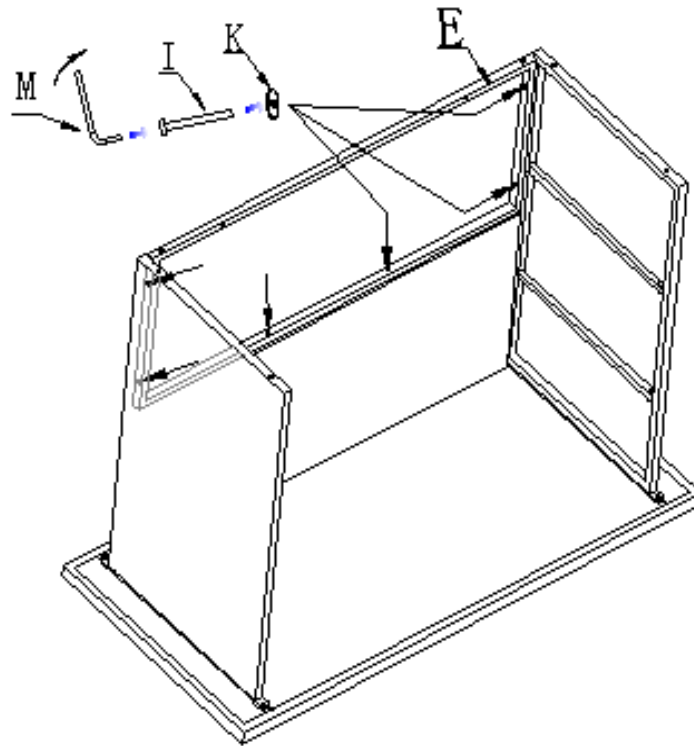

Attach the Bottom Back Panel(E) between the side panels using hardware(K, I) with Allen Key(M).

DO NOT FULLY TIGHTEN THE BOLTS.

 Step 5

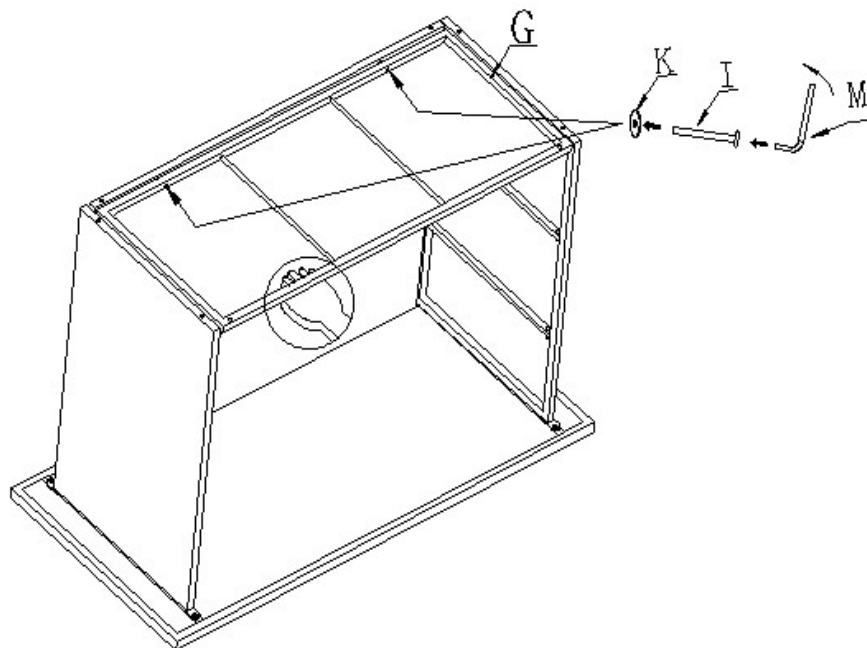


NOTE: Please have a second adult help you perform the Step 5 & Step 6.

Attach the Bottom Plate(G) to the Bottom Back Panel(E) using hardware(K, I) with Allen Key(M).


DO NOT FULLY TIGHTEN THE BOLTS.

 Step 6

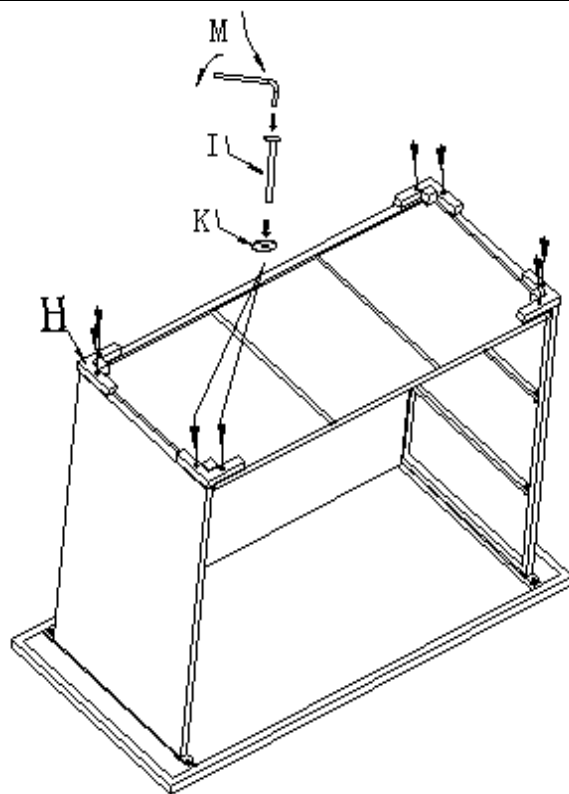



Attach the Feet Cap(H) to the Bottom Plate(G) using hardware(K, I) with Allen Key(M).
Now, in a gradual and sequential manner, **proceed to fully and securely tighten all Bolts at all joints.**

 Step 7

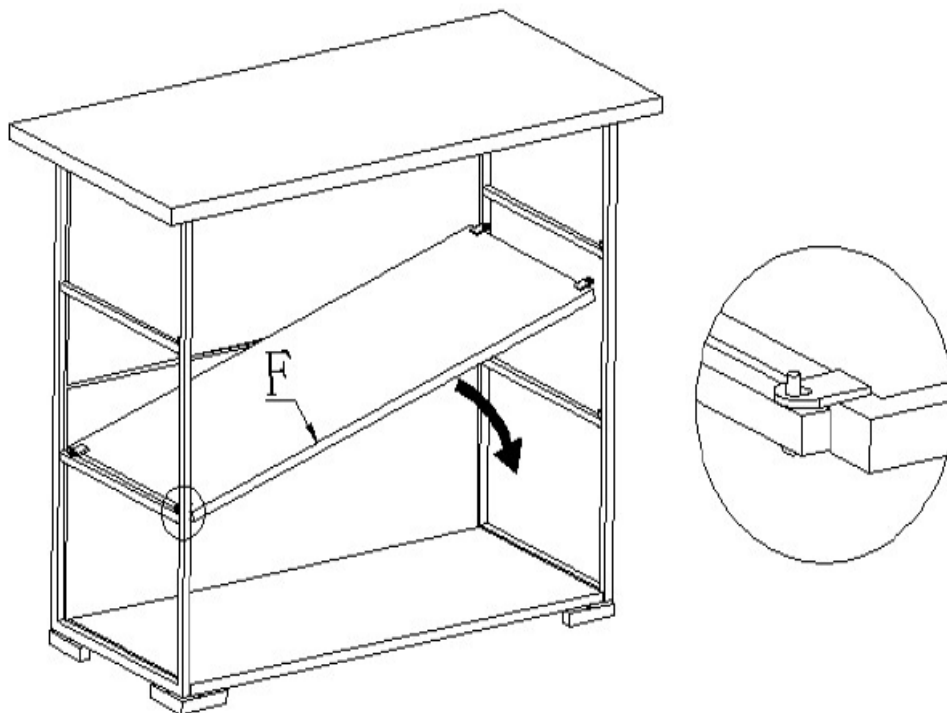

To install the Shelves(F), first place the loop attached to the left side of the shelf into the metal peg on the inside of the Left Side Panel(B) as shown in the picture above.
Then lower the right side until the loops fit into the pegs on the right side.

  Step 8

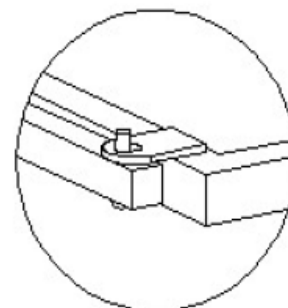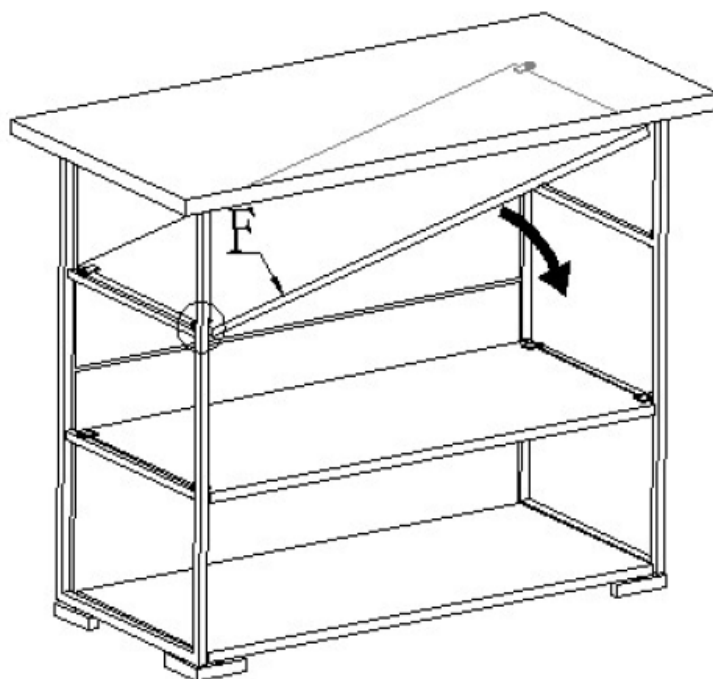





















Repeat Step 7 to install the second Shelf(F).

The Shelf is ready for use.

The Shelf can only be used on a flat, level surface.

Care & Maintenance

-   ● Do not put hot items directly on furniture surface
 -   ● Do not clean furniture with harsh cleansers or polish.
 -   ● To obtain the longest lifespan of your outdoor products, minimizing exposure to direct sunlight is recommended.
 -   ● Children should not climb or jump on the furniture.
 -   ● Do not write on furniture without a padded barrier to protect the surface.
 -   ● To obtain the longest lifespan of your outdoor products, avoid extended and lengthy exposure to rain, snow, and direct sunshine. Whenever possible cover the product and /or place under patio or awnings.
 -   ● Not for commercial use. For residential use only .
 -   ● Stains may be removed with mild soap solution and damp cloth.
 -   ● Keep away from sources of ignition.
-
-   ● Dust and pick-up spills using a clean, non-colored, lint-free cloth.

What is Proposition 65?

Proposition 65 is a California law that requires warning labels on products that may contain one of more than 800-plus chemicals or ingredients that the California Office of Environmental Health Hazard Assessment (OEHHA) has deemed to cause cancer or other reproductive toxicity. Chemicals and elements on this list include wood dust, brass, and other everyday substances, which can be found in very common household items, such as: lamps, tableware, jewelry, crystal glasses, electric cords, beauty products, automobiles, and furniture.

Why Did I Find a Proposition 65 Warning on My Home Goods Product?

We include Proposition 65 warnings on all of our products because there is always a chance that one of the 800-plus common chemicals and ingredients listed under this law could potentially be on our furniture or packing materials. We risk large fines under this law, if we don't include this warning.

Should I worry?

We realize you may be worried finding this warning on our products, but we want to reassure you that the hazardous exposure limits for any of these chemicals have never been found on furniture products that we've shipped to our customers. Additionally, this warning label is very common and can be found on almost every piece of furniture sold in the state of California.

Just How Common Are Proposition 65 Warnings?

Proposition 65 warnings have become so common in California that it is hard to take a trip to a local bank, grocery store, or restaurant without finding at least one warning. In fact, even the Disney Land Resort has a Proposition 65 warning:

