

## CARE AND MAINTENANCE

Store outdoor furniture indoors or cover well when not in use.

Remove wooden furniture from standing water. Dust regularly with small brush or vacuum






Spills should be taken care of immediately before they harden or stain with a slightly dampened sponge.

## NOTICE

- \* Please make sure that you have all parts indicated before you begin assembly of this item
- \* This item should be assembled on a soft surface to prevent scratching the finish during assembly
- \* This item may require periodic tightening


 **SAFAVIEH**  
O U T D O O R

## Part List and Hardware List

PIECE	DESCRIPTION	PICTURE	QUANTITY
A	Seat Frame		2X
B	Leg Frame		1X
C	Back frame		1X
D	Screw -1	 M7x70	6X
E	Allen key	 LG5	1X

Model# PAT7031

Product Dimensions: 50.39" W x 25.2" D x 25.59" H

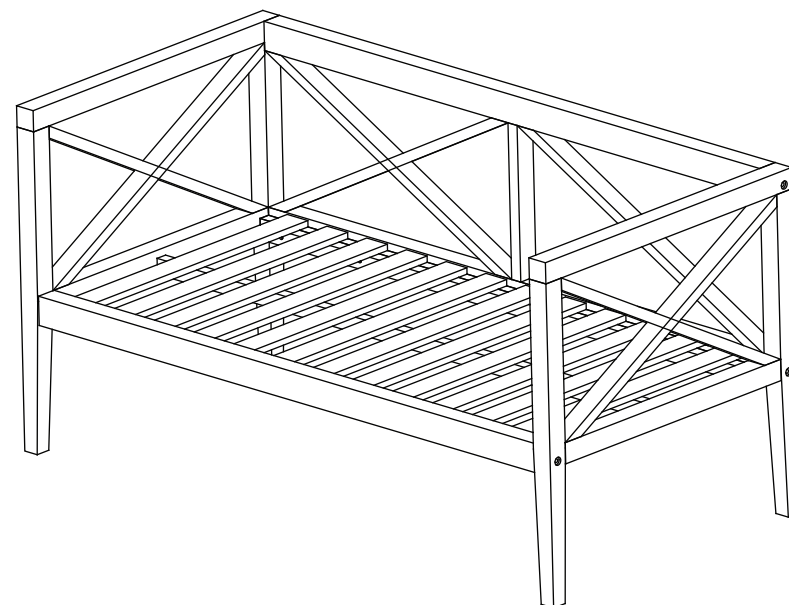


## PREPARATION

Before beginning assembly of product, make sure all parts are present. Compare parts with package contents list and hardware contents list.  
If any part is missing or damaged, do not attempt to assemble the product.

Estimated Assembly Time: 10 minutes.

Tools Required for Assembly (included): Allen Key


1

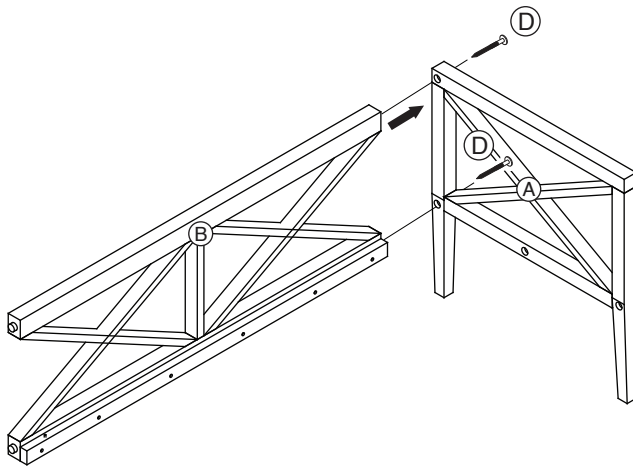

### Step 1

Attached back frame (B) to (A).Using Screw (D) tighten by (E).


2

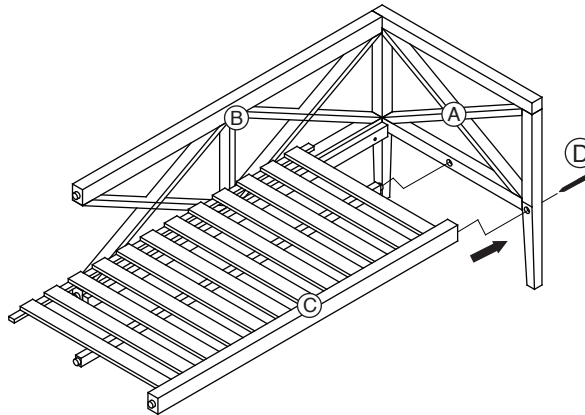

### Step 2

Attached Seat frame (C) to (A).Using Screw(D) tighten by (E).

3

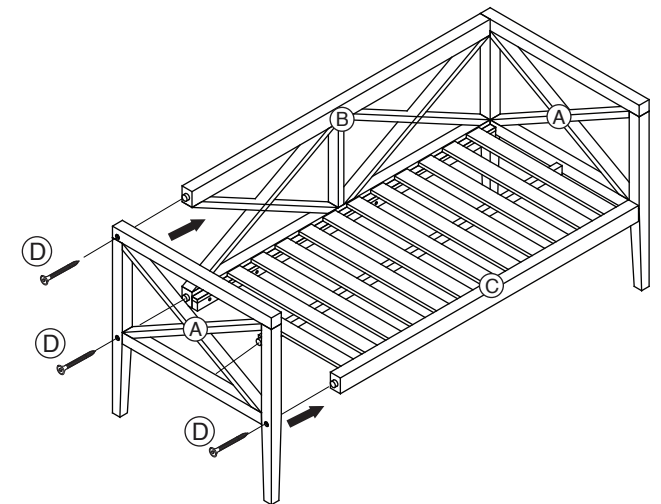

### Step 3

Attached Leg frame (A) to (B),(C).Using Screw(D) tighten by (E).