

CARE AND MAINTENANCE

Store outdoor furniture indoors or cover well when not in use.

Remove wooden furniture from standing water. Dust regularly with small brush or vacuum


 
 
 


Spills should be taken care of immediately before they harden or stain with a slightly dampened sponge.

NOTICE

- * Please make sure that you have all parts indicated before you begin assembly of this item
- * This item should be assembled on a soft surface to prevent scratching the finish during assembly
- * This item may require periodic tightening




Part List and Hardware List

PIECE	DESCRIPTION	PICTURE	QUANTITY
A	Leg Frame		2X
B	Back Frame		1X
C	Seat frame		1X
D	Screw	 M7x70	4X
E	Screw	 M7x50	4X
F	Allen key	 LG5	1X

Model# PAT7033

Product Dimensions:50.4" W x 25.6" D x 25.4" H

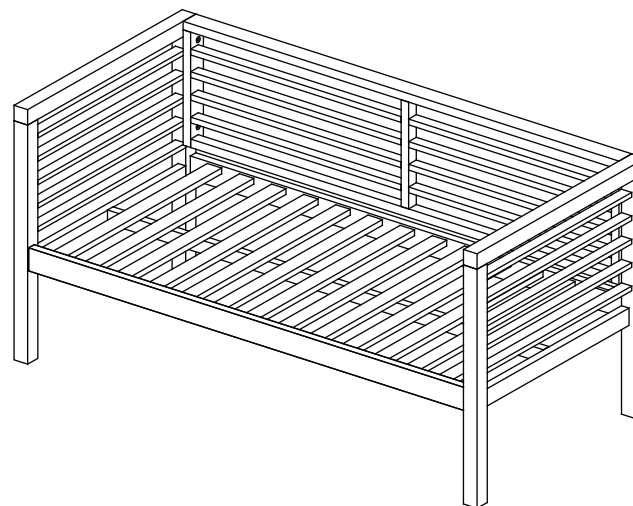


PREPARATION

Before beginning assembly of product, make sure all parts are present. Compare parts with package contents list and hardware contents list.
If any part is missing or damaged, do not attempt to assemble the product.

Estimated Assembly Time: 10 minutes.

Tools Required for Assembly (included): Allen Key


1

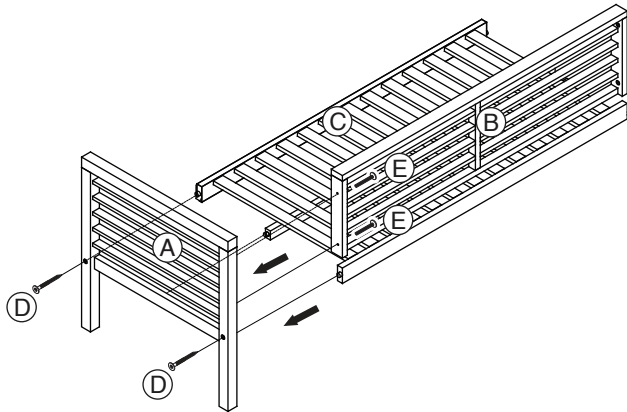

Step 1

Attached back frame (A) to (B),(C).Using
Screw (D)and (E) tighten by (F).


2

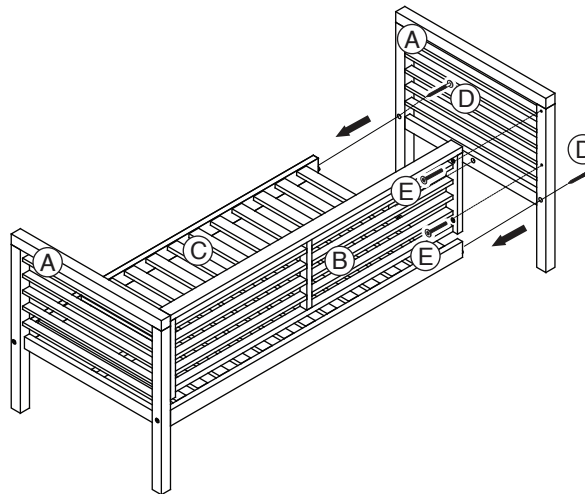

Step 2

Attached back frame (A) to (B),(C).Using
Screw (D)and (E) tighten by (F).

3

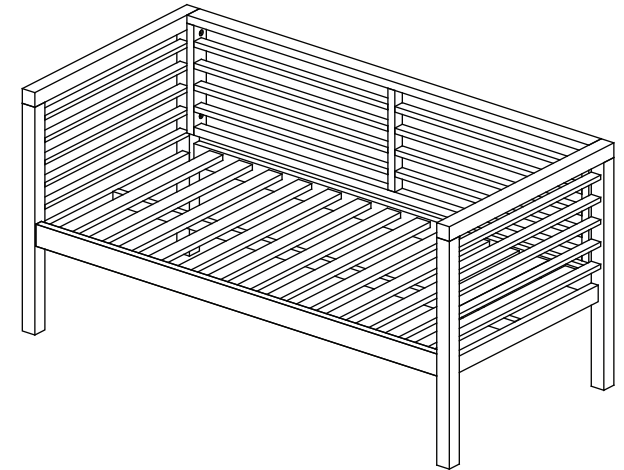

Step 3

Complete