


SHIRLYN

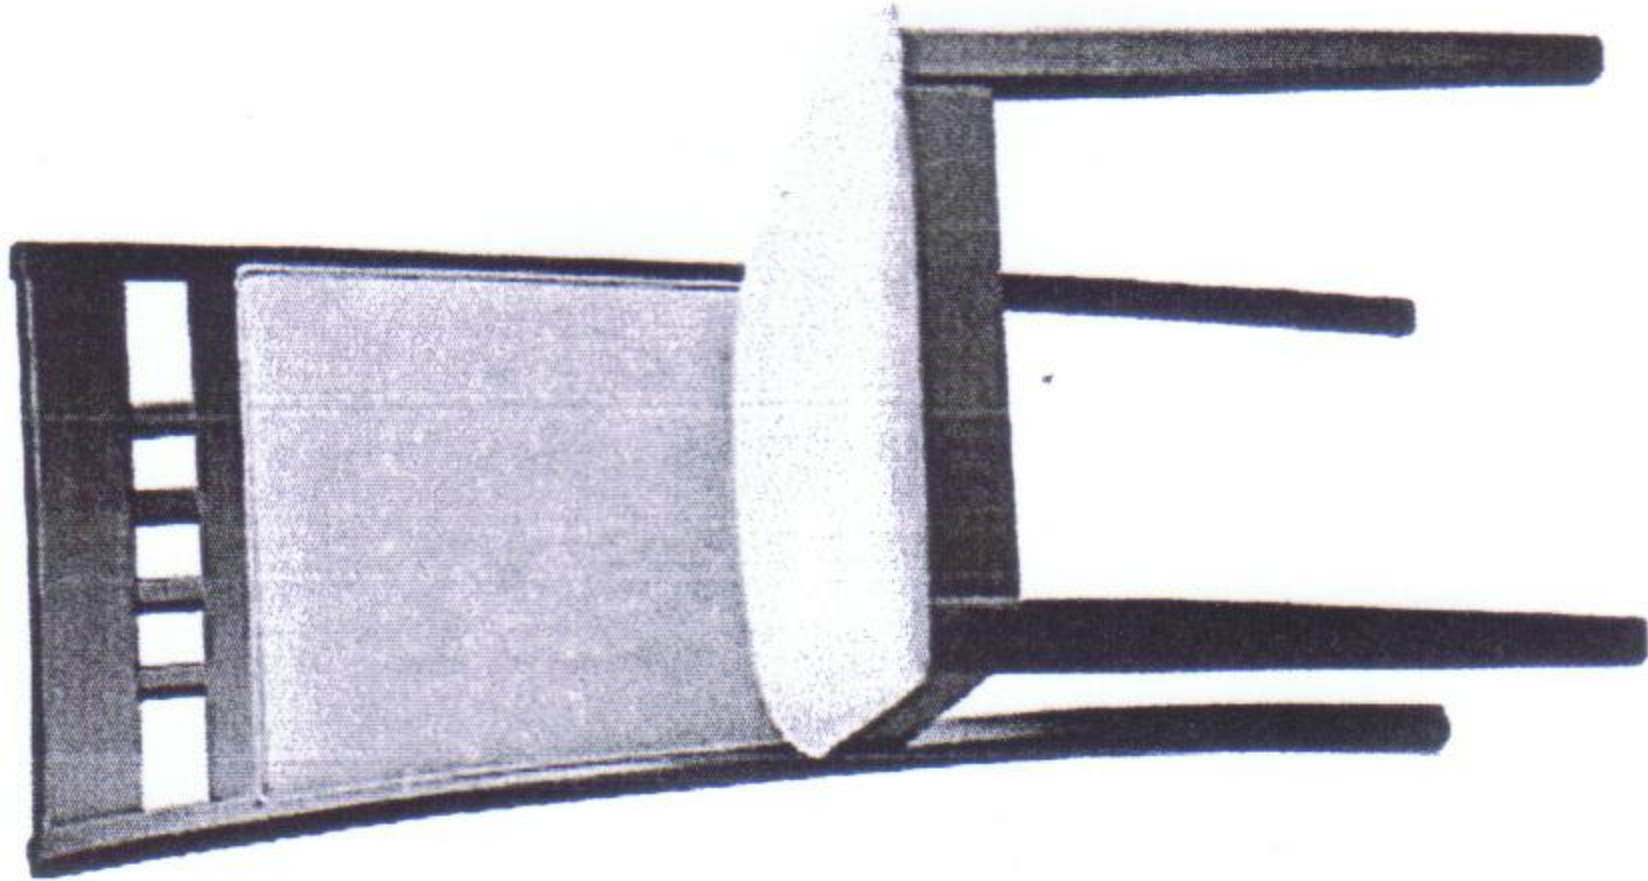


PRODUCT DESCRIPTION


Read instruction carefully. Remove all wrapping material. Staples and straps from the carton. See Hardware and Furniture Part List for guidance. Be sure you have all parts before you start assembling. Place all wooden furniture part a clean and flat soft surface, such as carpet or rug to prevent from being scratched.

CAUTION:

KEEP ALL HARDWARE PART OUT OF REACH OF CHILDREN

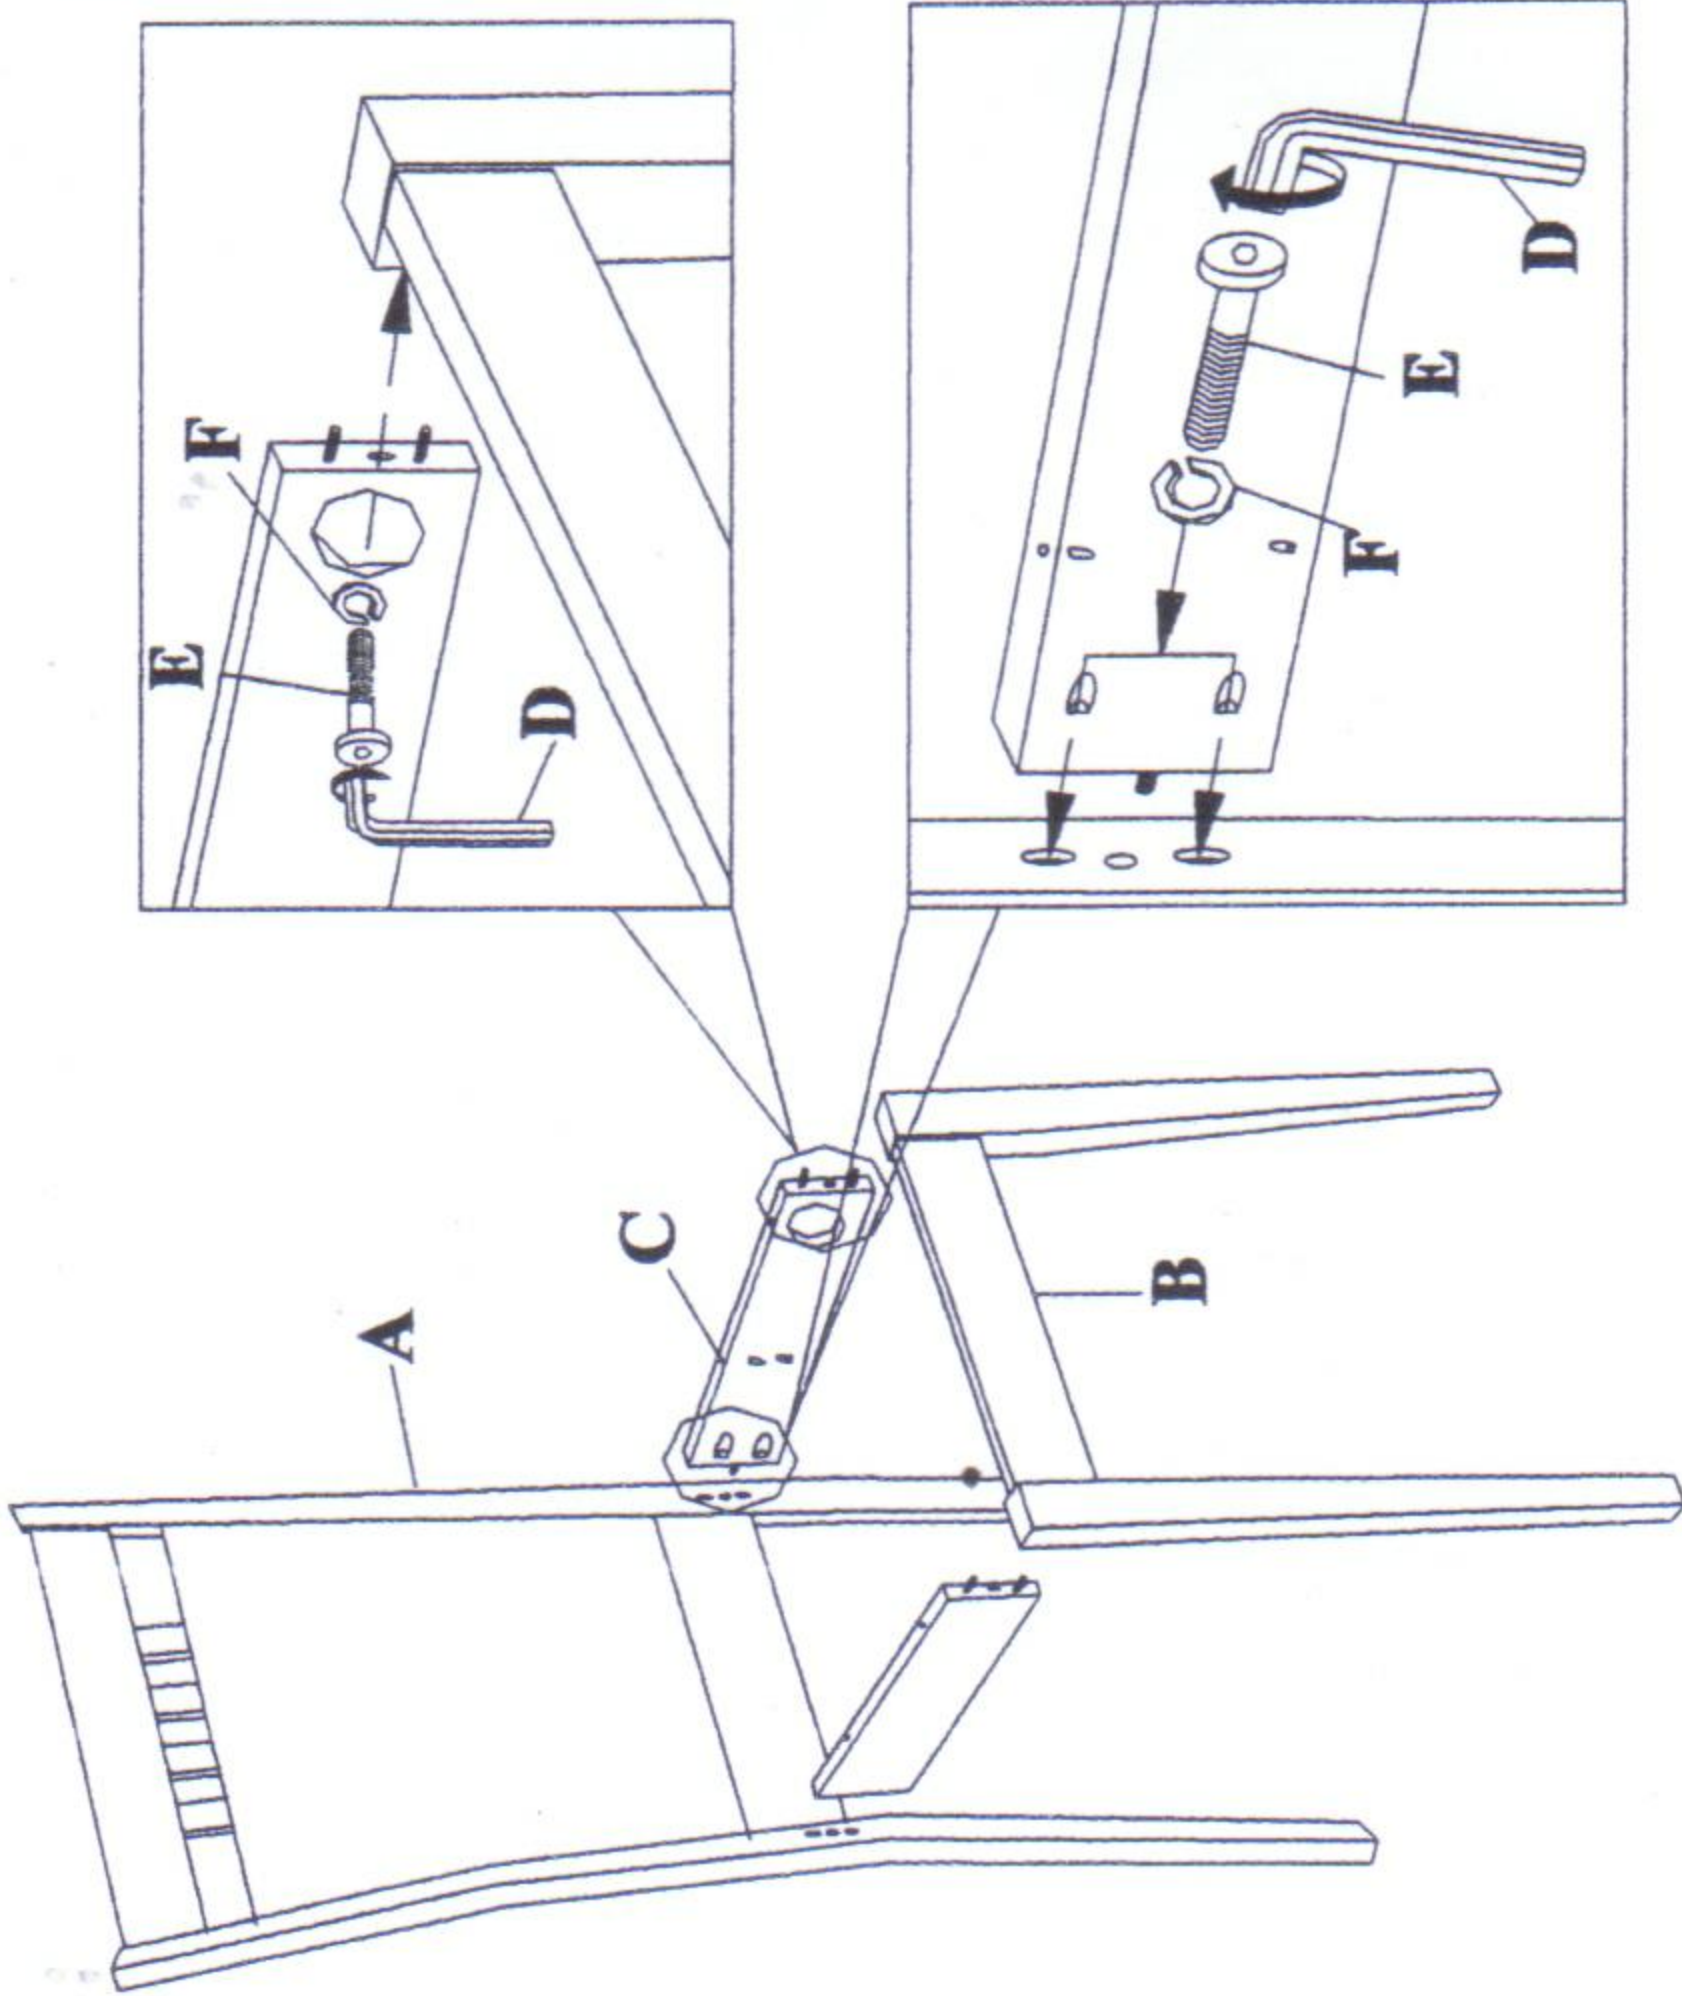

STEP 1

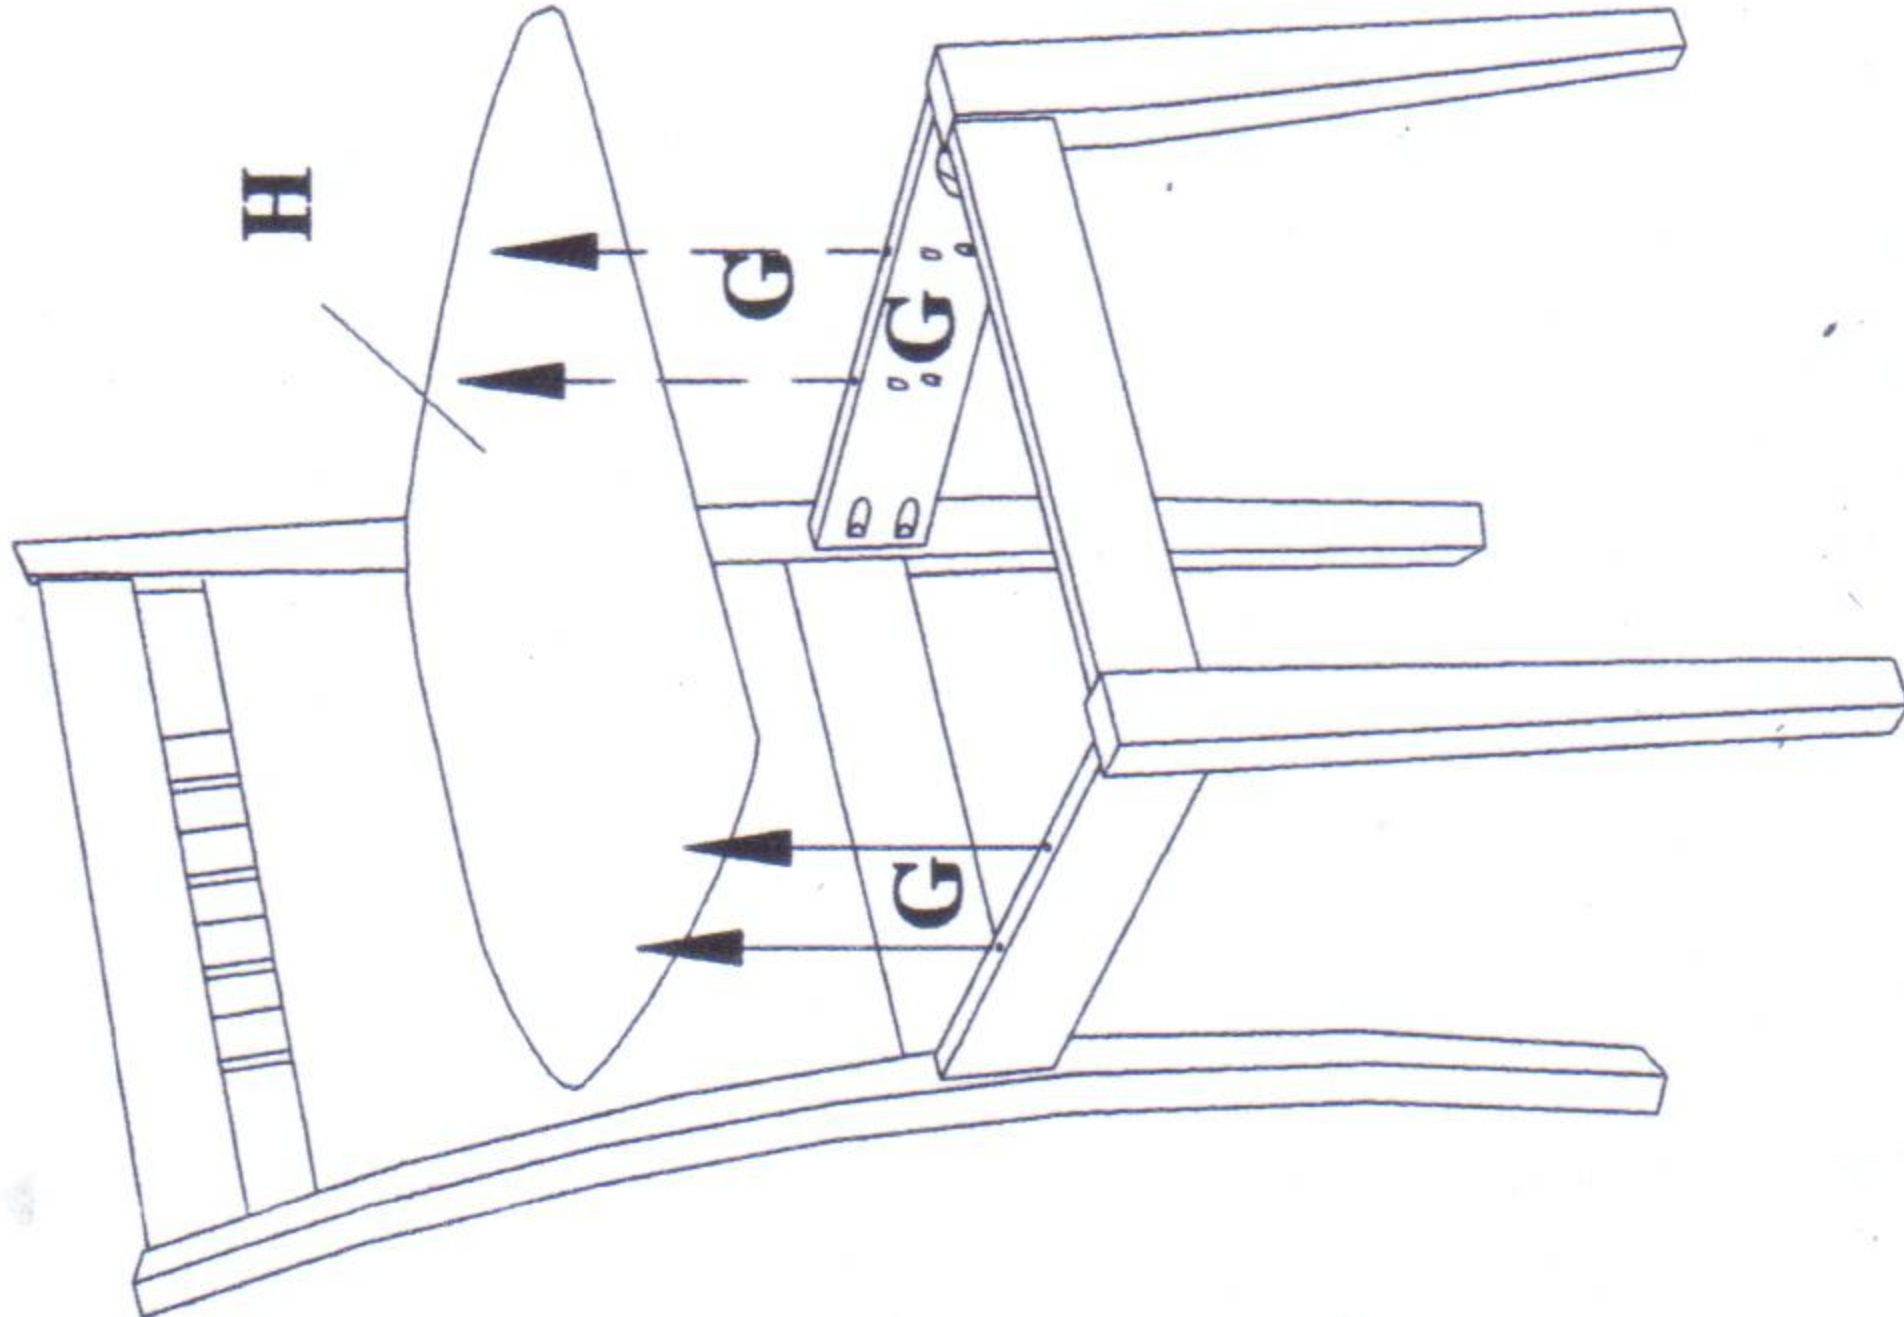

STEP 2

PART LIST		
CODE	DESCRIPTION	QTY
A	BACK REST	1 PC
B	FRONT LEG	1 PC
C	SIDE RAIL	2 PCS
D	ALLEN KEY	1 PC
E	JCBC BOLT M6X45MM	6 PCS
F	SPRING WASHER	6 PCS
G	CSK SCREW M4X32MM	4 PCS
H	SEAT CUSHION	1 PC