
CANOPY INSTALLATION INSTRUCTIONS

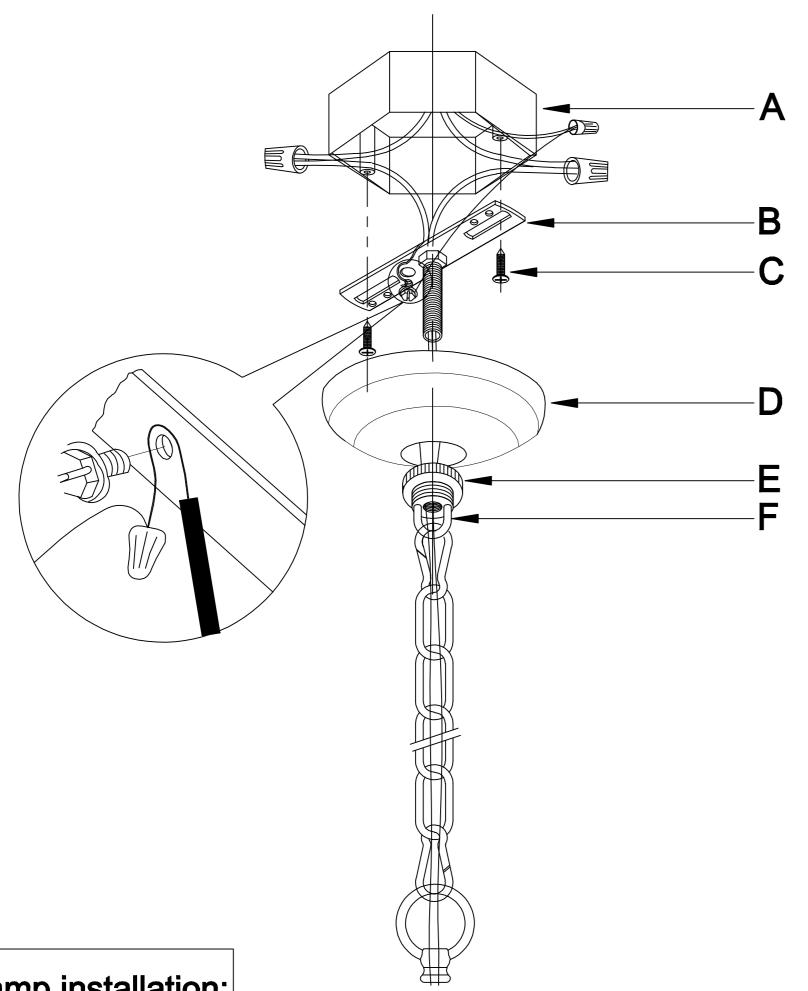

Attentions for lamp installation:


- 1. Please read the user manual carefully before the installation.
- 2. Please hire the professional electrician to install the lamp.
- 3. The load-bearing of the customer's ceiling must be over 3 times of the light weight.
- 4. The power must be cut off until the whole lamp is installed well.
- 5. To avoid getting an electric shock and cause the unnecessary hurt, please cut off the power when cleaning the lamp.
- A. Existing Electrical Box
- B. Crossbar

C. Crossbar Screws

D. Canopy

- E. Canopy Loop Nut lock
- F. Canopy Loop

Light Bulb

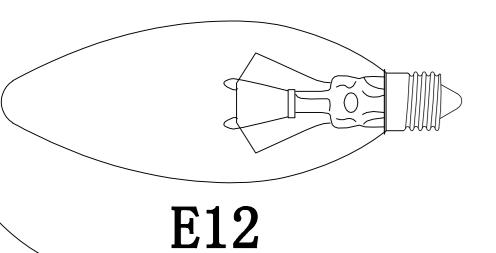


Buckle is used to connect the chain and loop or adjust the length of chain.

USER MANUAL FOR MODEL# HG8820


Light Bulb:E12

light:E12*3

(Rated 110-130V/60Hz, bulb 40W-60W maximum.)

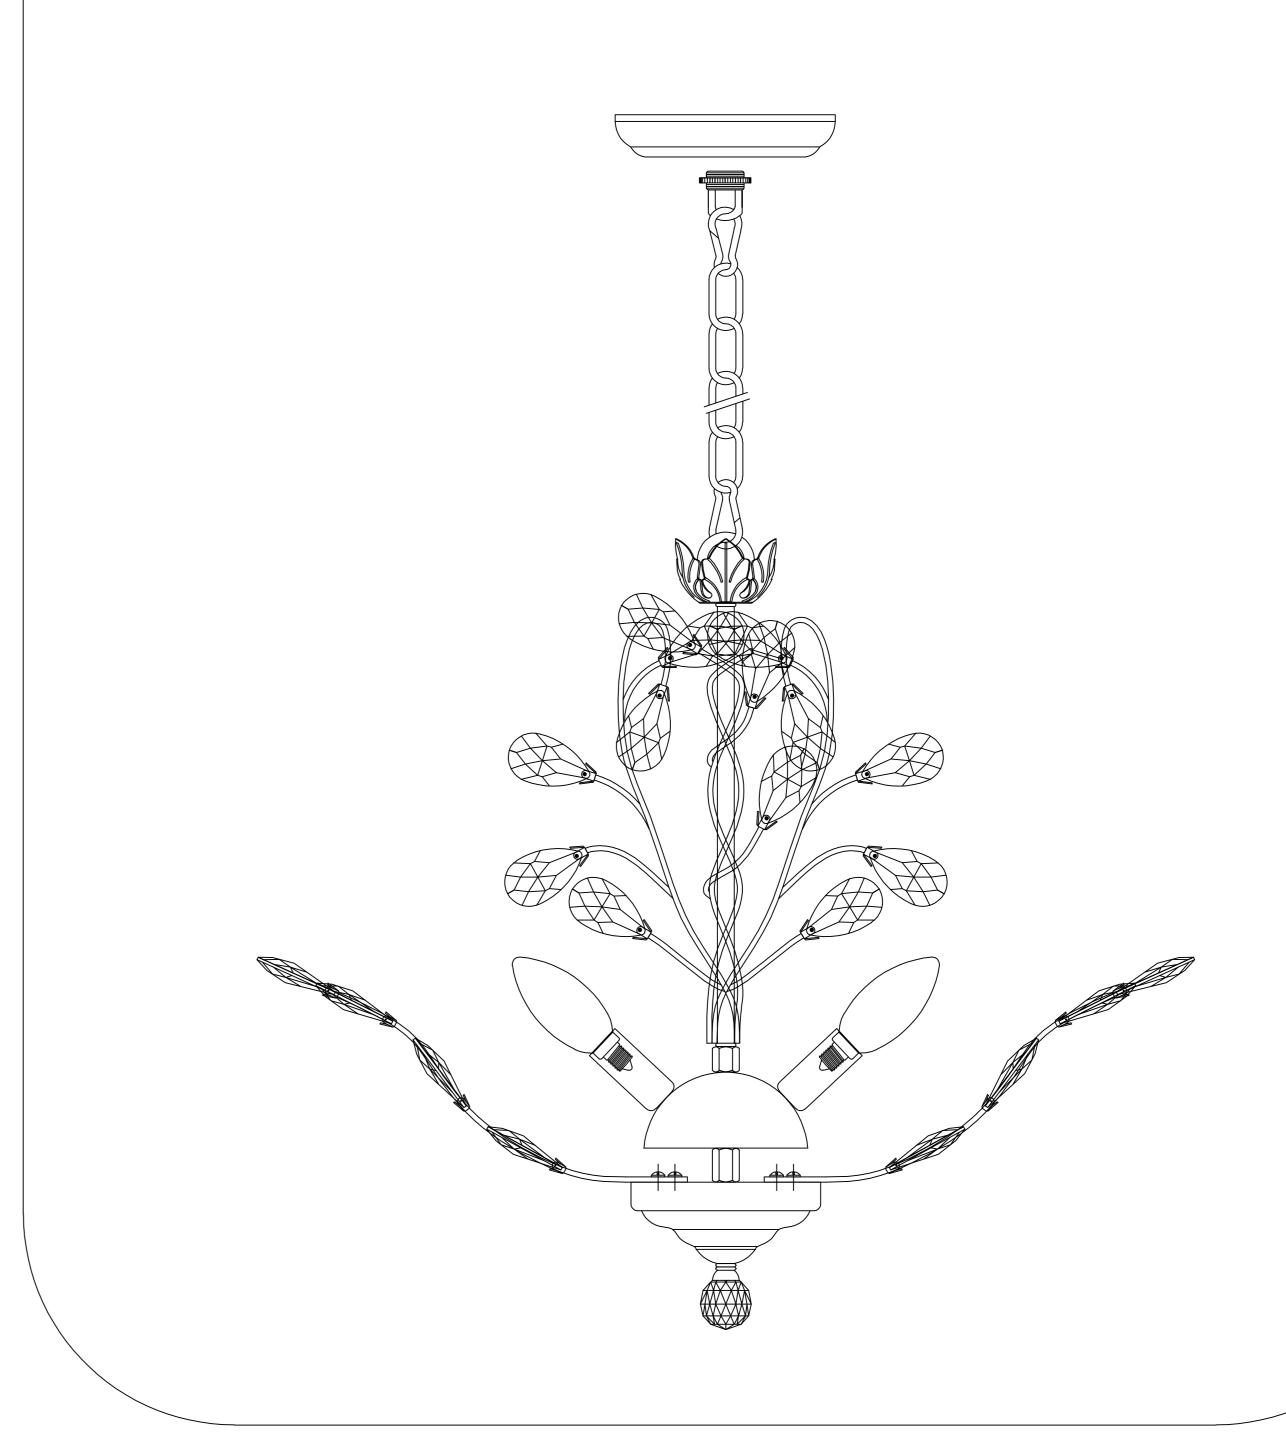


Please note: The parts in this table are completely unassembled, for illustrative purpose. In the actual product that you receive, some parts are assembled and attached together.

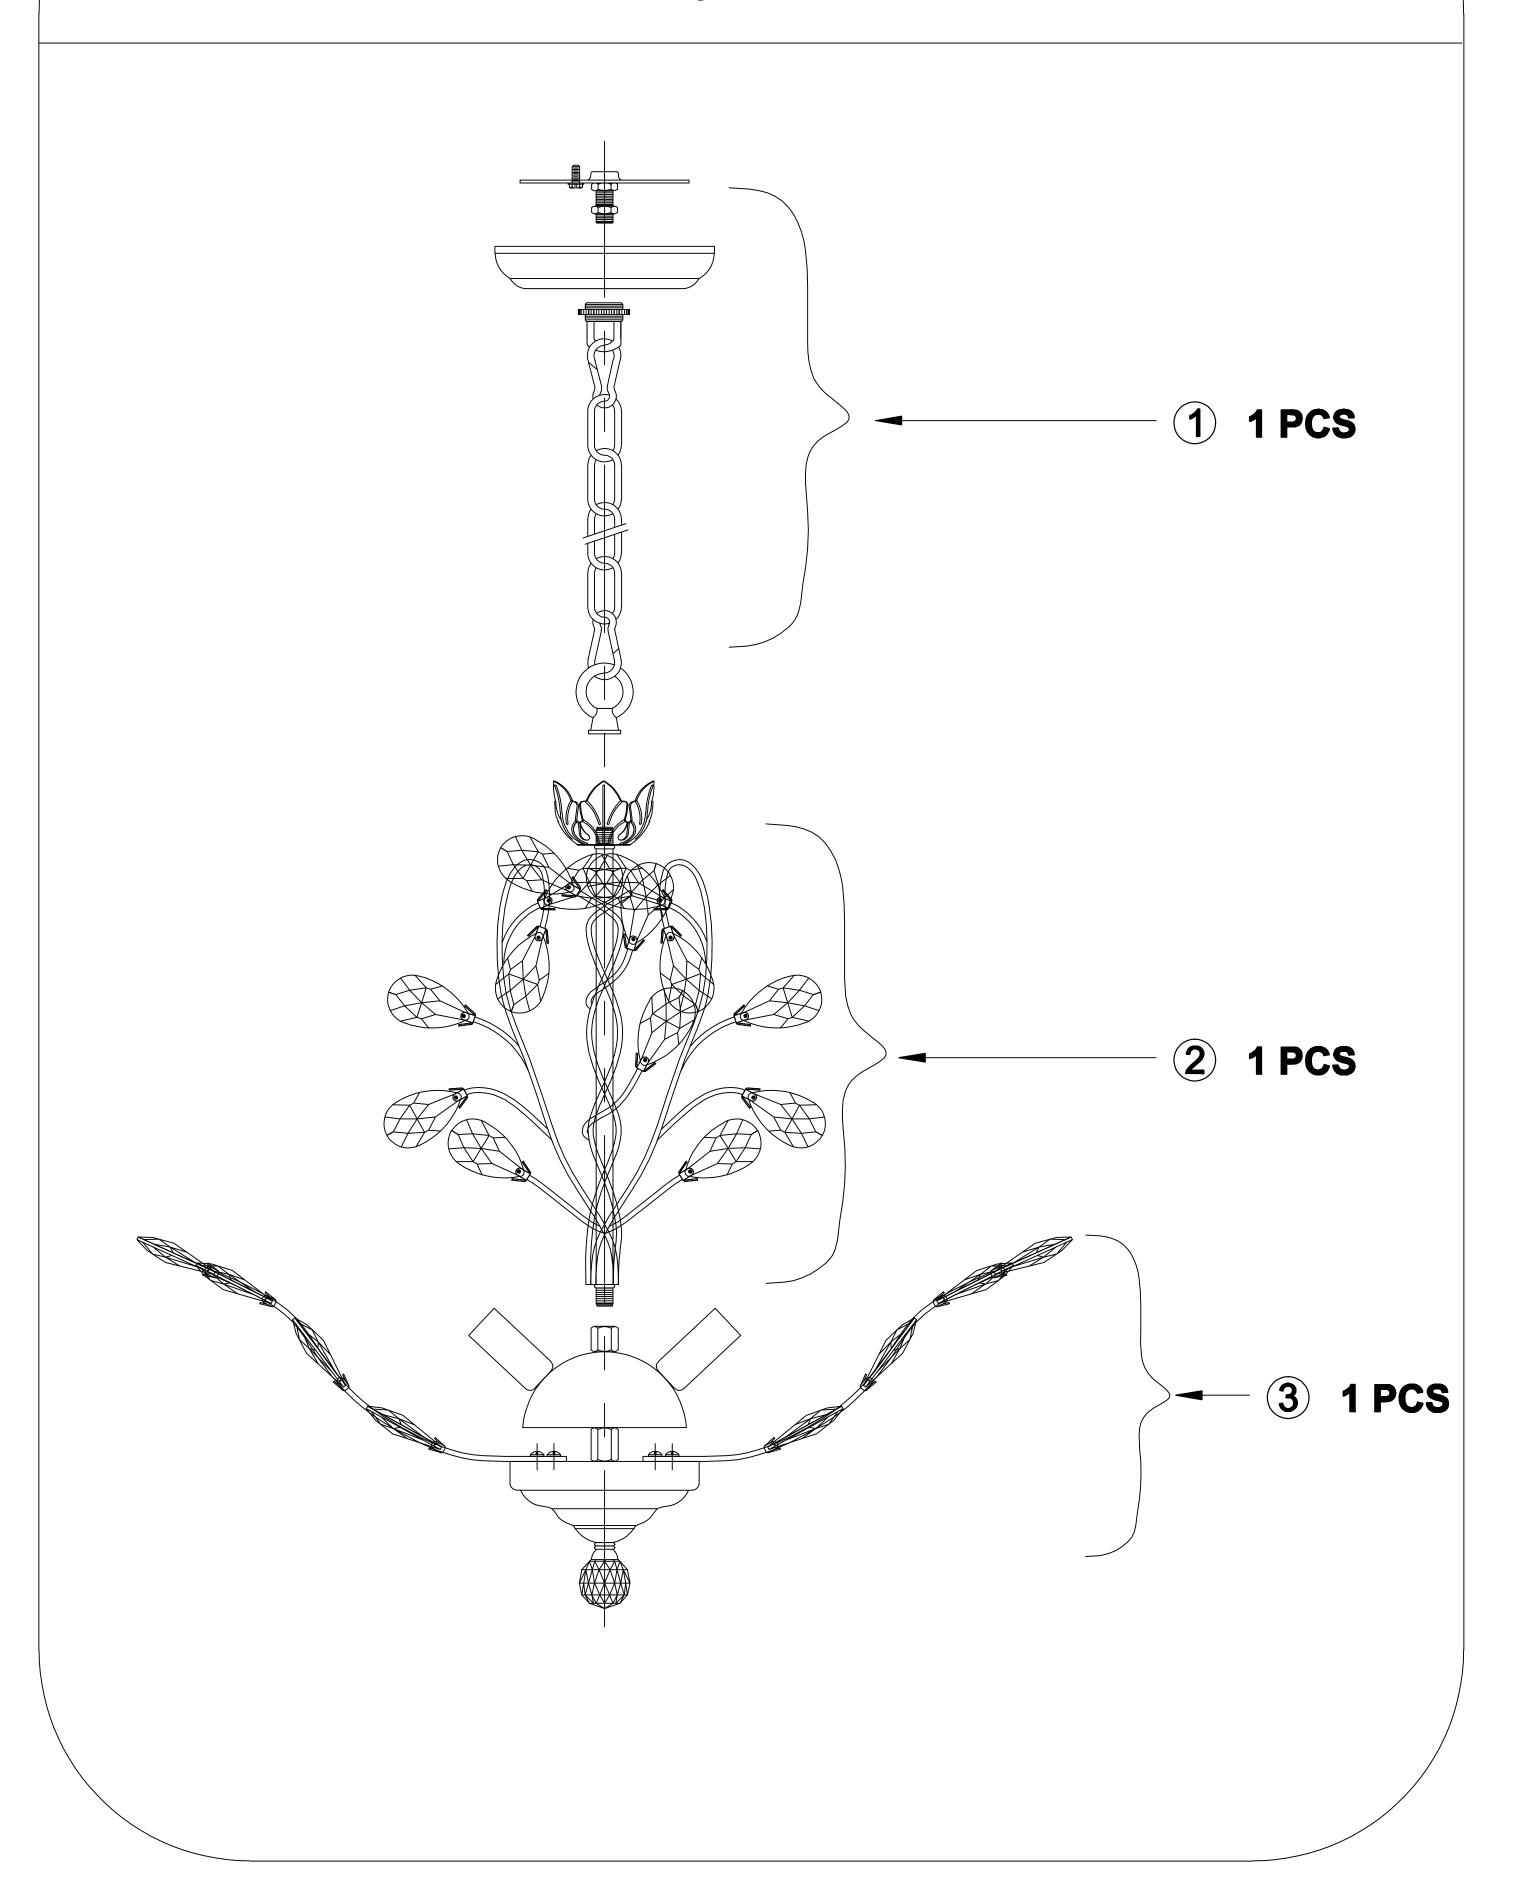



Products list


| | Picture | Quantity |
|---|---------|----------|
| 1 | | 1 PCS |
| 2 | | 1 PCS |
| 3 | | 1 PCS |

Assembly and Installation Steps

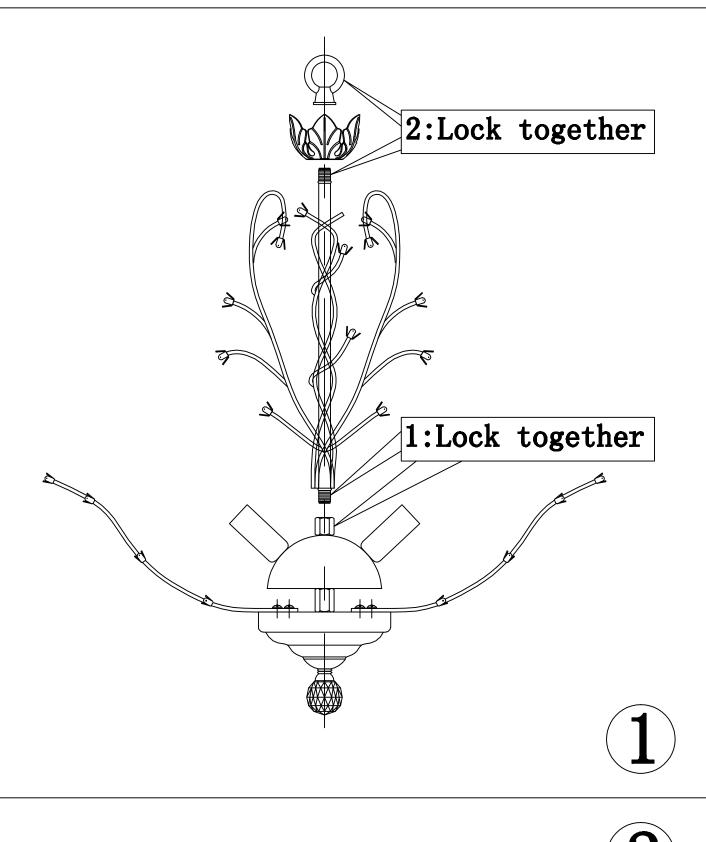

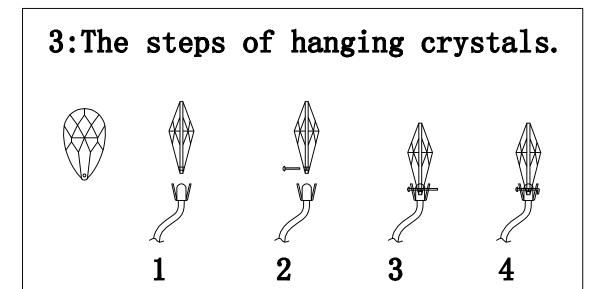

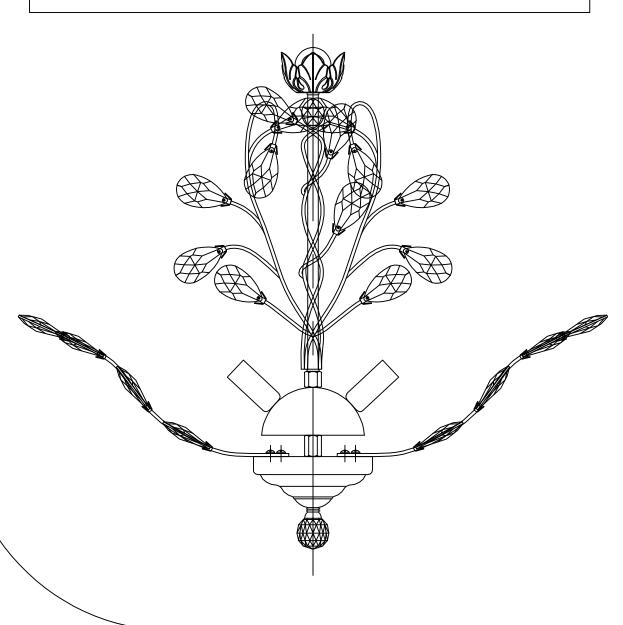

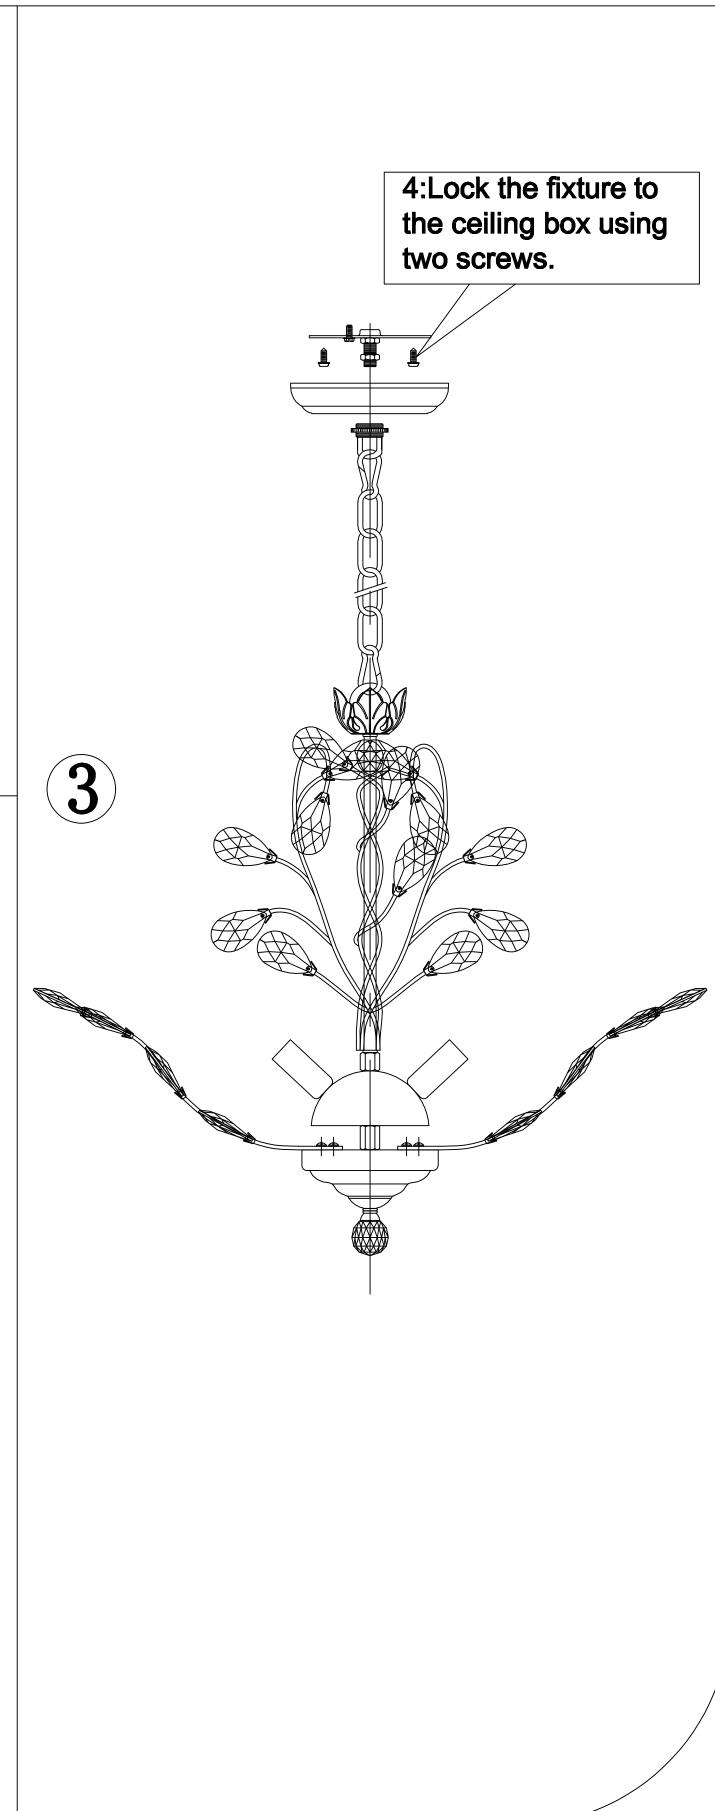

Product Size

