
 
 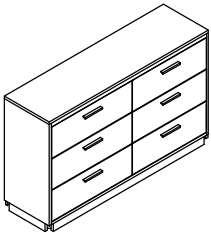







ASSEMBLY INSTRUCTION
ITEM NO. B187D DRESSER


NO	PARTS LIST		QTY
A	Dresser		1
B	Feet		4
C	Support Leg		1
NO	HARDWARE LIST		QTY
D	Bolt		4
E	Spring Washer		4
F	Washer $\frac{1}{4}$ " x 20mm		4
G	Allen Key M4		1

STEP 1

Take out Assembly Instruction sheet, Hardware Pack and Feet Packaging from bottom of unit which marked with the rope.

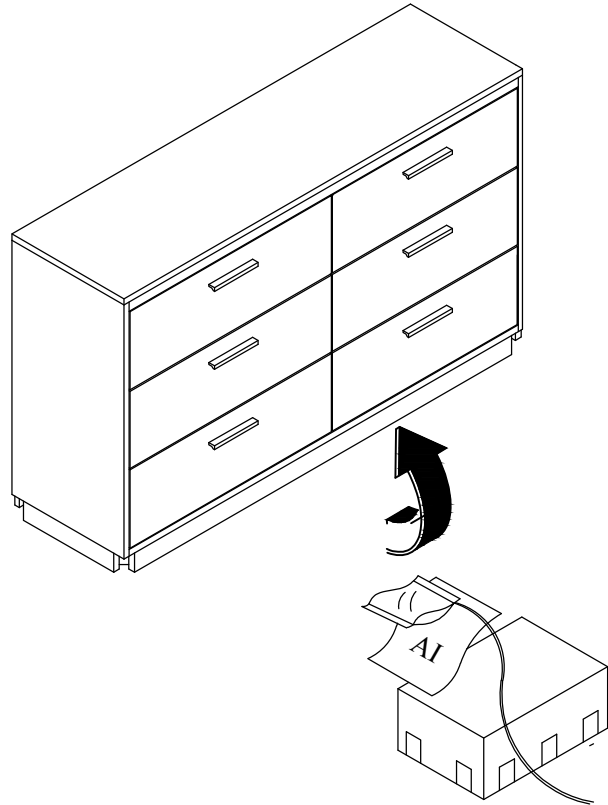

STEP 2

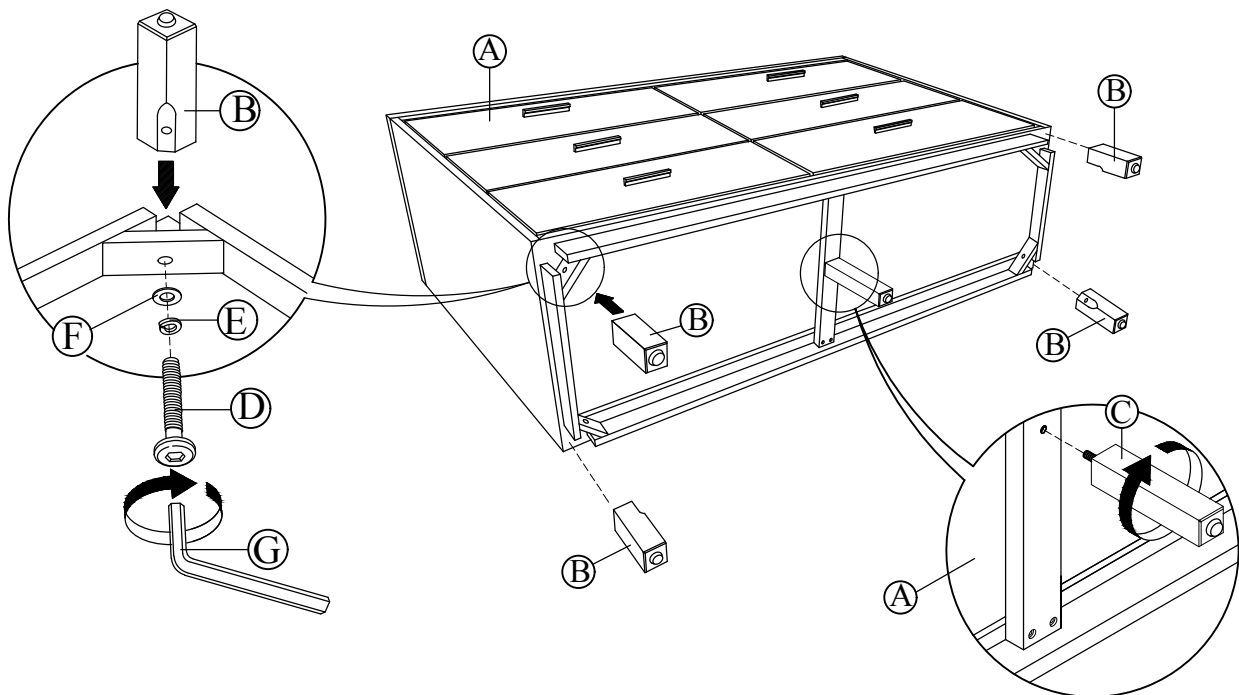

Insert Leg (B) at position as shown and tighten with JCBC Screw (D), Spring Washer (E) & Flat Washer (F) by using Allen key (G). Rotate and tighten Center Support Leg (C) to center of the bottom Dresser.