

## CARE AND MAINTENANCE

Always use felt pads under all articles to prevent discoloration or softening of the lacquer. Plastic and rubber bases on items can discolor wood. Wipe up spills immediately and avoid common hazards such as hot dishes, harsh solvents and abrasives. Cleaning should be done with a soft lint free cotton cloth dampened with water or furniture polish. On highly used surfaces we recommend applying a quality paste wax which should be used on a regular basis to provide additional protection from scratches and spills. How often you apply the wax depends on how much wear the furniture receives.

## NOTICE

 
- \* Please make sure that you have all parts indicated before you begin assembly of this item
- \* This item should be assembled on a soft surface to prevent scratching the finish during assembly
- \* This item may require periodic tightening





 


 
 

 


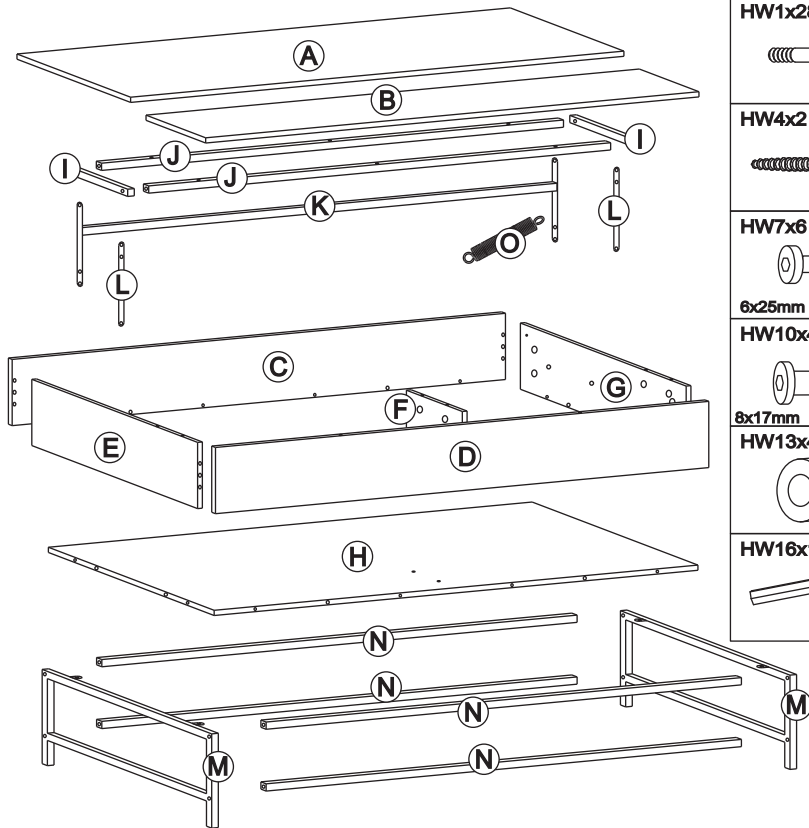





**Model# FOX2239/FOX2241**

**Product Dimensions: 50"W×26"D×17.8"/20.9"H**
 
## Part List and Hardware List



HW1x28 	HW2x28 	HW3x12 
HW4x2 	HW5x6  5x14mm	HW6x8  6x45mm
HW7x6  6x25mm	HW8x4  6x20mm	HW9x2  6x12mm
HW10x4  6x17mm	HW11x4  6x50mm	HW12x8 
HW13x4 	HW14x2 	HW15x6 
HW16x1 		

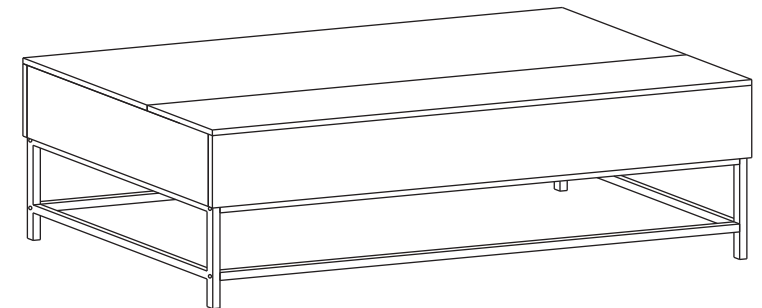 


## PREPARATION

Before beginning assembly of product, make sure all parts are present. Compare parts with package contents list and hardware contents list.


If any part is missing or damaged, do not attempt to assemble the product.

Estimated Assembly Time: 60 minutes.

 
1

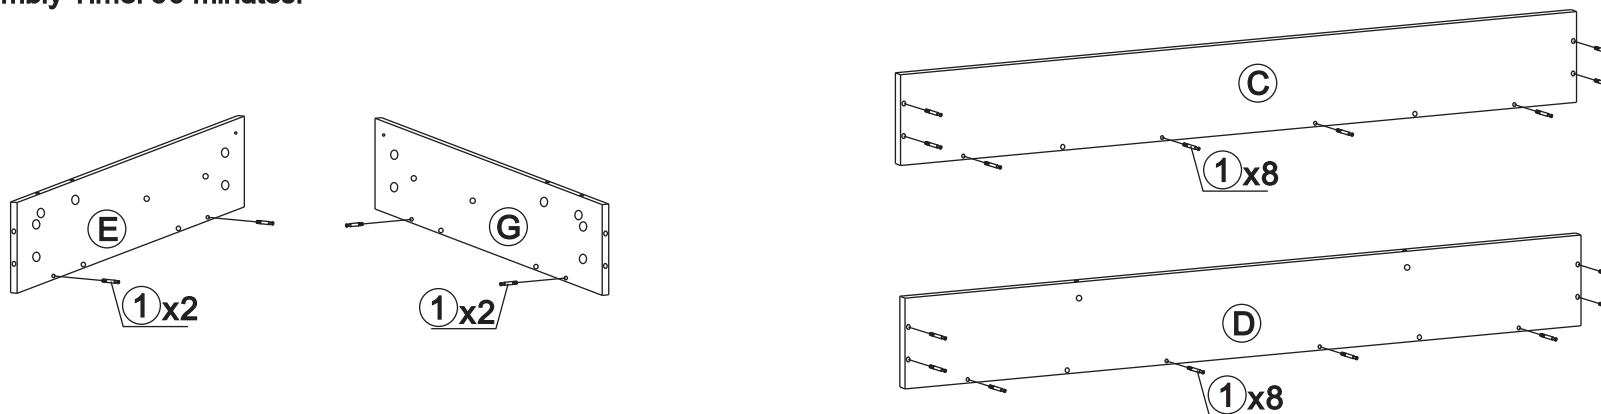


2

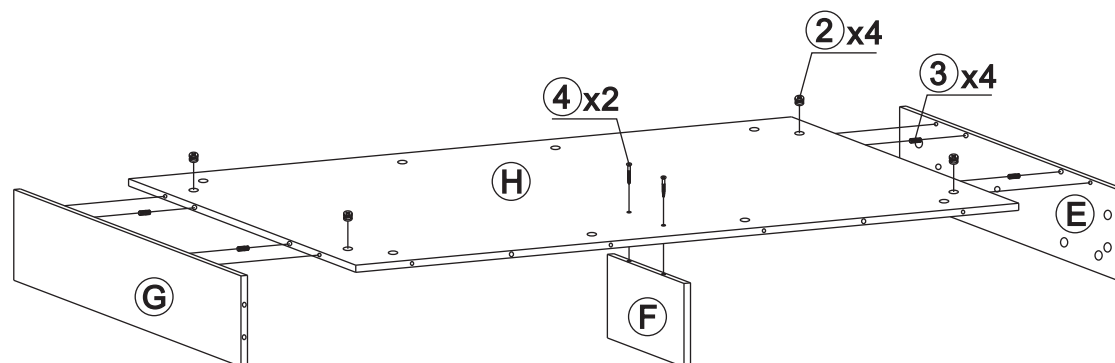 


3

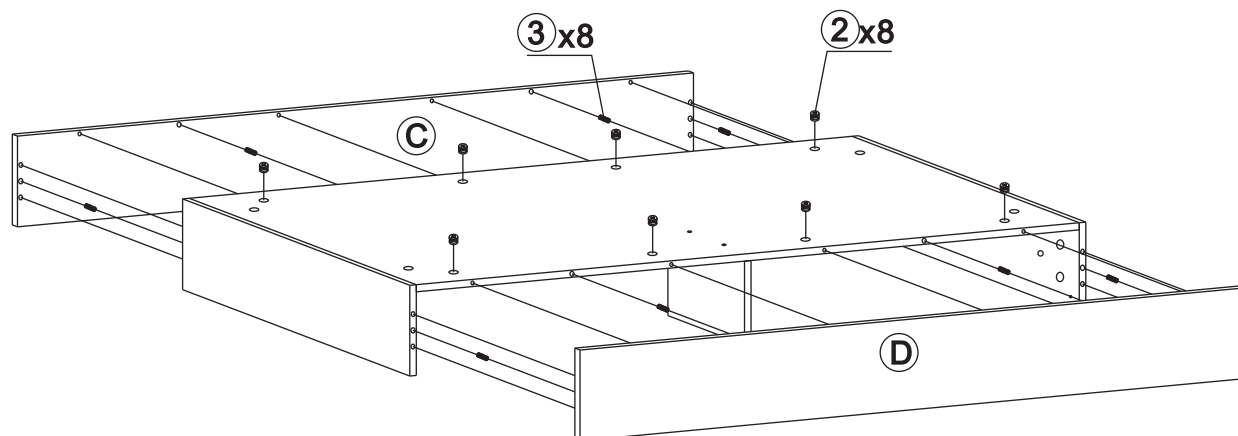 


4

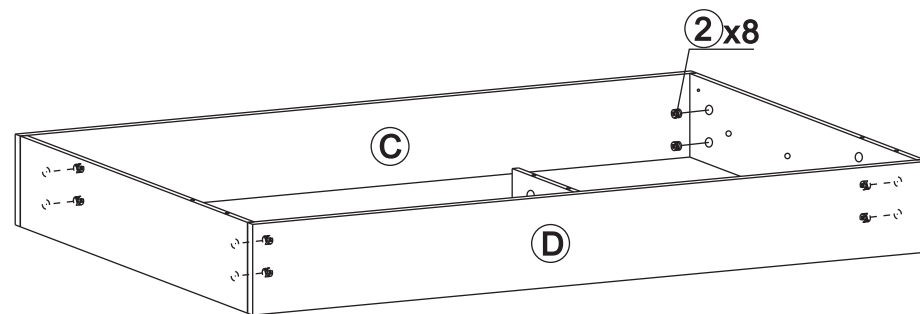 


5

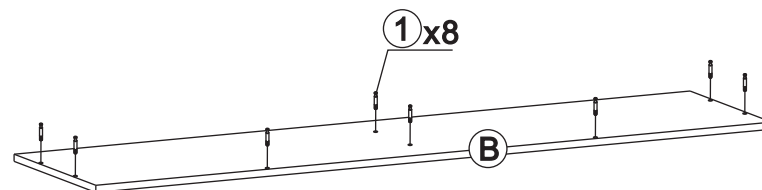 


6

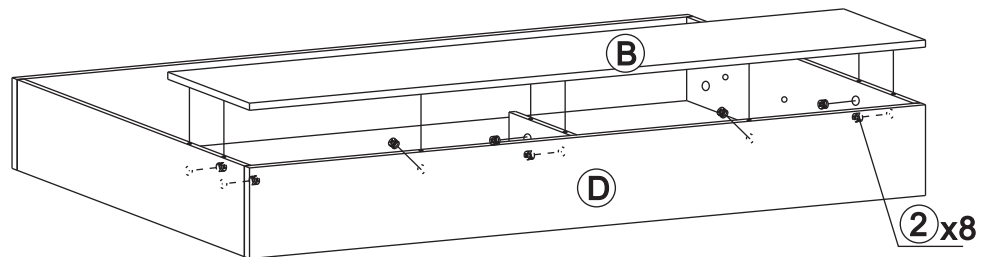 


7

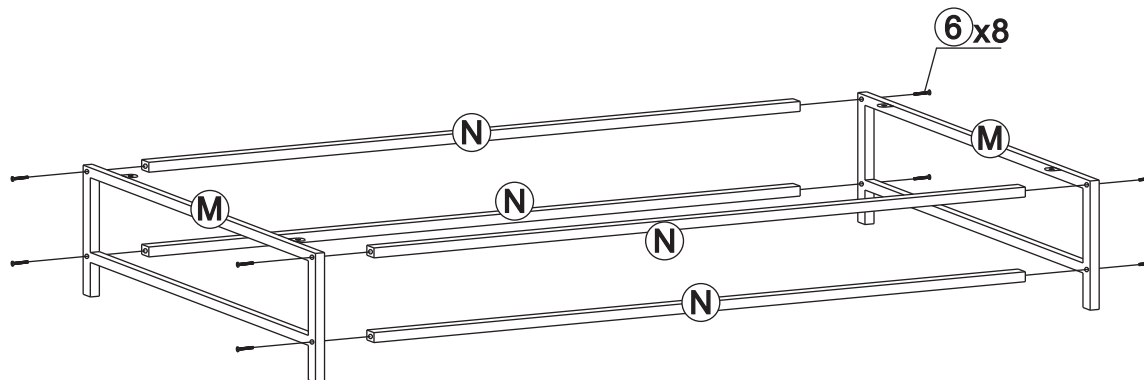 


8

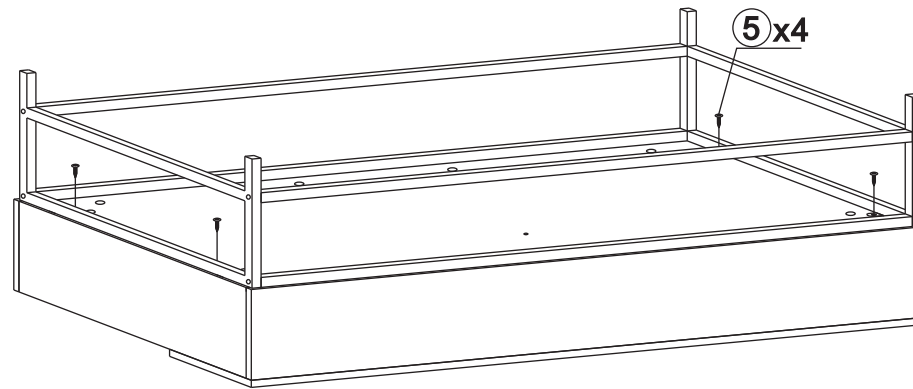 


9

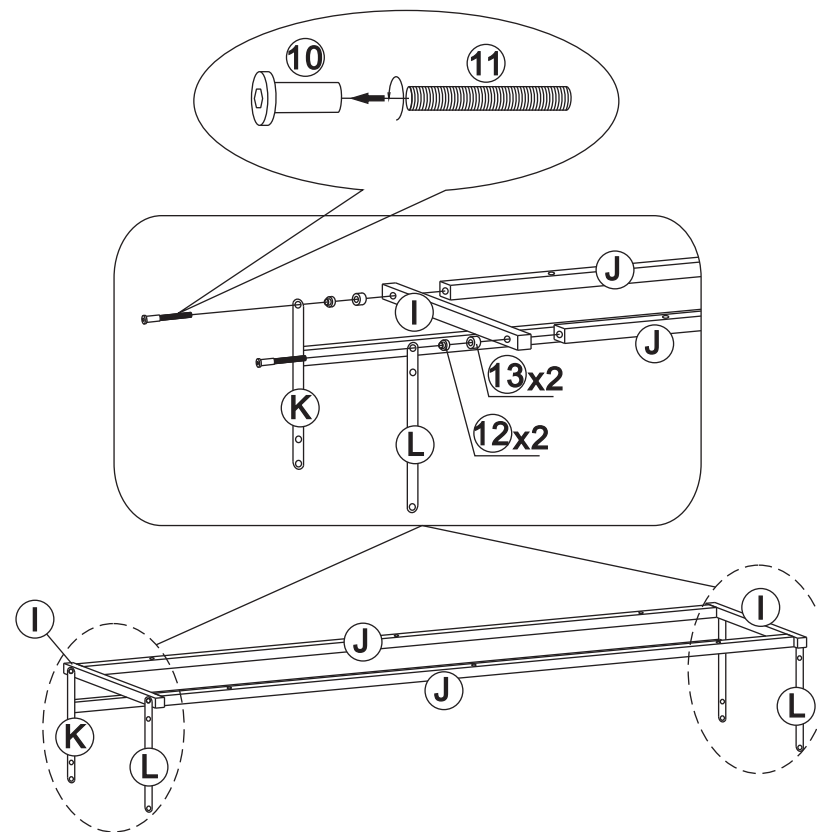 


10

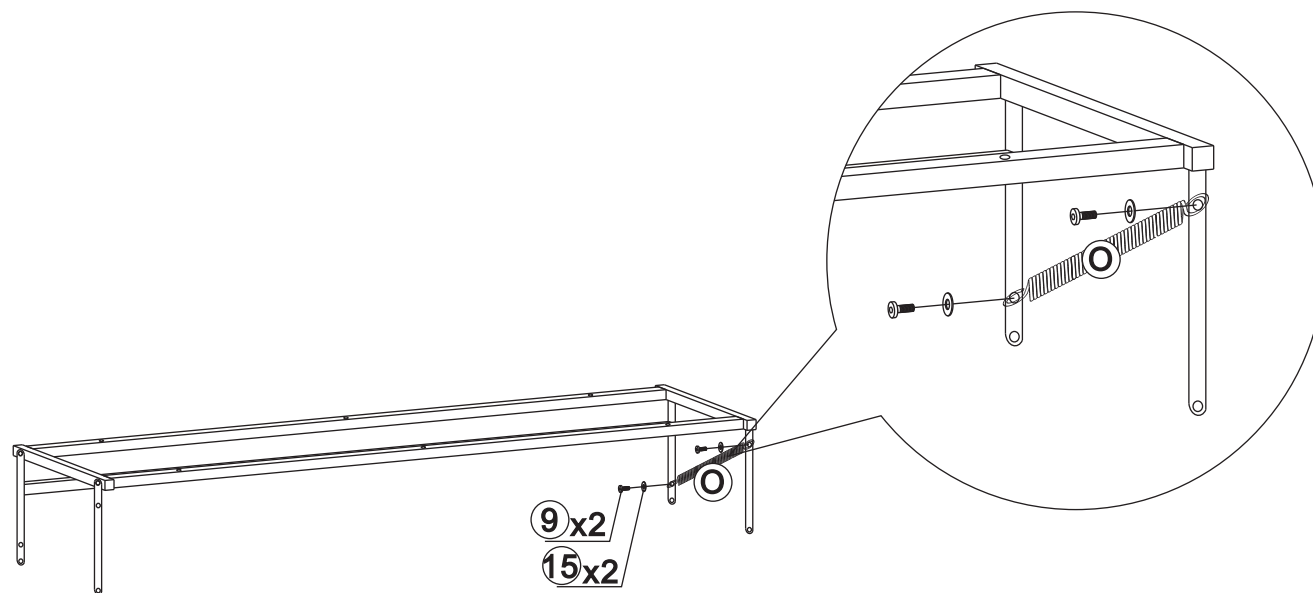 


11

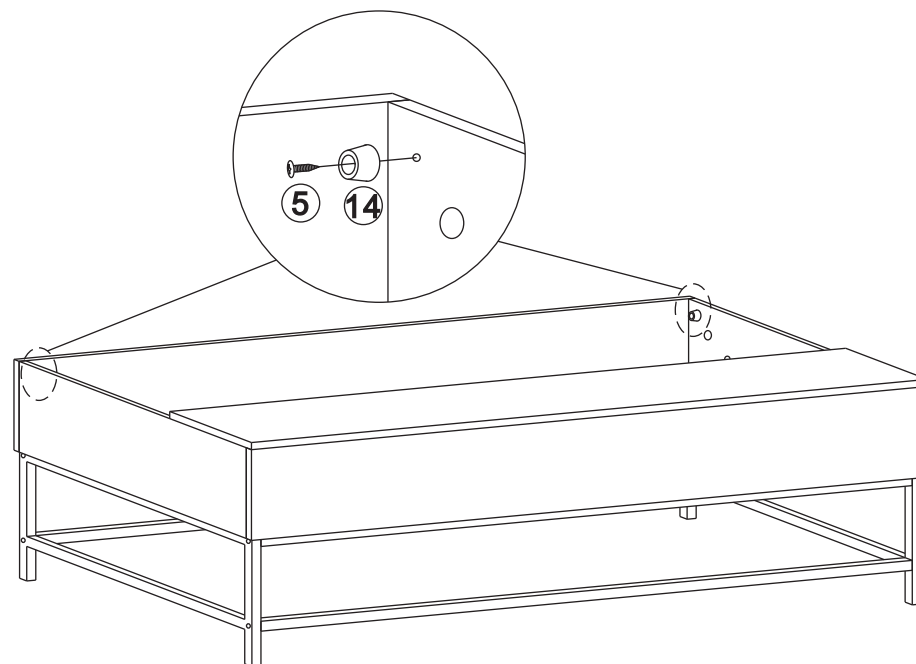 

12

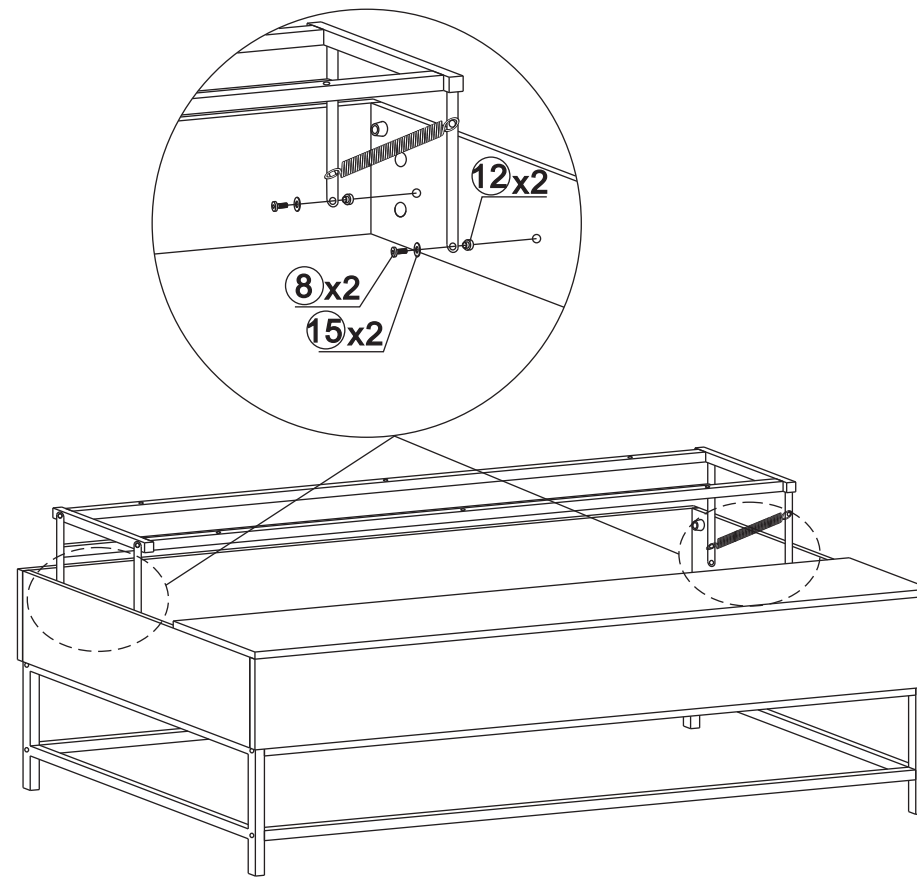 

13

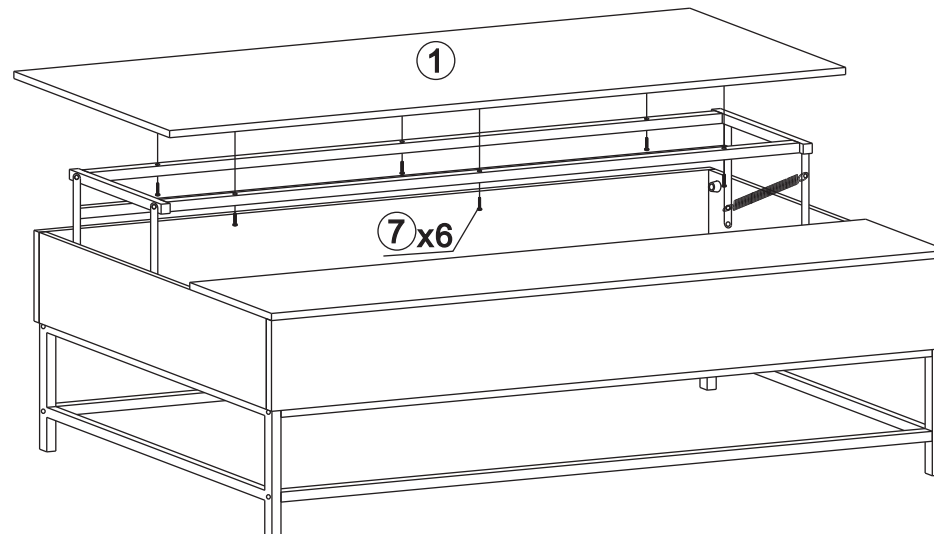 



# CAUTION

POSSIBLE FINGER ENTRAPMENT MAY  
OCCUR WHEN OPENING AND CLOSING DESK  
DRAWER  
KEEP FINGERS AWAY FROM MOVING PARTS  
NEVER ALLOW A CHILD TO OPEN OR CLOSE  
THE DESK DRAWER

