

ASSEMBLY INSTRUCTIONS COASTER FINE FURNITURE



Fine Furniture for every stage of life

902932 SNACK TABLE

REVISION 0: 09/25/2017 REVISION 1: 05/09/2023

PAGE 1 OF 5

COASTERFURNITURE.COM



ASSEMBLY TIPS:

- 1. Remove hardware from box and sort by size.
- 2. Please check to see that all hardware and parts are present prior to start of assembly.
- 3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



WARNING!

- 1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
- 2. This product is for home use only and not intended for commercial establishments.

ASSEMBLY TIME 25 MINUTES

PARTS IDENTIFICATION

Α	TOP PANEL	1PC
В	TOP FRAME	1PC
С	BOTTOM FRAME	1PC
D	BACK CROSSBAR	2PCS
E	FRONT CROSSBAR	2PCS




HARDWARE IDENTIFICATION

1	BOLT (1/4" x 1-1/4" BLK)	4PCS
2	CROSS BOLT (3/16" x 12mm BLK)	6PCS
3	LARGE BOLT (ø16 x 29mm)	1PC
4	FLOOR PROTECTOR (ø6.3mm)	4PCS
5	ALLEN WRENCH (4mm)	1PC




STEP 1


Do not tighten until each step is completed or instructed.

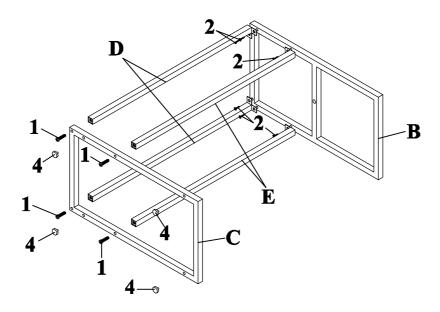

STEP 2

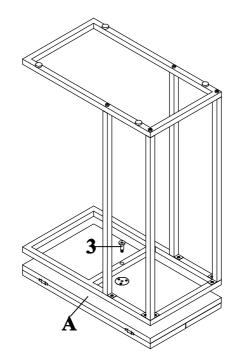

COMPLETE

 

PAGE 4 OF 5

COASTERFURNITURE.COM





Product Size : 305 X 457 X 641 H (MM)

Product Size: 12" X 18" X 25.5"

Product Size: 610 X 457 X 622 H (MM)

Product Size: 24" X 18" X 24.5"

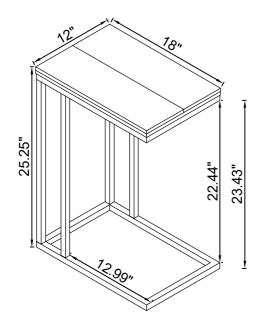

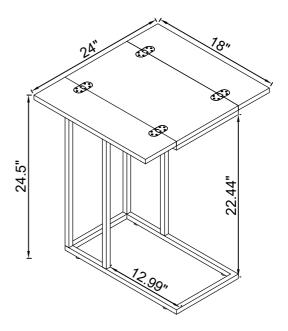

Note: Dimension tolerance ±5%