

HO664200TX – White

HO664300TX– Black

HO664400TX- Espresso

Corner Desk

Assembly Instruction



For assistance with assembly contact:

 
Southern Enterprises Inc.

Customer Service 1-800-633-5096

service@seidal.com

www.seidal.com

PO#11279

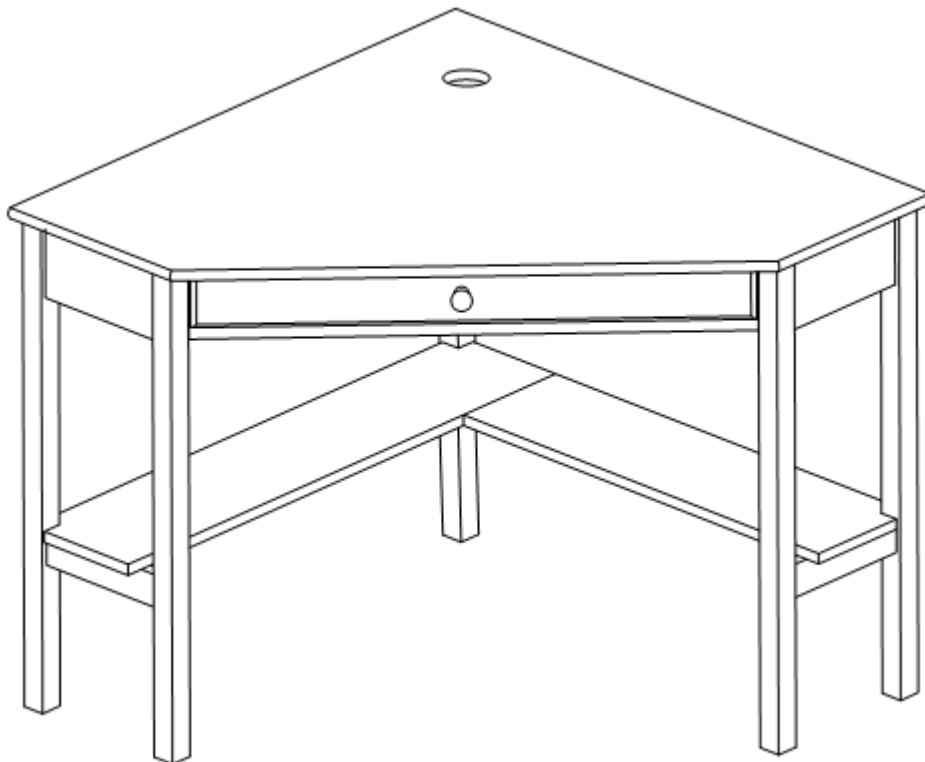

HO664200TX–White / HO664300TX-Black / HO664400TX-Espresso

 
 
 

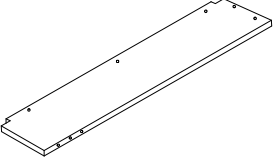 
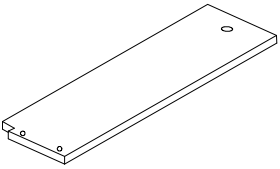 
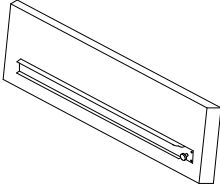 
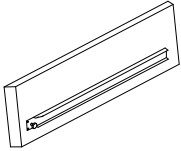 

 

 
 
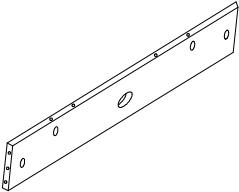 
Corner Desk Parts List

 

 

 

 
 
 

 

 
 
Please review all parts and hardware before disposing of any packaging.

Call Customer Service if missing hardware. Do not return to store/retailer.


Using a screw that is too long will cause damage. Before beginning assembly, separate each type of screw. Carefully study the screw diagrams below.

You may receive extra hardware with your unit.
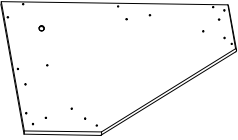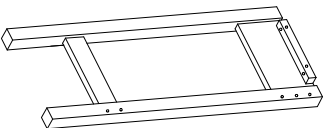
| | | |
|---|---|---|
| <p>A 1pc</p>  <p>Wood Top</p> | <p>B 1pc</p>  <p>Left Side Leg</p> | <p>C 1pc</p>  <p>Right Side Leg</p> |
| <p>D 2pcs</p>  <p>Bottom Stretcher</p> | <p>E 1pc</p>  <p>Left Long Shelf</p> | <p>F 1pc</p>  <p>Right Short Shelf</p> |
| <p>G 1pc</p>  <p>Drawer Right Panel</p> | <p>H 1pc</p>  <p>Drawer Left Panel</p> | <p>I 2pcs</p>  <p>Back Panel</p> |
| <p>J 1pc</p>  <p>Back Leg</p> | <p>K 1pc</p>  <p>Drawer Front Panel</p> | <p>L 1pc</p>  <p>Drawer Front Stretcher</p> |
| <p>M 1pc</p>  <p>Drawer Shelf</p> | <p>N 1pc</p>  <p>Drawer Back Panel</p> | |

| | | | | | |
|--|------------------|---|---|---|-------|
| 1 | 4pcs | 2 | 32pcs | 3 | 10pcs |
|  | |  | |  | |
| Bolt 1/4"x 1-1/4" | | Wood Dowel 5/16" x1-1/4" | | Screw 5/32"x1" | |
| 4 | 23pcs | 5 | 23pcs | 6 | 23pcs |
|  | |  | |  | |
| Cam Lock 5/8"x1-1/2" | | Cam Bolt 1/4"x1-1/2" | | Cover | |
| 7 | 2pcs | 8 | 12pcs | 9 | 1pc |
|  | |  | |  | |
| Hinge | | Screw 1/8"x1/2" | | Wood Knob | |
| 10 | 1pc | 11 | 1pc | 12 | 4pcs |
|  | |  | |  | |
| Bolt 5/32" x1" | | Plastic Cap | | Flat Washer 1/4"x3/4" | |
| 13 | Quantity Of 4 | | | | |
|  | | | | | |
| Lock Washer 1/4" | | | | | |
| Care and Cleaning Instructions: Before using, wipe with a clean, dry cloth. Periodically apply furniture wax to renew the finish. Avoid rubbing or scratching the surface with rough or abrasive objects. | | | For replacement parts or questions, please call Customer Service at 1-800-633-5096. Do not return product to store. Please call manufacturer for assistance, questions or parts. | | |
| Assembly Tool Required No.2 Phillips Screwdriver | | |  | | |

 Corner Desk Assembly Instructions

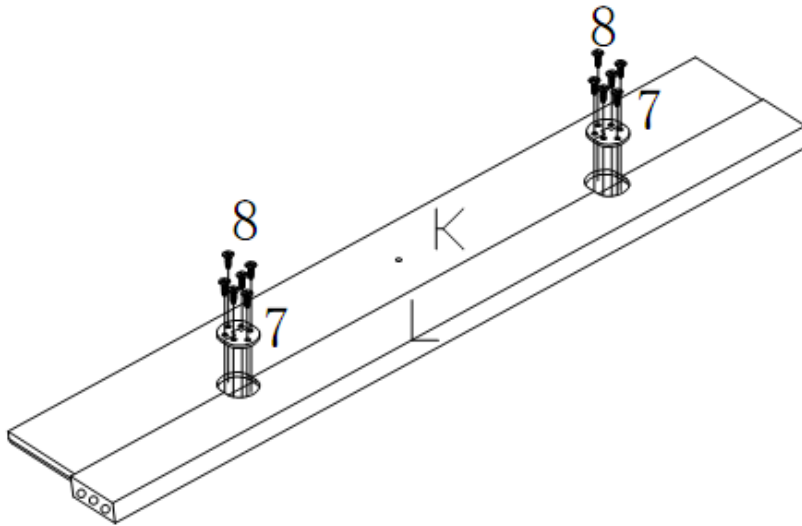


Step 1:

PLEASE DO NOT
OVER-TIGHTEN CAMLOCKS.
PLEASE STOP WHEN
YOU FEEL TIGHT

Put all parts on a soft surface to prevent scratches.

You may need a phillips screwdriver.

 Attach hinge (7) to drawer front panel (K) and drawer front stretcher (L) by using screw (8) as shown.

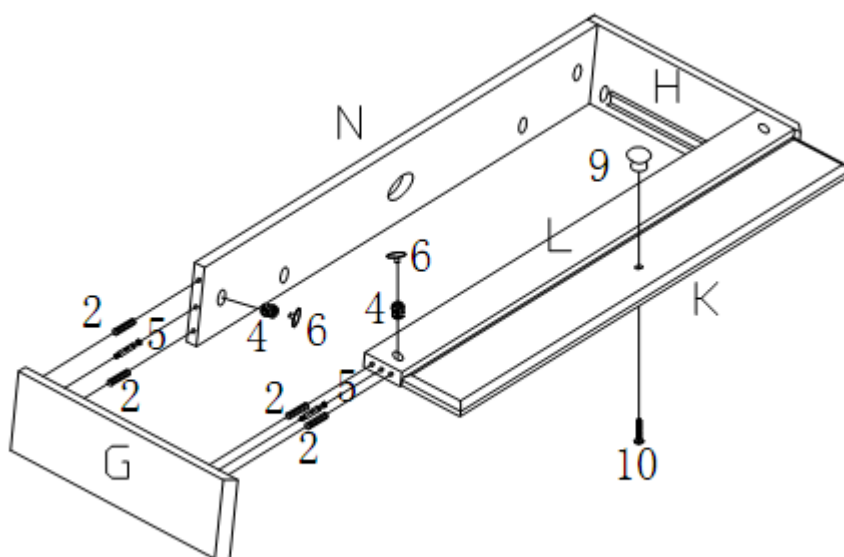


Step 2:

Attach drawer right side panel (G) to drawer back panel (N) and drawer front stretcher (L) by using wood dowel (2), cam lock (4), cam bolt (5), cover (6) as shown.


Repeat same procedure as above to attach drawer left side panel (H) to drawer back panel (N) and drawer front stretcher (L).

 Then attach wood knob (9) to drawer front panel (K) by using screw (10) as shown.

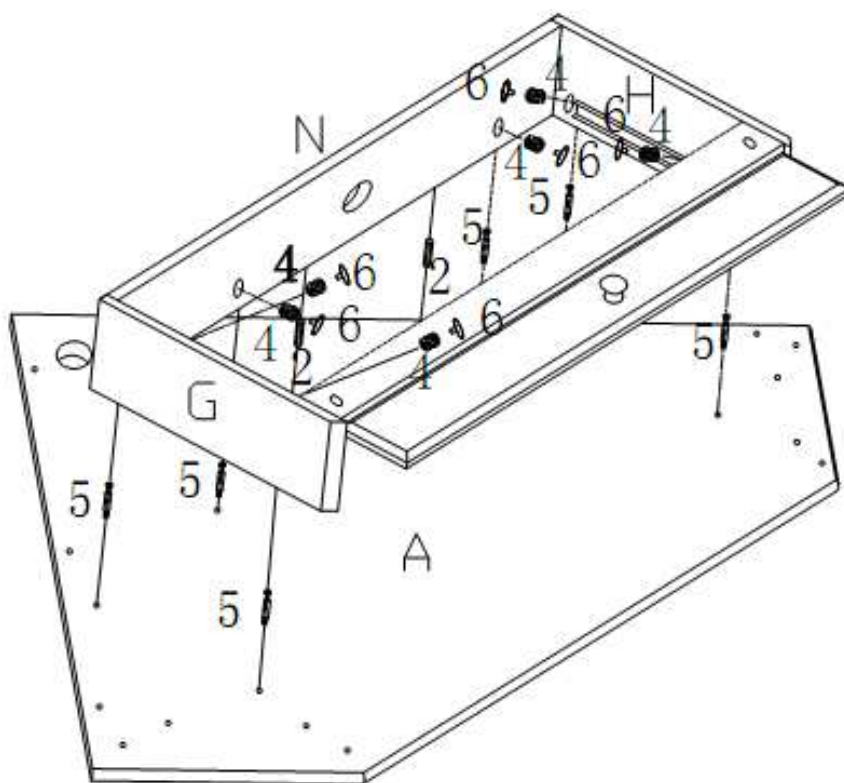


Step 3:

 Attach the frame to wood top (A) by using wood dowel (2), cam lock (4), cam bolt (5) and cover (6) as shown.

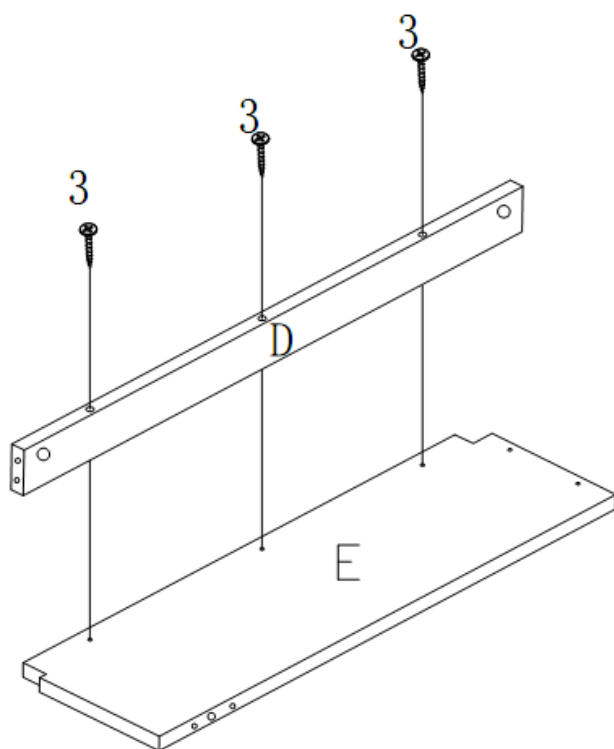


Step 4:

 Attach bottom stretcher (D) to short left shelf (E) by using screw (3) as shown.

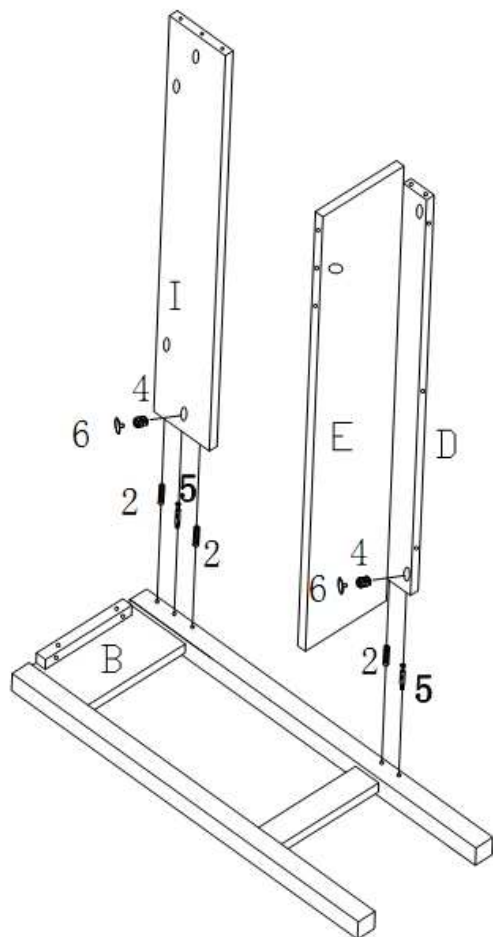


Step 5:

 Attach back panel (I) and bottom stretcher (D) to left side leg (B) by using wood dowel (2), cam lock (4), cam bolt (5) and cover (6) as shown.

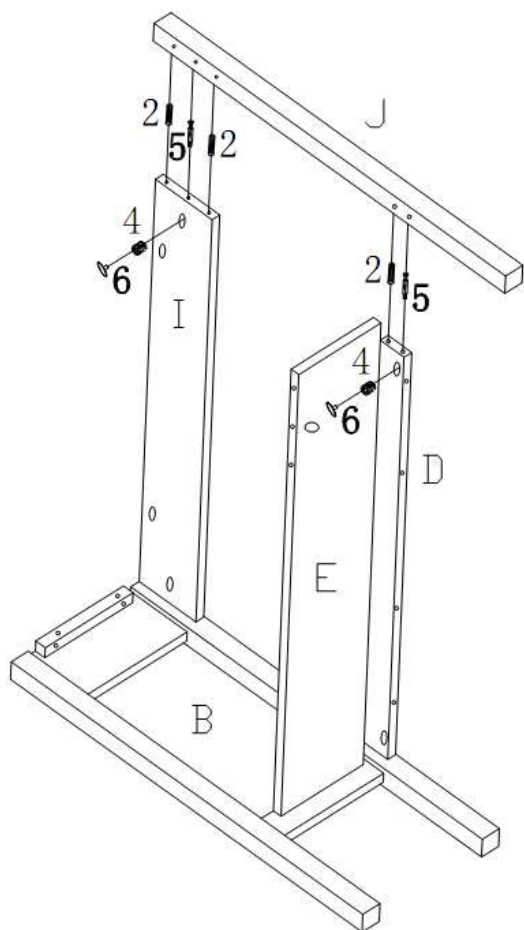


Step6:

 Attach back leg (J) to back panel (I) and bottom stretcher (D) by using wood dowel (2), cam lock (4), cam bolt (5) and cover (6) as shown.

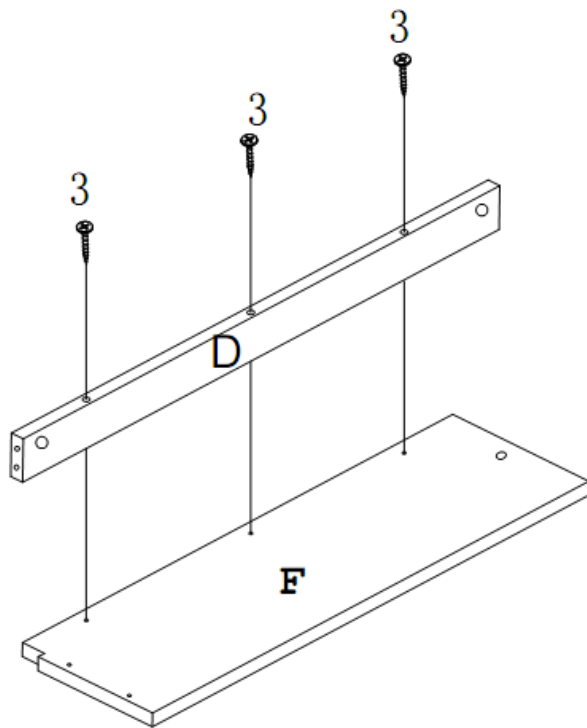


Step7:

 Attach bottom stretcher (D) to long right shelf (F) by using screw (3) as shown.

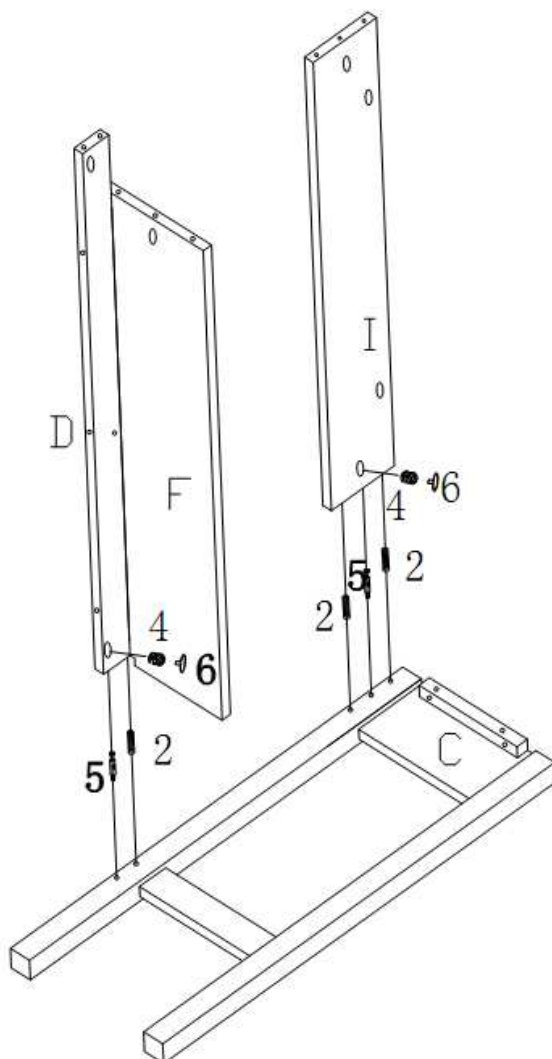


Step8:

 Attach back panel (I), bottom stretcher (D) to right side leg (C) by using wood dowel (2), cam lock (4), cam bolt (5) and cover (6) as shown.

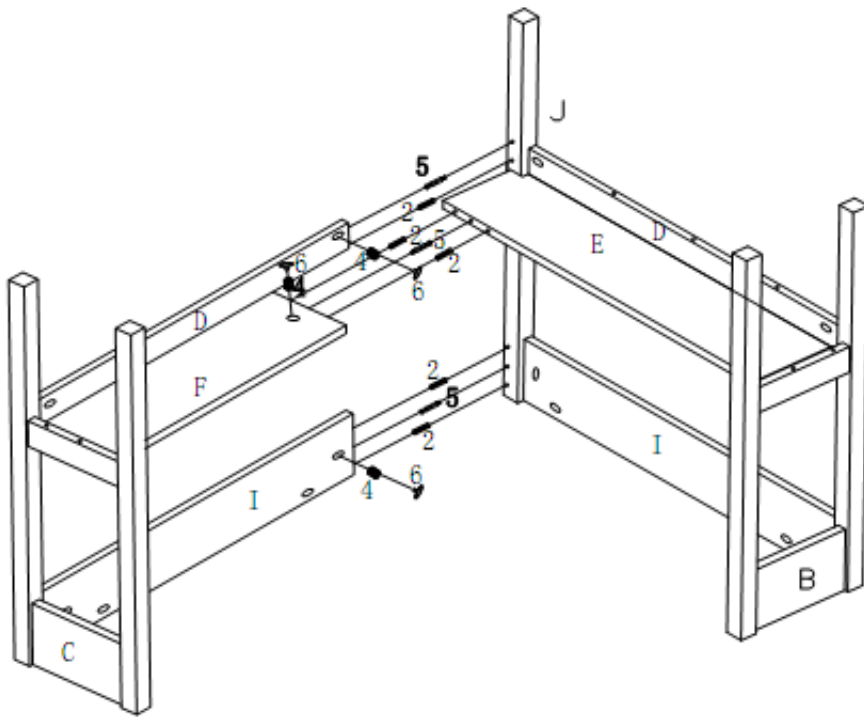

Step9:

 
Combine 2 side frames by using wood dowel (2), cam lock (4), cam bolt (5) and cover (6) as shown.

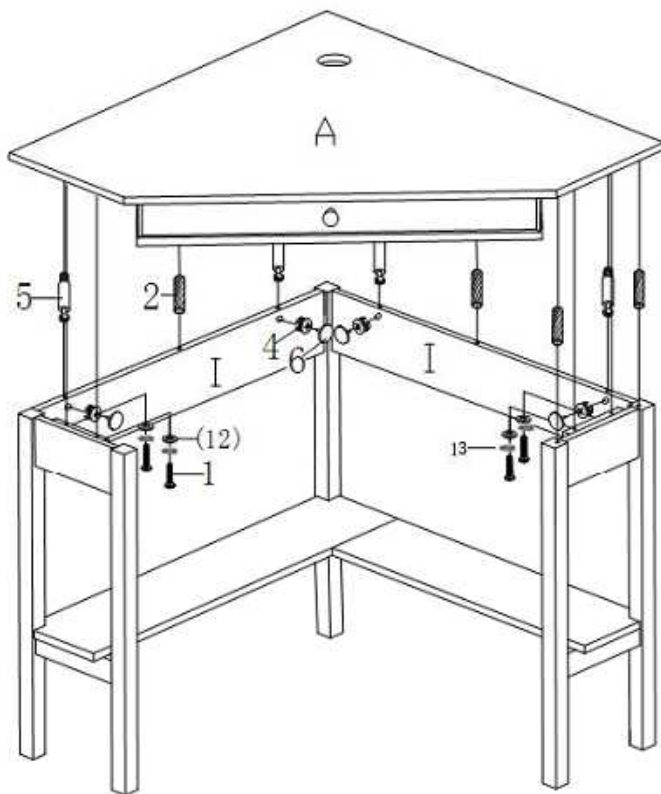

Step10:

Turn the frame upside down.

 
Attach wood top (A) to the frame by using bolt (1), flat washer (12), lock washer (13), wood dowel (2), cam lock (4), cam bolt (5) and cover (6) as shown.

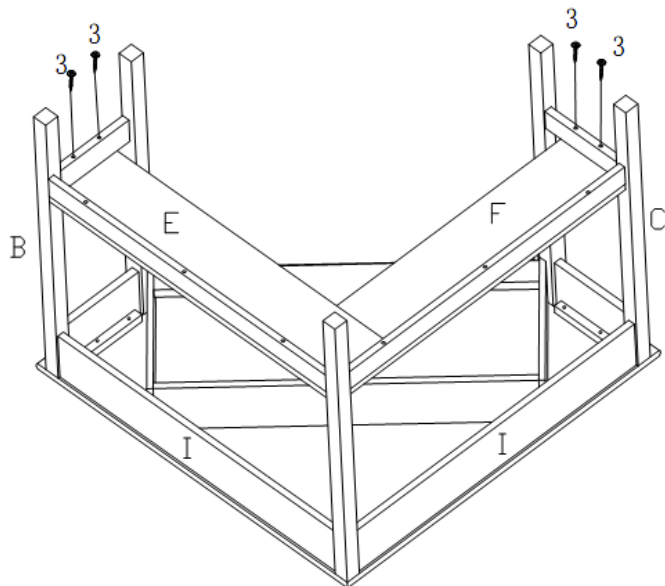

Step11:


Turn the table upside down.

 Insert screw (3) to fix rough predrilled holes side frames (B) (C) into shelves (E) (F) as shown.

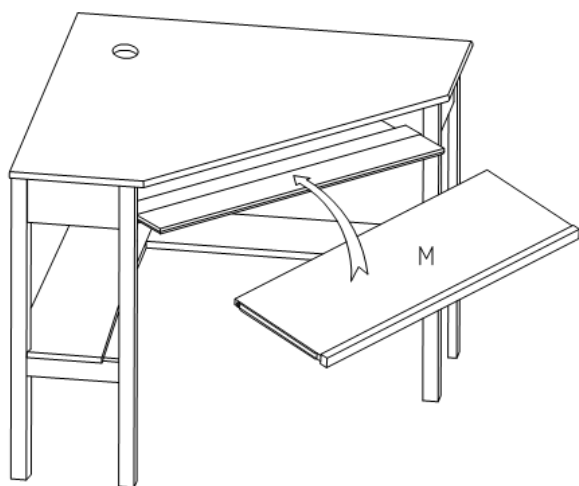

Step12:

 Turn the table upside again and slide drawer shelf (M) into the slides of unit as shown.

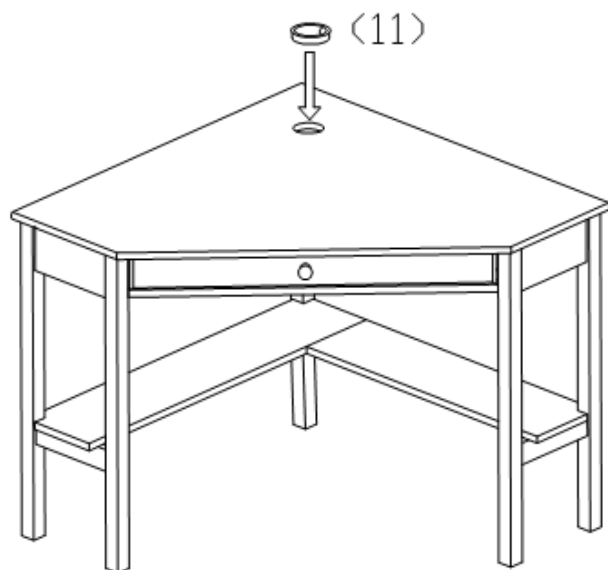

Step13:

Insert plastic cap (11) into the hole on the wood top (A) as shown.

We'd love to hear from you! Email us photos of our products in your home at sei@seidal.com and we might feature it on our site or use it to model one of our inspirational photos.

“PARTS WILL BE SENT IF AVAILABLE FROM SEI” “THIS IS NOT A WARRANTY”

Parts Replacement Form

Customer Information

Name _____

Address _____

City/State/Zip Code _____

Phone Number _____

Please indicate where you purchased this item: Store/ Website/ Catalog

Please indicate color/size/style number:

Style No

Parts Letter

Parts Description

Quantity Needed

Please count, identify and compare parts and hardware list to be sure all parts are present. It may help to divide parts and label them to correspond with part list. Extra hardware may be included. If any items are missing, **please contact Southern Enterprises at 800-633-5096 or in Dallas (972) 869-0111/ 9am – 4pm Mon-Fri Central time if you have product issues with your purchase. Please ask for a customer service representative for issues involving damages or replacement parts. Please ask for a technical assistance representative for any issues with product assembly and product construction. Please contact the retailer that you purchased from for returns.**

Missing or damaged hardware and/ or parts will be replaced free of charge. **We do not sell parts. We do not recommend modifying product(s) and we are not responsible for any damages due to product modification(s).**

If this product has not been purchased from our retail affiliates (within 9 months), we are under no obligation to provide parts or replacements merchandise. Parts will not be available for items arriving fully assembled.



Customer Service 1-800-633-5096

service@seidal.com

Southern Enterprises, Inc.

600 Freeport Parkway, Suite 200

Coppell, Texas 75019