

ASSEMBLY INSTRUCTIONS
COASTER FINE FURNITURE



Fine Furniture for every stage of life

701975
TV CONSOLE

ITEM:701975

ASSEMBLY INSTRUCTIONS

 
ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



WARNING!

1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.
















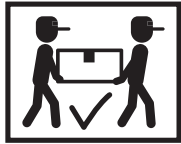


ASSEMBLY TIME

60 MINUTES

MAX TV SIZE : 65"

                
PARTS IDENTIFICATION

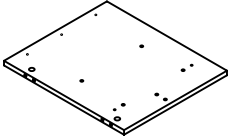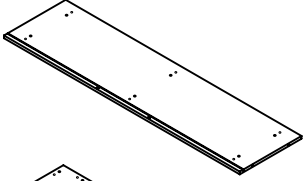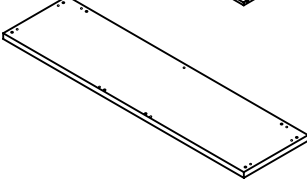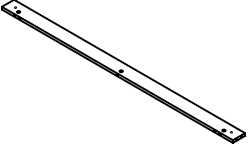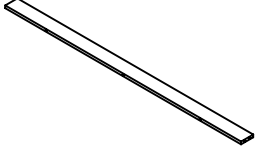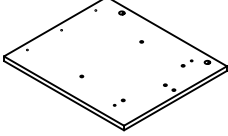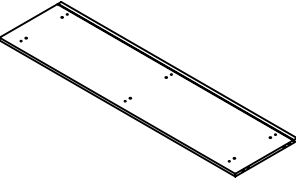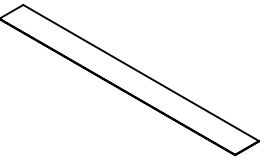A	LEFT SIDE PANEL		1 PC	I	CROSS PANEL		1 PC
B	LEFT CROSS BRACE		1 PC	J	TOP PANEL		1 PC
C	LONG CROSS BRACE		1 PC	K	LOWER CROSS BRACE		1 PC
D	LEFT DIVIDER PANEL		1 PC	L	LOWER LEFT DIVIDER PANEL		1 PC
E	RIGHT SIDE PANEL		1 PC	M	LOWER MIDDLE DIVIDER PANEL		1 PC
F	RIGHT CROSS BRACE		1 PC	N	LOWER RIGHT DIVIDER PANEL		1 PC
G	RIGHT DIVIDER PANEL		1 PC	O	UPPER BACK PANEL		1 PC
H	BOTTOM PANEL		1 PC	P	LOWER BACK PANEL		1 PC


NOTE:

Phillips head screw driver is required in the assembly process; however, manufacturer does not provide this item.

 
ITEM:701975

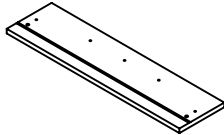Q **DRAWER FRONT PANEL**  **2 PCS**

 R **DRAWER BACK PANEL**  **2 PCS**



S **LEFT DRAWER SIDE PANEL**  **2 PCS**

 T **RIGHT DRAWER SIDE PANEL**  **2 PCS**

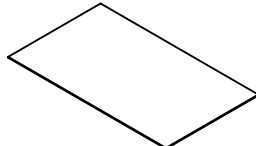U **DRAWER BOTTOM PANEL**  **2 PCS**

Z

  HARDWARE IDENTIFICATION

NO	DESCRIPTION	FIGURE	Q'TY	NO	DESCRIPTION	FIGURE	Q'TY
1	GLUE 40g		1 PC	8	SHORT SCREW Ø 3x10mm SR		24 PCS
2	WOODEN DOWEL Ø 8x30mm		49 PCS	9	PLASTIC FEET Ø 15mm		5 PCS
3	CAM BOLT Ø 7x35.5mm SR		27 PCS	10	HANDLE L = 290mm		2 PCS
4	CAM LOCK Ø 15x12mm SR		27 PCS	11	HANDLE BOLT Ø 4x28mm SR		6 PCS
5	LONG SCREW Ø 4.5x42mm SR		8 PCS	12	ALLEN WRENCH Ø 4x28mm RBW		8 PCS
6	SCREW Ø 4.3x35mm SR		8 PCS	13	STICKER Ø 20mm		5 PCS
7	RAIL L = 350mm WHT		2 SET				

Z7,Z10,Z11 not included in blister packaging.

 
 
NOTE:

Phillips head screw driver is required in the assembly process; however, manufacturer does not provide this item.

ITEM: 701975

STEP 1



COASTER
FINE FURNITURE

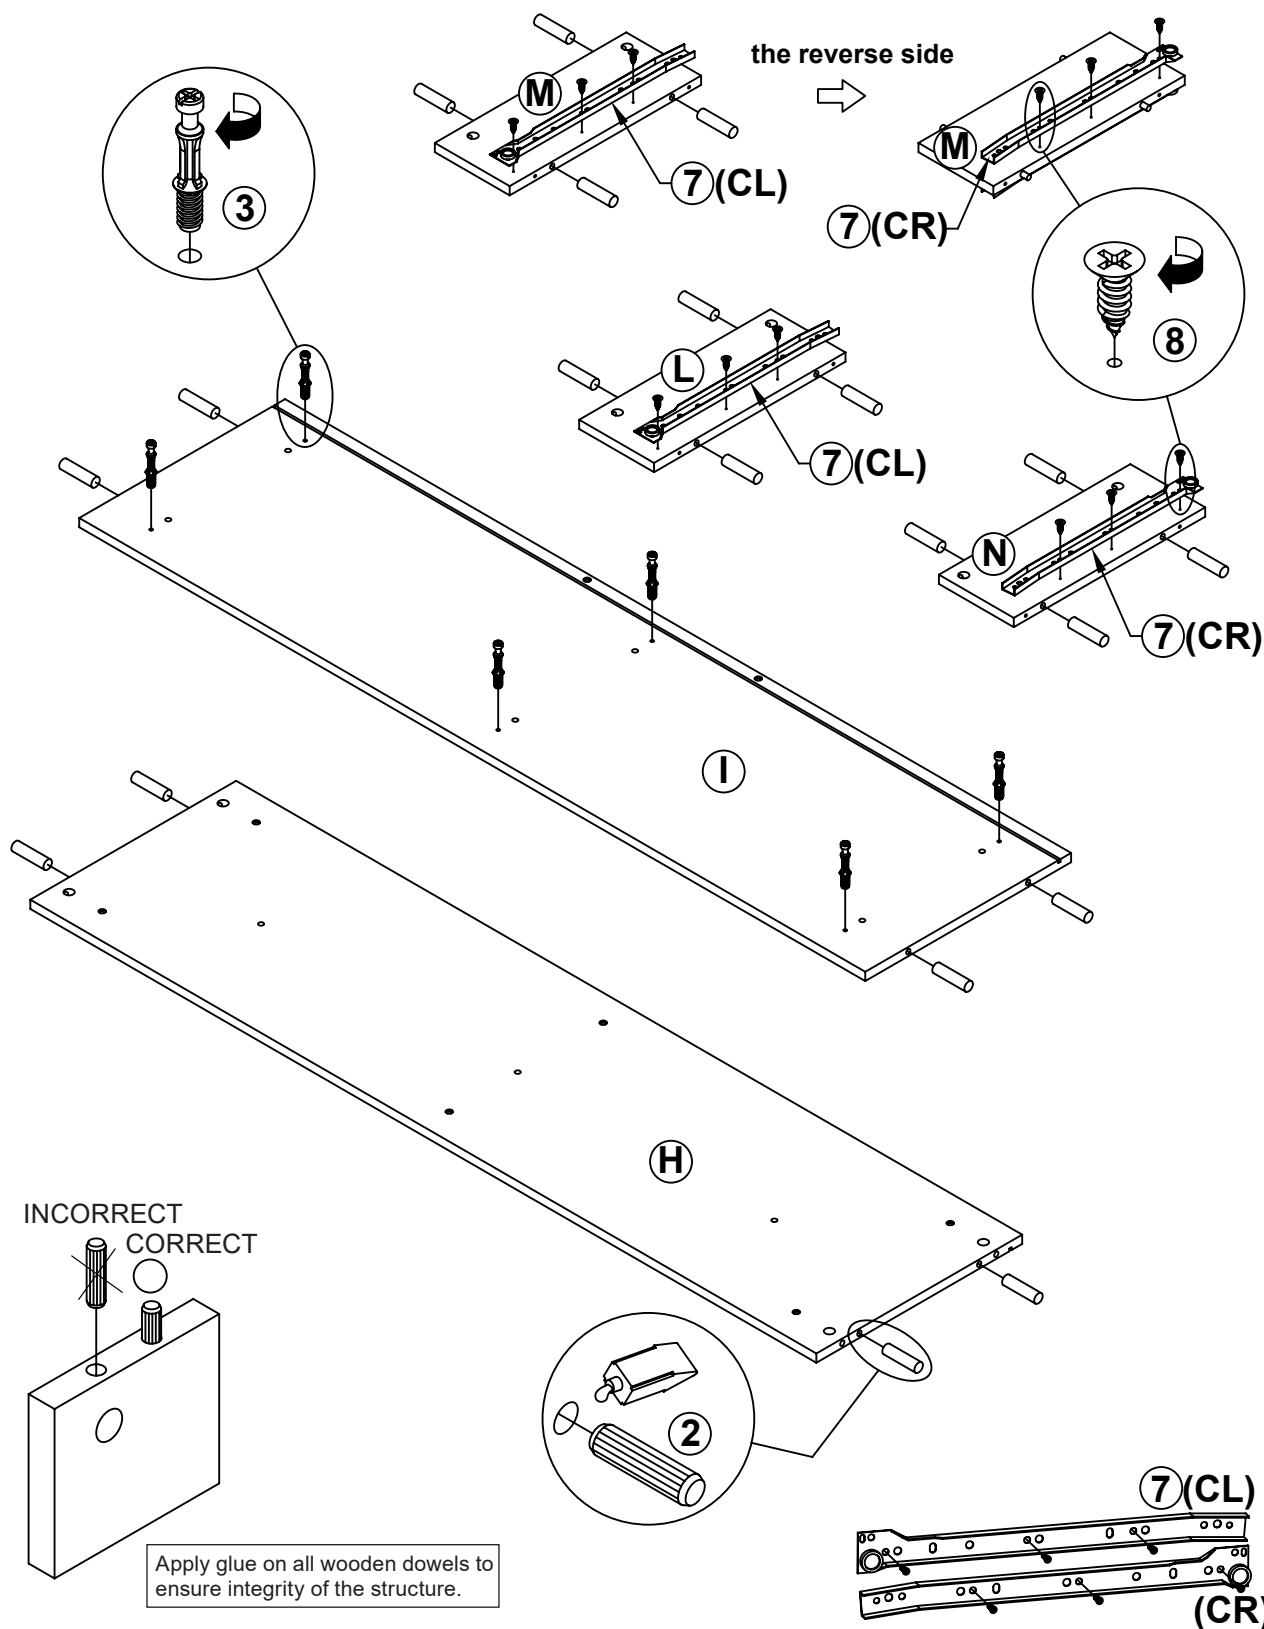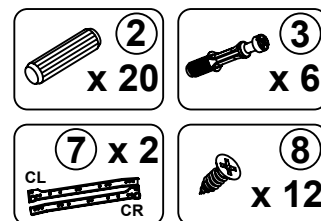



ITEM: 701975

STEP 2

  COASTER
FINE FURNITURE

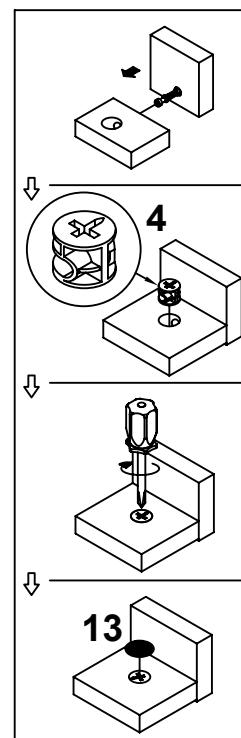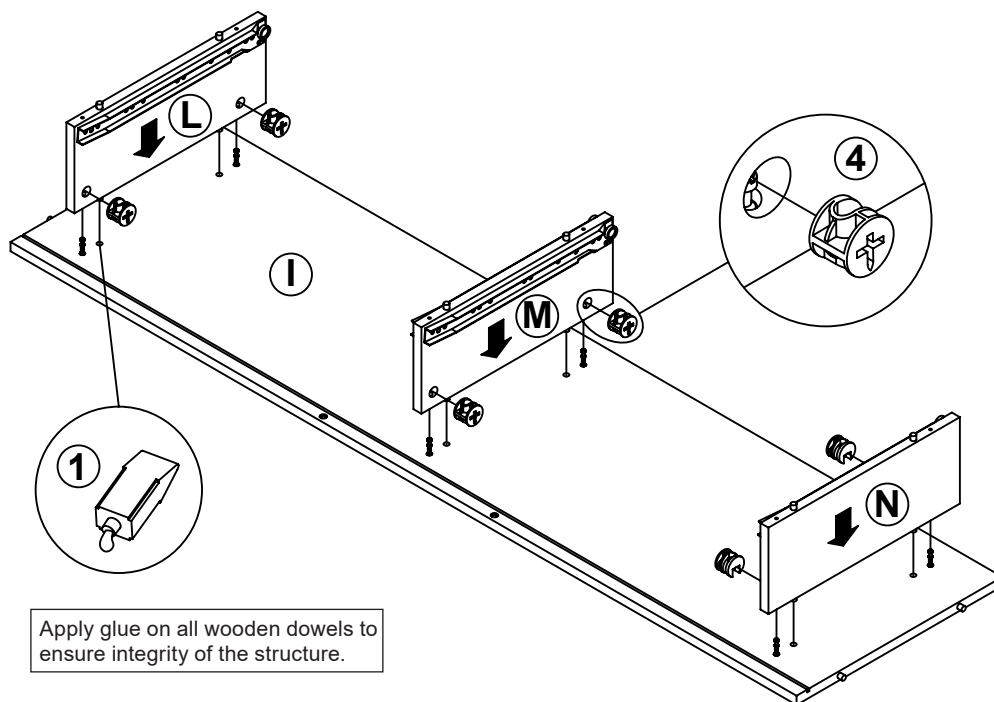

 
 
STEP 3

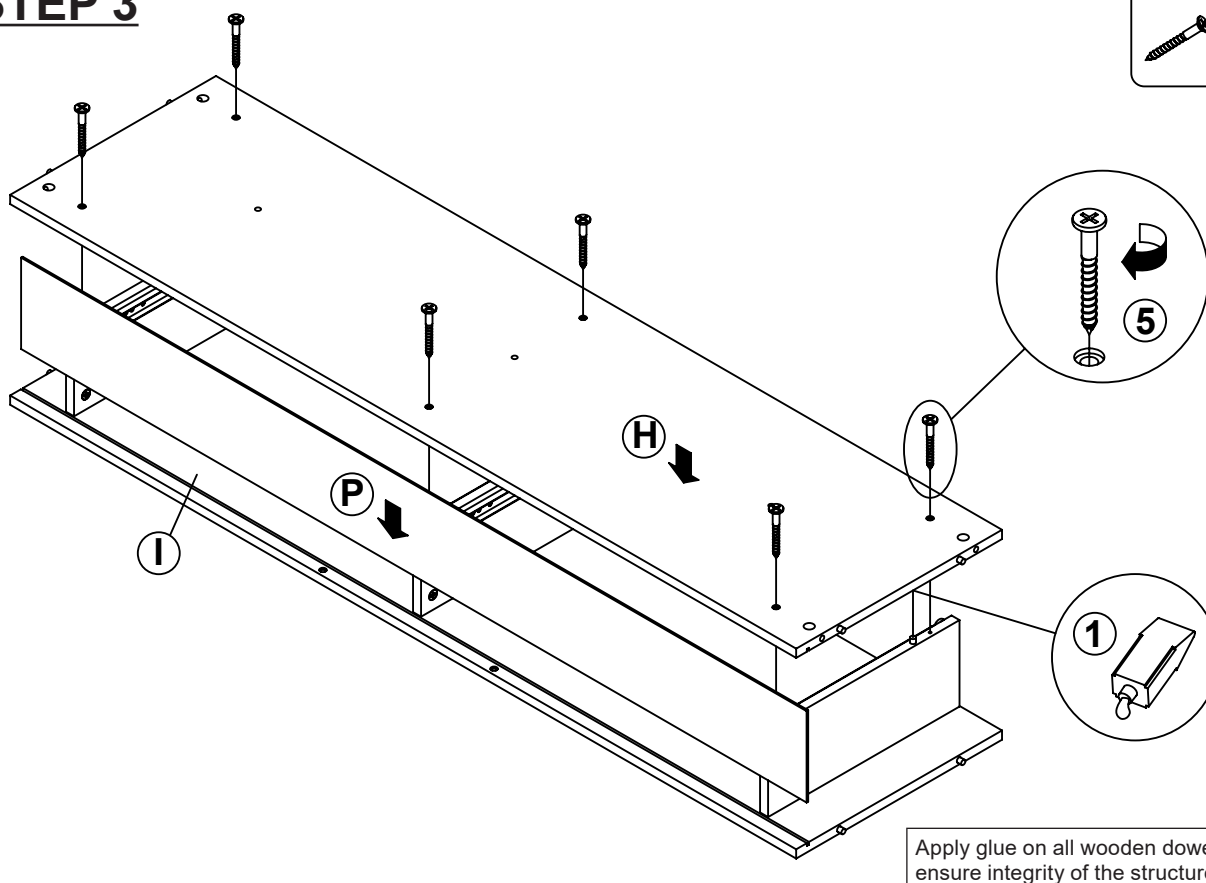

ITEM: 701975


STEP 4

  COASTER
FINE FURNITURE



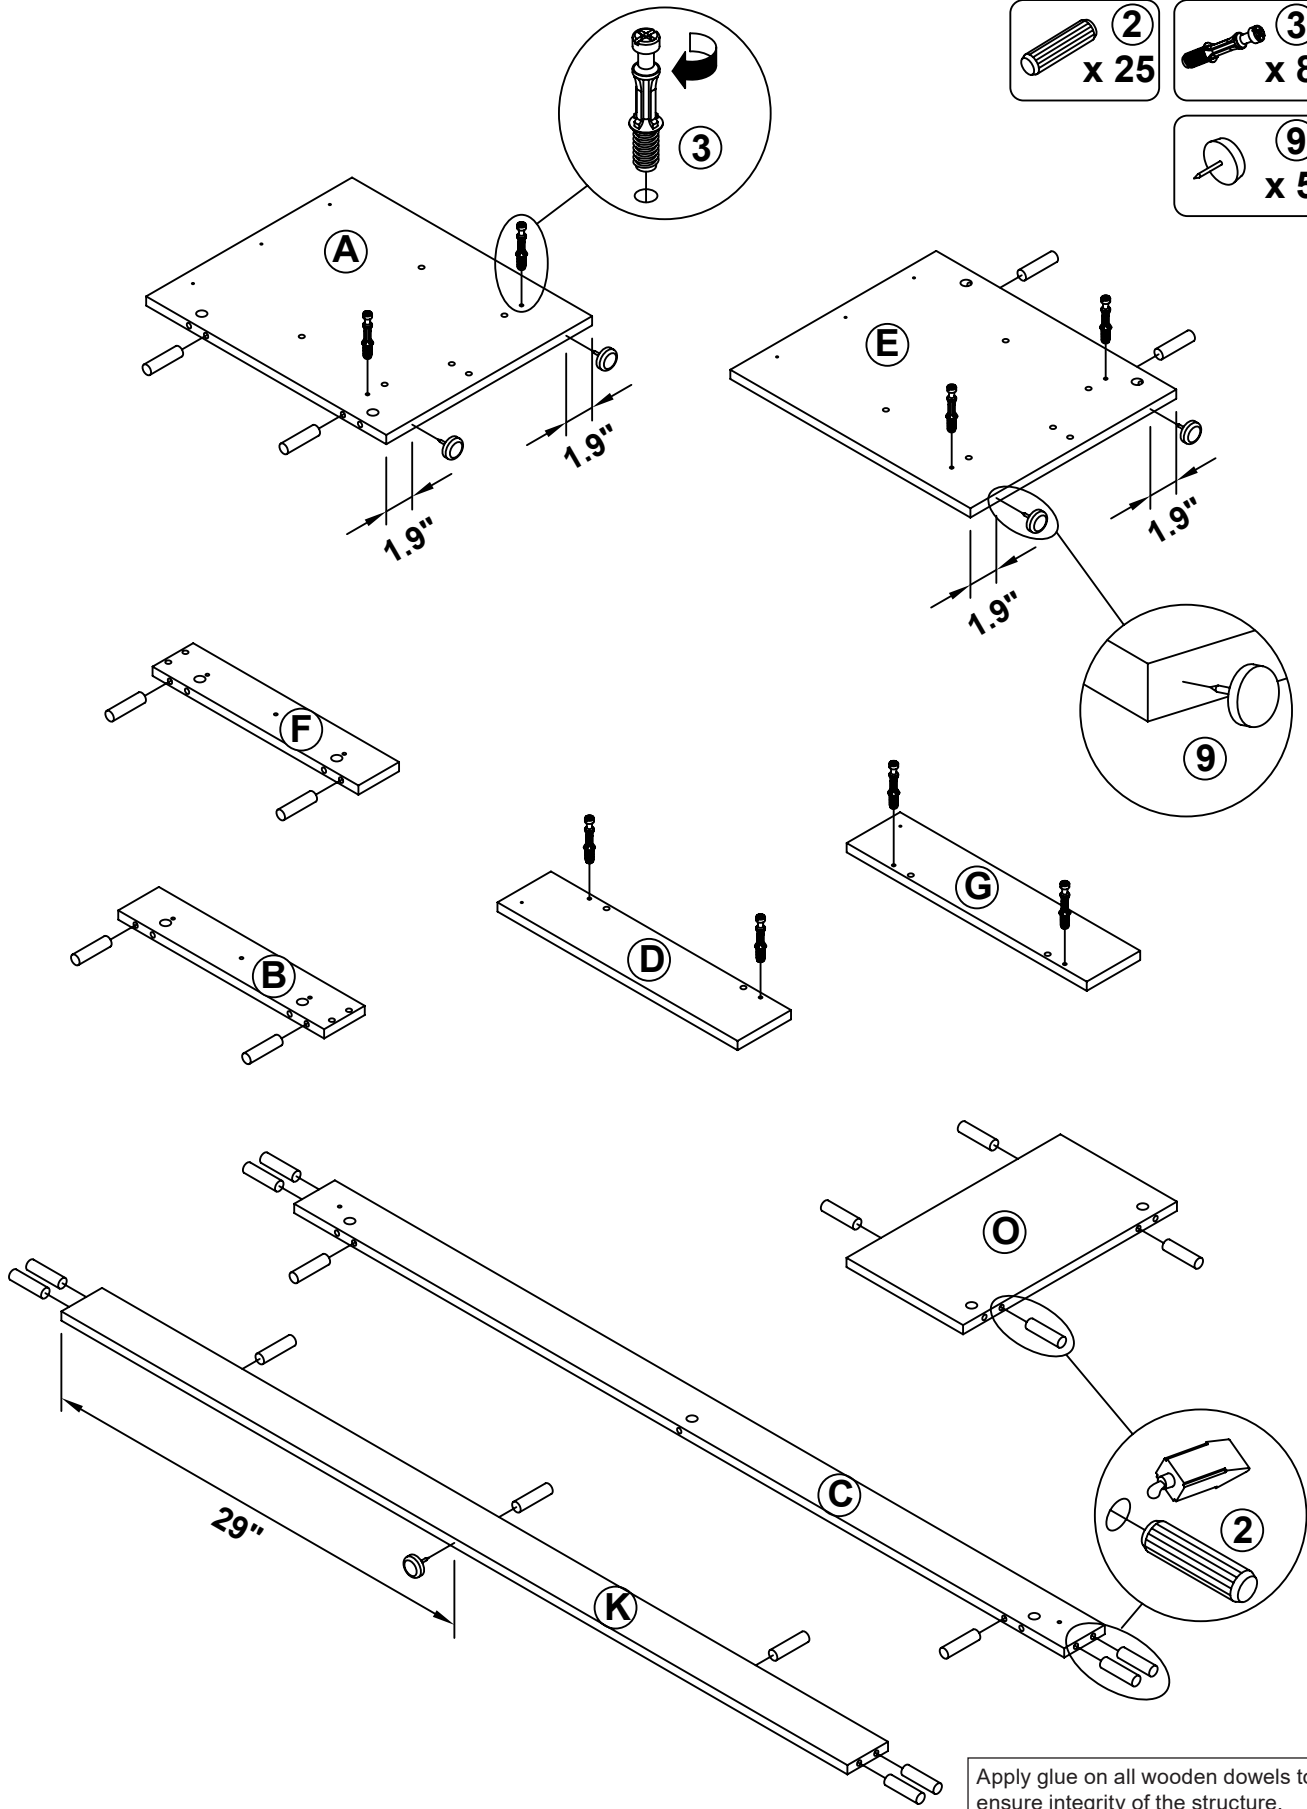
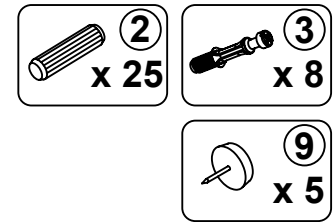


ITEM: **701975**

 STEP 5

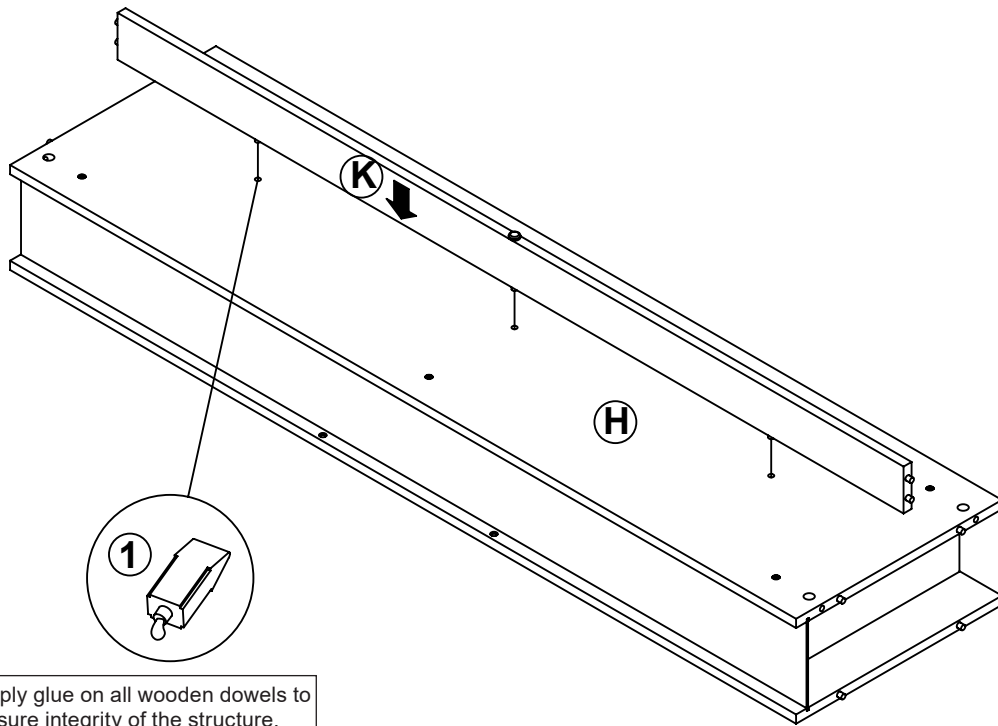

  
 
 
STEP 6

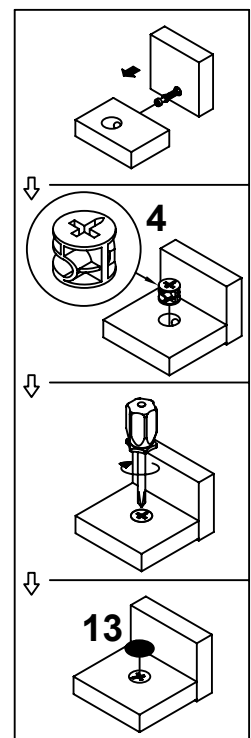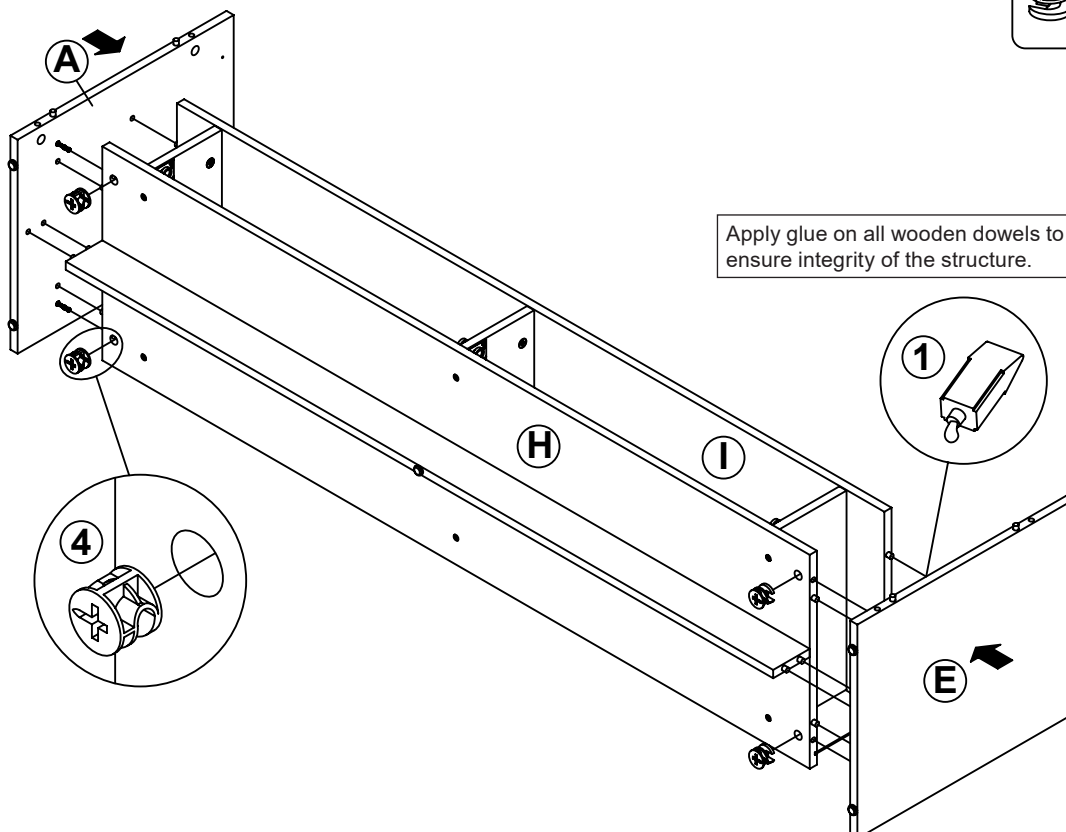


ITEM: 701975

COASTER
FINE FURNITURE

   STEP 7

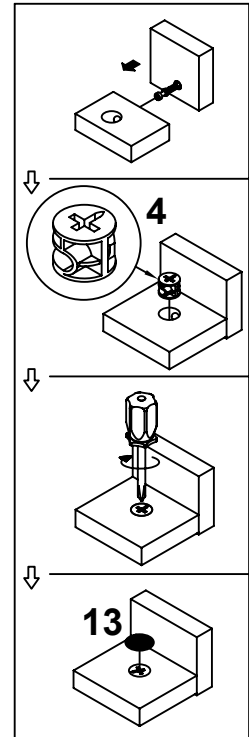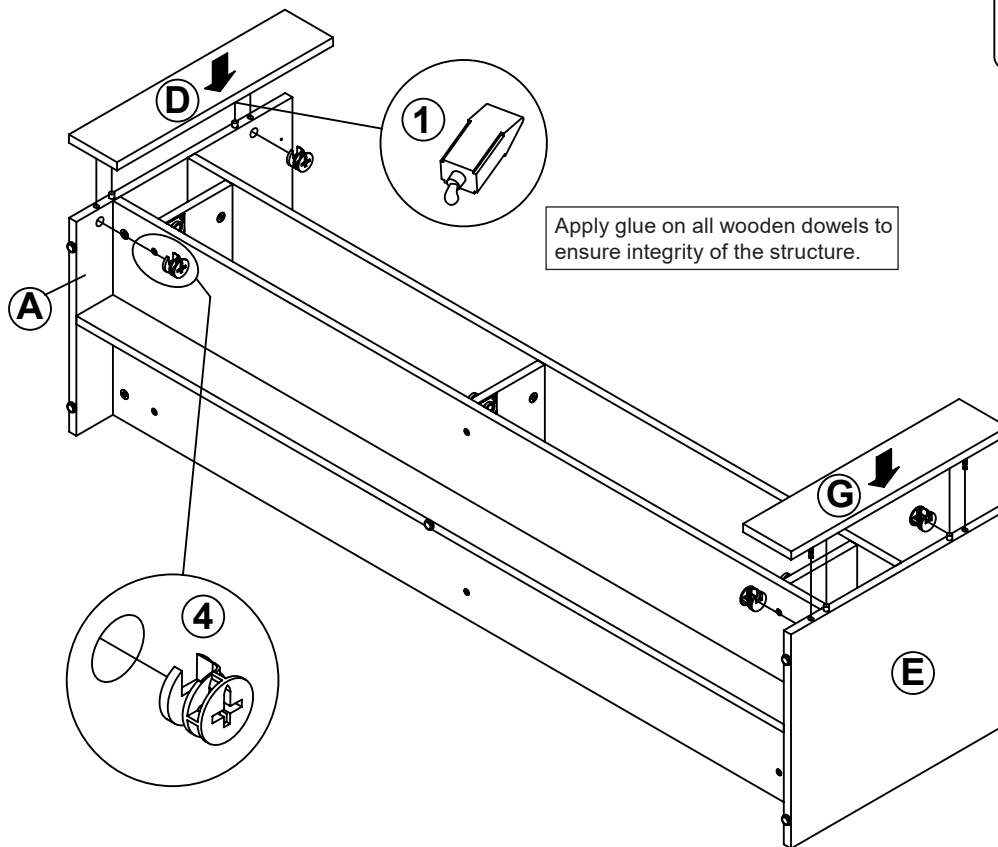


 STEP 8


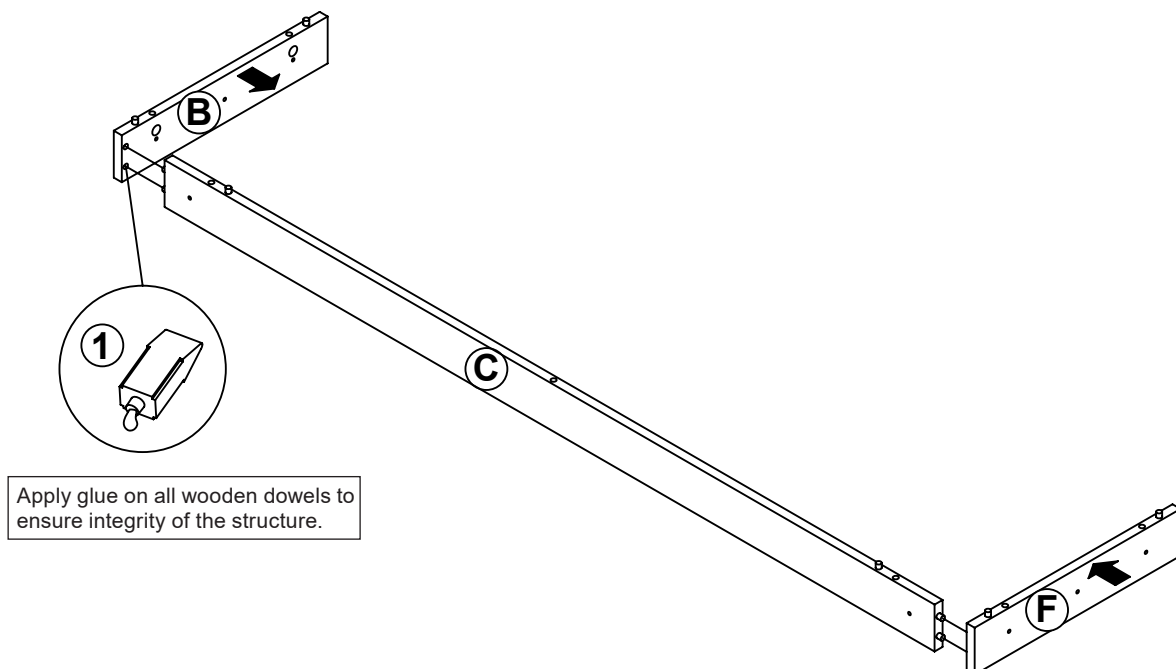


ITEM: **701975**

 STEP 9

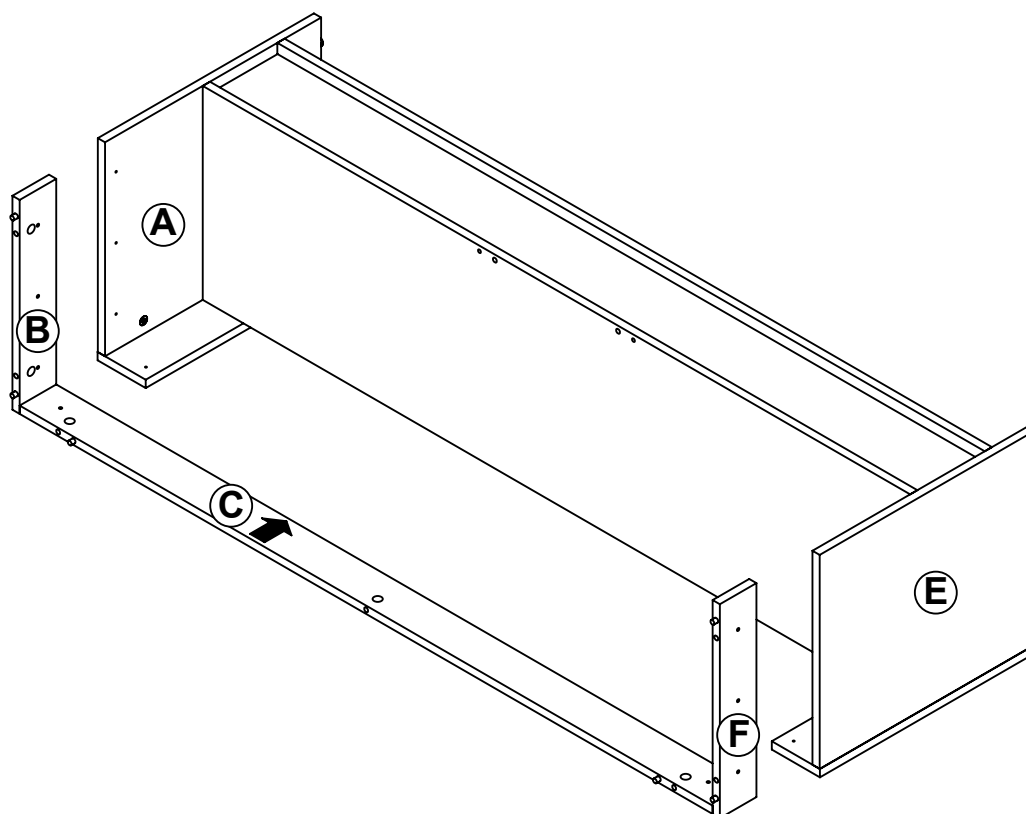

 
 
STEP 10

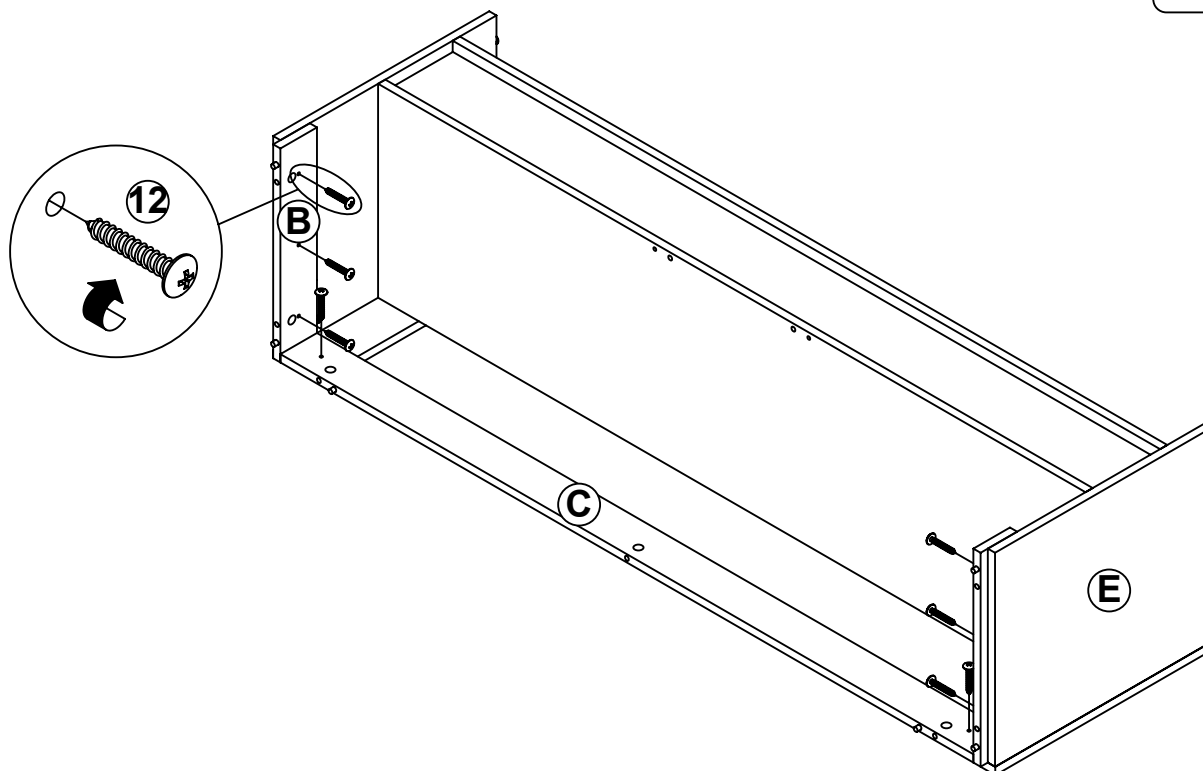



ITEM: **701975**

STEP 11

  COASTER
FINE FURNITURE

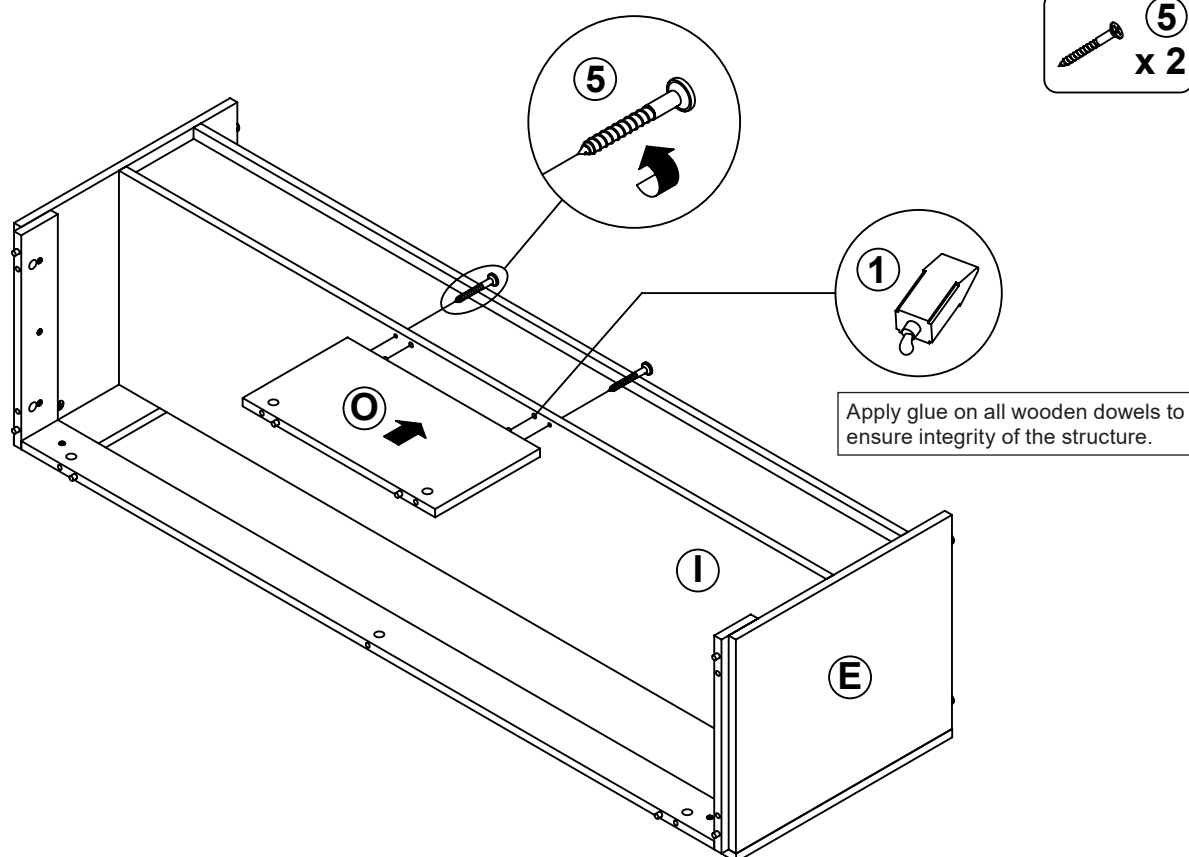

  STEP 12

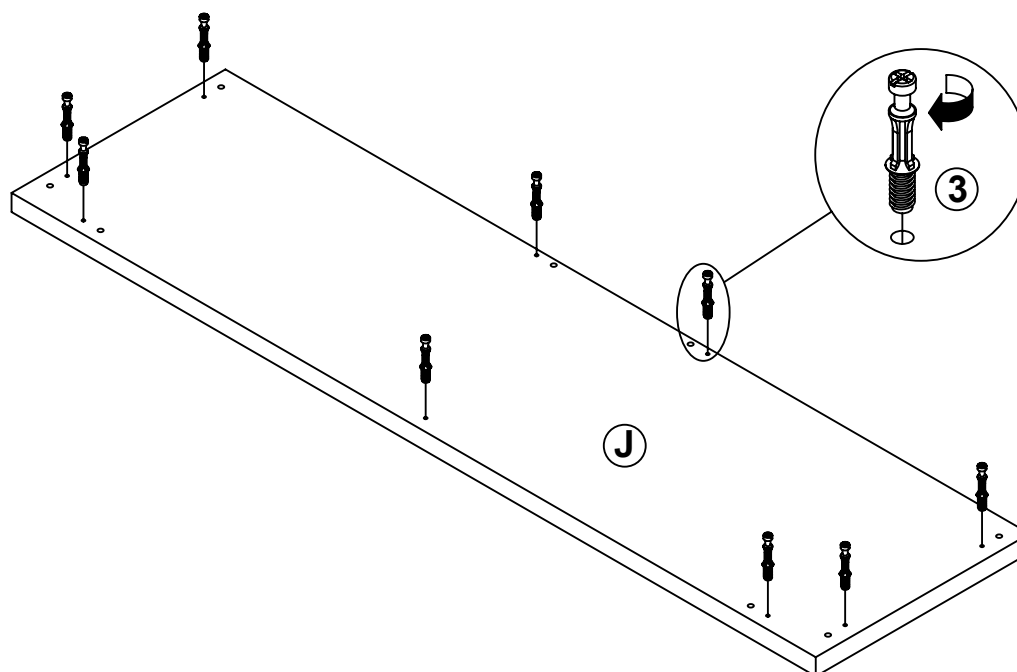


ITEM: 701975

STEP 13


COASTER
FINE FURNITURE



 Apply glue on all wooden dowels to ensure integrity of the structure.

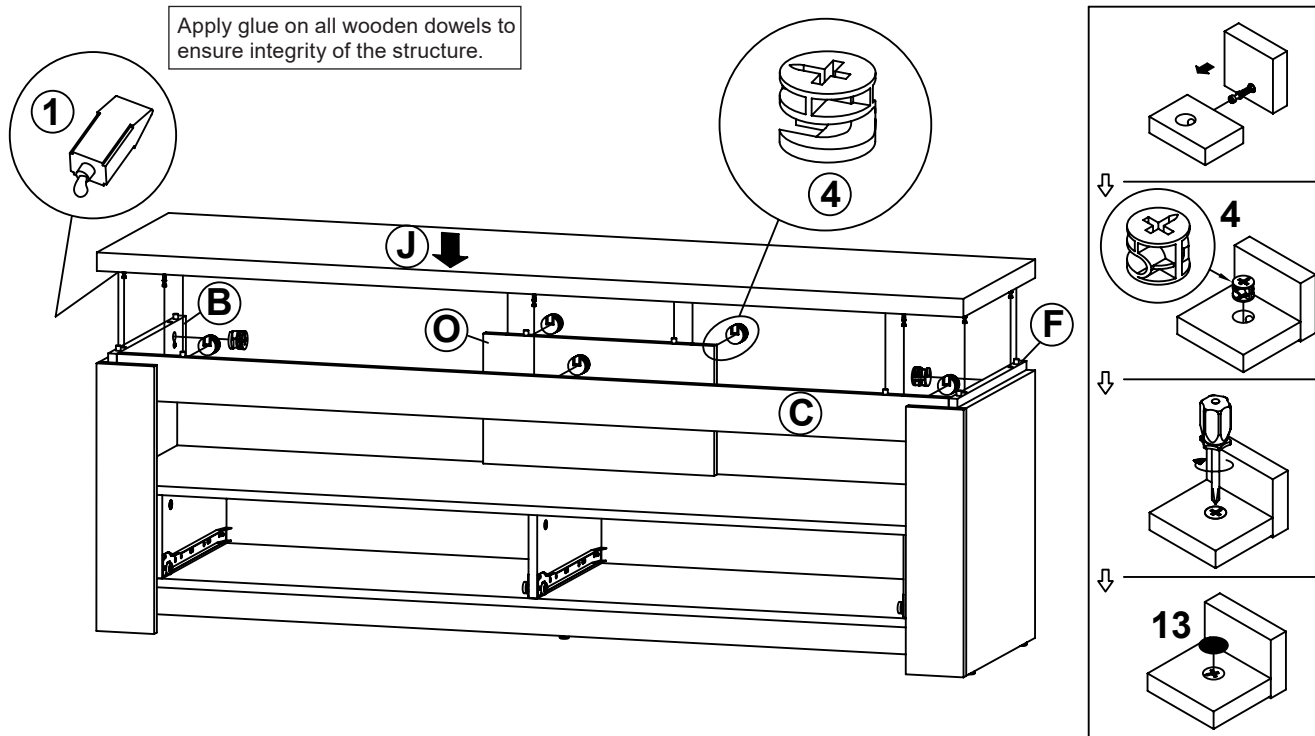


 STEP 14

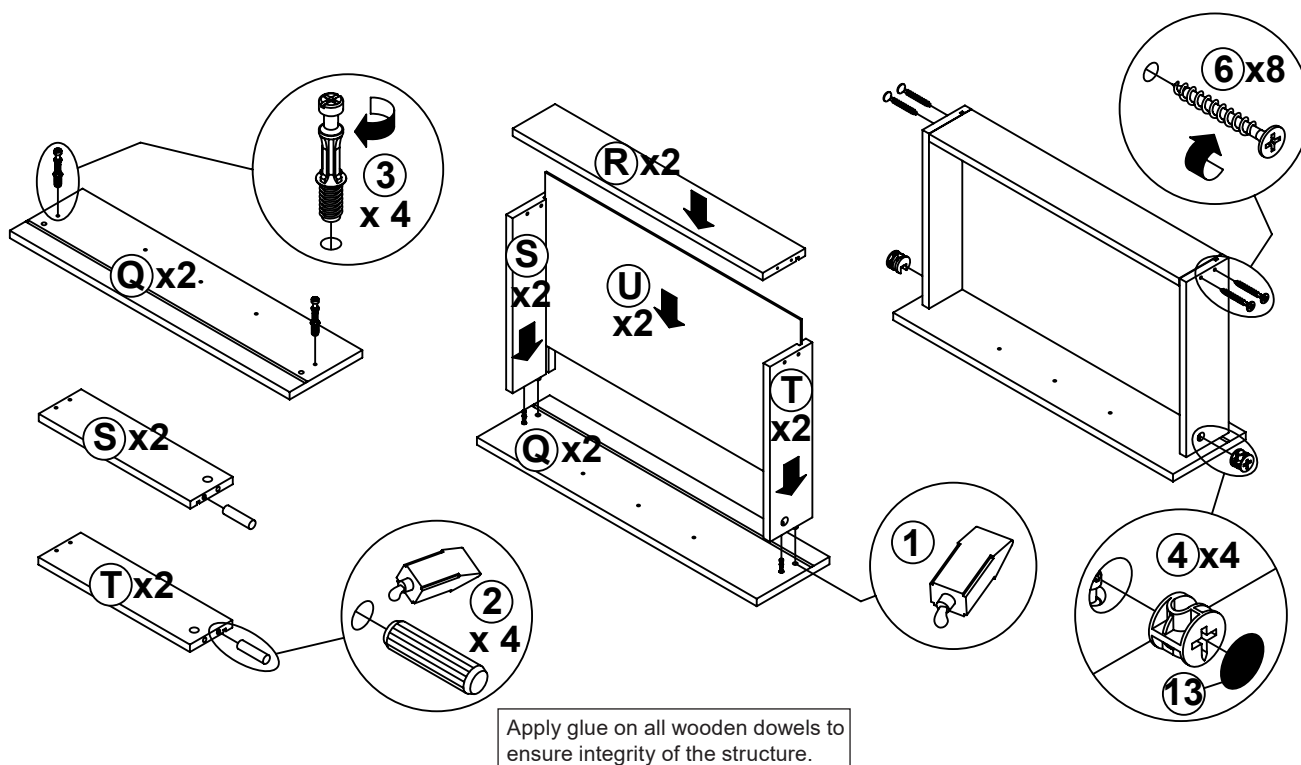


ITEM: **701975**


 
STEP 15

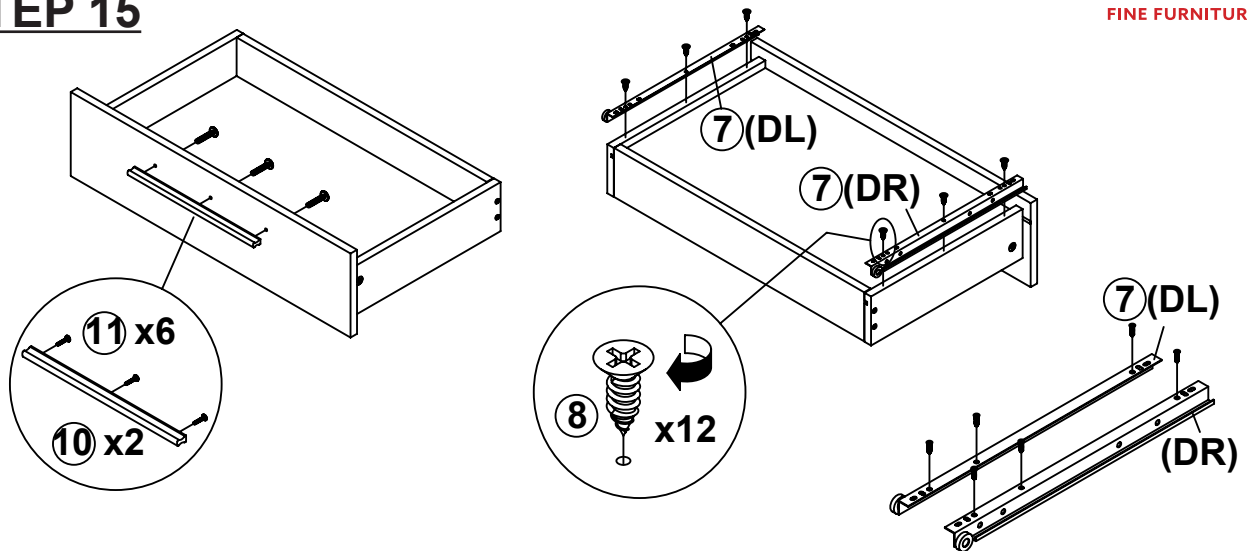


 
STEP 16

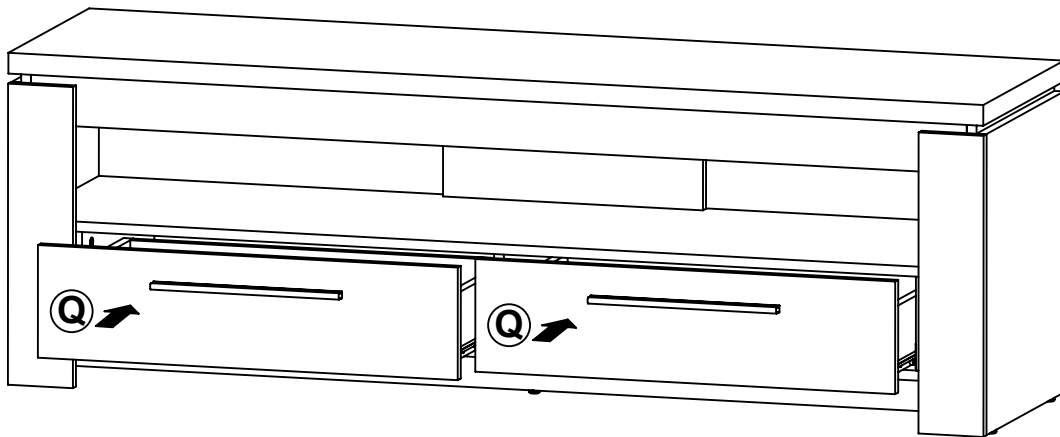

  STEP 17
COMPLETE

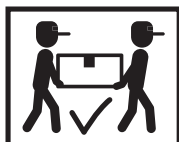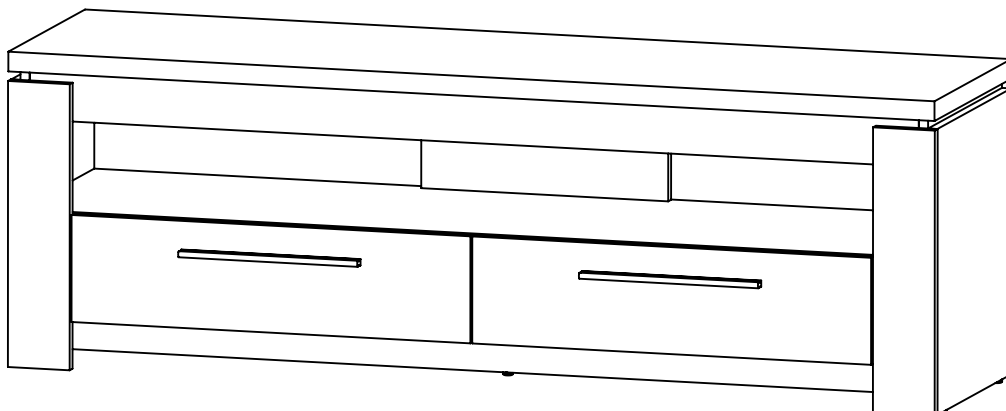

ITEM: 701975

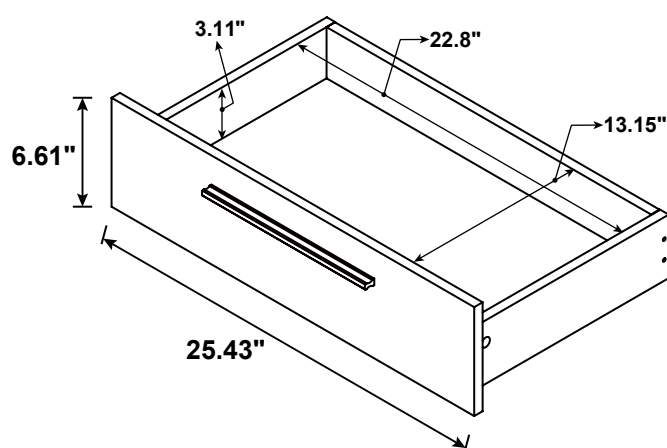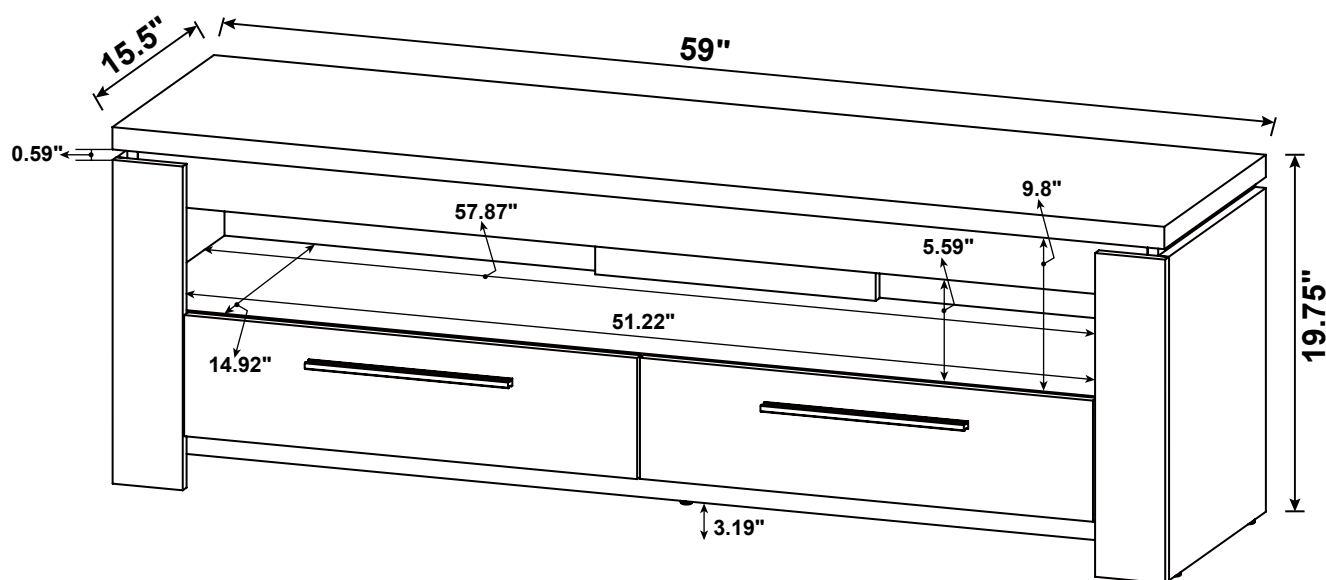  

Note : Dimension tolerance $\pm 5\%$