



ASSEMBLY INSTRUCTIONS
COASTER FINE FURNITURE



Fine Furniture for every stage of life

720227
END TABLE

REVISION 0 : 09/12/2017
REVISION 1 : 11/03/2022

PAGE 1 OF 4

COASTERFURNITURE.COM

ITEM: 720227



ASSEMBLY INSTRUCTIONS


ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



 



WARNING!

1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.

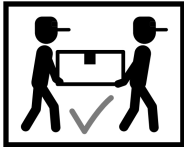



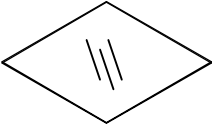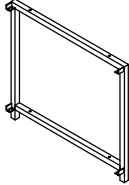

ASSEMBLY TIME 25 MINUTES

PARTS IDENTIFICATION

A	TOP GLASS		1PC
B	SHELF GLASS		1PC
C	SIDE FRAME		2PCS
D	CROSSBAR		4PCS

HARDWARE IDENTIFICATION


1	BOLT (1/4" x 12mm BLK)		8PCS	3	CAP (25 x 25mm BLK)		4PCS
2	SUCTION CUP (9mm)		8PCS	4	ALLEN WRENCH (4mm)		1PC

ITEM: 720227 ASSEMBLY INSTRUCTIONS




STEP 1



Do not tighten until each step is completed or instructed.

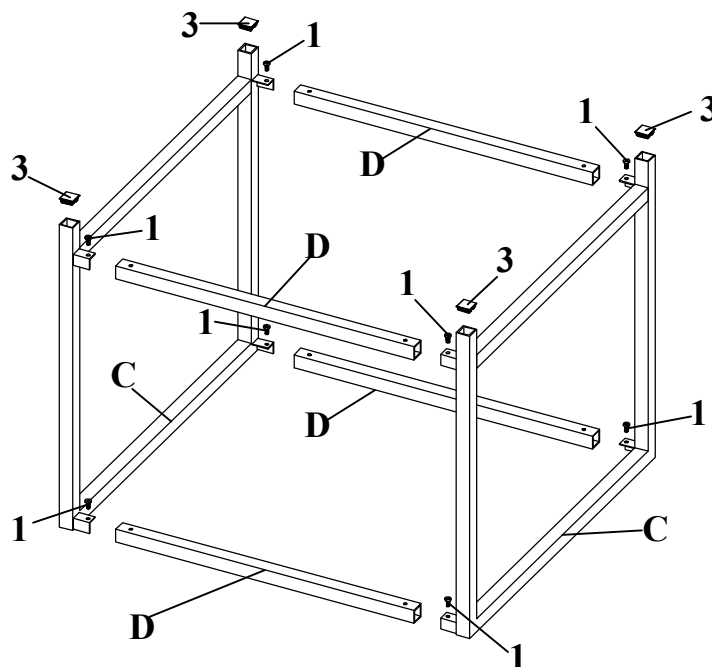

STEP 2

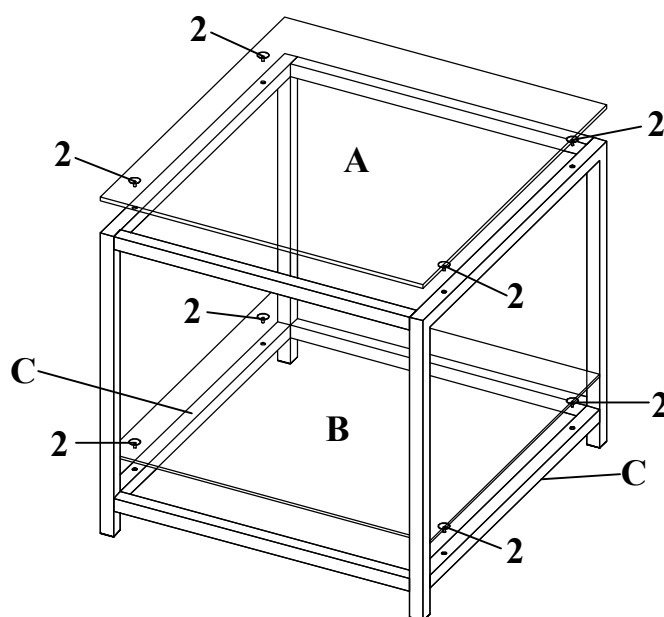

COMPLETE

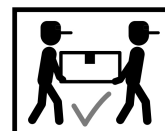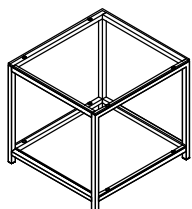


ITEM: 720227

ASSEMBLY INSTRUCTIONS



Product Size : 610 X 660 X 584 H (MM)

Product Size : 24" X 26" X 23"

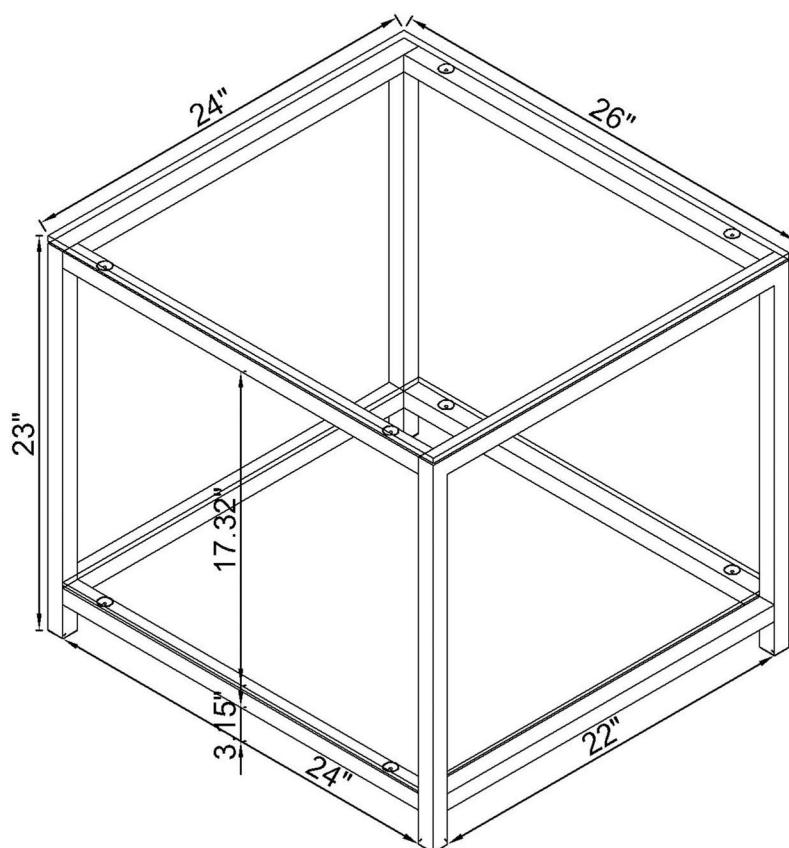

Note : Dimension tolerance $\pm 5\%$