

ASSEMBLY INSTRUCTIONS COASTER FINE FURNITURE



Fine Furniture for every stage of life

CURIO CABINET

REVISION 0: 03/15/2018 REVISION 1: 06/19/2023

PAGE 1 OF 9



ASSEMBLY TIPS:

- 1. Remove hardware from box and sort by size.
- 2. Please check to see that all hardware and parts are present prior to start of assembly.
- 3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



WARNING!

- 1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
- 2. This product is for home use only and not intended for commercial establishments.



ASSEMBLY TIME 50 MINUTES

PARTS IDENTIFICATION

A	GLASS DOOR (1529 x 292mm)			1PC
В	SIDE GLASS (1550 x 284mm)			5PCS
С	CROSSBAR			4PCS
D	GLASS SHELF (ø 480mm)			3PCS
Е	TOP PANEL			1PC
F	BOTTOM PANEL			1PC
G	PLASTIC BAR			4PCS
		PAGE 2 OF 9	COASTERFURNITURE.COM	




HARDWARE IDENTIFICATION

1	THREAD BOLT (1/4" x 65mm)			3PCS
2	LONG BOLT (1/4" x 50mm)			2PCS
3	FLAT WASHER (ø19mm)		©	2PCS
4	PLASTIC WASHER (ø50mm)		©	8PCS
5	PLASTIC MAGNET (19mm)		&	2PCS
6	HANGER (50mm)			1PC
7	HANGER INSERT (ø12 x 9mm)			2PCS
8	METAL WITH ADHESIVE (38mm)			2PCS
9	SMALL BOLT (¢7 x 6mm)			4PCS
10	LEG (¢44 x 18mm)			6PCS
11	SCREW (E printe	6PCS
12	HANDLE (40mm)			1PC
13	METAL HANDLE (40mm)			1PC
14	ADHESIVE (38 x 42mm)		\Diamond	2PCS
15	ALLEN WRENCH (4mm)			1PC
16	STICKER (ø30mm)		0	1PC
	PAGE 3 OF 9 COASTERFURNITURE.COM			




STEP 1

Do not tighten until each step is completed or instructed.

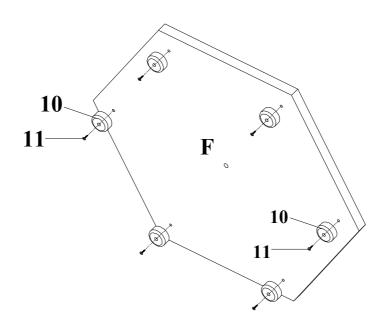


STEP 2

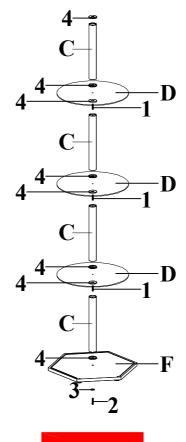


PAGE 4 OF 9



STEP 3

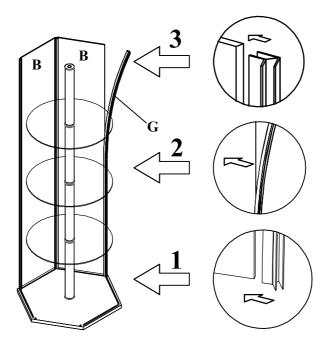


STEP 4

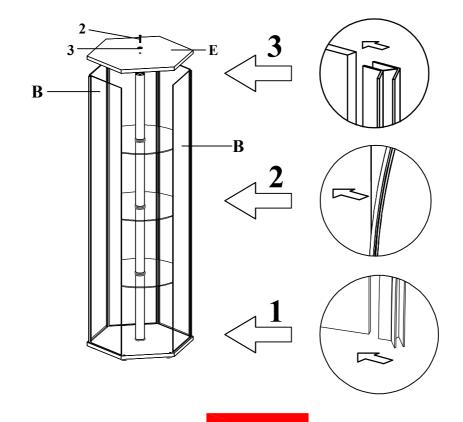


PAGE 5 OF 9



STEP 5

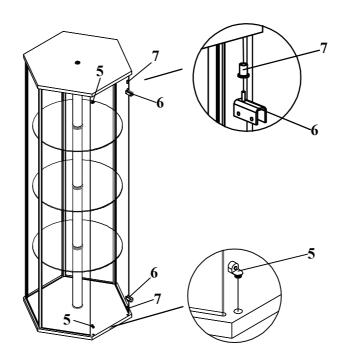


STEP 6

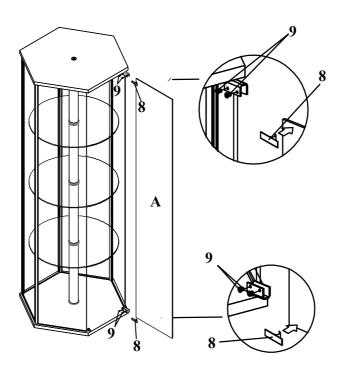


PAGE 6 OF 9



STEP 7

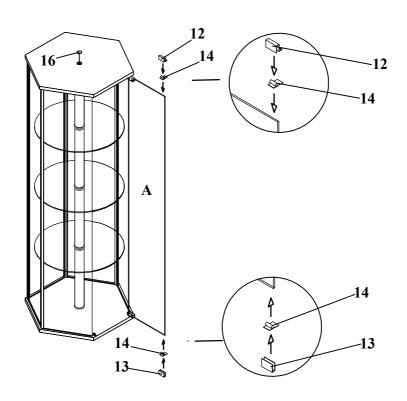

STEP 8 COMPLETE

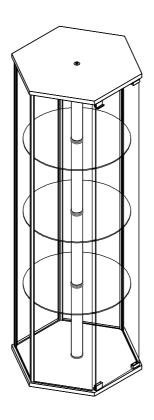






Product Size: 610 X 610 X 1613 H (MM)

Product Size : 24" X 24" X 63 ½"

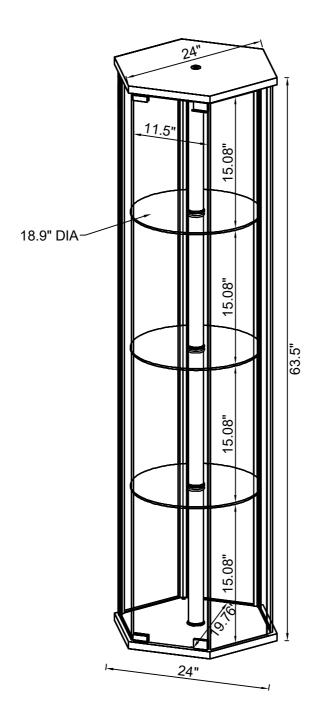

Note: Dimension tolerance ±5%

ITEM: 950276



ANTI-TIPPING INSTALLMENT INSTRUCTIONS FURNITURE TIPPING RESTRAINT

WARNING

Injury may result from tipping furniture.

This restraint may protect against tipping furniture.

Do not allow children to climb on furniture.


This restraint is not a substitute for proper adult supervision.

Failure to detach this restraint before moving the furniture may result in injury and damage.

This tip restraint must be attached to a wall stud using long screw enclosed.


STEP 1

Attach a bracket securely to the back top rail of the furniture using short screw provided, through the smaller hole.

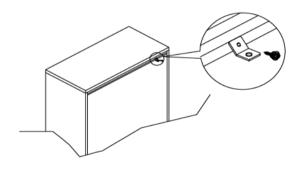

STEP 2

Locate the other bracket on the wall over a plastic wall stud and two inches below the mounting bracket secured to the back of the furniture. Attach the wall stud using the long screw provided, through the smaller hole.

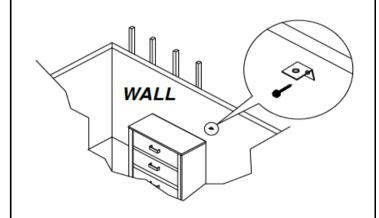

STEP 3

Place the furniture into position so both mounting brackets are vertically in line. Lace the end of the restraint strap through the larger hole in each mounting bracket. Bring both ends together and slide the flat end through the locking end and draw it through until all slack is removed. Confirm that the strap is securely laced and locked.

