

ASSEMBLY INSTRUCTIONS COASTER FINE FURNITURE



Fine Furniture for every stage of life

700345 3PC OCCASIONAL SET

REVISION 0 : 02/14/2017 REVISION 1 : 06/21/2019 REVISION 2 : 03/18/2020 REVISION 3 : 09/07/2022

PAGE 1 OF 7

COASTERFURNITURE.COM

ASSEMBLY INSTRUCTIONS

ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.

Please check to see that all hardware and parts are present prior to start of assembly.
Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



WARNING!

Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
This product is for home use only and not intended for commercial establishments.



ASSEMBLY TIME

60 MINUTES

PARTS IDENTIFICATION

Α	SHORT SIDE PANEL	2PCS	F	LONG SIDE PANEL	4PCS
В	LEFT SHORT PANEL	2PCS	G	LEFT LARGE PANEL	4PCS
С	LARGE SHELF	1PC	н	SMALL SHELF	2PCS
D	RIGHT SHORT PANEL	2PCS	ı	RIGHT LARGE PANEL	4PCS
E	LARGE TOP PANEL	1PC	J	SMALL TOP PANEL	2PCS

HARDWARE IDENTIFICATION


_	TIANDWAKE IDENTIFICATION										
NO	DESCRIPTION	FIGURE	Q'TY	NO	DESCRIPTION	FIGURE	Q'TY				
1	GLUE 40g	To the second se	1PC	4	CAM BOLT Ø 7x35.5mm SR		60PCS				
2	WOODEN DOWEL Ø 8x30mm		60PCS	5	PLASTIC FEET Ø 15mm		12PCS				
3	CAM LOCK Ø 15x12mm SR		60PCS	6	STICKER Ø 20mm		10PCS				

NOTE:

Phillips head screw driver is required in the assembly process; however, manufacturer does not provide this item.


ITEM: **700345 STEP 1**



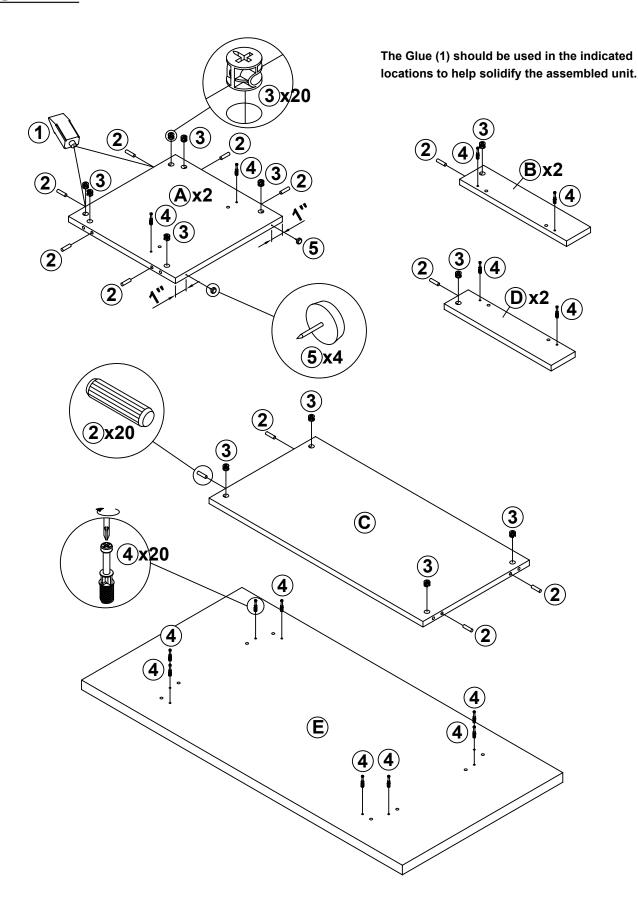


COASTER


STEP 2

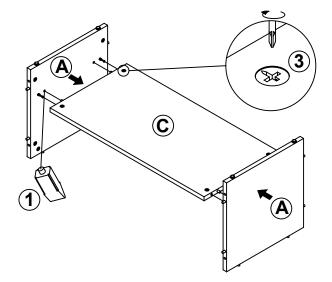

STEP 3

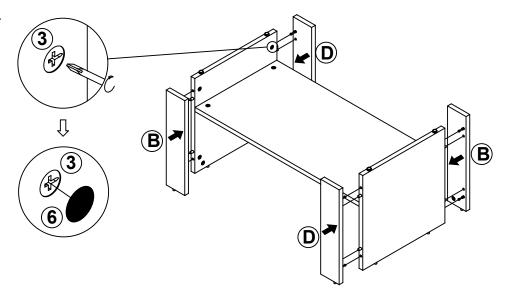


STEP 4

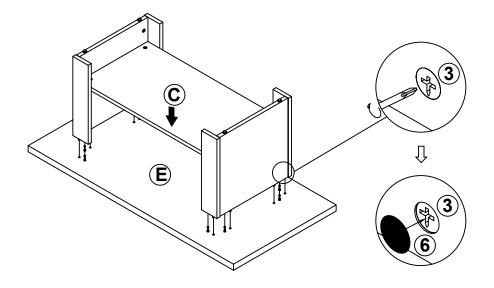


ITEM: **700345 STEP 5**



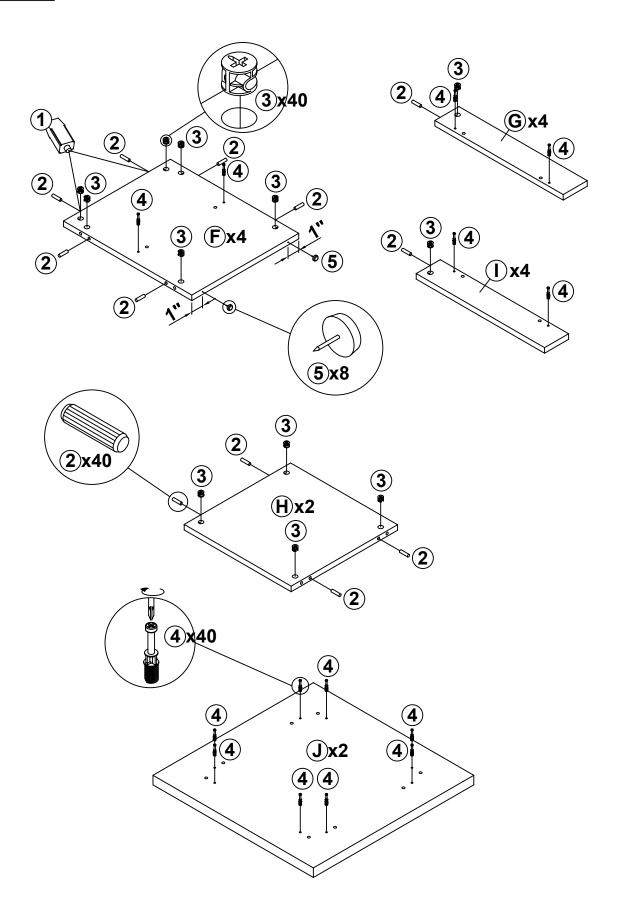


STEP 6




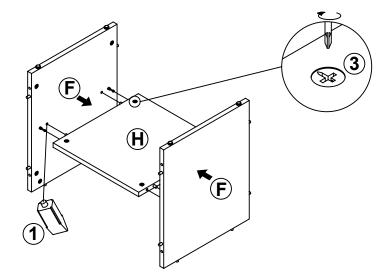


STEP 7

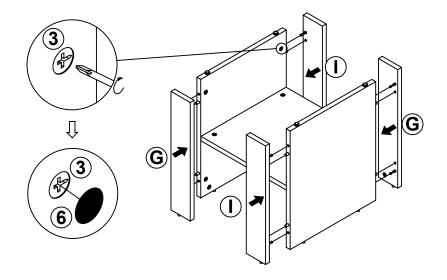


STEP 8

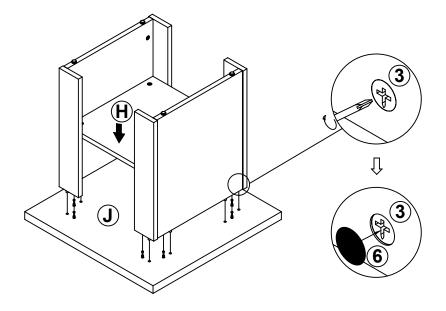



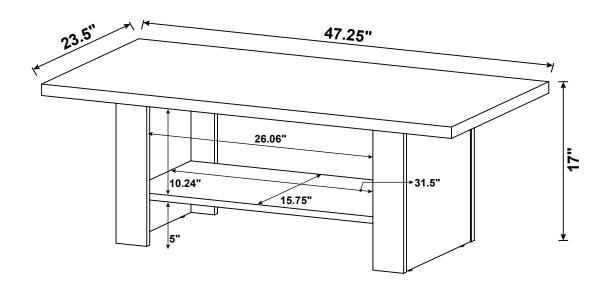

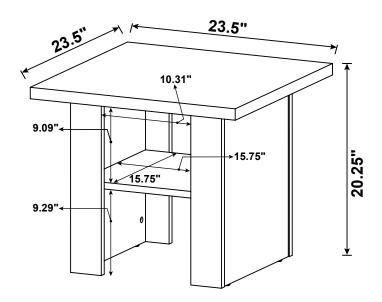

Note: Dimension tolerance ±5%