



GOLDEN OAK STYLE NO. CM0695A/B0JP
JCP LOT . 774-4285/774-4286

 




 
 
 
 
 


 
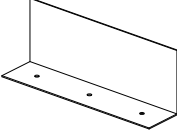
 
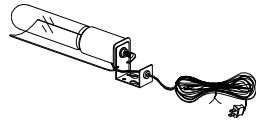
 

MAHOGANY STYLE NO. CM0696A/B0JP
JCP LOT . 774-4285/774-4286

SOUTHERN ENTERPRISES INC.

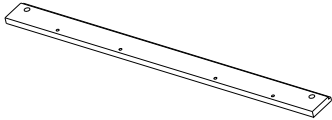
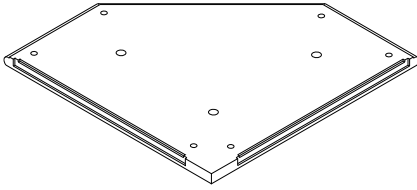
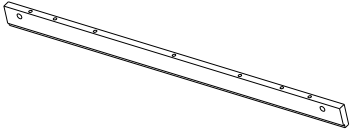
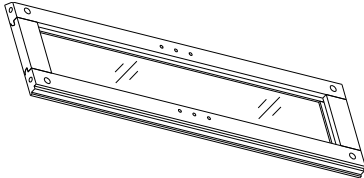
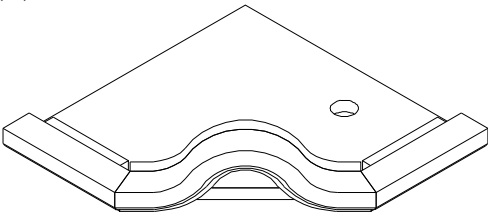
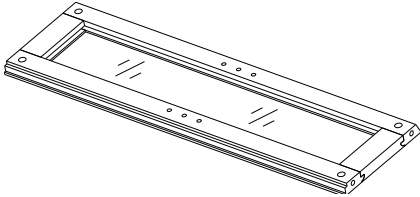
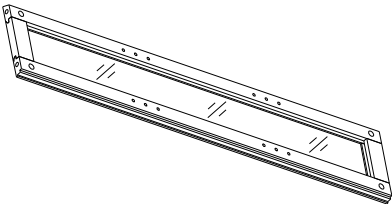
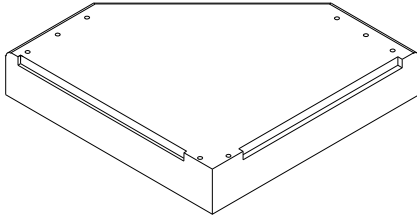
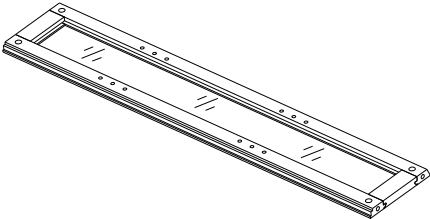
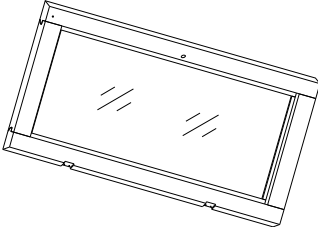
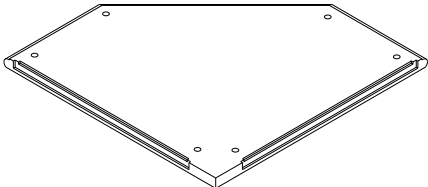
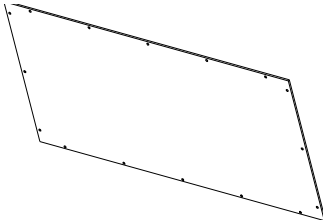
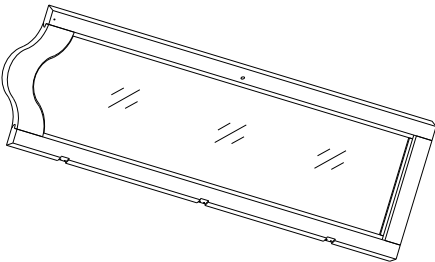

RELAX...If you can follow a few easy, step-by-step directions in order .YOU CAN ASSEMBLE THIS ITEM.

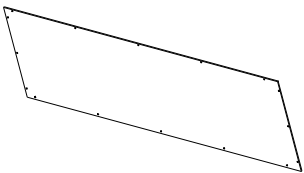
 
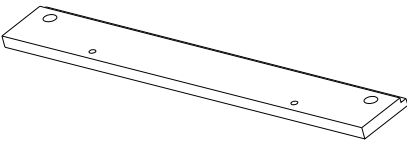
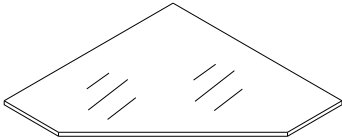
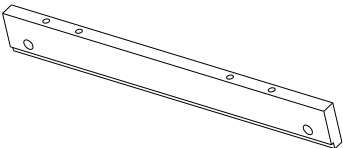
LIGHTED CORNER CURIO

.PLEASE FIND HARDWARE IN RED POLYBAG BEFORE DISCARDING PACKING MATERIAL.

HARDWARE LIST			
(1) LARGE FLAT HEAD WOOD SCREW	6PCS	(10) METAL PLATE	2PCS
 Ø4X25mm			
(2) WOOD DOWEL	5PCS	(11) HANDLE	2PCS
 Ø8X30mm			
(3) CAM-BOLT	24PCS	(12) PAN HEAD WOOD SCREW	70PCS
		 Ø3x12mm	
(4) CAM-LOCK	24PCS	(13) MAGNET	2PCS
			
(5) COVER	24PCS	(14) LARGE MACHINE SCREW	3PCS
		 Ø1/4"X1"	
(6) SMALL FLAT HEAD WOOD SCREW	31PCS	(15) SHELF SUPPORT	15PCS
 Ø3X12mm			
(7) HINGE	5PCS	(16) METAL SHADE	1PC
			
(8) MAGNET PLATE	2PCS	(17) LIGHT	1PC
			
(9) SMALL MACHINE SCREW	2PCS	(18) TILTING PREVENT HARDWARE	1SET
 Ø5/32"x3/4"			

PARTS LIST

<p>(A) UPPER RIGHT BACK RAIL 1PC</p> 	<p>(K) LOWER SHELF 1PC</p> 
<p>(B) UPPER LEFT BACK RAIL 1PC</p> 	<p>(L) LOWER RIGHT SIDE PANEL 1PC</p> 
<p>(C) TOP PANEL 1PC</p> 	<p>(M) LOWER LEFT SIDE PANEL 1PC</p> 
<p>(D) UPPER RIGHT SIDE PANEL 1PC</p> 	<p>(N) BASE 1PC</p> 
<p>(E) UPPER LEFT SIDE PANEL 1PC</p> 	<p>(O) LOWER DOOR 1PC</p> 
<p>(F) UPPER SHELF 1PC</p> 	<p>(P) LOWER BACK PANEL 2PCS</p> 
<p>(G) UPPER DOOR 1PC</p> 	<p>(Q) LARGE BACK MIRROR 2PCS</p> 

(H) UPPER BACK PANEL 	2PCS	(R) SMALL BACK MIRROR 	2PCS
(I) LOWER RIGHT BACK RAIL 	1PC	(S) GLASS SHELF 	3PCS
(J) LOWER LEFT BACK RAIL 	1PC		

ASSEMBLY INSTRUCTIONS

1. SELECT A SMOOTH, SOFT SURFACE TO PREVENT SCRATCHING FINISH.
2. YOU MAY NEED A PHILLIPS SCREWDRIVER.
3. INSERT WOOD DOWELS (2) INTO PREDRILLED HOLES ON EDGE OF UPPER LEFT BACK RAIL (B) AND FIT INTO CORRESPONDING HOLES ON UPPER RIGHT BACK RAIL (A). INSERT LARGE FLAT HEAD WOOD SCREWS (1) THROUGH PREDRILLED HOLES ON UPPER RIGHT BACK RAIL (A) AND TIGHTEN INTO CORRESPONDING HOLES ON UPPER LEFT BACK RAIL (B). AS SHOWN IN FIGURE 1.
4. INSERT SMALL FLAT HEAD WOOD SCREWS (6) THROUGH METAL SHADE (16) AND TIGHTEN INTO PREDRILLED HOLES ON UNDERSIDE OF TOP PANEL (C). AS SHOWN IN FIGURE 2.
5. INSERT SMALL FLAT HEAD WOOD SCREWS (6) THROUGH THE HOLDER OF LIGHT (17) AND TIGHTEN INTO PREDRILLED HOLES ON UNDERSIDE OF TOP PANEL (C). LEAD THE POWER CORD ON THE LIGHT (17) THROUGH THE HOLE ON TOP PANEL (C) TO UPSIDE OF TOP PANEL (C). AS SHOWN IN FIGURE 3.

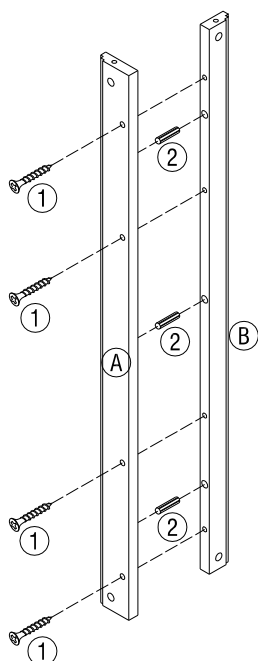


FIGURE 1

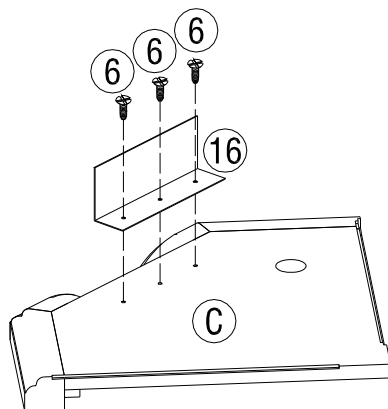


FIGURE 2

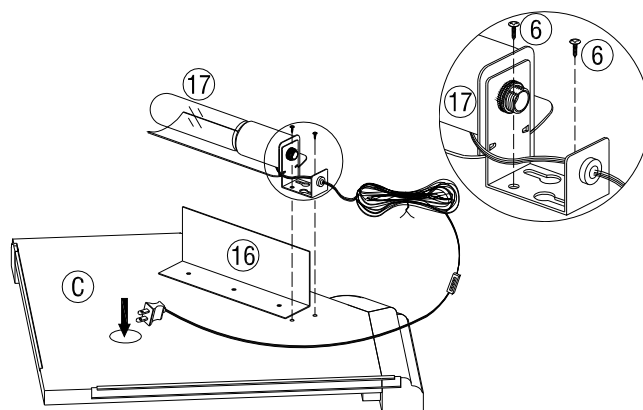


FIGURE 3

6. TIGHTEN CAM-BOLTS (3) INTO PREDRILLED HOLES ON UPSIDE OF UPPER SHELF (F) AND FIT INTO CORRESPONDING HOLES ON BOTTOM EDGES OF PARTS (A, B, D, E). INSERT CAM-LOCKS (4) INTO BIG HOLE ON PARTS (A, B, D, E) WITH SLOT FOR SCREWDRIVER FACING OUTWARD. ROTATE CAM-LOCKS (4) CLOCKWISE TO SECURE CAM-BOLTS (3). PUSH COVERS (5) INTO CAM-LOCKS (4). ASSEMBLE TOP PANEL (C) IN SAME MANNER. AS SHOWN IN FIGURE 4.
7. INSERT SMALL FLAT HEAD WOOD SCREW (6) THROUGH MAGNET PLATE (8) AND TIGHTEN INTO PREDRILLED HOLE ON UPPER DOOR (G). INSERT SMALL FLAT HEAD WOOD SCREWS (6) THROUGH METAL PLATE (10) AND TIGHTEN INTO PREDRILLED HOLES ON UPPER DOOR (G). INSERT SMALL MACHINE SCREW (9) THROUGH PREDRILLED HOLES ON UPPER DOOR (G), METAL PLATE (10) AND TIGHTEN INTO HANDLE (11). AS SHOWN IN FIGURE 5.
8. INSERT SMALL FLAT HEAD WOOD SCREWS (6) THROUGH THE HOLES ON HINGES (7) AND TIGHTEN INTO PREDRILLED HOLES ON EDGES OF UPPER RIGHT SIDE PANEL (D) AND UPPER DOOR (G). INSERT PAN HEAD WOOD SCREWS (12) THROUGH END OF MAGNET (13) AND TIGHTEN INTO PREDRILLED HOLES ON UNDERSIDE OF TOP PANEL (C). AS SHOWN IN FIGURE 5.

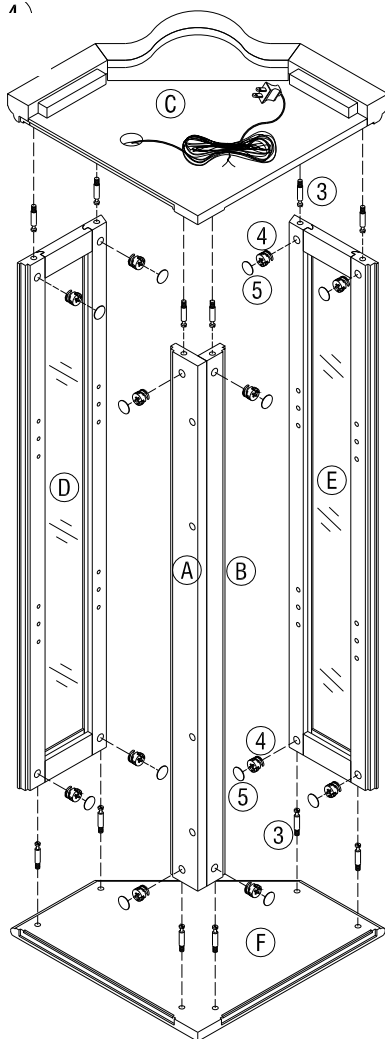


FIGURE 4

SHOWN BACK VIEW FOR ASSEMBLY PURPOSES

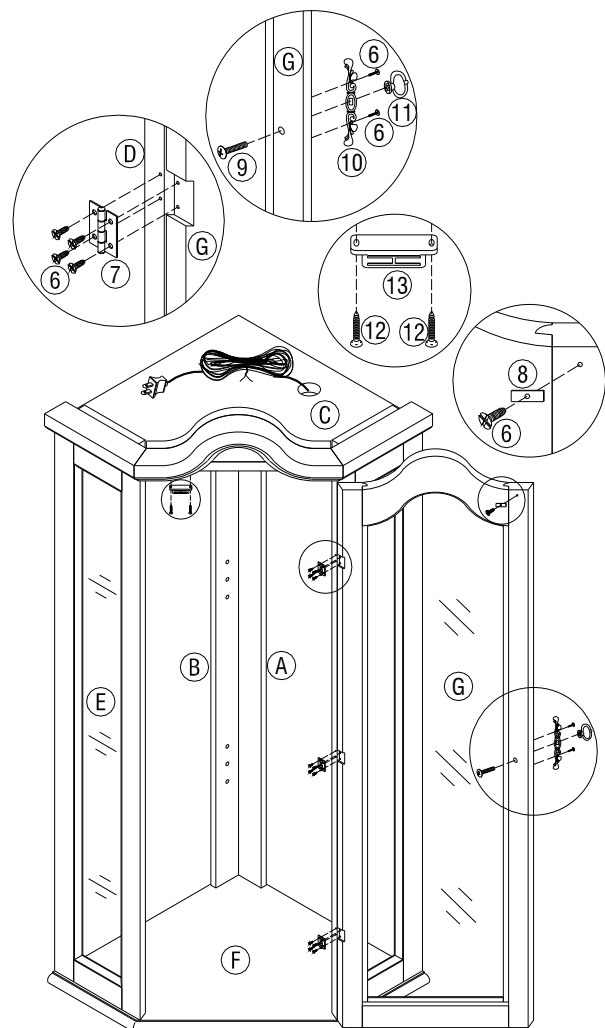


FIGURE 5

9. PLEASE BE CAREFULLY ATTACH LARGE BACK MIRRORS (Q) INTO GROOVES OF PARTS (A, B, C, D, E, F), AND ATTACH UPPER BACK PANELS (H) INTO SLOTS OF REAR EDGES OF PARTS (A, B, C, D, E, F). INSERT PAN HEAD WOOD SCREWS (12) THROUGH PREDRILLED HOLES ON UPPER BACK PANELS (H) AND TIGHTEN INTO CORRESPONDING HOLES ON REAR EDGES OF PARTS (A, B, C, D, E, F). AS SHOWN IN FIGURE 6.

10. ASSEMBLE LOWER CABINET (INCLUDED PARTS “I, J, K, L, M, N, O, P, R”) IN SAME MANNER AS STEP 3-9. AS SHOWN IN FIGURES 7, 8, 9 & 10.

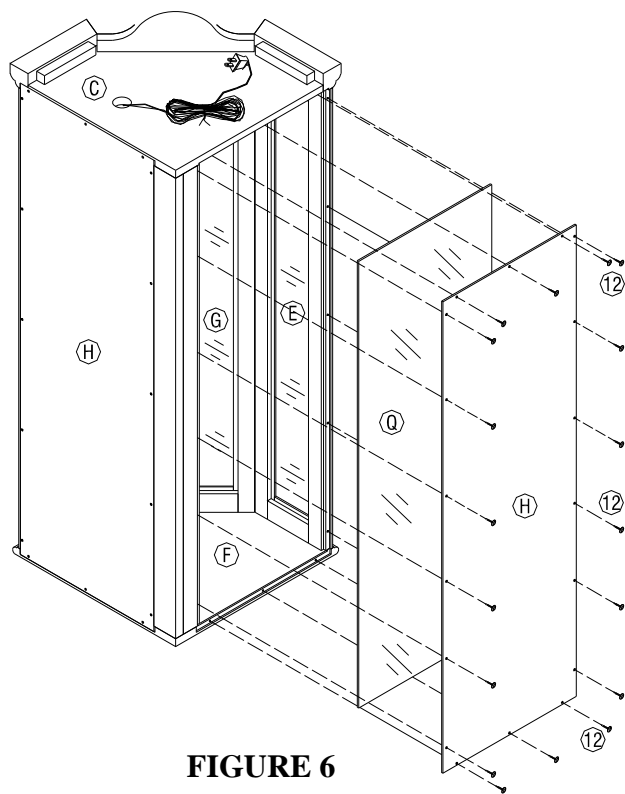


FIGURE 6

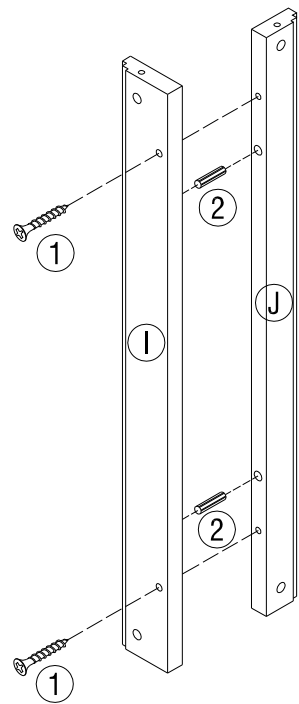


FIGURE 7

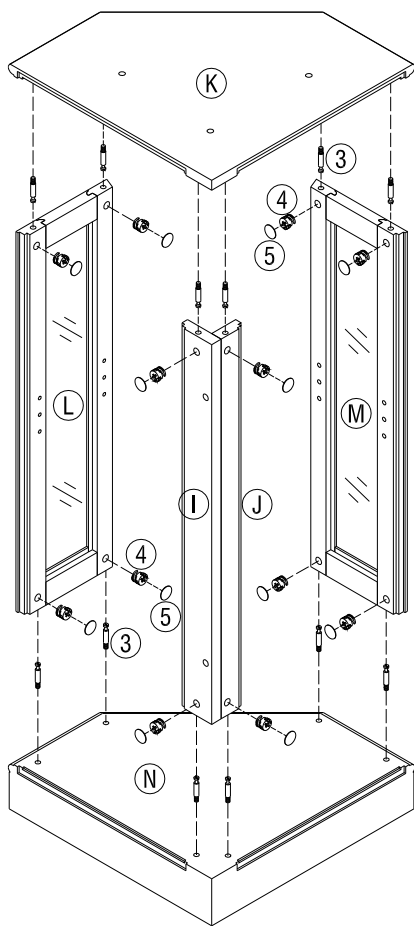


FIGURE 8

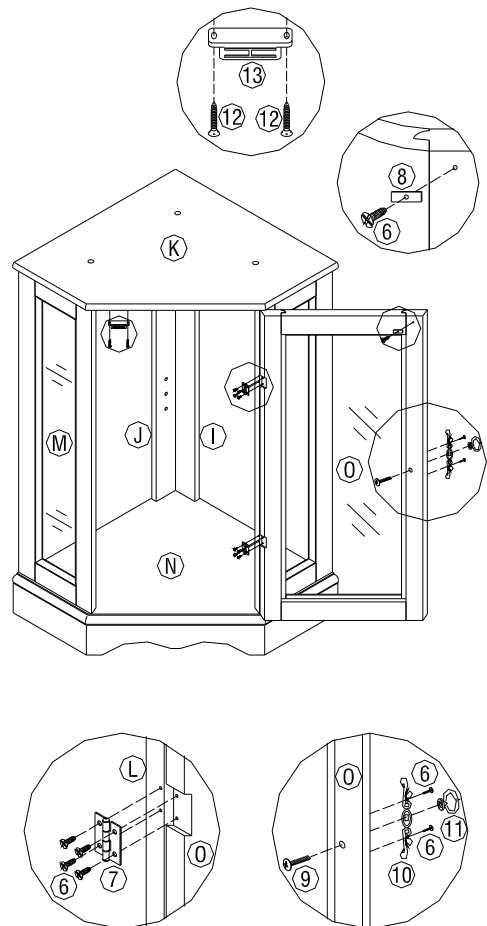


FIGURE 9

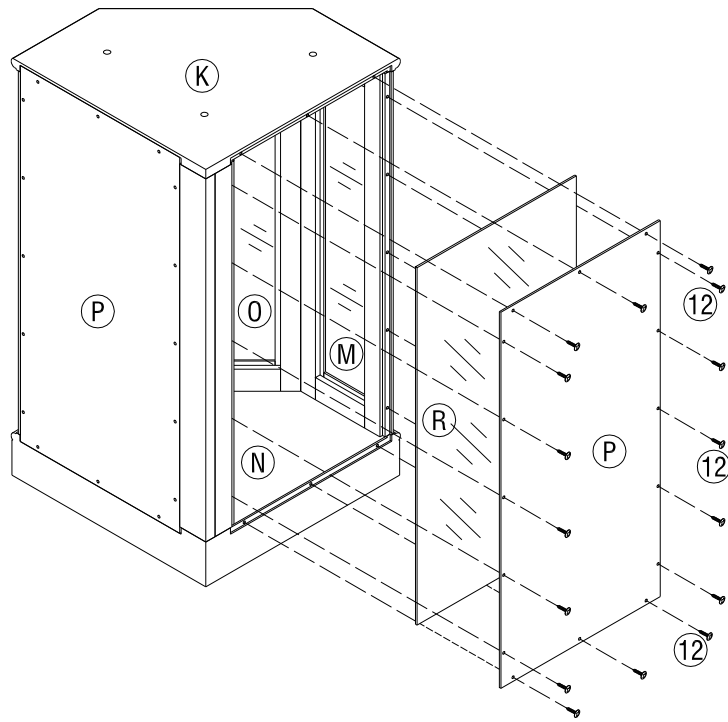


FIGURE 10

11. WITH AN ASSISTANT, PLACE UPPER CABINET ONTO LOWER CABINET, AND TIGHTEN LARGE MACHINE SCREWS (14) THROUGH PREDRILLED HOLES ON LOWER SHELF (K) INTO THREADED HOLES ON UNDERSIDE OF UPPER SHELF (F). AS SHOWN IN FIGURE 11.
12. FIT SHELF SUPPORTS (15) INTO PREDRILLED HOLES ON INSIDE OF PARTS (A, B, D, E, I, J, L, M), AND PUT GLASS SHELVES (S) ON EACH SHELF SUPPORTS (15). AS SHOWN IN FIGURE 12.

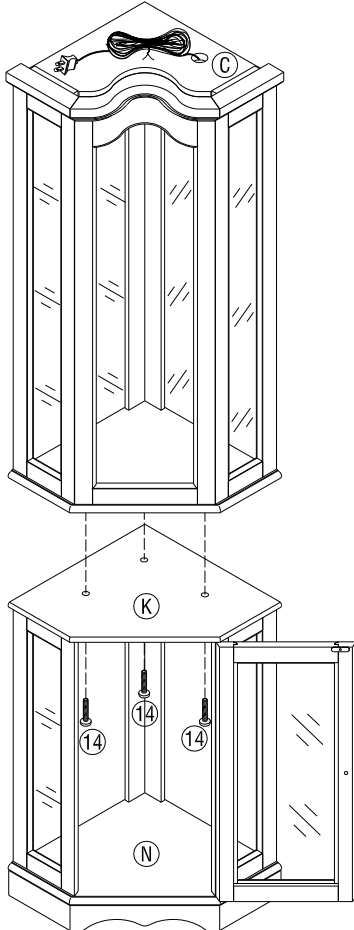


FIGURE 11

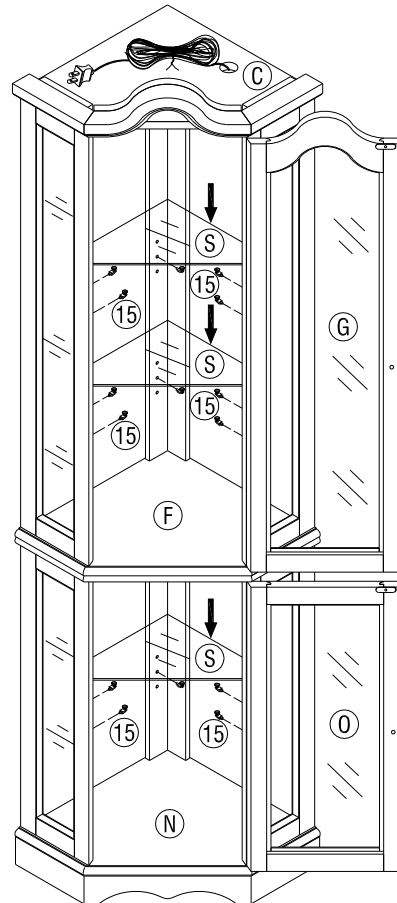


FIGURE 12

13. FIT THE PLUG TO THE APPROPRIATE POWER SOURCE AND THE LIGHT IS READY TO BE LIT. TURN THE LIGHT **ON** AND **OFF** BY TURNING THE SWITCH ON CORD. AS SHOWN IN FIGURE 13.

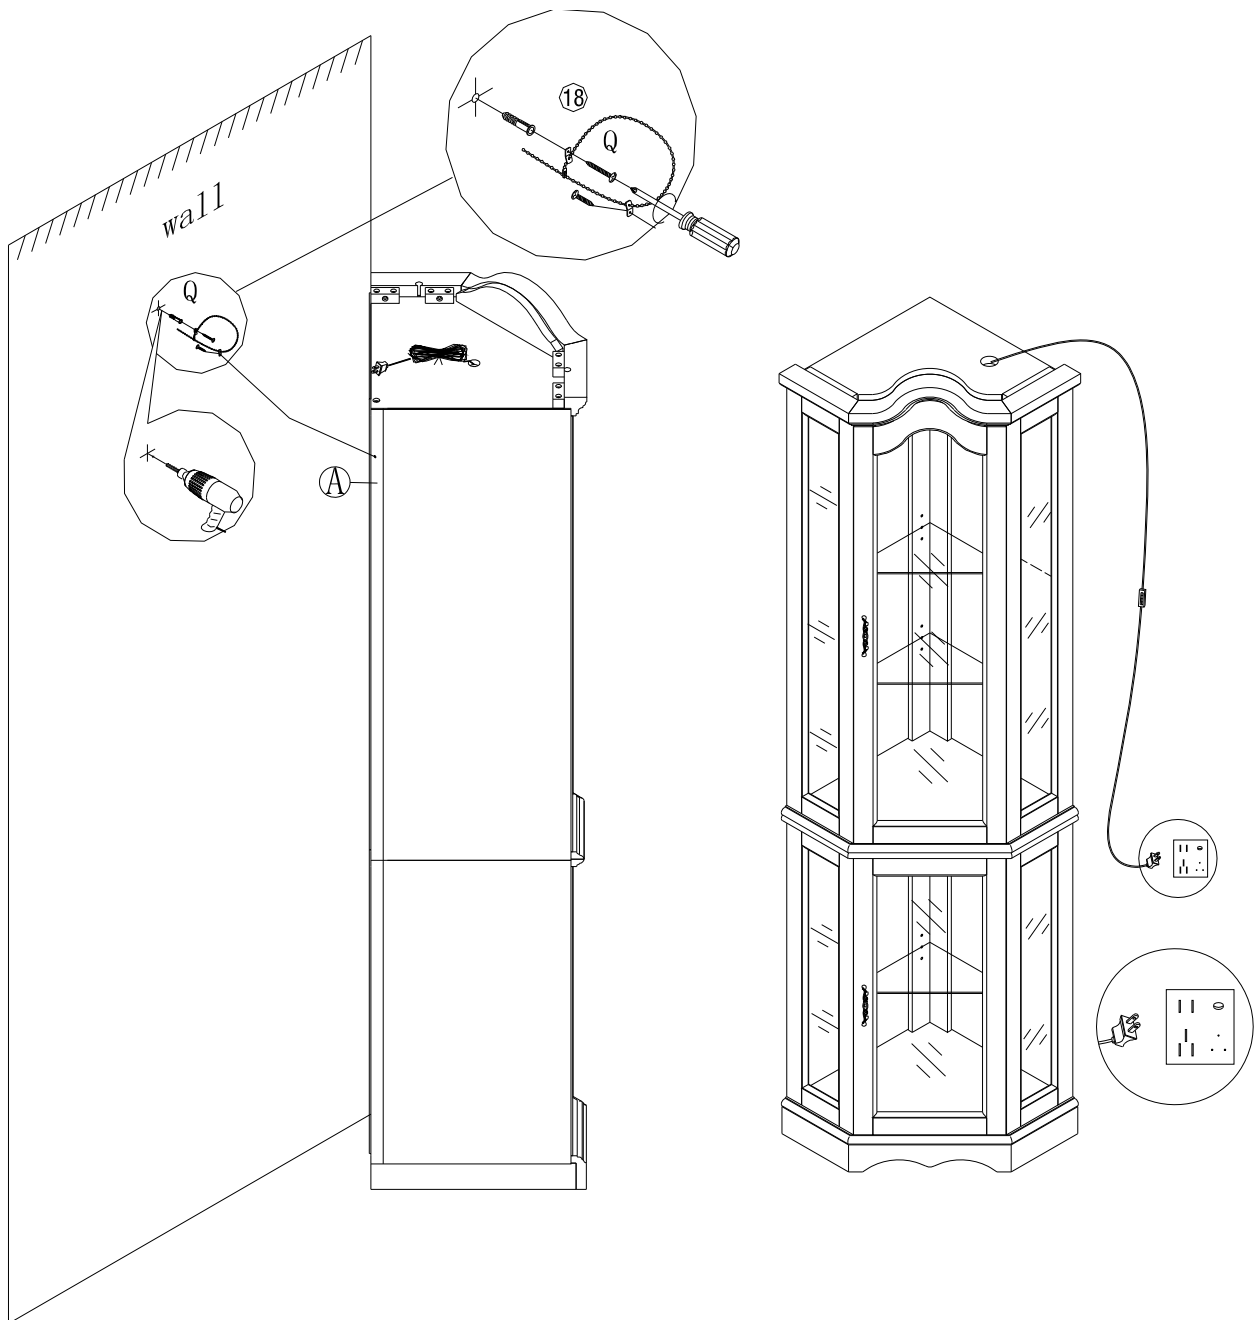



FIGURE 13

YOUR NEW LIGHTED CORNER CURIO IS FINISHED AND READY TO USE.

Please count, identify and compare parts and hardware list to be sure all parts are present. It may help to divide parts and label them to correspond with part list. Extra hardware may be included. If any items are missing, please contact our parts/service department at (800) 633-5096 or in Dallas (972) 869-0111/ 9am – 4pm Mon-Fri Central time. Missing or damaged hardware and/ or parts will be replaced free of charge. WE DO NOT SELL PARTS. WE DO NOT RECOMMEND MODIFYING PRODUCT(S) AND WE ARE NOT RESPONSIBLE FOR ANY DAMAGES DUE TO PRODUCT MODIFICATION(S). If this product has not been purchased from our retail affiliates (within 9 months), we are under no obligation to provide parts or replacement merchandise. Parts will not be available for items arriving fully assembled.

We will ship parts if available. This is not a warranty.

PARTS REPLACEMENT FORM			
GOLDEN OAK	STYLE NO. CM0695A/B0JP JCPL0T . 774-4285/774-4286		
MAHOGANY	STYLE NO. CM0696A/B0JP JCPL0T . 774-4285/774-4286		
Customer Name	PARTS LETTER	PART DESCRIPTION	QUANTITY NEEDED
Street, City, State, Zip			
Phone#			
		<div style="border-bottom: 1px solid black; height: 20px; width: 100%;"></div> <div style="border-bottom: 1px solid black; height: 20px; width: 100%;"></div>	
SOUTHERN ENTERPRISES INC. 600 Freeport Parkway, Suite 200 Coppell, Texas, 75019		Please indicate where you purchased this item. Store/website/catalog <div style="text-align: center;">/ /</div>	
		Please indicate color/size/style number <div style="text-align: center;">/ /</div>	
		<div style="text-align: center;">/ /</div>	

WARNING:

- USE THE PROPER BULB AND THE PROPER POWER SUPPLY LABELED ON THE LAMP HOLDER.
- **THIS PRODUCT CAN ONLY BE USED INDOORS.**

IMPORTANT SAFETY INSTRUCTIONS

WHEN USING ELECTRICAL PRODUCTS, BASIC PRECAUTIONS SHOULD ALWAYS BE FOLLOWED INCLUDING THE FOLLOWING.

READ AND FOLLOW ALL SAFETY INSTRUCTIONS

- DO NOT USE SEASONAL PRODUCTS OUTDOORS UNLESS MARKED SUITABLE FOR INDOOR AND OUTDOOR USE. WHEN PRODUCTS ARE USED IN OUTDOOR APPLICATIONS, CONNECT THE PRODUCT TO A GROUND FAULT CIRCUIT INTERRUPTING (GFCI) OUTLET. IF ONE IS NOT PROVIDED, CONTACT A QUALIFIED ELECTRICIAN FOR PROPER INSTALLATION.
- THIS SEASONAL USE PRODUCT IS NOT INTENDED FOR PERMANENT INSTALLATION OR USE.
- DO NOT MOUNT OR PLACE NEAR GAS OR ELECTRIC HEATERS, FIREPLACE, CANDLES OR OTHER SIMILAR SOURCES OF HEAT.
- DO NOT OPERATE WHERE AEROSOL (SPRAY) PRODUCTS ARE BEING USED OR WHERE OXYGEN IS BEING ADMINISTERED.
- DO NOT LET LAMPS REST ON THE SUPPLY CORD OR ON ANY WIRE.
- UNPLUG THE PRODUCT WHEN LEAVING THE HOUSE, WHEN RETIRING FOR THE NIGHT, OR IT LEFT UNATTENDED.
- CLOSE SUPERVISION IS NECESSARY WHEN THIS APPLIANCE IS USED BY, OR NEAR
- CHILDREN, INVALIDS, OR DISABLED PERSONS.
- USE THIS APPLIANCE ONLY FOR ITS INTENDED USE AS DESCRIBED IN THIS MANUAL. DO NOT USE ATTACHMENTS NOT RECOMMENDED BY THE MANUFACTURER.
- DO NOT HANG ORNAMENTS OR OTHER OBJECTS FROM CORD, WIRE, OR LIGHT STRING.
- NEVER OPERATE THE APPLIANCE IF IT HAS A DAMAGED CORD OR PLUG, IF IT IS NOT
- WORKING PROPERLY, IF IT HAS BEEN DROPPED OR DAMAGED. RETURN THE FURNISHING TO A SERVICE CENTER FOR REPAIR.
- TO DISCONNECT, TURN ALL CONTROLS TO THE OFF POSITION, THEN REMOVE PLUG FROM OUTLET.
- READ AND FOLLOW ALL INSTRUCTIONS THAT ARE ON THE PRODUCT OR PROVIDED WITH THE PRODUCT.

USE AND CARE INSTRUCTIONS

- BEFORE USING OR REUSING, INSPECT PRODUCT CAREFULLY. DISCARD ANY PRODUCTS THAT HAVE CUT, DAMAGED, OR FRAYED WIRE INSULATION OR CORDS, CRACKS IN THE LAMP HOLDERS OR ENCLOSURES, LOOSE CONNECTIONS, OR EXPOSED COPPER WIRE.
- WHEN STORING THE PRODUCT, CAREFULLY REMOVE THE PRODUCT FROM WHEREVER IT IS PLACED, INCLUDING TREES, BRANCHES, OR BUSHES, TO AVOID ANY UNDUE STRAIN OR STRESS ON THE PRODUCT CONDUCTORS, CONNECTIONS AND WIRES.
- WHEN NOT IN USE, STORE NEATLY IN A COOL, DRY LOCATION PROTECTED FROM SUNLIGHT.

SAVE THESE INSTRUCTIONS