

## JAMBOREE



**Safety**  
**Sûreté**  
**Seguridad**



**WARNING:** Assembly by adult.  
**AVERTISSEMENT:** L'assemblage doit être exécuté par un adulte.  
**ADVERTENCIA:** El ensamblaje lo debe hacer un adulto.

**FOR PRIVATE BACKYARD USE ONLY**  
**DO NOT USE IN PUBLIC SETTINGS!**

**SOLAMENTE PARA USO EN EL PATIO TRASERO PRIVADO**  
**¡NO DEBE USARSE EN LUGARES PUBLICOS!**

**PRODUIT NON-CONÇU POUR UNE UTILISATION COMMERCIALE**  
**UTILISEZ UNIQUEMENT EN RÉSIDENCES PRIVÉES!**

# IMPORTANT!!

## PLEASE READ BEFORE BEGINNING ASSEMBLY!!

Please make sure all lumber, hardware and accessory parts are accounted for.  
If you are missing anything, please **DO NOT RETURN** to the store where purchased.  
Please call our Customer Service Department at the number below.

## ASSEMBLY INSTRUCTIONS

Swing-N-Slide • 1212 Barberry Drive • Janesville, Wisconsin 53545  
Visit our web sit at: [www.swing-n-slide.com](http://www.swing-n-slide.com) or call us at 1-800-888-1232



WE PUT *Kids* FIRST!

## Safety Checklist for Play Sets and Accessories

### Observing the following statements and warnings reduces the likelihood of serious or fatal injury

- ☐ This playset has been designed for use by a maximum of nine (9) occupants at one time having a combined weight of 945 pounds.
- ☐ This playset is intended for use by children from (2) to (10) years of age.
- ☐ On-site adult supervision for children of all ages is recommended.
- ☐ Instruct children not to walk close to, in front of, behind, or between moving items.
- ☐ Instruct children not to twist swing chains or ropes or loop them over the top support bar since this may reduce the strength of the chain or rope.
- ☐ Instruct children to avoid swinging empty seats.
- ☐ Teach children to sit in the center of the swings with their full weight on the seats.
- ☐ Instruct children not to use the equipment in a manner other than intended.
- ☐ Instruct children not to get off equipment while it is in motion.
- ☐ Do not allow children to wear inappropriate items, such as but not limited to, loose fitting clothing, hood and neck drawstrings, scarves, cord-connected items, capes and ponchos. These items can cause death by strangulation.
- ☐ Instruct children not to climb when the equipment is wet. Slippery surfaces may cause a hazard.
- ☐ Verify that suspended climbing ropes, chain, or cable are secured at both ends.
- ☐ Verify that suspended climbing ropes, chain, or cable cannot be looped back on itself.
- ☐ Instruct children not to attach items to the playground equipment that are not specifically designed for use with the equipment, such as, but not limited to, jump ropes, clothesline, pet leashes, cables and chain as they may cause a strangulation hazard.
- ☐ Instruct children to remove their bike or other sports helmet before playing on the playground equipment.
- ☐ Dress children with well-fitting and full foot enclosing footwear. Examples of inappropriate footwear are clogs, flip flops, and sandals.
- ☐ Instruct children to not walk or run up slides.
- ☐ Instruct children to not pick up slides or ramps as this may cause damage or breakage.
- ☐ Place the equipment on level ground not less than six (6) feet from any obstructions. Be sure to look overhead for any obstructions above the playset.
- ☐ Do not use the equipment until fully erected per this playset instruction manual, bolts tightened and the playset is anchored to the ground.

### IMPORTANT!

**This product is intended for single family home/residential use only and not intended for use in any public setting. Placement in any public setting constitutes a misuse of this product.**

# PLAYSET MAINTENANCE

Cosmetic defects that do not affect the structural integrity of the product, or natural defects of wood such as warping, splitting, checking, twisting, shrinkage, swelling or any other physical properties of wood that do not present a safety hazard, are not covered by our warranty.

To help minimize these natural defects we recommend applying a sealer or stain every two or three years, or more often as the climate dictates. Power washing, sanding or other preparatory methods should be used prior to sealing or staining.

Periodic maintenance is required to ensure safe enjoyment of your playset and accessories. Read and follow the Playset Checklist below to reduce the likelihood of serious or fatal injury. Use the checklists as a guide for proper playset care and maintenance.

## PLAYSET CHECKLIST

### At the beginning of each play season:

- ☐ Tighten all hardware.
- ☐ Lubricate all metallic moving parts per manufacturer's instructions.
- ☐ Check all protective coverings on bolts, pipes, edges, and corners. Replace if they are loose, cracked, or missing.
- ☐ Check all moving parts including swing seats, ropes, cables, and chains for wear, rust, or other deterioration. Replace as needed.
- ☐ Check metal parts for rust. If found, sand and repaint using a nonleaded-based paint meeting the requirements of 16 CFR 1303.
- ☐ Check all wood members for deterioration and splinters. Sand down splinters and replace deteriorating wood members.
- ☐ Reinstall any plastic parts, such as swing seats or any other items that were removed for the cold season.
- ☐ Rake and check depth of loose fill protective surfacing materials to prevent compaction and to maintain appropriate depth. Replace as necessary.

### Twice a month during play season:

- ☐ Tighten all hardware.
- ☐ Check all protective coverings on bolts, pipes, edges, and corners. Replace if they are loose, cracked, or missing.
- ☐ Rake and check depth of loose fill protective surfacing materials to prevent compaction and to maintain appropriate depth. Replace as necessary.

### Once a month during play season:

- ☐ Lubricate all metallic moving parts per manufacturer's instructions.
- ☐ Check all moving parts including swing seats, ropes, cables, and chains for wear, rust, or other deterioration. Replace as needed.

### At the end of each play season or when the temperature drops below 10°F:

- ☐ Remove plastic swing seats, tents, sandbox cover, tire swing, slide and other items as specified by the manufacturer and take indoors or do not use.
- ☐ Rake and check depth of loose fill protective surfacing materials to prevent compaction and to maintain appropriate depth. Replace as necessary.
- ☐ Owner shall be responsible for maintaining the legibility of warning labels.

**When you are ready to dispose of your playset, make sure that all metal, plastic and wood components are disposed of in accordance with local waste ordinances.**

**Buyer and/or owner should disassemble and dispose of the playground equipment in such a way that no unreasonable hazards will exist at the time the swing set is discarded. Do not burn your playset's preserved wood.**

**For further information on playground safety, the Consumer Product Safety Commission (CPSC) publishes the Outdoor Home Playground Safety Handbook which can be downloaded for free from [www.cpsc.gov](http://www.cpsc.gov). An additional resource is the American Society of Testing and Materials (ASTM) Standard Consumer Safety Performance Specification for Home Playground Equipment (ASTM F1148) which can be purchased and downloaded from [www.astm.org](http://www.astm.org).**

# PLAYGROUND SURFACING MATERIALS

## SECTION 4 OF THE CONSUMER PRODUCT SAFETY COMMISSION'S OUTDOOR HOME PLAYGROUND SAFETY HANDBOOK<sup>9</sup>

### Select Protective Surfacing

One of the most important things you can do to reduce the likelihood of serious head injuries is to install shock-absorbing protective surfacing under and around your play equipment. The protective surfacing should be applied to a depth that is suitable for the equipment height in accordance with ASTM Specification F 1292. There are different types of surfacing to choose from; whichever product you select, follow these guidelines:

**NOTE:** Do not install home playground equipment over concrete, asphalt, or any other hard surface. A fall onto a hard surface can result in serious injury to the equipment user. Grass and dirt are not considered protective surfacing because wear and environmental factors can reduce their shock absorbing effectiveness. Carpeting and thin mats are generally not adequate protective surfacing. Ground level equipment - such as a sandbox, activity wall, playhouse or other equipment that has no elevated play surface - does not need any protective surfacing.

### Maximum fall height for this playset is 83".

#### Loose-Fill Materials:

- ☐ Maintain a minimum depth of 9 inches of loose-fill materials such as wood mulch/chips, engineered wood fiber (EWF), or shredded/recycled rubber mulch for equipment up to 8 feet high; and 9 inches of sand or pea gravel for equipment up to 5 feet high. NOTE: An initial fill level of 12 inches will compress to about a 9-inch depth of surfacing over time. The surfacing will also compact, displace, and settle, and should be periodically refilled to maintain at least a 9-inch depth.
- ☐ Use a minimum of 6 inches of protective surfacing for play equipment less than 4 feet in height. If maintained properly, this should be adequate. (At depths less than 6 inches, the protective material is too easily displaced or compacted.)
- ☐ Use containment, such as digging out around the perimeter and/or lining the perimeter with landscape edging. Don't forget to account for water drainage.
- ☐ Check and maintain the depth of the loose-fill surfacing material. To maintain the right amount of loose-fill materials, mark the correct level on play equipment support posts. That way you can easily see when to replenish and/or redistribute the surfacing.
- ☐ Do not install loose fill surfacing over hard surfaces such as concrete or asphalt.

#### Poured-In-Place Surfaces or Pre-Manufactured Rubber Tiles:



You may be interested in using surfacing other than loose-fill materials - like rubber tiles or poured-in-place surfaces.

- ☐ Installations of these surfaces generally require a professional and are not "do-it-yourself" projects.
- ☐ Review surface specifications before purchasing this type of surfacing. Ask the installer/manufacture for a report showing that the product has been tested to the following safety standard: ASTM F 1292 Standard Specification for Impact Attenuation of Surfacing Materials within the Use Zone of Playground Equipment. This report should show the specific height for which the surface is intended to protect against serious head injury. This height should be equal to or greater than the fall height - vertical distance between a designated play surface (elevated surface for standing, sitting, or climbing) and the protective surfacing below - of your play equipment.
- ☐ Check the protective surfacing frequently for wear.

### Placement

Proper placement and maintenance of protective surfacing is essential. Be sure to


- ☐ Extend surfacing at least 6 feet from the equipment in all directions.
- ☐ For to-and-fro swings, extend protective surfacing in front of and behind the swing to a distance equal to twice the height of the top bar from which the swing is suspended.
- ☐ For tire swings, extend surfacing in a circle whose radius is equal to the height of the suspending chain or rope, plus 6 feet in all directions.

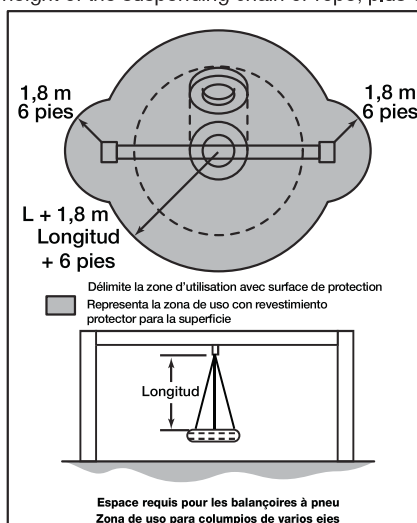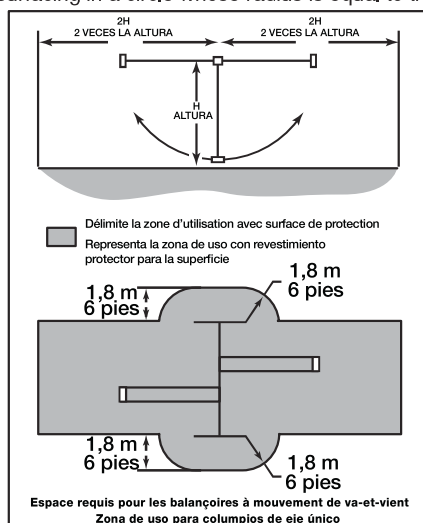

<sup>9</sup> This information has been extracted from the CPSC publications "Playground Surfacing-Technical Information Guide" and "Handbook for Public Playground Safety." Copies of these reports can be obtained by sending a postcard to the: Office of Public Affairs, U.S. Consumer Product Safety Commission, Washington, D.C., 20207 or call the toll-free hotline: 1-800-638-2772




# DIMENSIONS

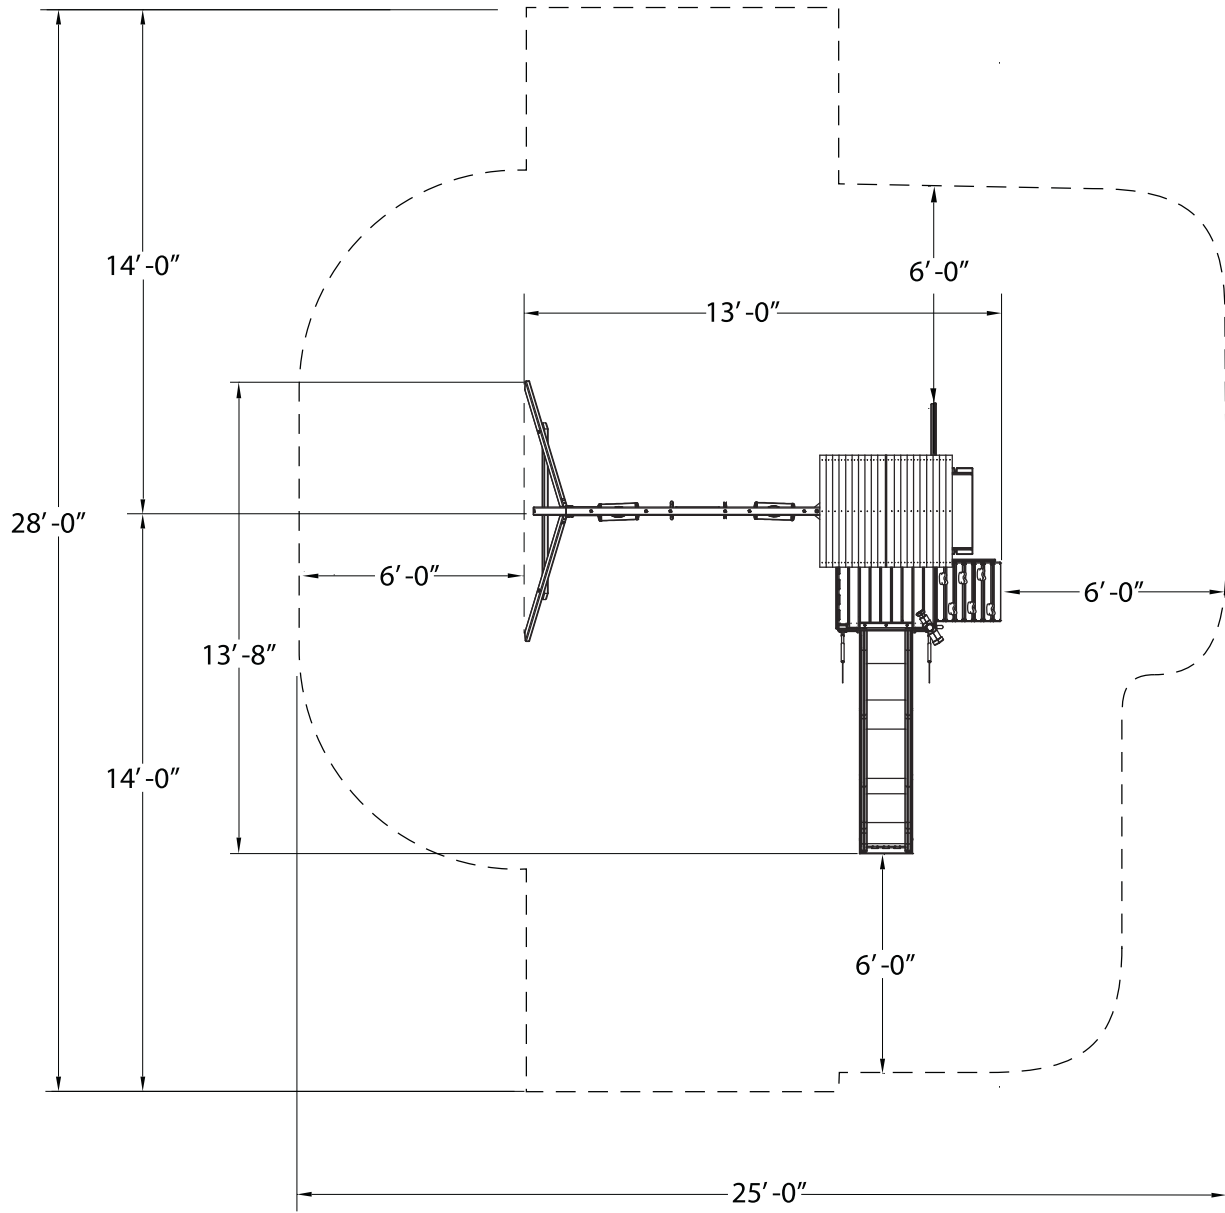


MINIMUM USE ZONE FOR PLAY EQUIPMENT SHALL EXTEND NO LESS THAN 72" FROM ALL SIDES OF THE PLAY STRUCTURE.

SWING USE ZONE EXTENDS NO LESS THAN 168".


SWINGS MUST HAVE A MINIMUM CLEARANCE OF 8" ABOVE THE PROTECTIVE SURFACING.

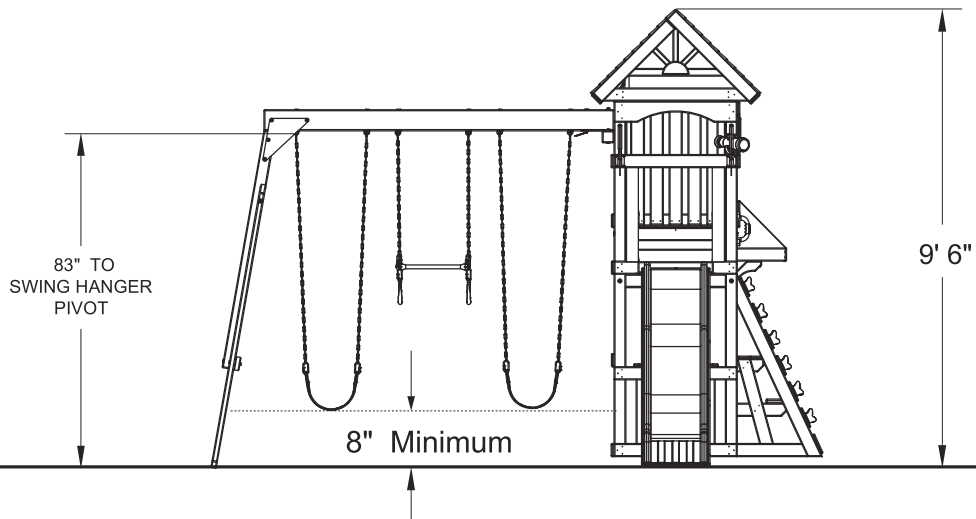

## TOOLS REQUIRED

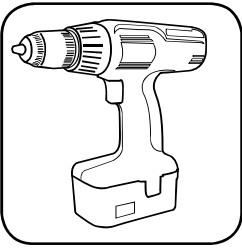


DRILL

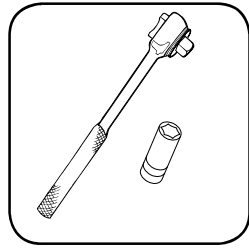


1/2" & 7/16" SOCKETS & WRENCH




HAMMER

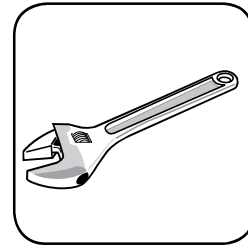


ADJUSTABLE WRENCH

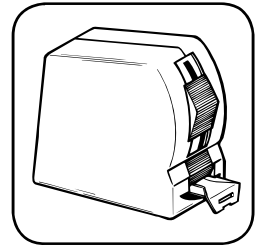


TAPE MEASURE

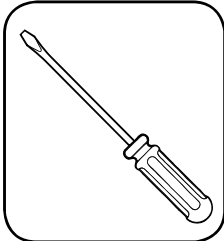

SCREWDRIVER

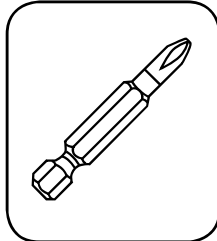


PHILLIPS BIT

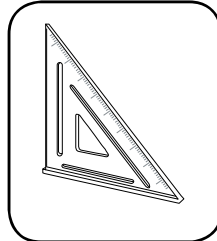


CARPENTER SQUARE



SAFETY GLASSES

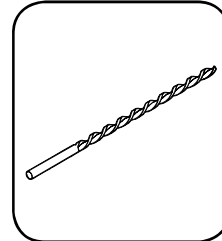


1/8" DRILL BIT

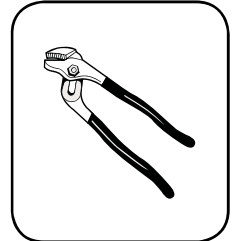


PLIERS


## INCLUDED HARDWARE

 


3" Deck Screw (x9)

 


2-1/2" Deck Screw (x170)

 

2" Deck Screw (x105)

 

1-3/4" Deck Screw (x155)

 


1-5/8" Deck Screw (x12)




1-1/4" Deck Screw (x210)



 
3/4" Flat Head Screw (x18)




#12 x 3/4" Pan Screw (x6)

 

#14 x 1-3/4" Truss Screw (x6)

 

1/4" x 1-3/4" Pan Screw (x2)

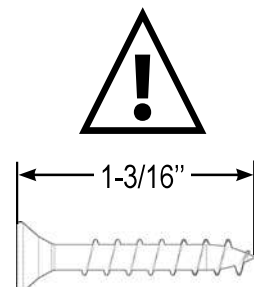


30mm Deck Screw (x110)




5/16" Loc Nut (x10)




5/16" Wood Loc Washer (x3)

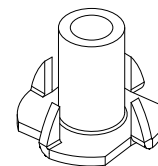


5/16-18 T-Nut (x18)  
Small

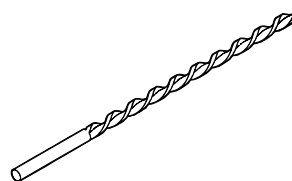


3/8" Drill Bit (x1)

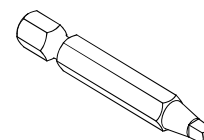


Square Bit (x1)

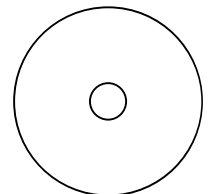


3/16" Tarp Washer (x6)

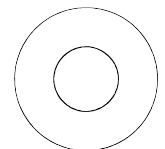


5/16" Washer (x39)

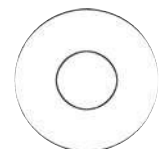

1/4" Washer (x18)





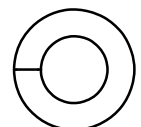


5/16" Loc Washer (x18)


 


1/4" Loc Washer (x16)



**HARDWARE**

  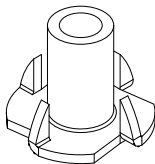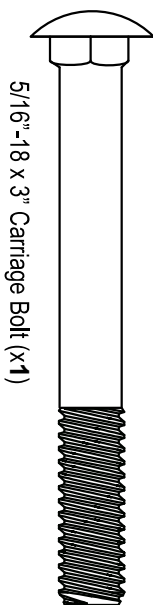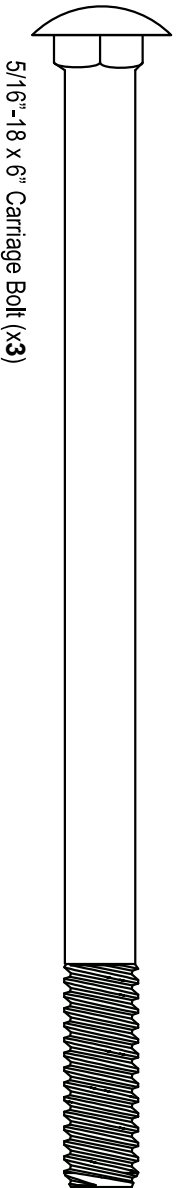




1/4 -18 T-Nut (x12)  
Small

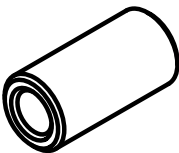 

Steering Wheel Spacer (x1)

  

5/16" x 1-1/2" Lag Screw (x4)

 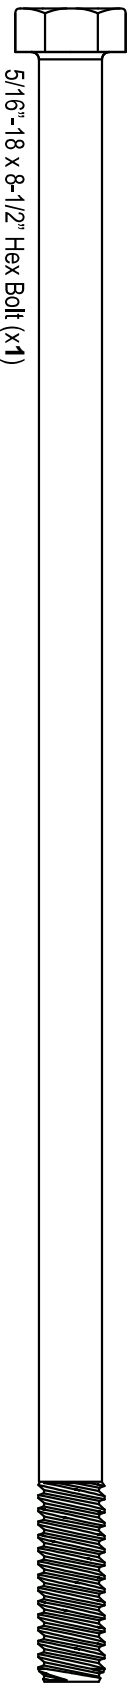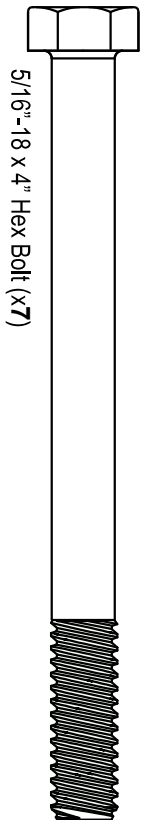

# SA6066 BOX 1 of 2

## BOARD LIST



(2) [PF 6325] 3" x 3" x 94-1/4"



(2) [PF 6324] 3" x 3" x 94-1/4"



(1) [PF 6323] 3" x 3" x 31-1/2" TOWER BEAM SUPPORT



(1) [PF 6298] 2-11/16" x 3" x 62" SWING BEAM SUPPORT



(1) [PF 6299] 2-5/8" x 5-3/8" x 93" SWING BEAM



(2) [PF 6315] 1" x 3-3/8" x 53"



(1) [PF 6314] 1" x 3-3/8" x 31-1/2"



(2) [PF 6300] 3/4" x 3-3/8" x 15-3/4"



(2) [PF 6317] 5/8" x 1-3/8" x 12"



(1) [PF 6302] 3/4" x 3-3/8" x 9-3/4"



(1) [PF 6311] 3/4" x 5-3/8" x 21-1/2"



(2) [PF 6319] 5/8" x 2" x 28"



(1) [PF 6309] 5/8" x 3-3/8" x 35"



(1) [PF 6331] 5/8" x 3-3/8" x 31-1/2"



(1) [PF 6338] 3/4" x 3-3/8" x 31-1/2"



(1) [PF 6346] 5/8" x 3-3/8" x 31-1/2"



(2) [PF 6303] 5/8" x 3-3/8" x 30"



(1) [PF 6310] 5/8" x 3-3/8" x 8-5/16"



(1) [PF 6322] 1" x 5-3/8" x 28-1/2"



(1) [PF 6339] 5/8" x 5-3/8" x 31-1/2"







 
 
 
 




 
 
 





 
 
 
 
(1) [PF 6340] 5/8" x 5-3/8" x 26-7/8"

 
 

 
 



 
 

 



 









(6) [PF 6341] 5/8" x 5-3/8" x 26-7/8"

# SA6065 BOX 2 of 2

 
## BOARD LIST

  
 (2) [PF 6297] 1-3/8" x 3-3/8" x 83" A-FRAME  
  
 (1) [PF 6296] 1-3/8" x 3-3/8" x 58" A-FRAME SUPPORT  
  
 (2) [PF 6352] 1-3/8" x 3-3/8" x 31-1/2"  
  
 (2) [PF 6295] 1-3/8" x 3-3/8" x 17-1/4" SLIDE STAKE  
  
 (2) [PF 6334] 1-3/8" x 3-3/8" x 8"  
  
 (2) [PF 6313] 1-3/8" x 3" x 77-1/4"  
  
 (1) [PF 6326] 1" x 3-3/8" x 42"  
  
 (1) [PF 6314] 1" x 3-3/8" x 31-1/2"  
  
 (2) [PF 6301] 3/4" x 3-3/8" x 26-7/8"  
  
 (2) [PF 6351] 1" x 3-3/8" x 29-1/8"  
  
 (2) [PF 6350] 1" x 3-3/8" x 26"  
  
 (2) [PF 6305] 5/8" x 3-3/8" x 25-3/8"  
  
 (2) [PF 6329] 1" x 3-1/4" x 4-5/8"  
  
 (3) [PF 6335] 3/4" x 3-3/8" x 62-1/2"  
  
 (1) [PF 6336] 3/4" x 3-3/8" x 51-3/4"  
  
 (1) [PF 6337] 3/4" x 3-3/8" x 51-1/4"  
  
 (1) [PF 6338] 3/4" x 3-3/8" x 31-1/2"  
  
 (1) [PF 6316] 3/4" x 3-3/8" x 24"  
  
 (2) [PF 6333] 3/4" x 3-3/8" x 15-1/2"  
  
 (2) [PF 6332] 3/4" x 3-3/8" x 13"  
  
 (1) [PF 6302] 3/4" x 3-3/8" x 9-3/4"  
  
 (2) [PF 6312] 1-3/8" x 1-3/8" x 31-1/2"  
  
 (2) [PF 6355] 1-3/8" x 1-3/8" x 27-3/4"  
  
 (4) [PF 6318] 5/8" x 1-3/8" x 8"

  
  
 (20) [PF 6330] 1/2" x 3-5/16" x 36-3/4" SHINGLE  
  
 (2) [PF 6354] 5/8" x 3-3/8" x 37-3/8"  
  
 (3) [PF 6309] 5/8" x 3-3/8" x 35"  
  
 (4) [PF 6308] 5/8" x 3-3/8" x 35"  
  
 (2) [PF 6320] 5/8" x 3-3/8" x 34-3/4"  
  
 (1) [PF 6345] 5/8" x 3-3/8" x 34"  
  
 (8) [PF 6347] 5/8" x 3-3/8" x 31-1/2"  
  
 (1) [PF 6346] 5/8" x 3-3/8" x 31-1/2"  
  
 (2) [PF 6307] 5/8" x 3-3/8" x 31-1/2"  
  
 (7) [PF 6306] 5/8" x 3-3/8" x 31-3/8"  
  
 (1) [PF 6331] 5/8" x 3-3/8" x 31-1/2"  
  
 (7) [PF 6348] 5/8" x 3-3/8" x 30-7/8"  
  
 (6) [PF 6303] 5/8" x 3-3/8" x 30"  
  
 (2) [PF 6349] 5/8" x 3-3/8" x 29-1/2"  
  
 (2) [PF 6328] 5/8" x 3-3/8" x 28-1/2"  
  
 (6) [PF 6327] 5/8" x 3-3/8" x 23"  
  
 (5) [PF 6304] 5/8" x 3-3/8" x 17"  
  
 (1) [PF 6310] 5/8" x 3-3/8" x 8-5/16"  
  
 (1) [PF 6342] 5/8" x 3-3/8" x 7"  
  
 (2) [PF 6321] 5/8" x 3-3/8" x 6-3/4" SUNBURST  
  
 (2) [PF 6343] 5/8" x 3-3/8" x 6-3/8"  
  
 (1) [PF 6344] 5/8" x 3-3/8" x 5-3/8"  
  
 (1) [PF 6353] 5/8" x 3-3/8" x 3"




# COMPONENTS

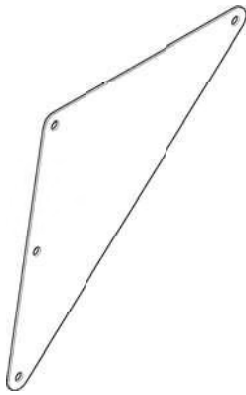


Swing Beam Bracket (x2)

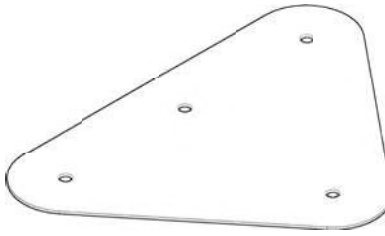


Beam Brace (x1)

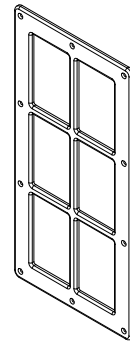

Window Pane (x1)

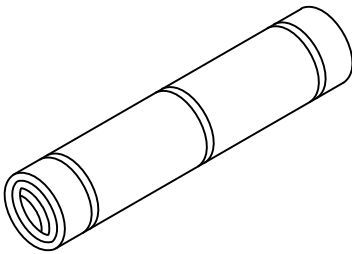


Tarp (x1)

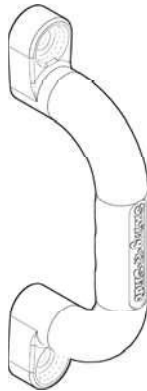

Play Handle (x2)




5/16" x 5-1/2" Swing Hanger (x6)

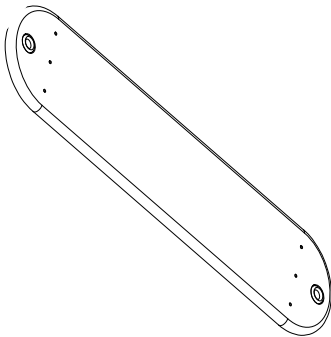

STD Swing Seat (x2)




58" Dipped Chain (x4)

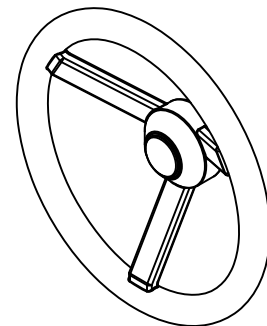


Steering Wheel (x1)




Plan (x1)

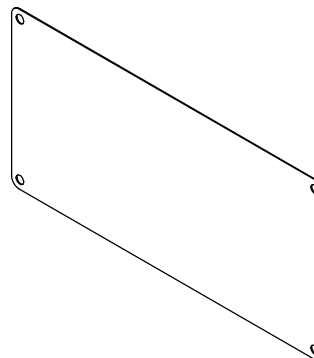


NAME PLATE (x1)

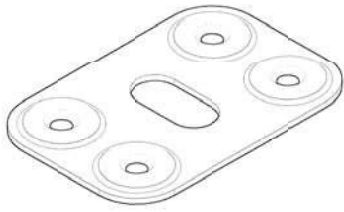


Beam Clamp Slotted (x6)

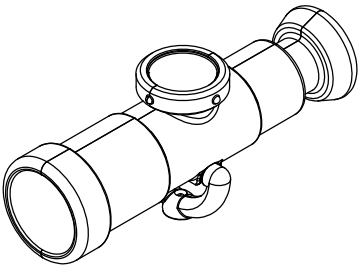


Telescope (x1)

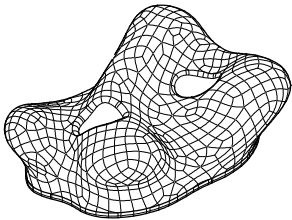


Climbing Rock (x6)

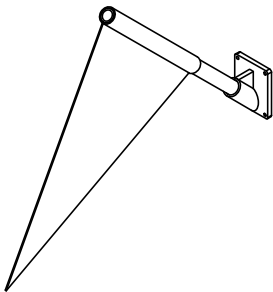


Flag Assembly (x2)

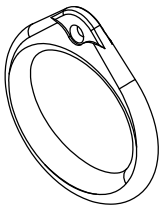


Iron Man Ring (x2)

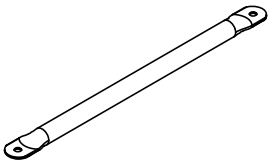

Trapeze Bar (x1)

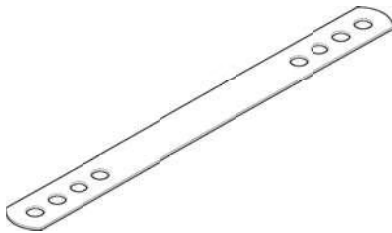

Anchor It Strap (x4)

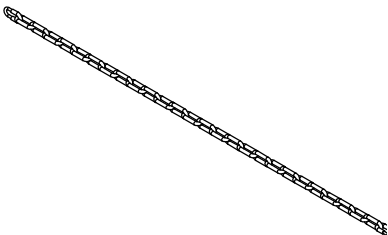


33" Dipped Chain (x2)




Anchor It (x4)

## STEP 1

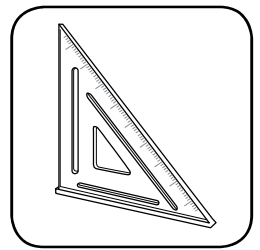


Check to make sure structure is square

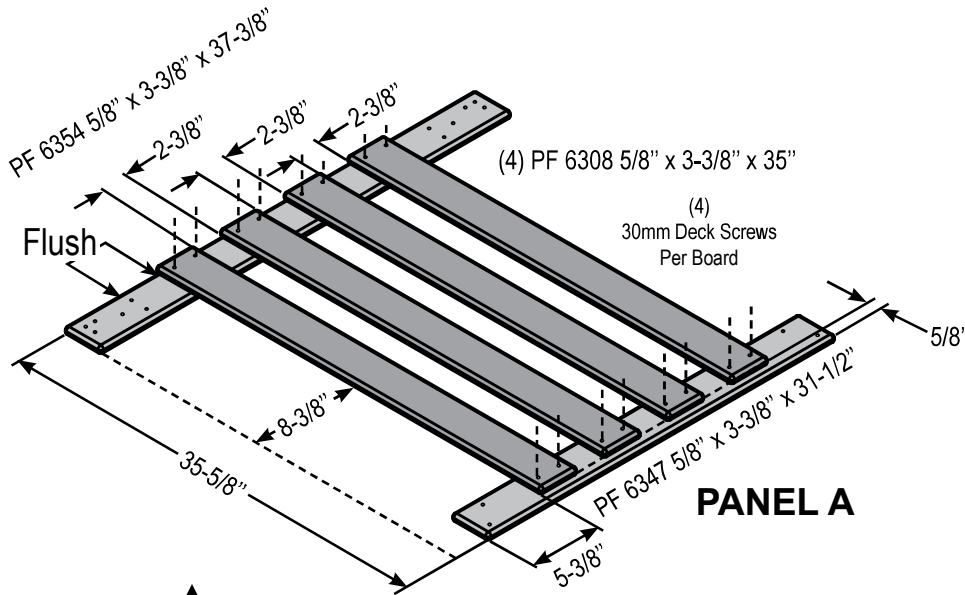


**PANEL A**




**Install 30mm Screws  
With Heads Flushed To  
Board To Avoid  
Protrusions.**

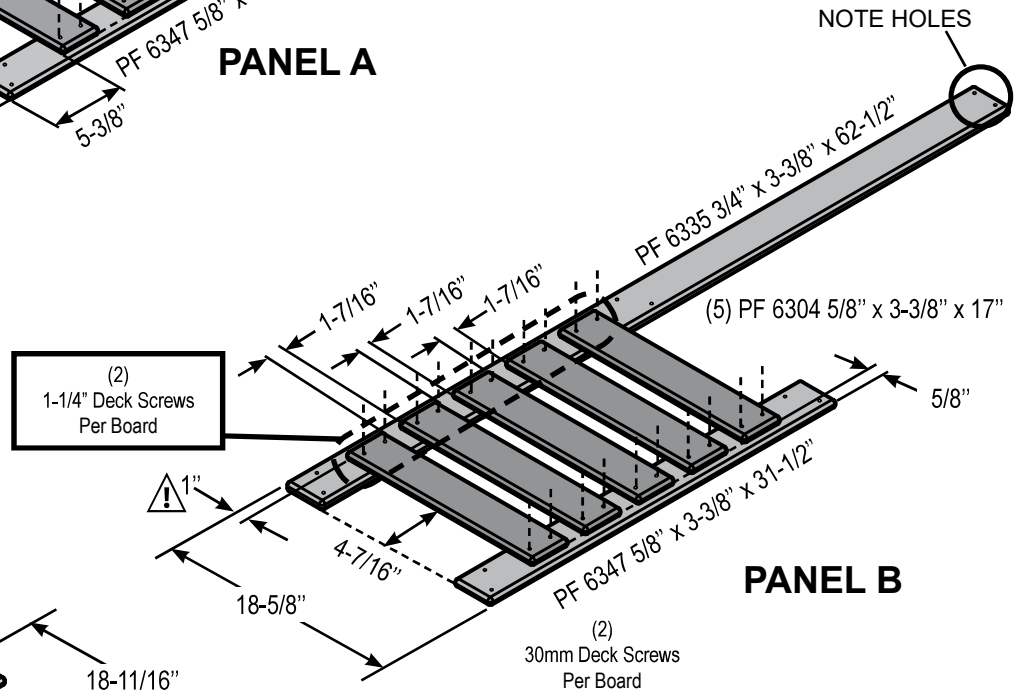


**PANEL B**

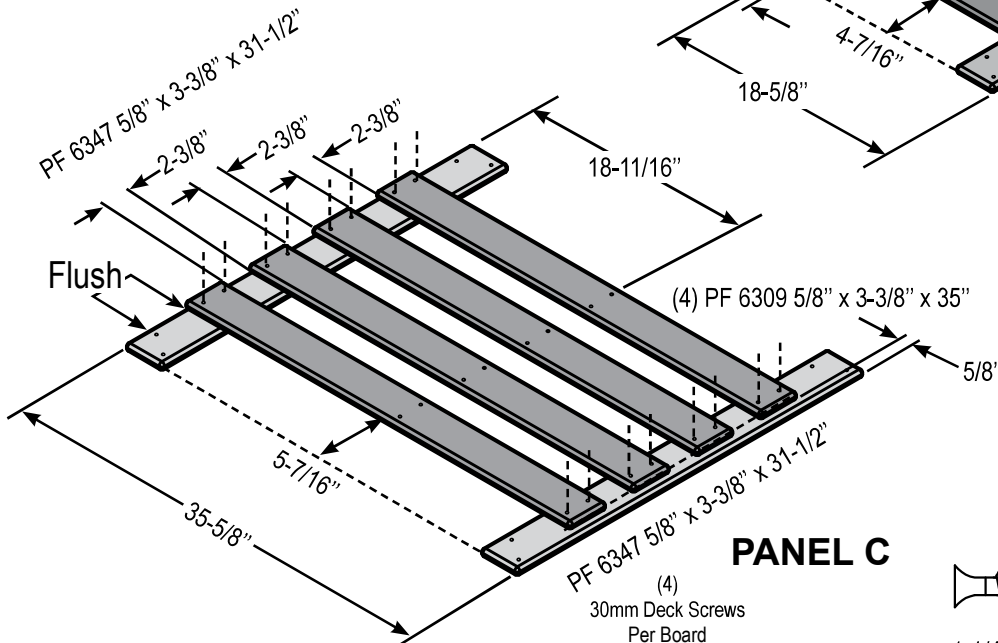

**PANEL C**

 


1-1/4" Deck Screw (x10)

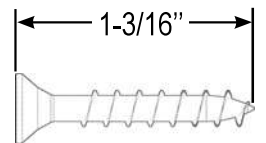


30mm Deck Screw (x42)

1. Assemble Panel A, Panel B and Panel C as shown.
2. Mark panels A, B and C.

## STEP 2

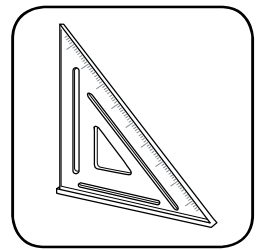


Check to make sure  
structure is square

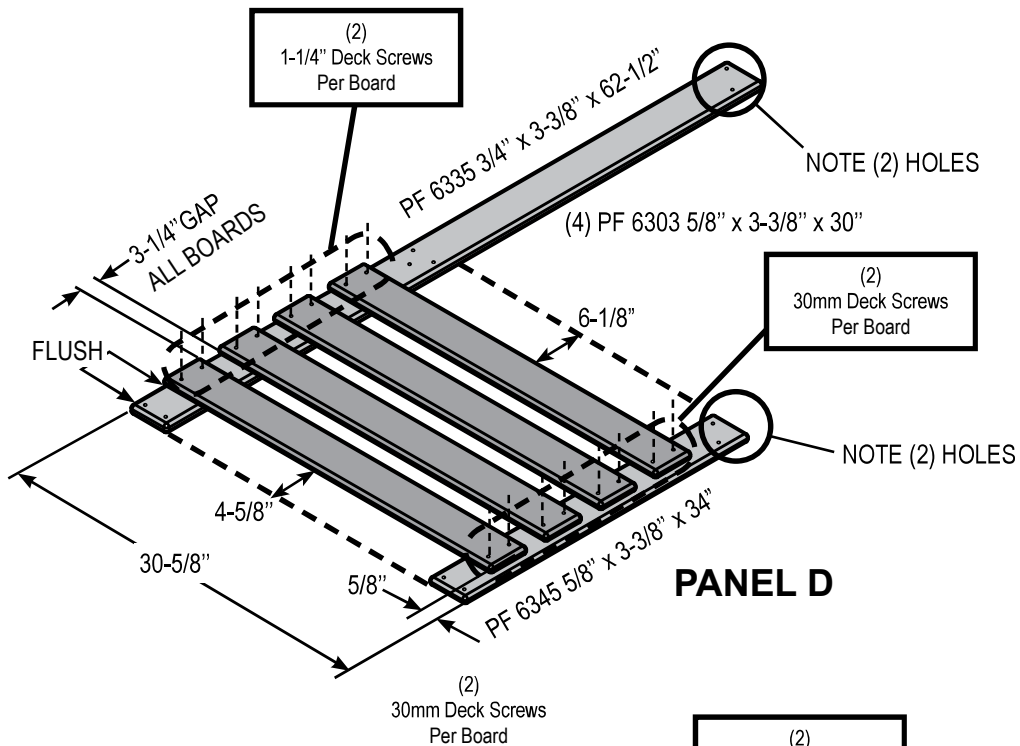


### PANEL D


**Install 30mm Screws  
With Heads Flushed To  
Board To Avoid  
Protrusions.**

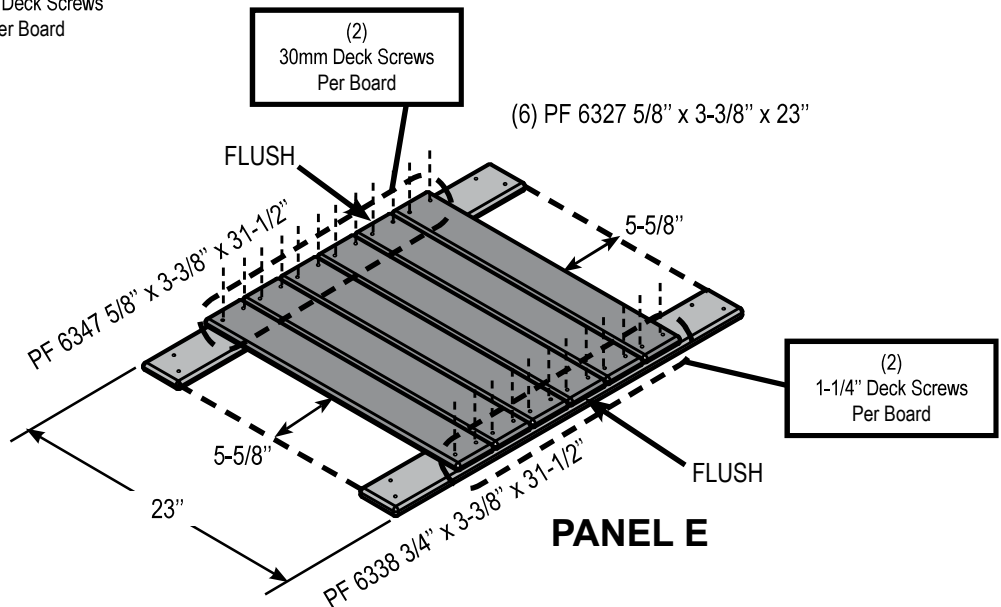

### PANEL E

 


1-1/4" Deck Screw (x20)

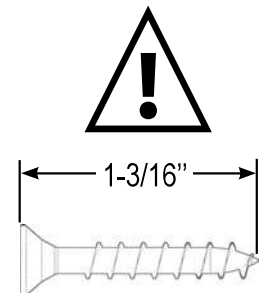


30mm Deck Screw (x20)

1. Assemble Panel D and Panel E as shown.

### STEP 3

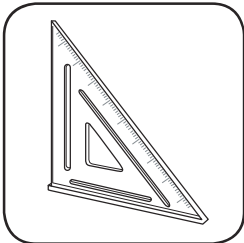

Check to make sure  
structure is square

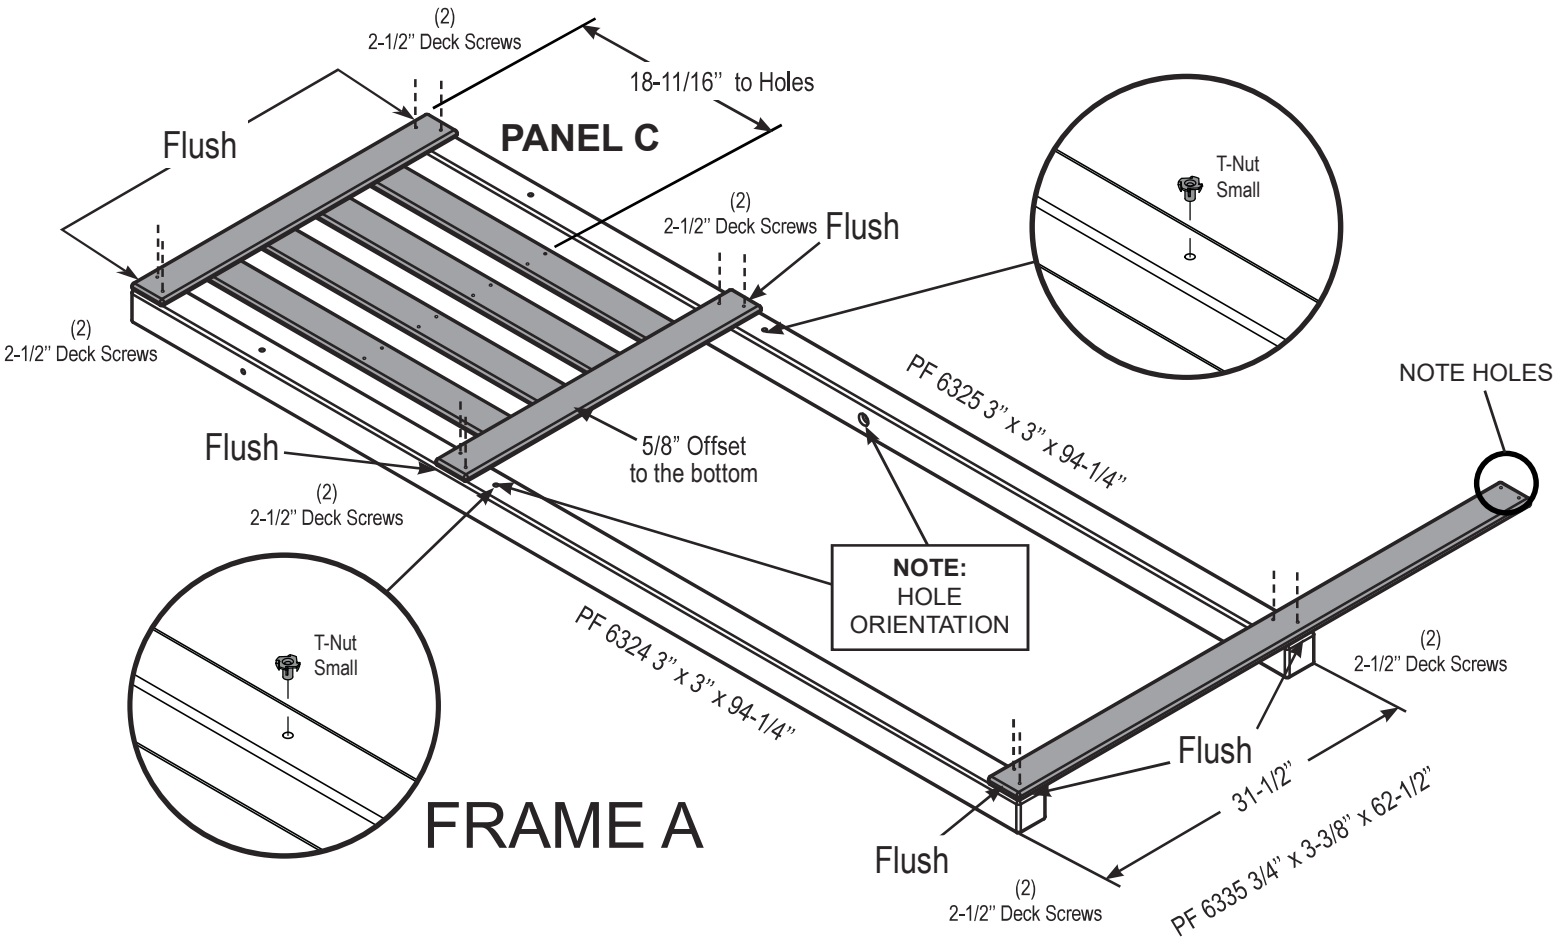


2-1/2" Deck Screw (x12)

1. Assemble Frame A as shown.

**Note:** Tap each T-Nut into its pre-drilled hole until the metal tangs sink fully into the wood.




#### STEP 4

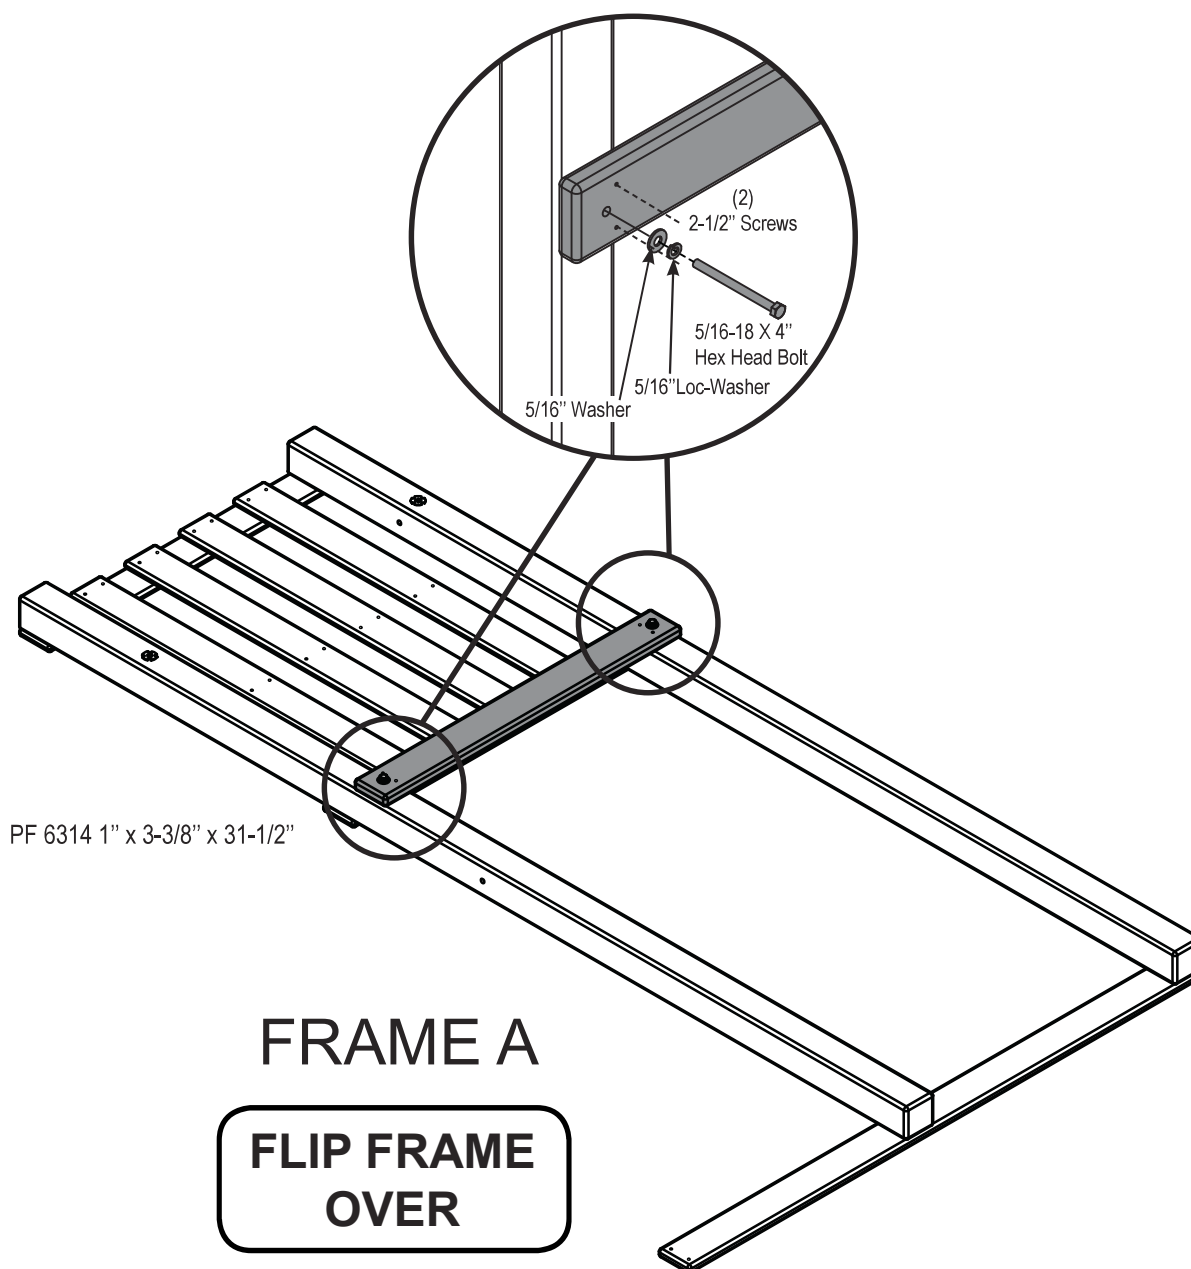


2-1/2" Deck Screw (x4)

1. Flip frame over and Attach Frame Support Board as shown above.

## STEP 5

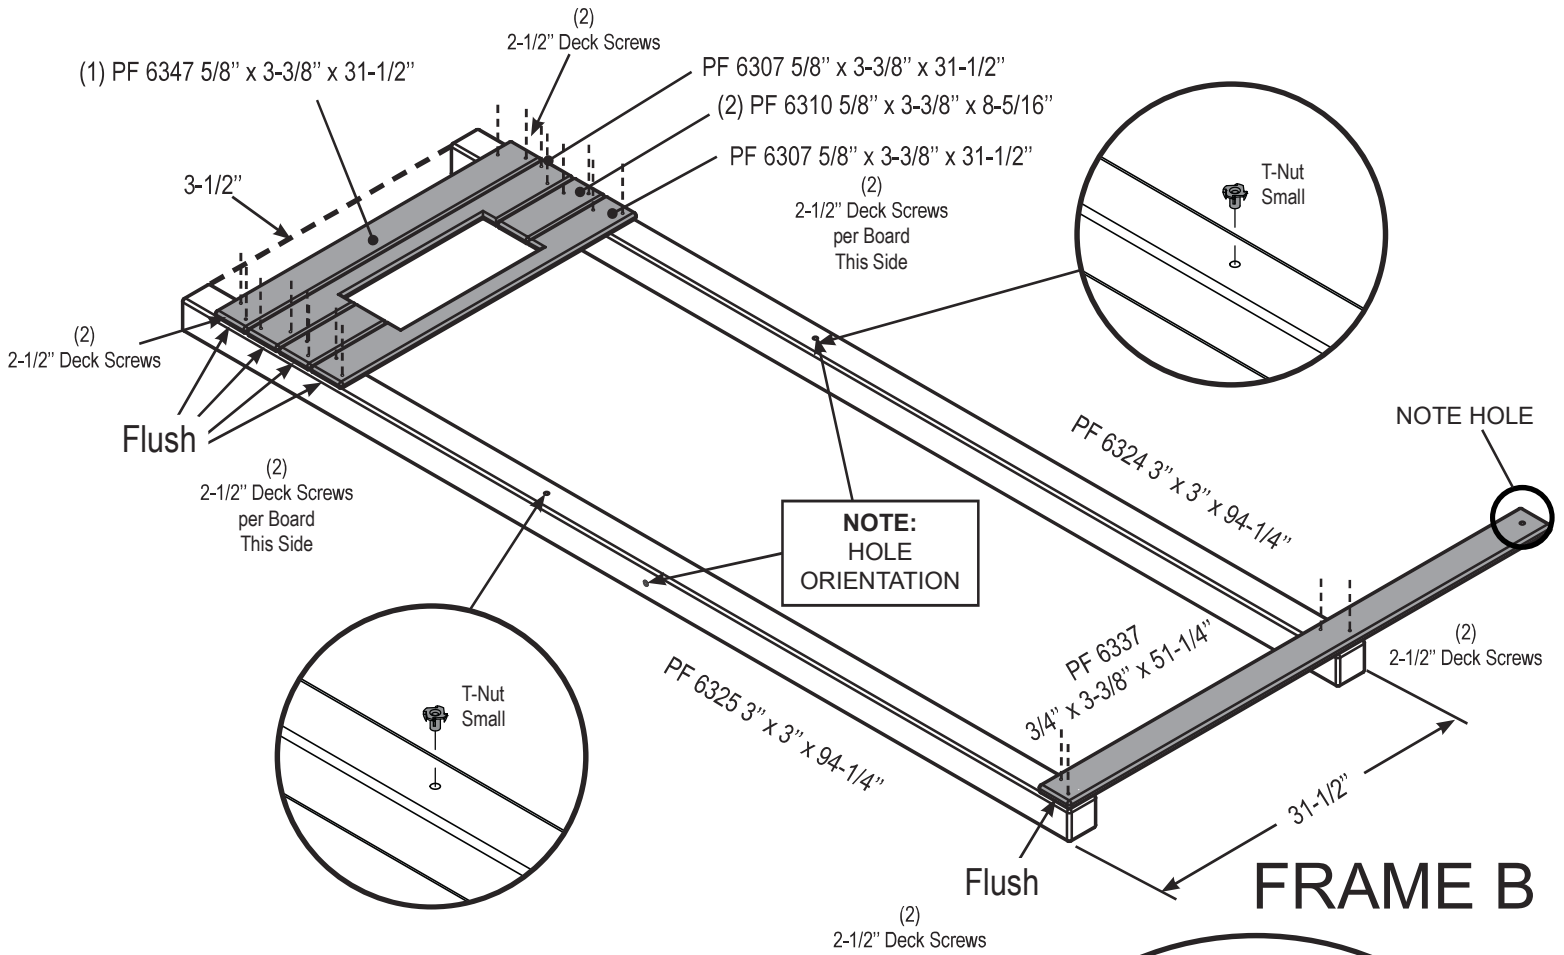

## FRAME B

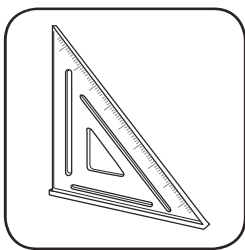


Check to make sure structure is square



3/4" Flat Head Screw (x10)



2-1/2" Deck Screw (x20)

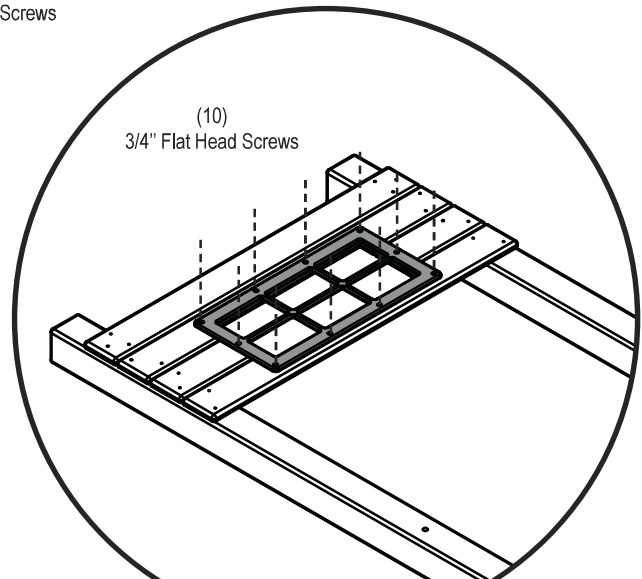


## WINDOW PANE INSTALL

1. Assemble Frame B as shown.

**Note:** Tap each T-Nut into its pre-drilled hole until the metal tangs sink fully into the wood.

2. Install Window Pane as shown.


## STEP 6

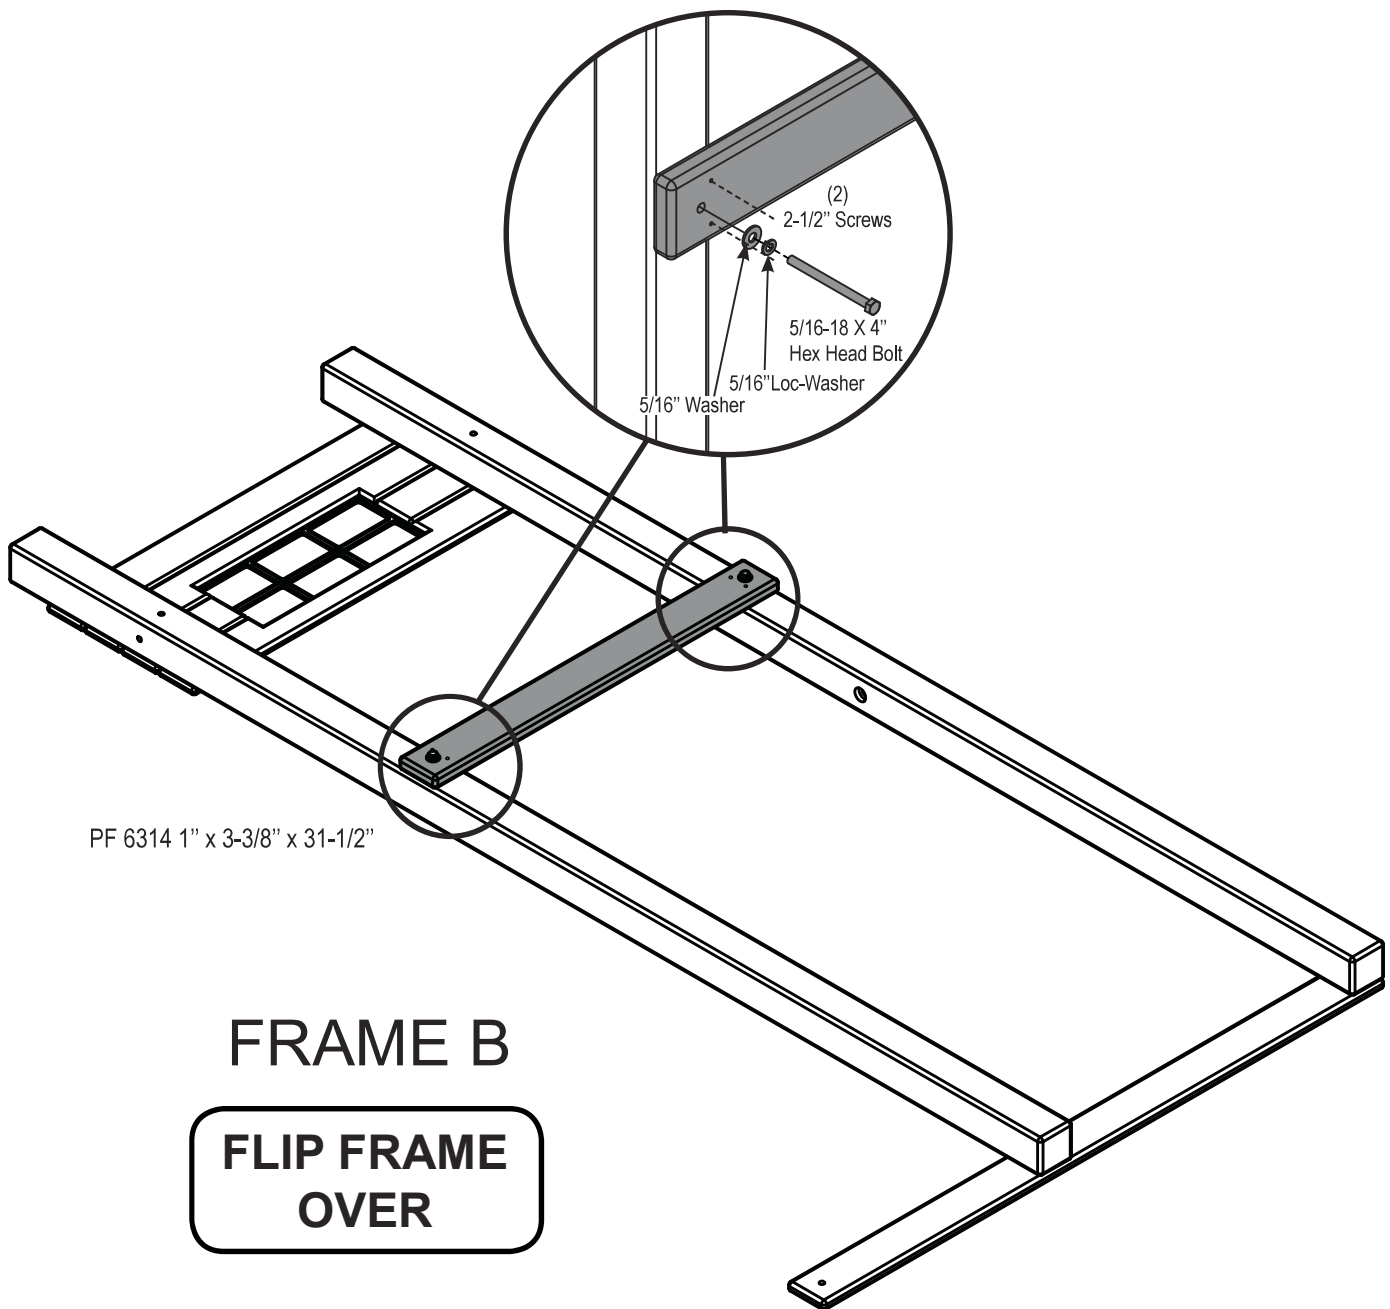




2-1/2" Deck Screw (x4)

1. Flip frame over and Attach Frame Support Board as shown above.

# STEP 7

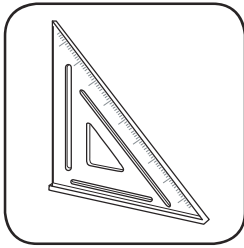

 
Check to make sure  
structure is square

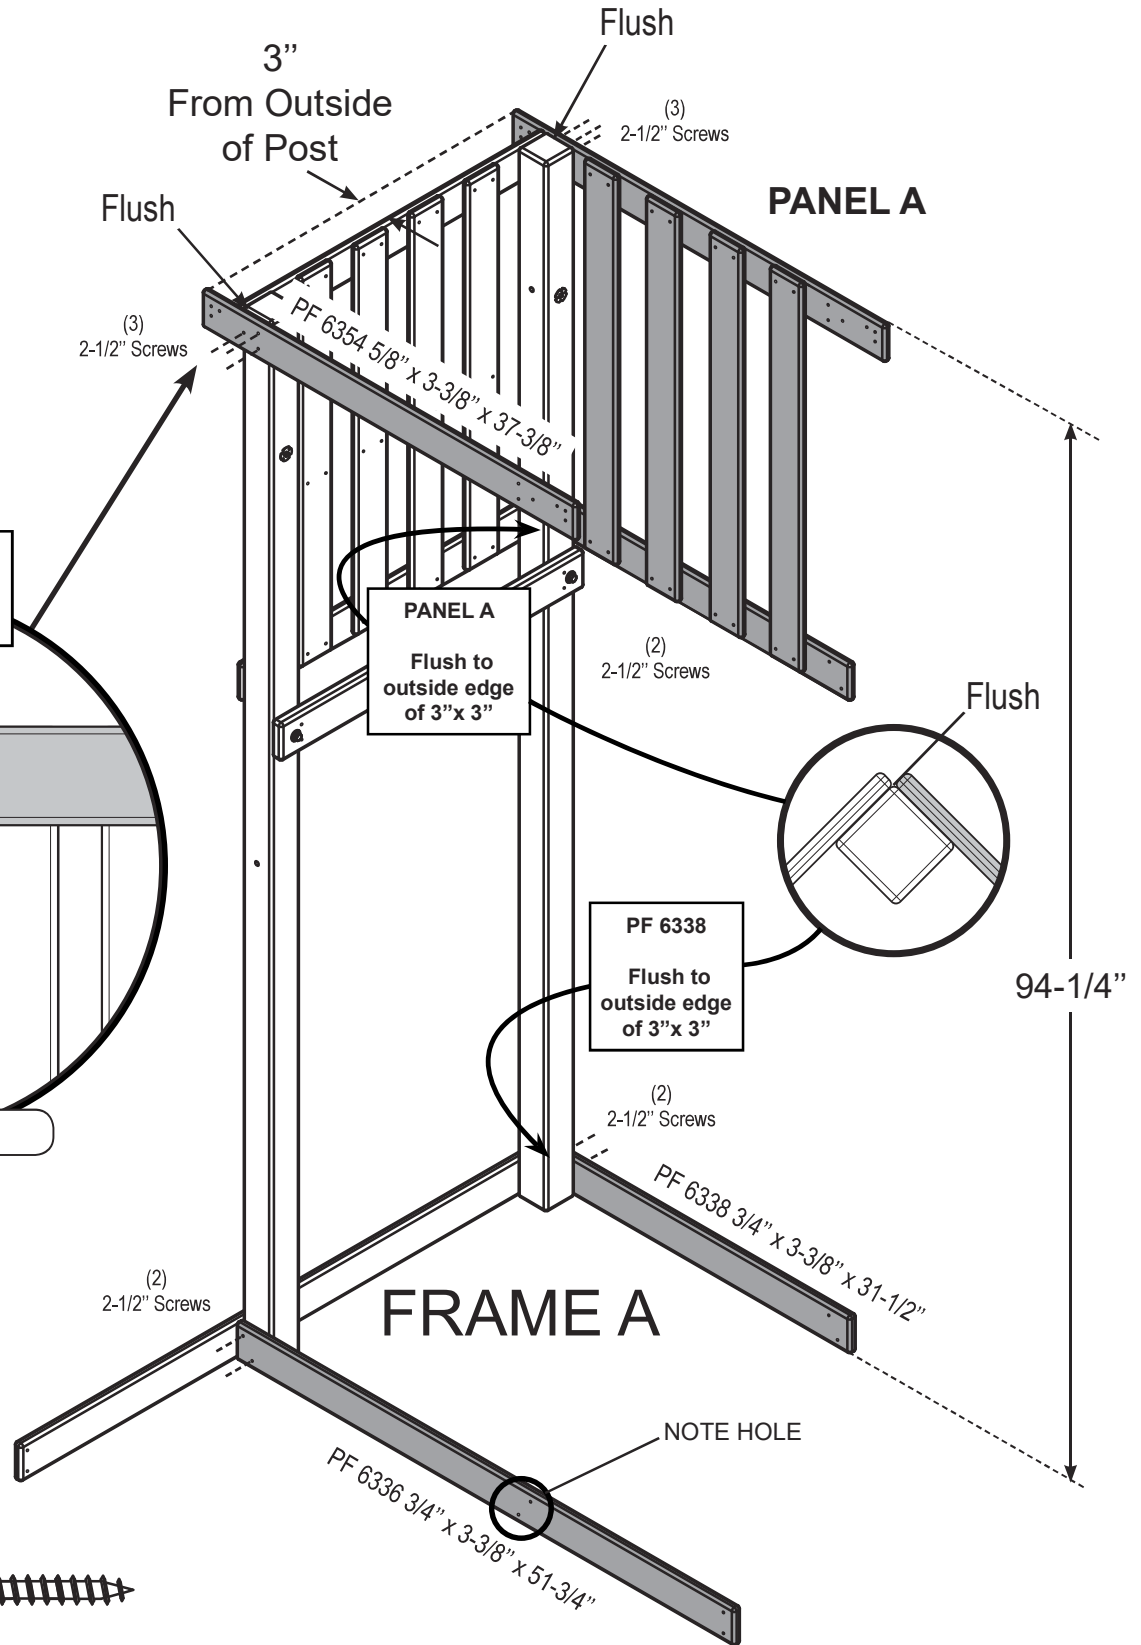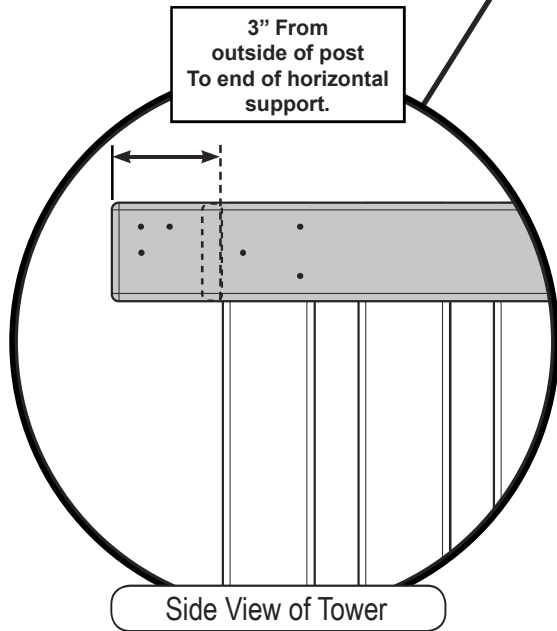

1. Attach frame Support Boards and Panel A to Frame A as shown above.

STEP 8

# FRAME A

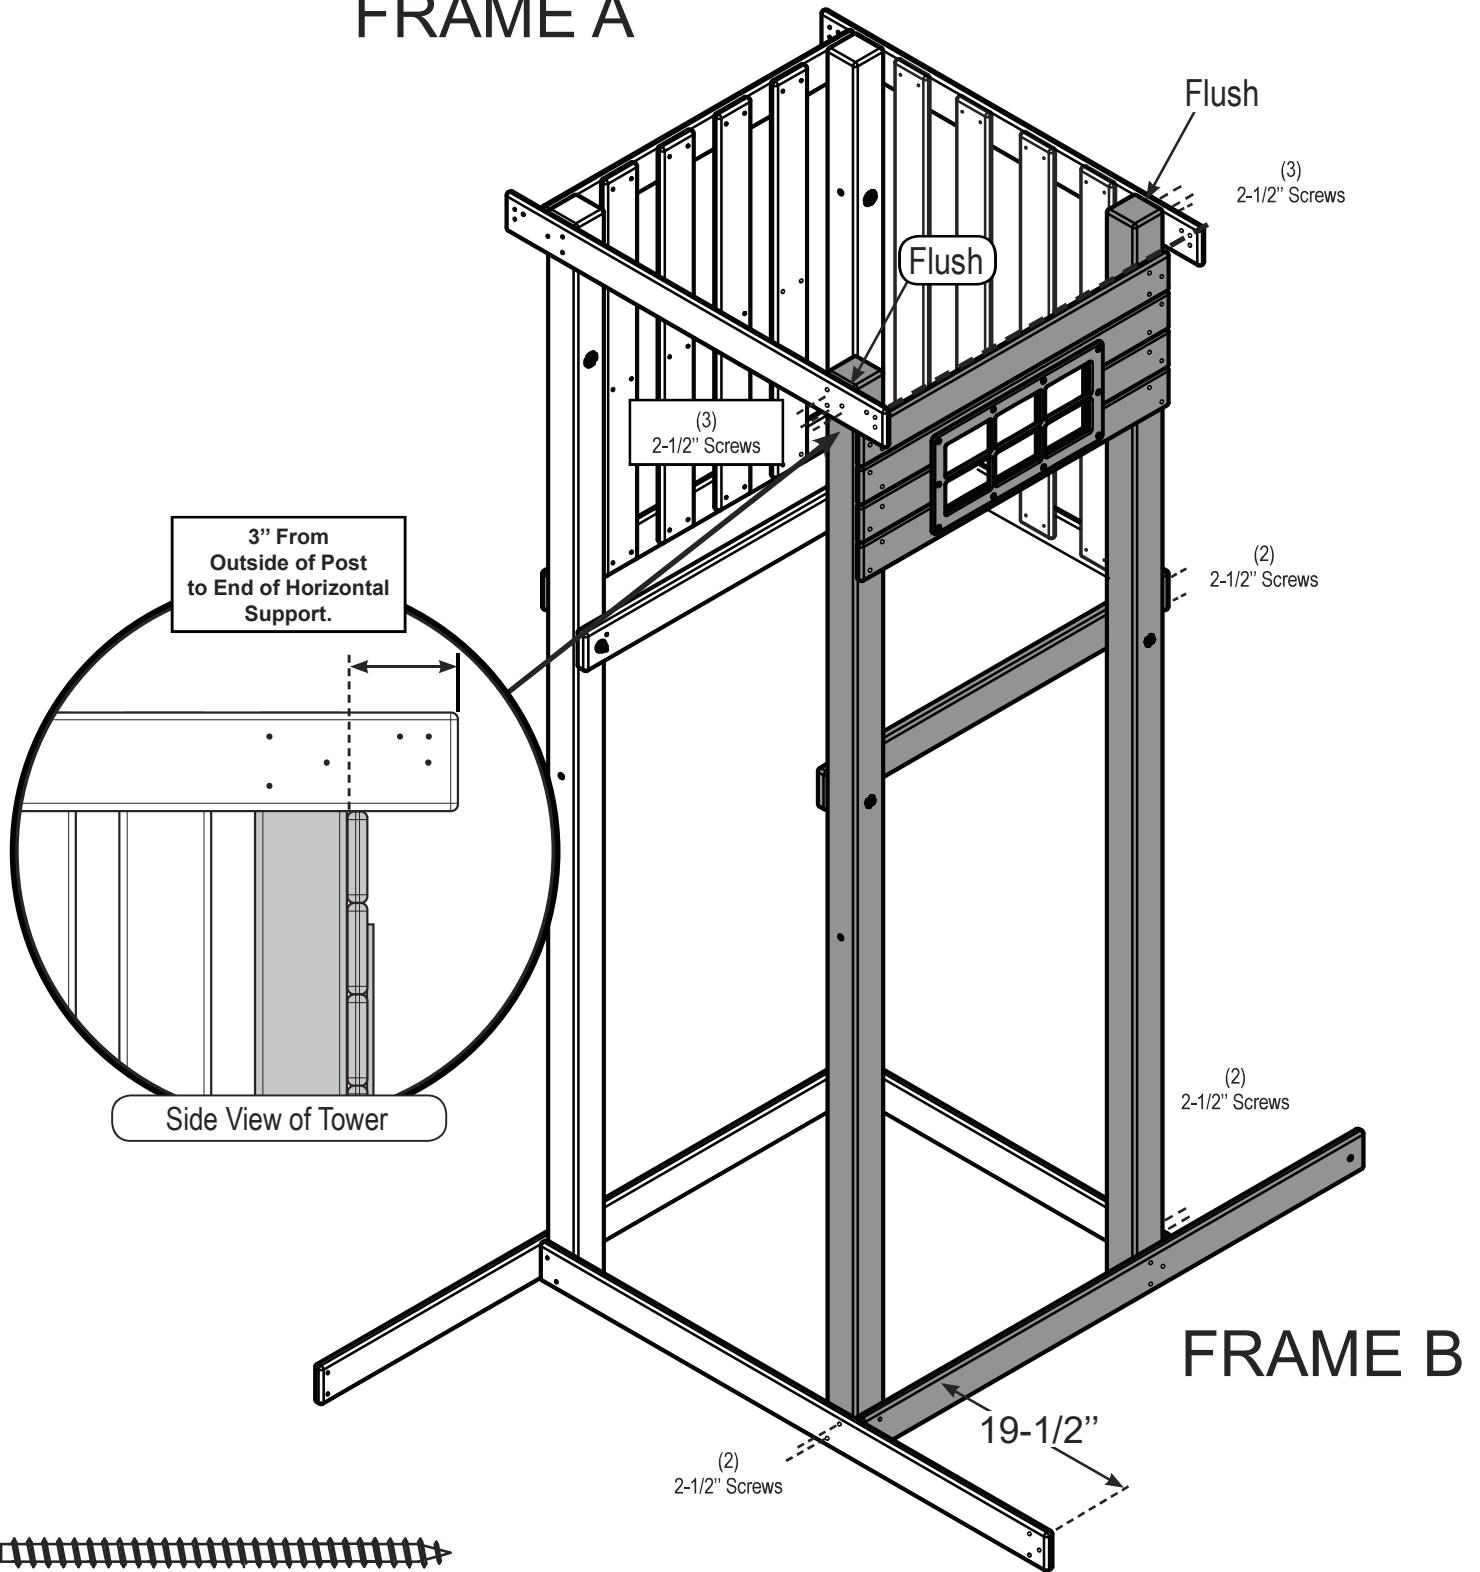

2-1/2" Deck Screw (x12)

1. Attach Frame B to Frame A as shown.



# STEP 9

(1) PF 6312  
1-3/8" x 1-3/8" x 31-1/2"

Flush

55-1/4"

(1)  
2" Screw  
per side

PF 6305  
5/8" x 3-3/8" x 25-3/8"  
(6)  
1-3/4" Screws

PF 6305 5/8" x 3-3/8" x 25-3/8"

(1) PF 6346 5/8" x 3-3/8" x 31-1/2"

Flush  
(4)  
2-1/2" Screws

(1)  
2" Screw  
per side


(1) PF 6346 5/8" x 3-3/8" x 31-1/2"

Back of Tower

**NOTE:  
PRE-DRILL  
HOLES GOING  
INTO DECK  
SUPPORTS**

(6)  
1-3/4" Screws

(4)  
2-1/2" Screws

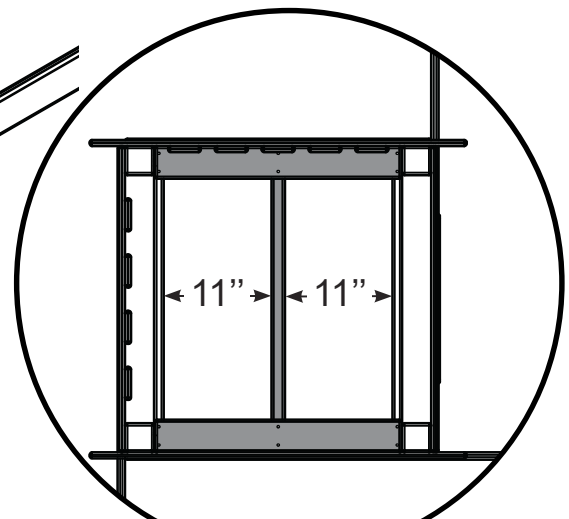

Top View of Tower



2-1/2" Deck Screw (x8)




2" Deck Screw (x2)



1-3/4" Deck Screw (x12)

1. Attach Deck Boards and Deck Support Boards as shown.

# STEP 10

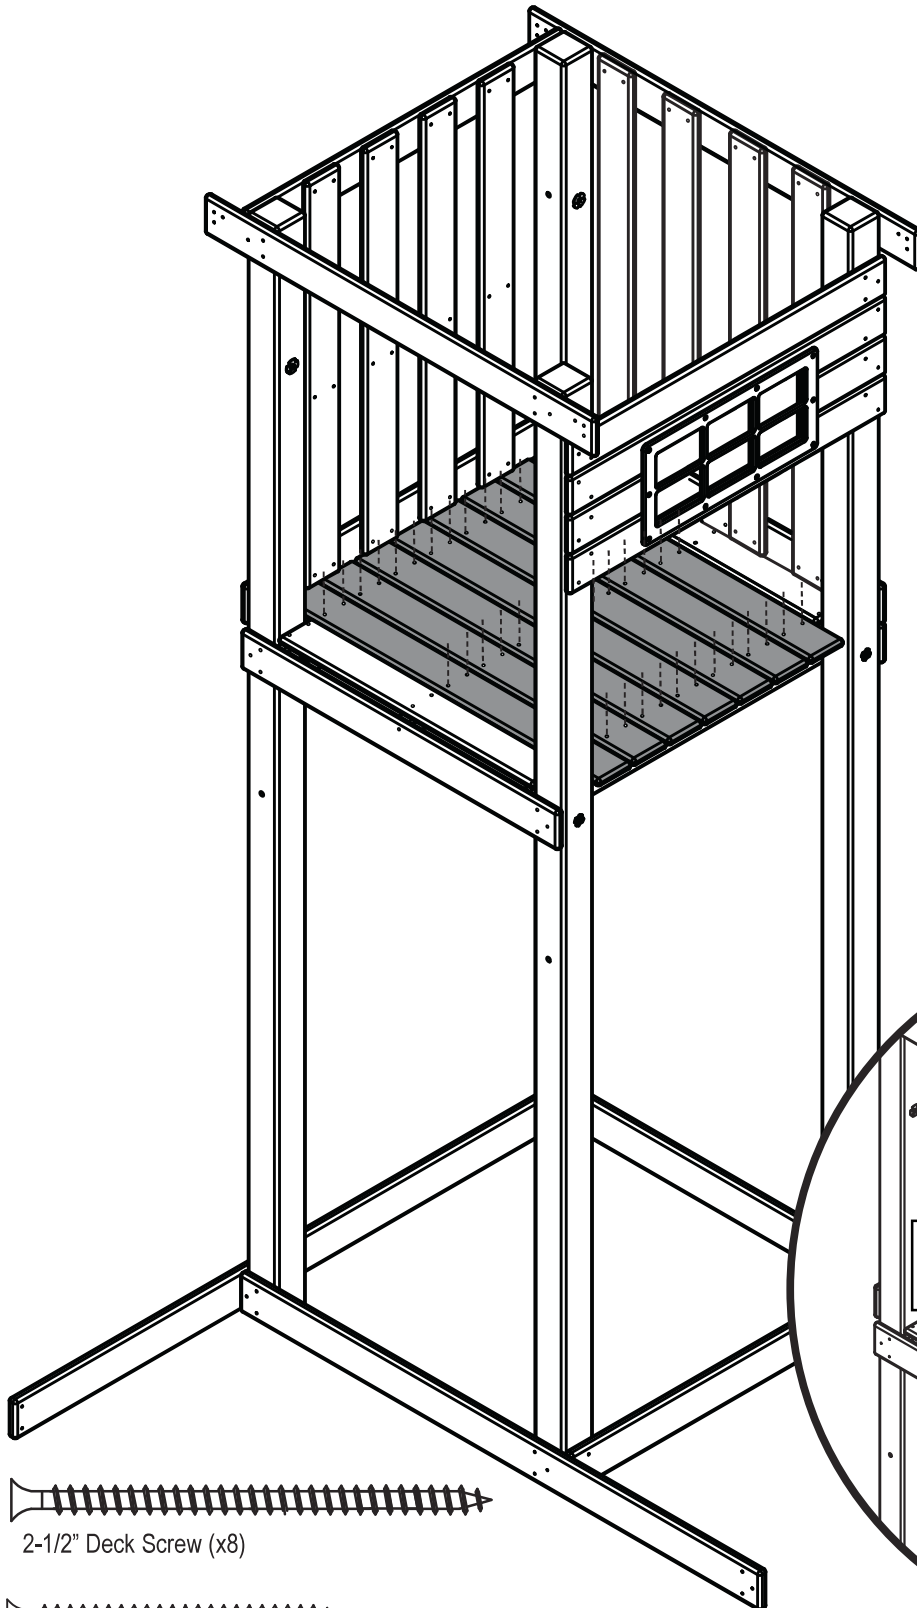

(7) PF 6306 5/8" x 3-3/8" x 31-3/8"


(6)  
1-3/4" Screws  
per board



2-1/2" Deck Screw (x8)




1-3/4" Deck Screw (x42)

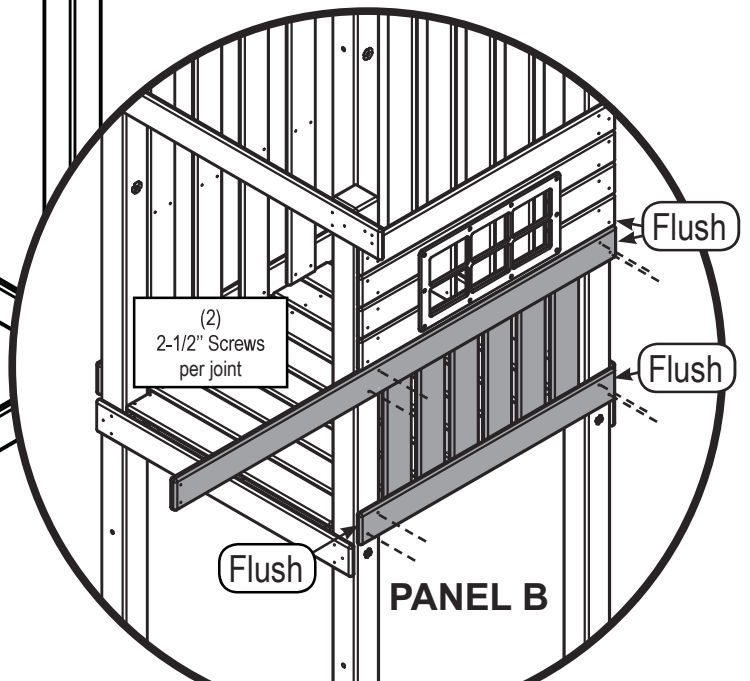

**PANEL B INSTALL**



1. Install Deck Boards as shown.  
NOTE: Standard gap between deck boards is 1/8".
2. Install Panel B as shown.

# STEP 11

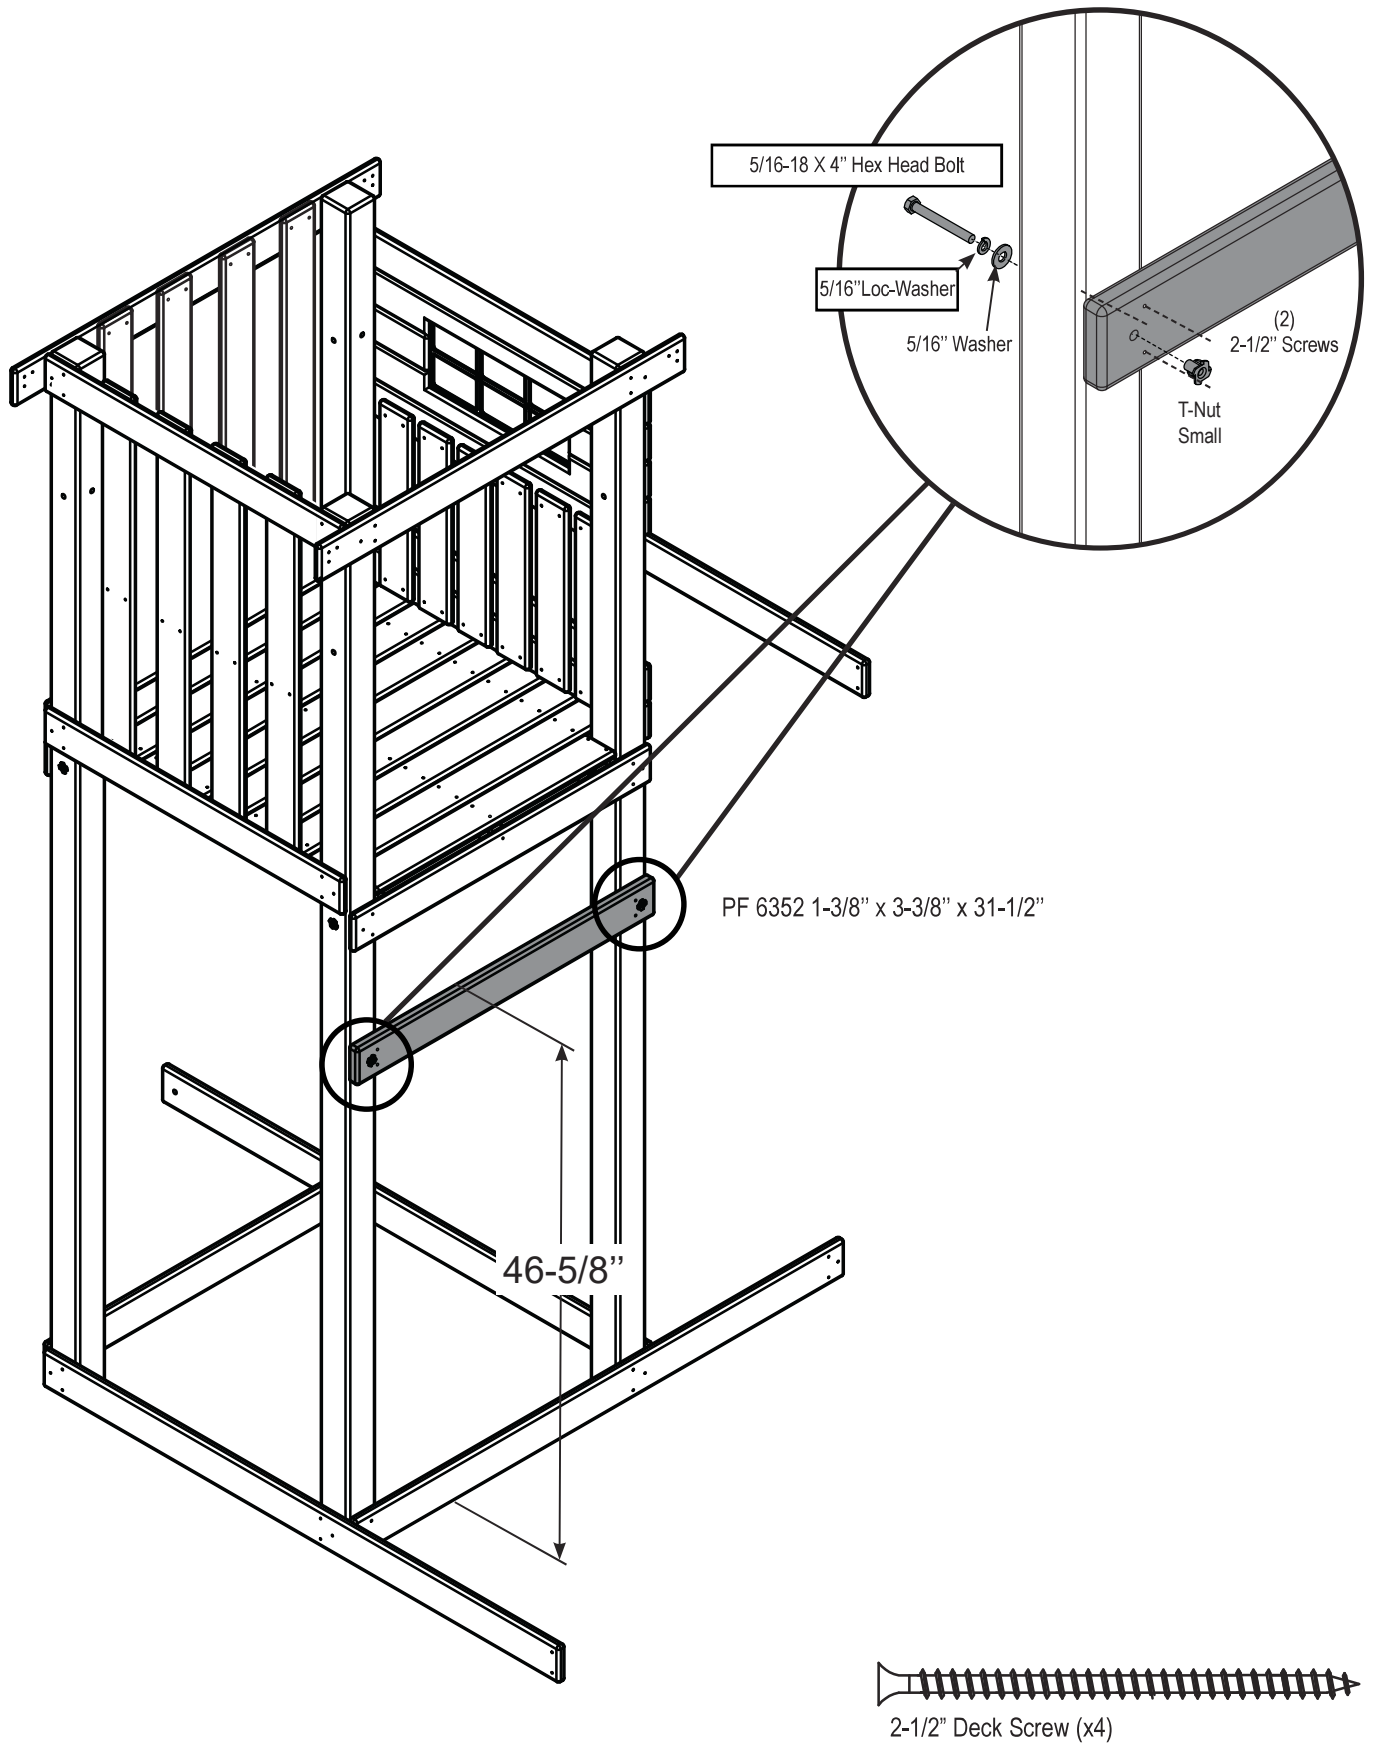

1. Attach Frame Support Board as shown.

# STEP 12

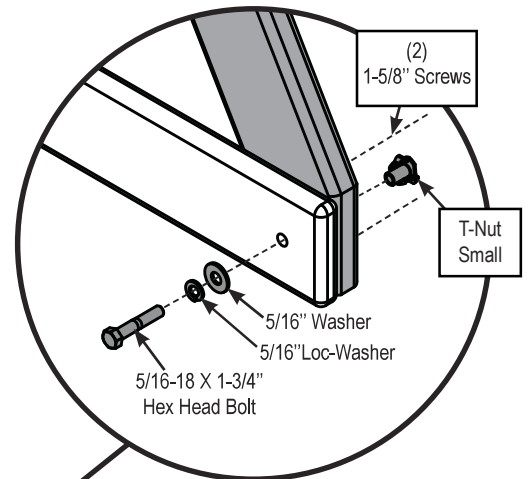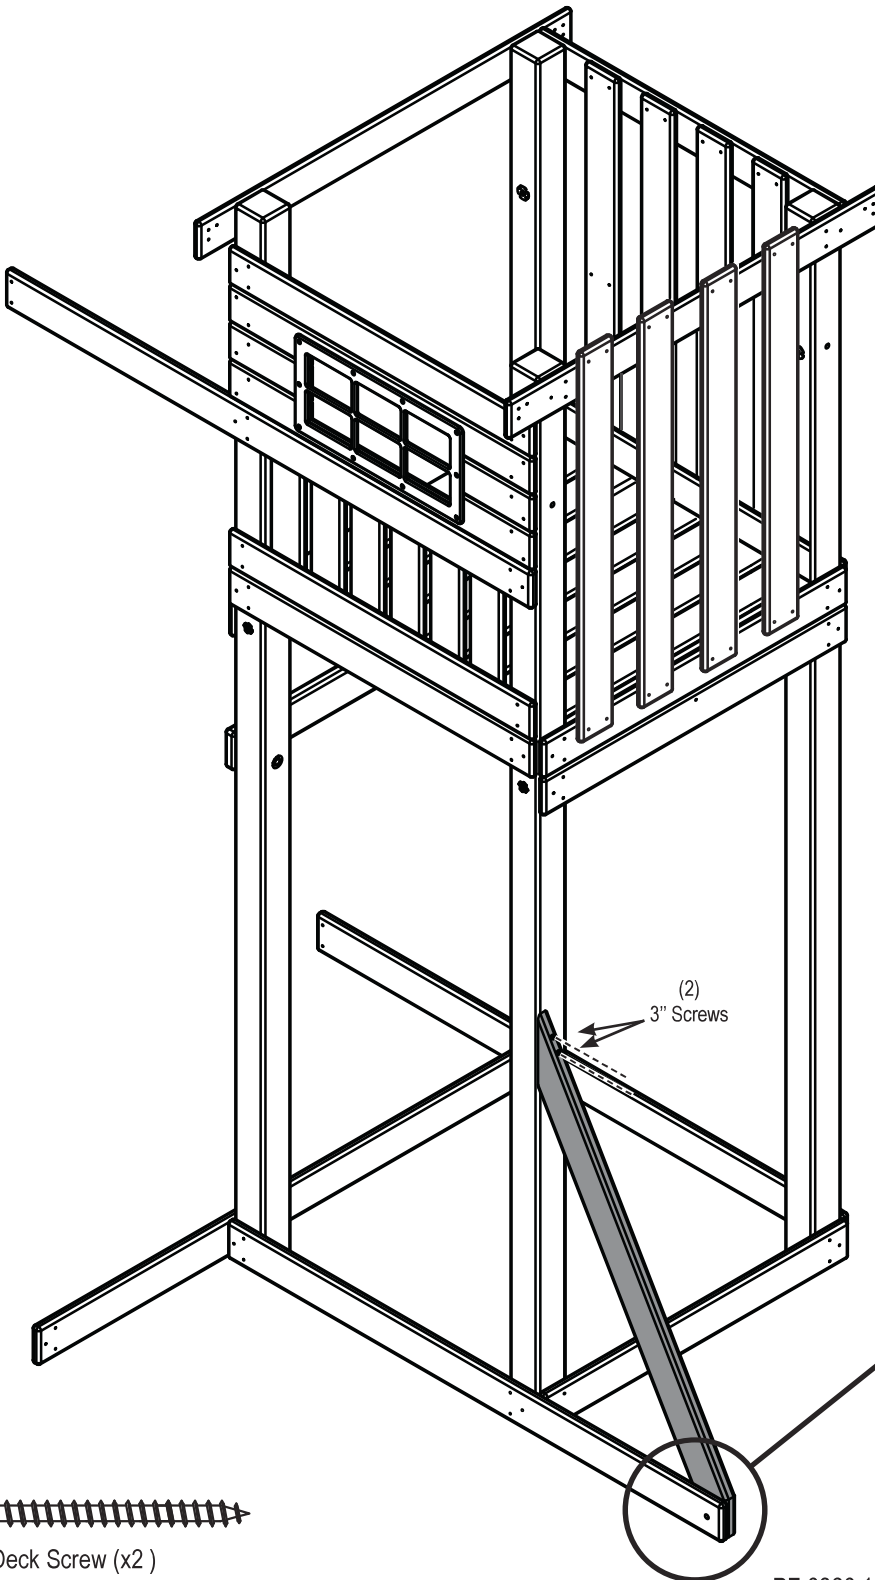

**NOTE:**  
MAKE SCREW  
HEADS FLUSH



1-5/8" Deck Screw (x2)




3" Deck Screw (x2)


PF 6326 1" x 3-3/8" x 42" SUPPORT

1. Attach Tower Support Board as shown.

# STEP 13

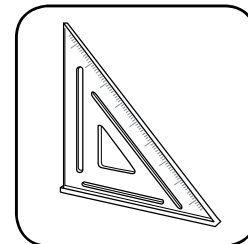


Check to make sure structure is square

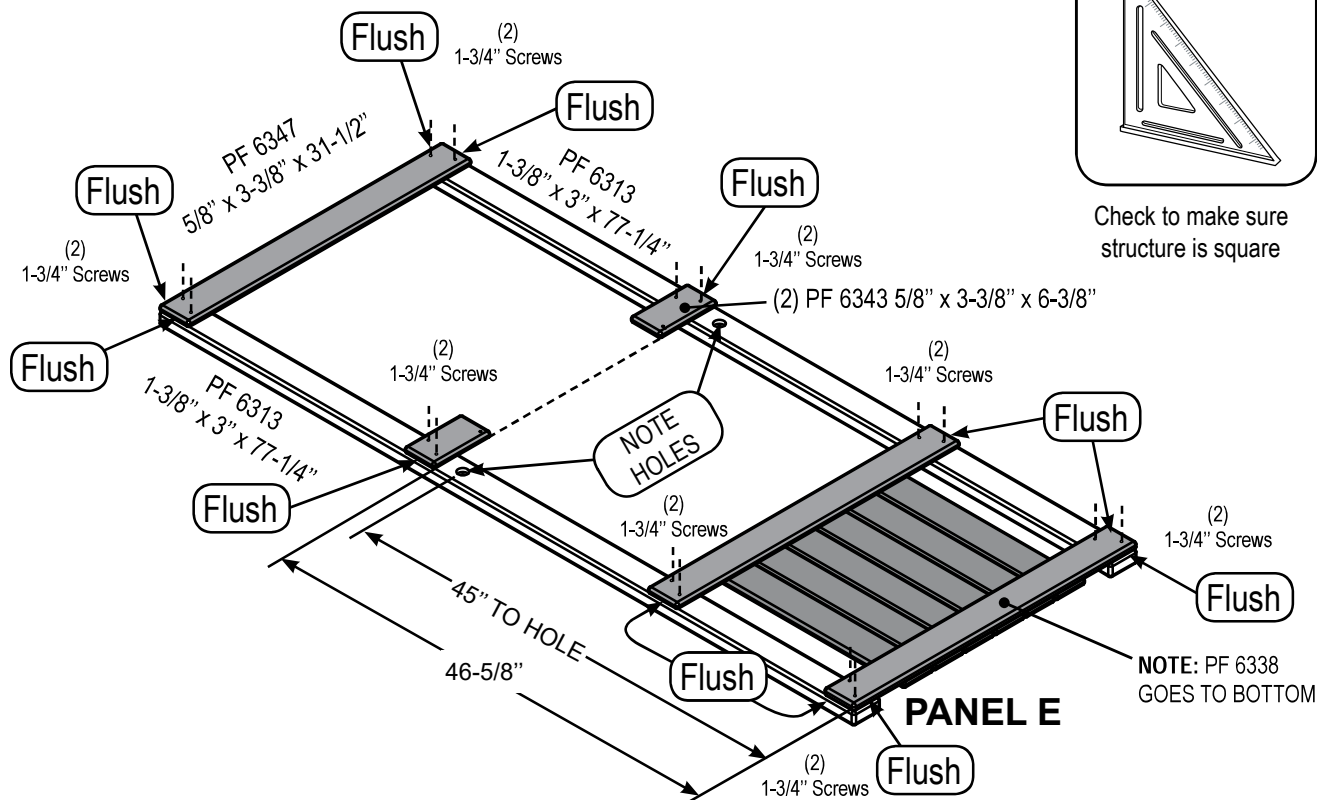

## FRAME C

**FLIP FRAME OVER**

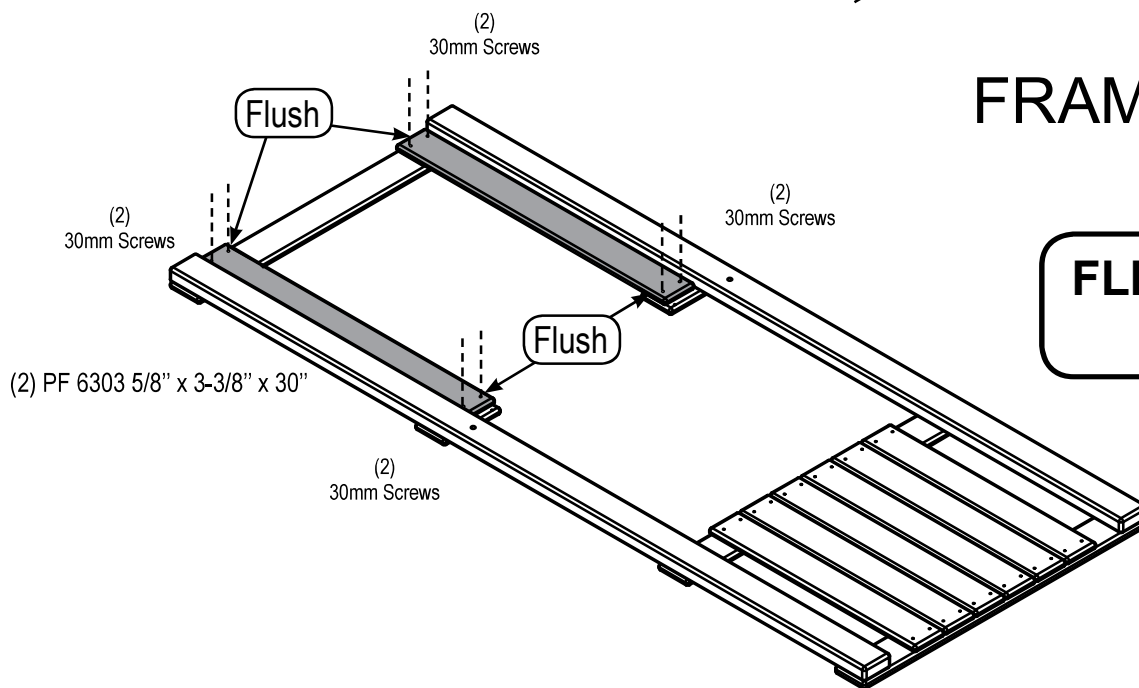

1-3/4" Deck Screw (x16)





30mm Deck Screw (x8)

1. Assemble Frame C as shown above.
2. Attach barrier boards as shown.




## STEP 14

 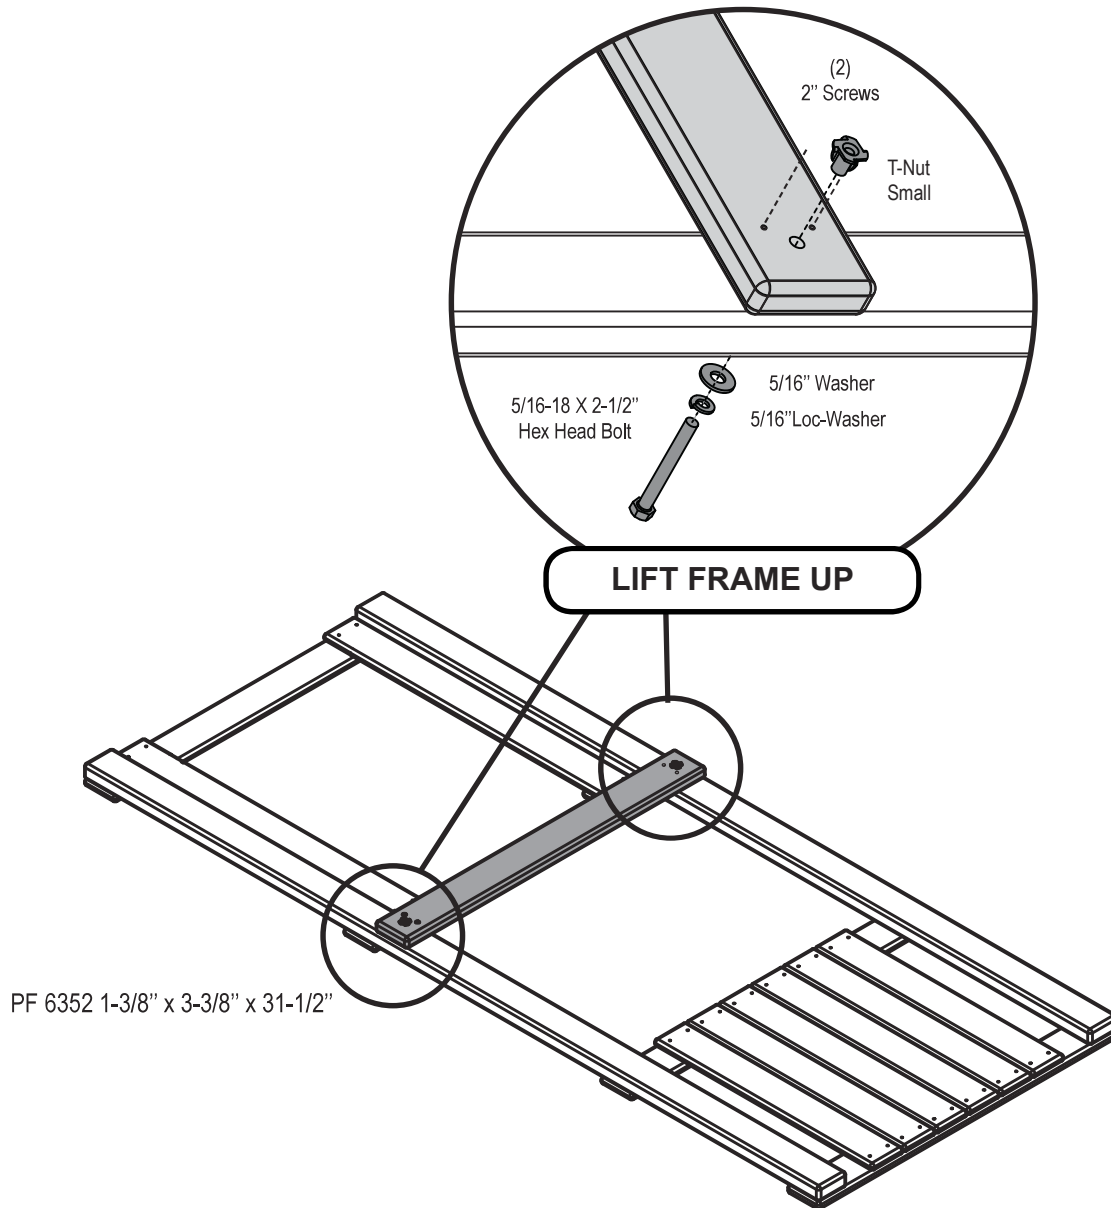


1. Flip frame over and Attach Frame Support Board as shown above.

**Note:** Tap each T-Nut into its pre-drilled hole until the metal tangs sink fully into the wood.

## STEP 15

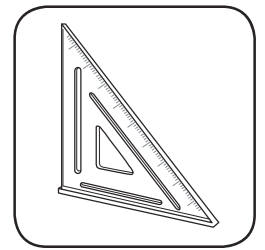

Check to make sure  
structure is square

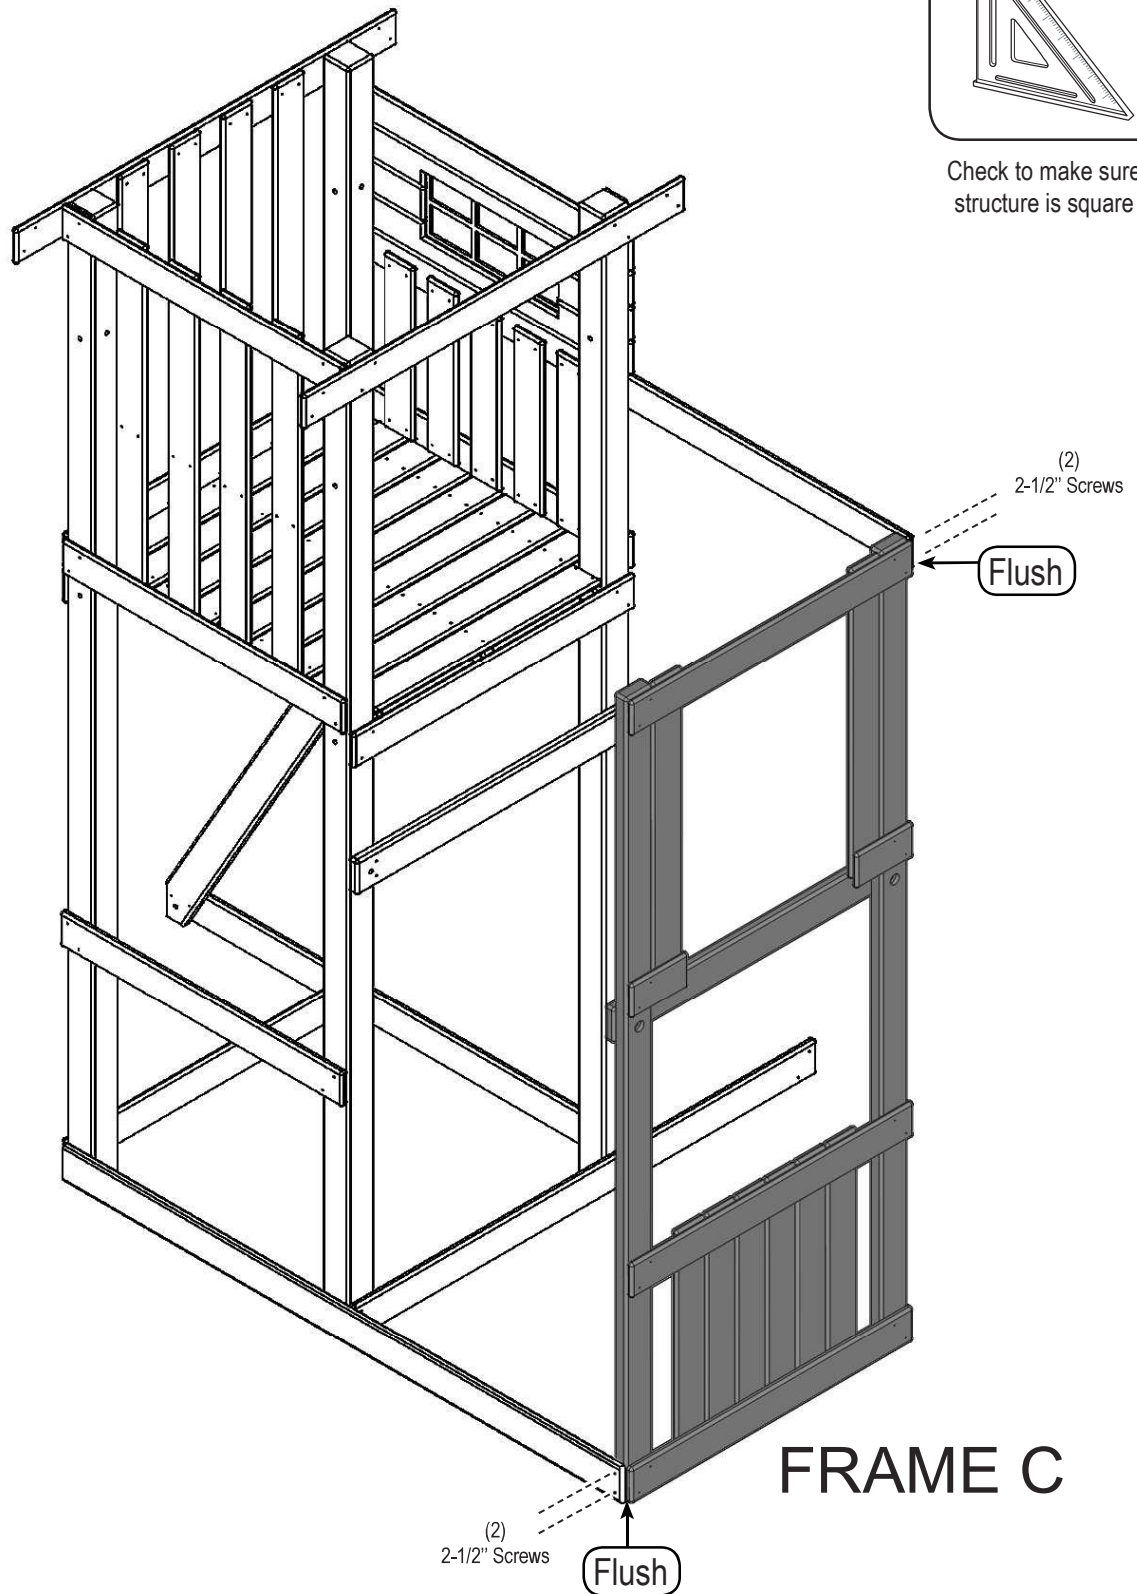


FRAME C





2-1/2" Deck Screw (x4)

1. Attach Frame C to tower as shown.

## STEP 16

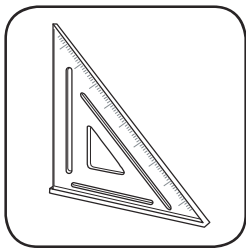

Check to make sure  
structure is square

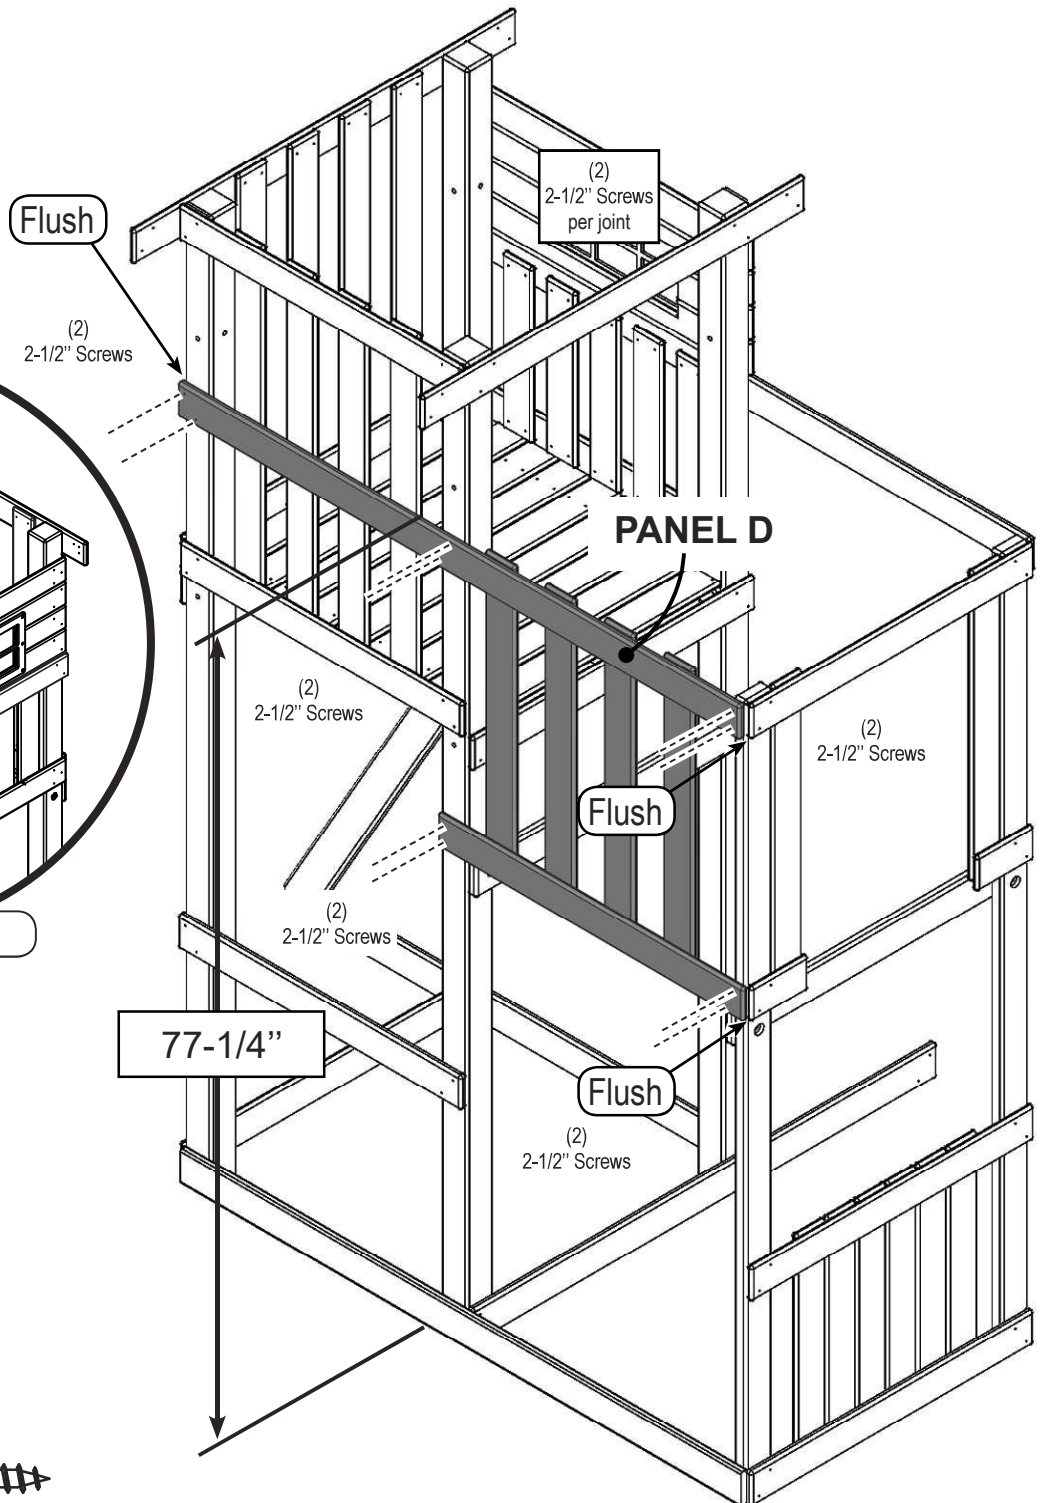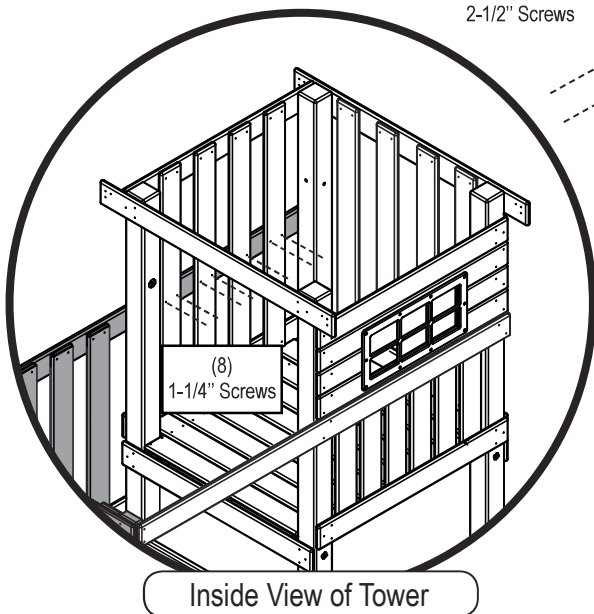


1-1/4" Deck Screw (x8)



2-1/2" Deck Screw (x10)


1. Attach Panel D to Frame A as shown.

# STEP 17

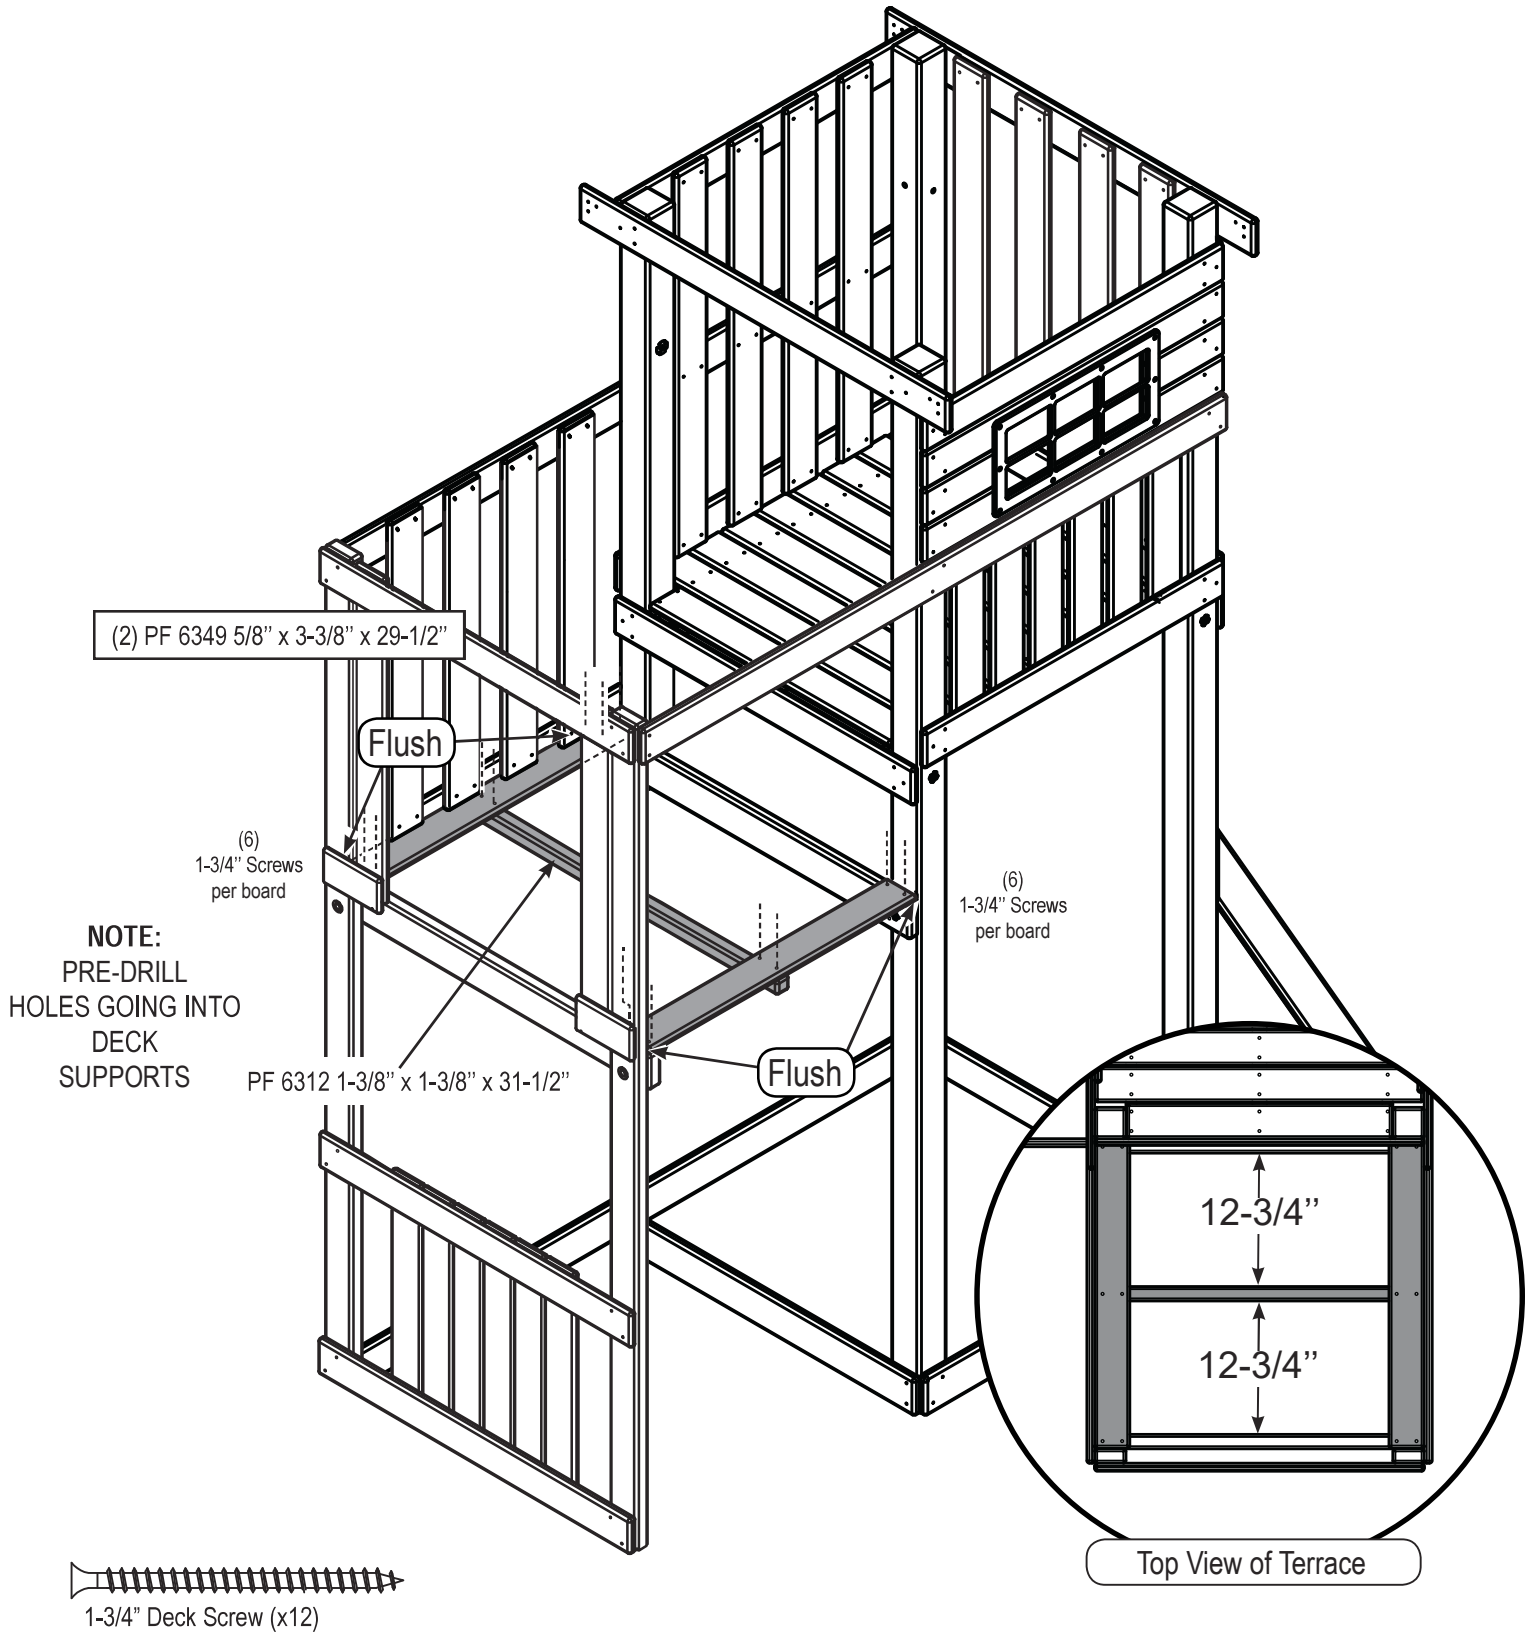

1. Install Deck Boards and Deck Support Board as shown.


## STEP 18

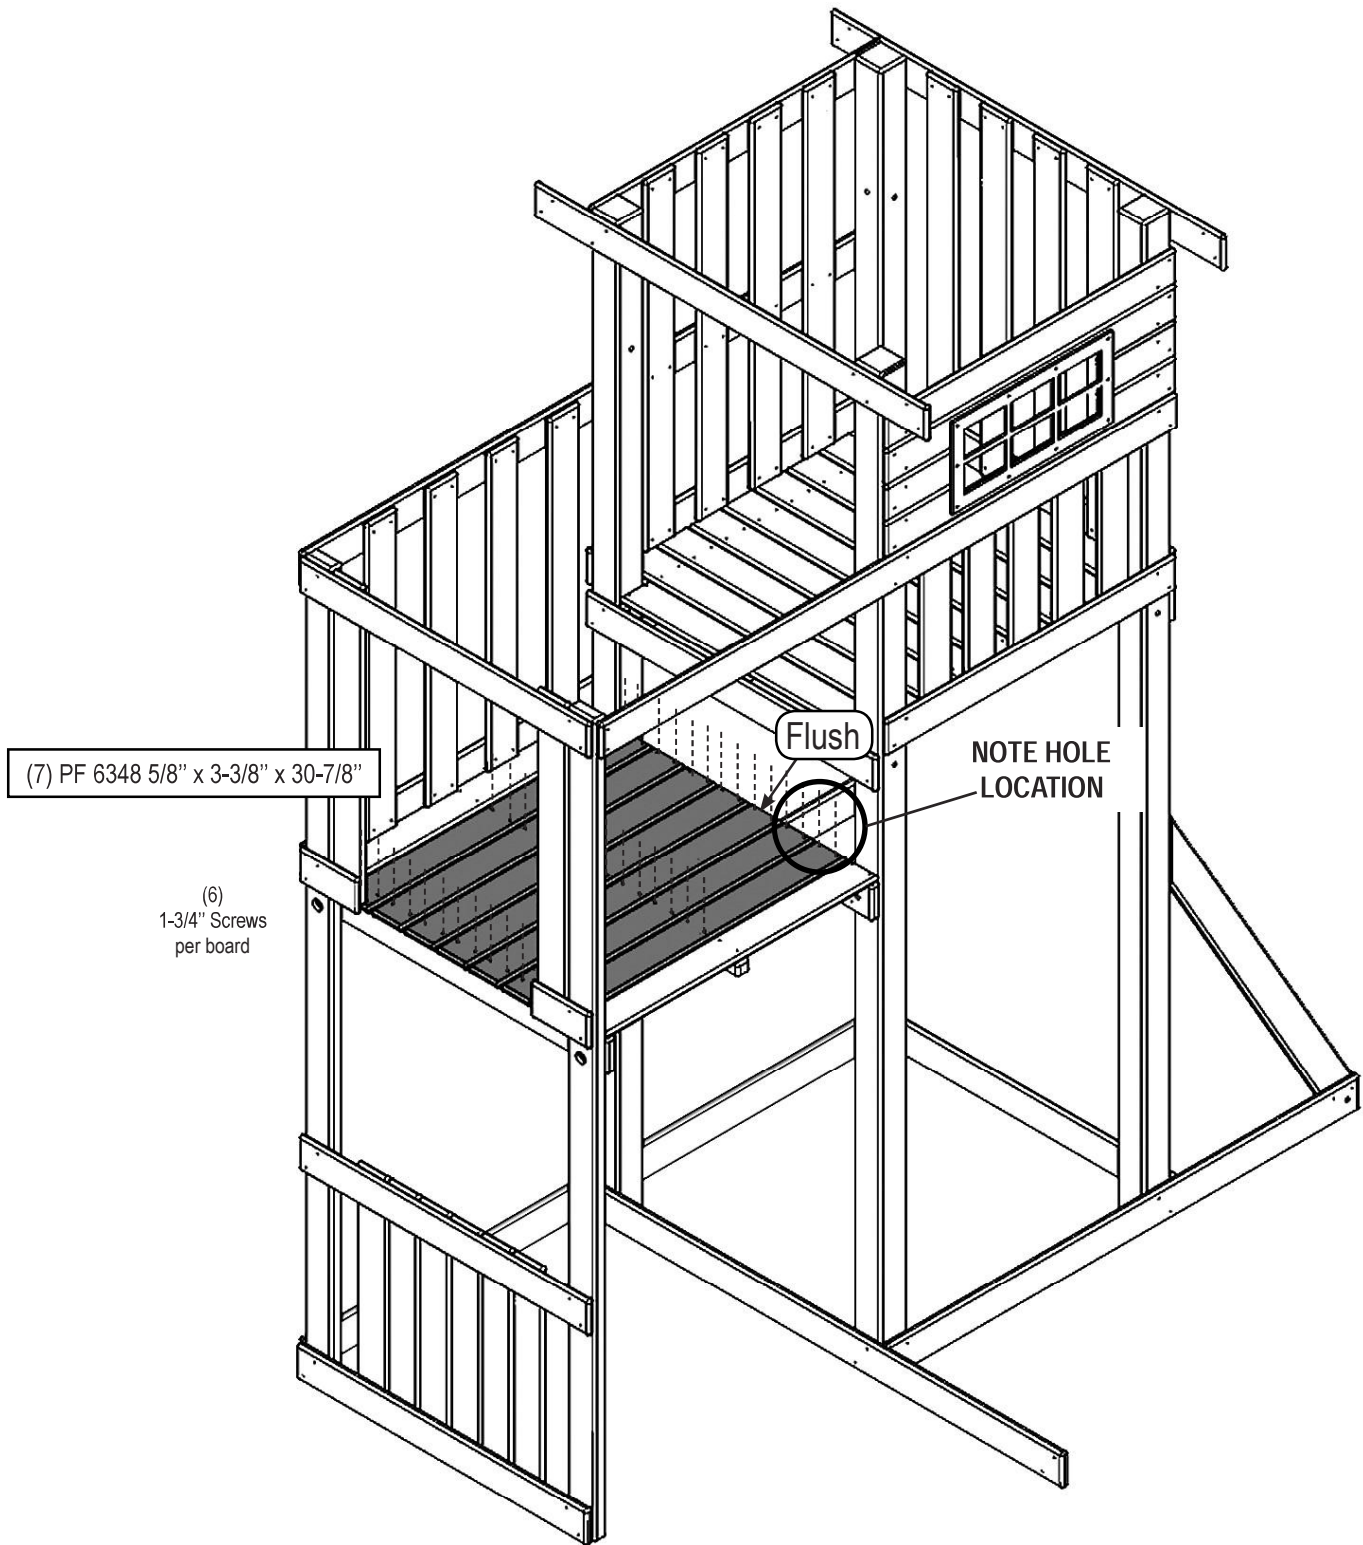

1-3/4" Deck Screw (x42)

1. Install Deck Boards as shown.  
NOTE: Standard gap between deck boards is 1/8".

## STEP 19


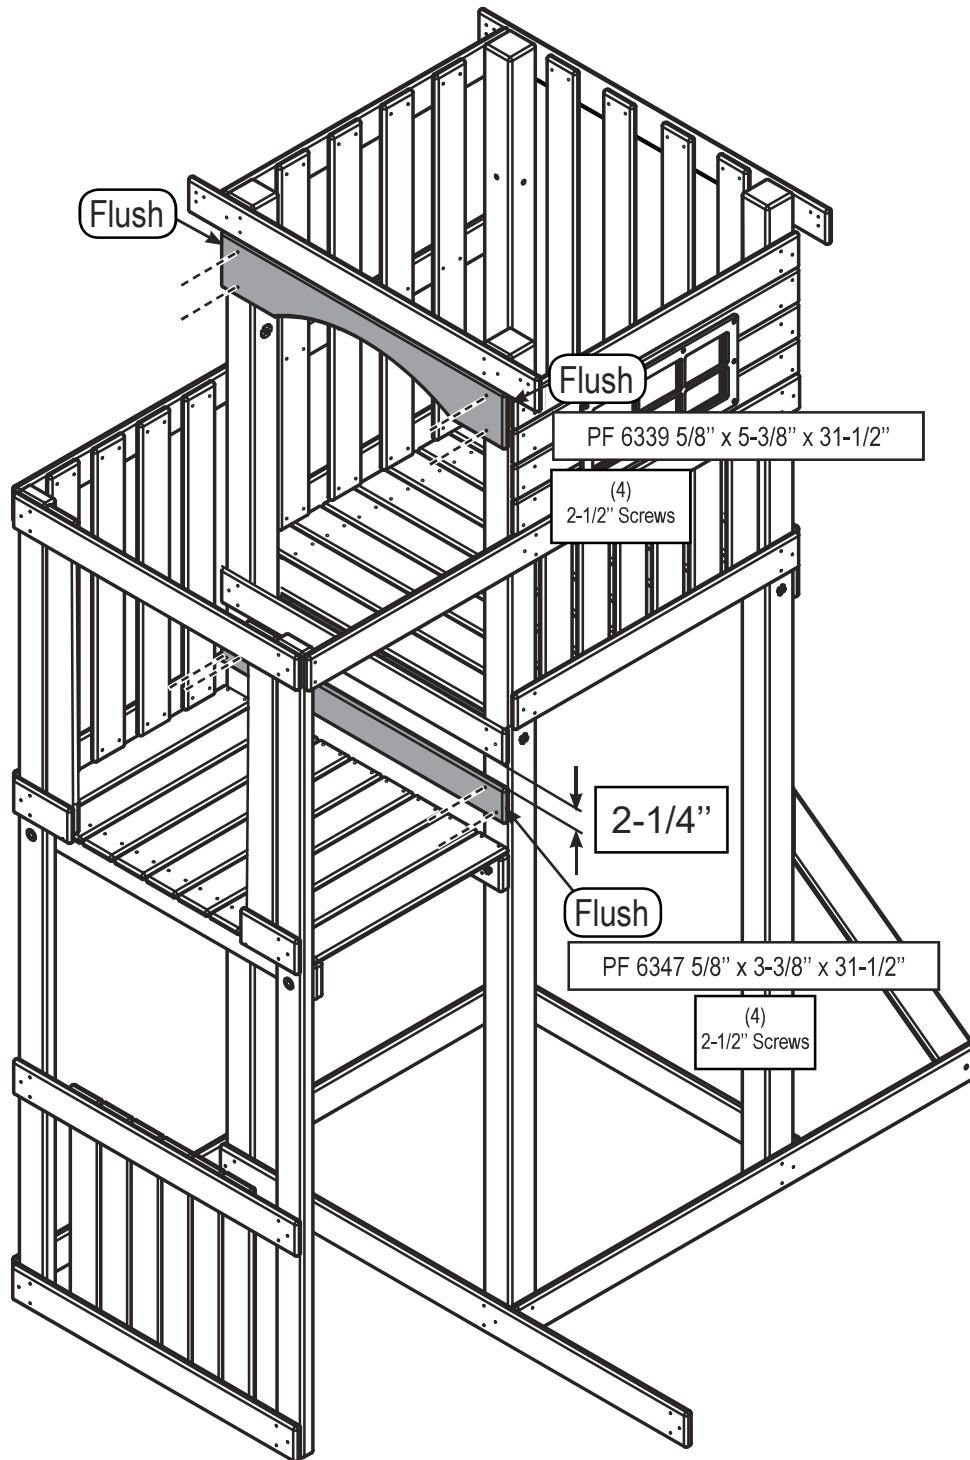


2-1/2" Deck Screw (x8)

1. Install horizontal boards as shown.




 STEP 20

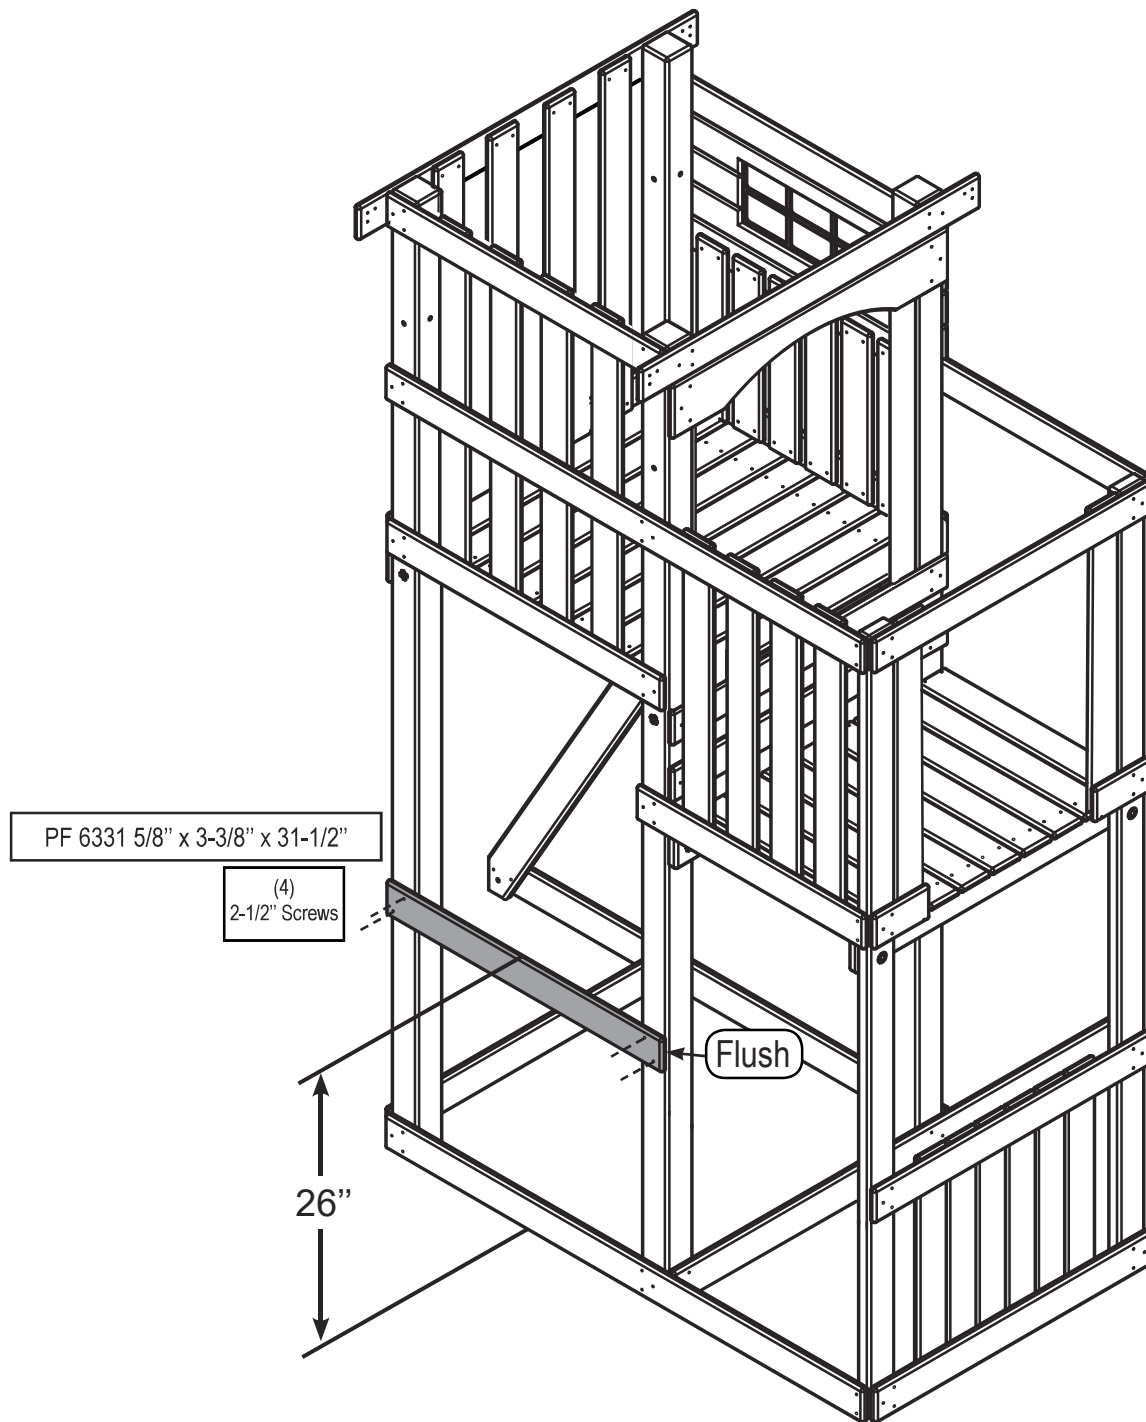

1. Install horizontal board as shown.





## STEP 21

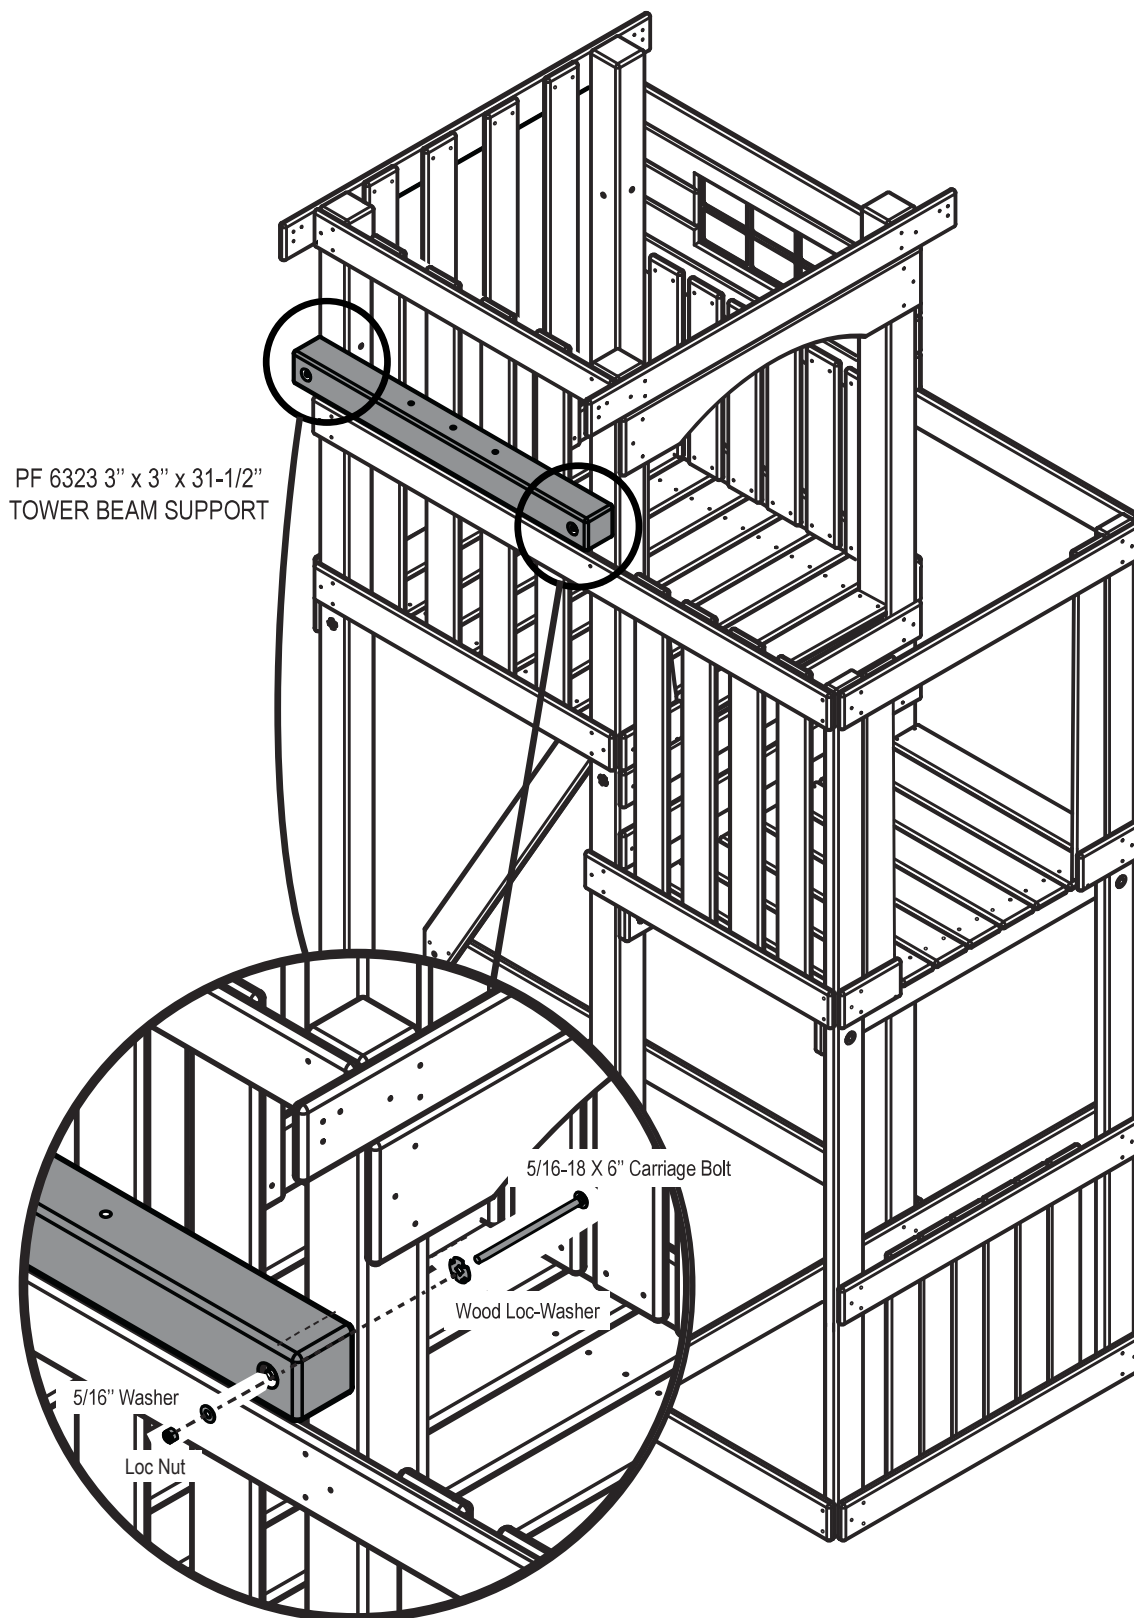



1. Attach Tower Beam Support Board as shown.



# STEP 22

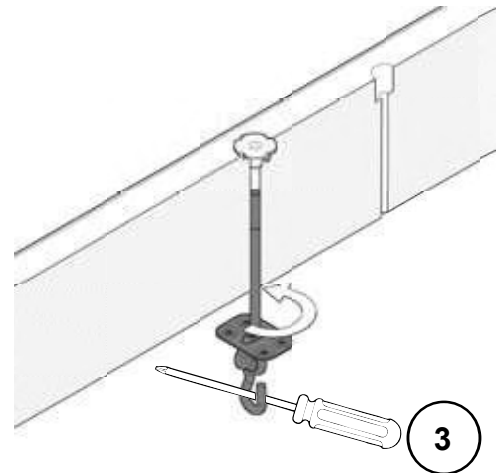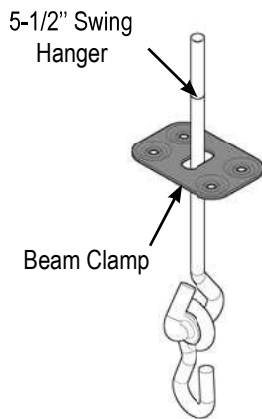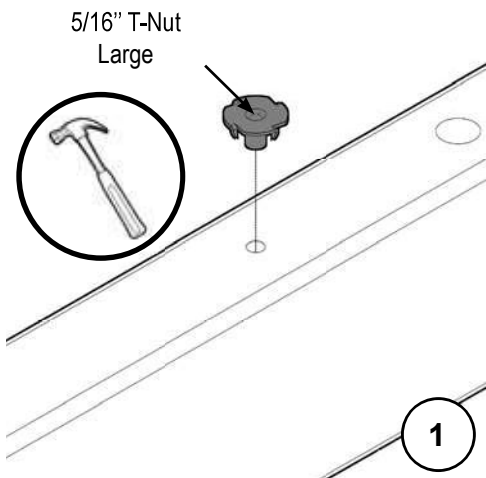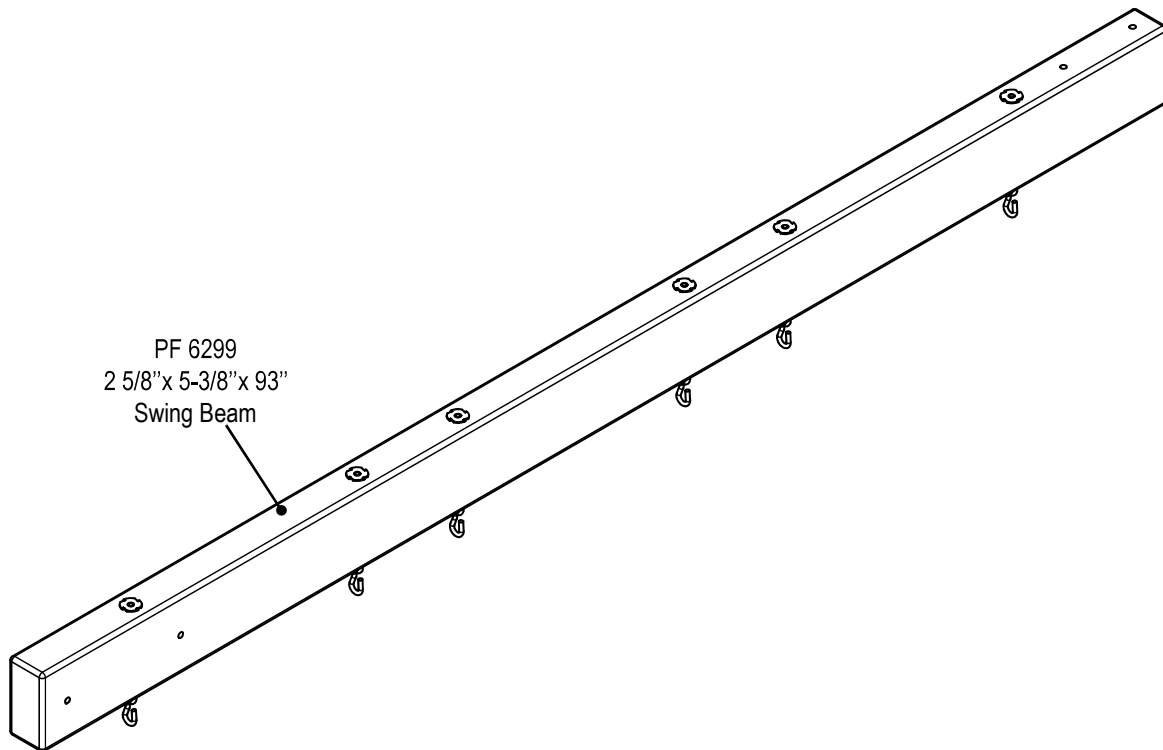


x4

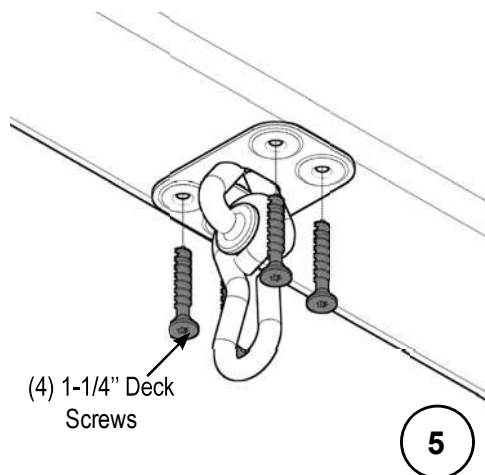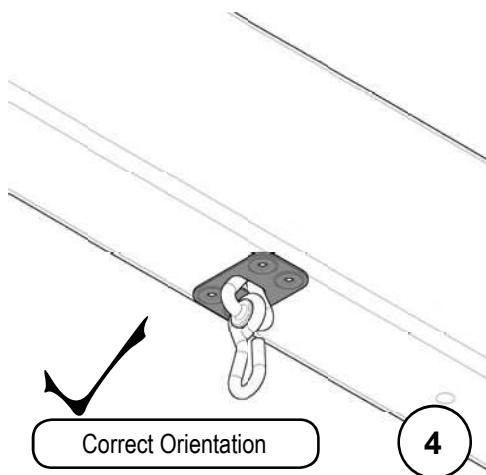


1. Attach Swing Hanger(s) to swing beam as shown.

## STEP 23

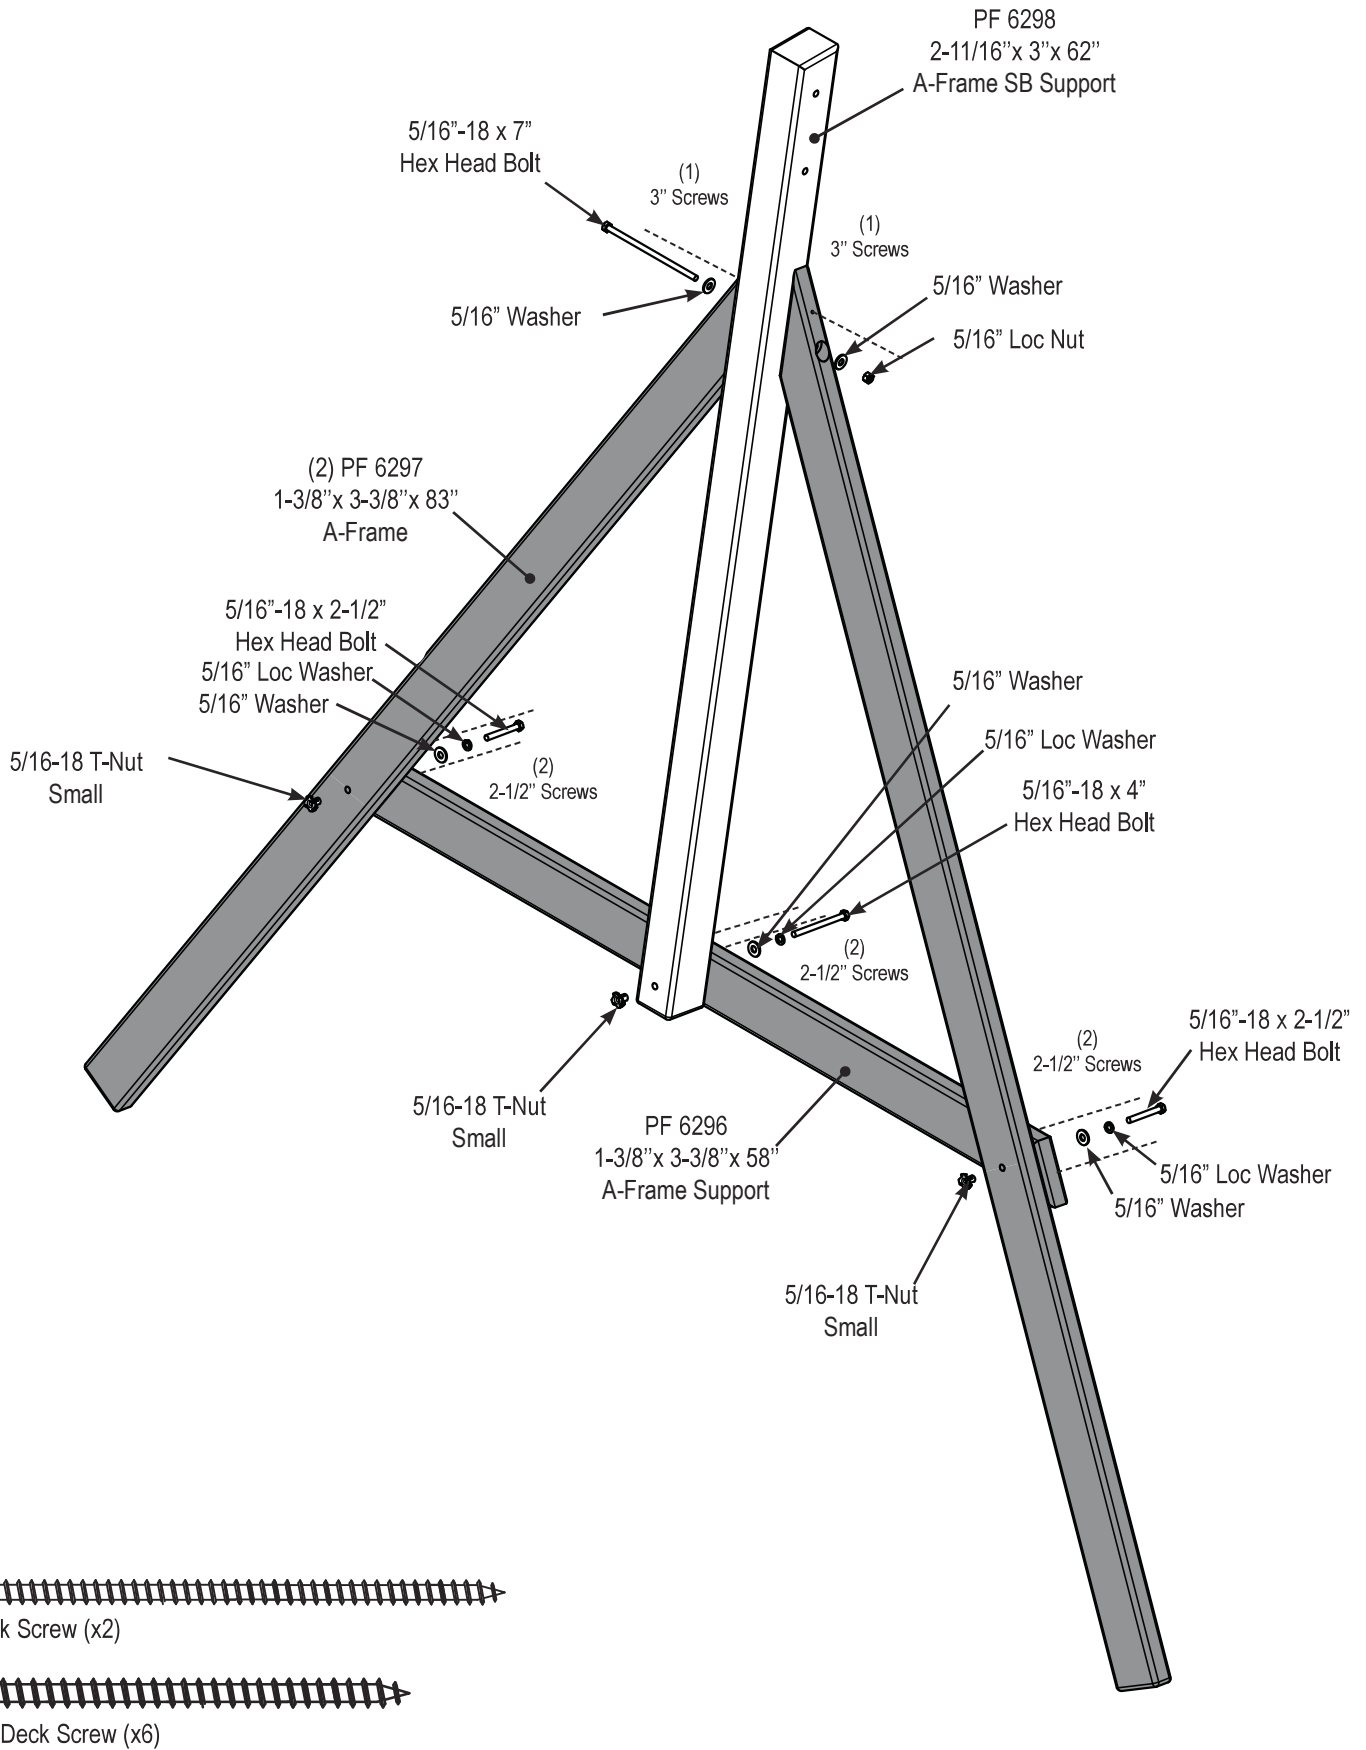


1. Assemble A-Frame as shown.

## STEP 24

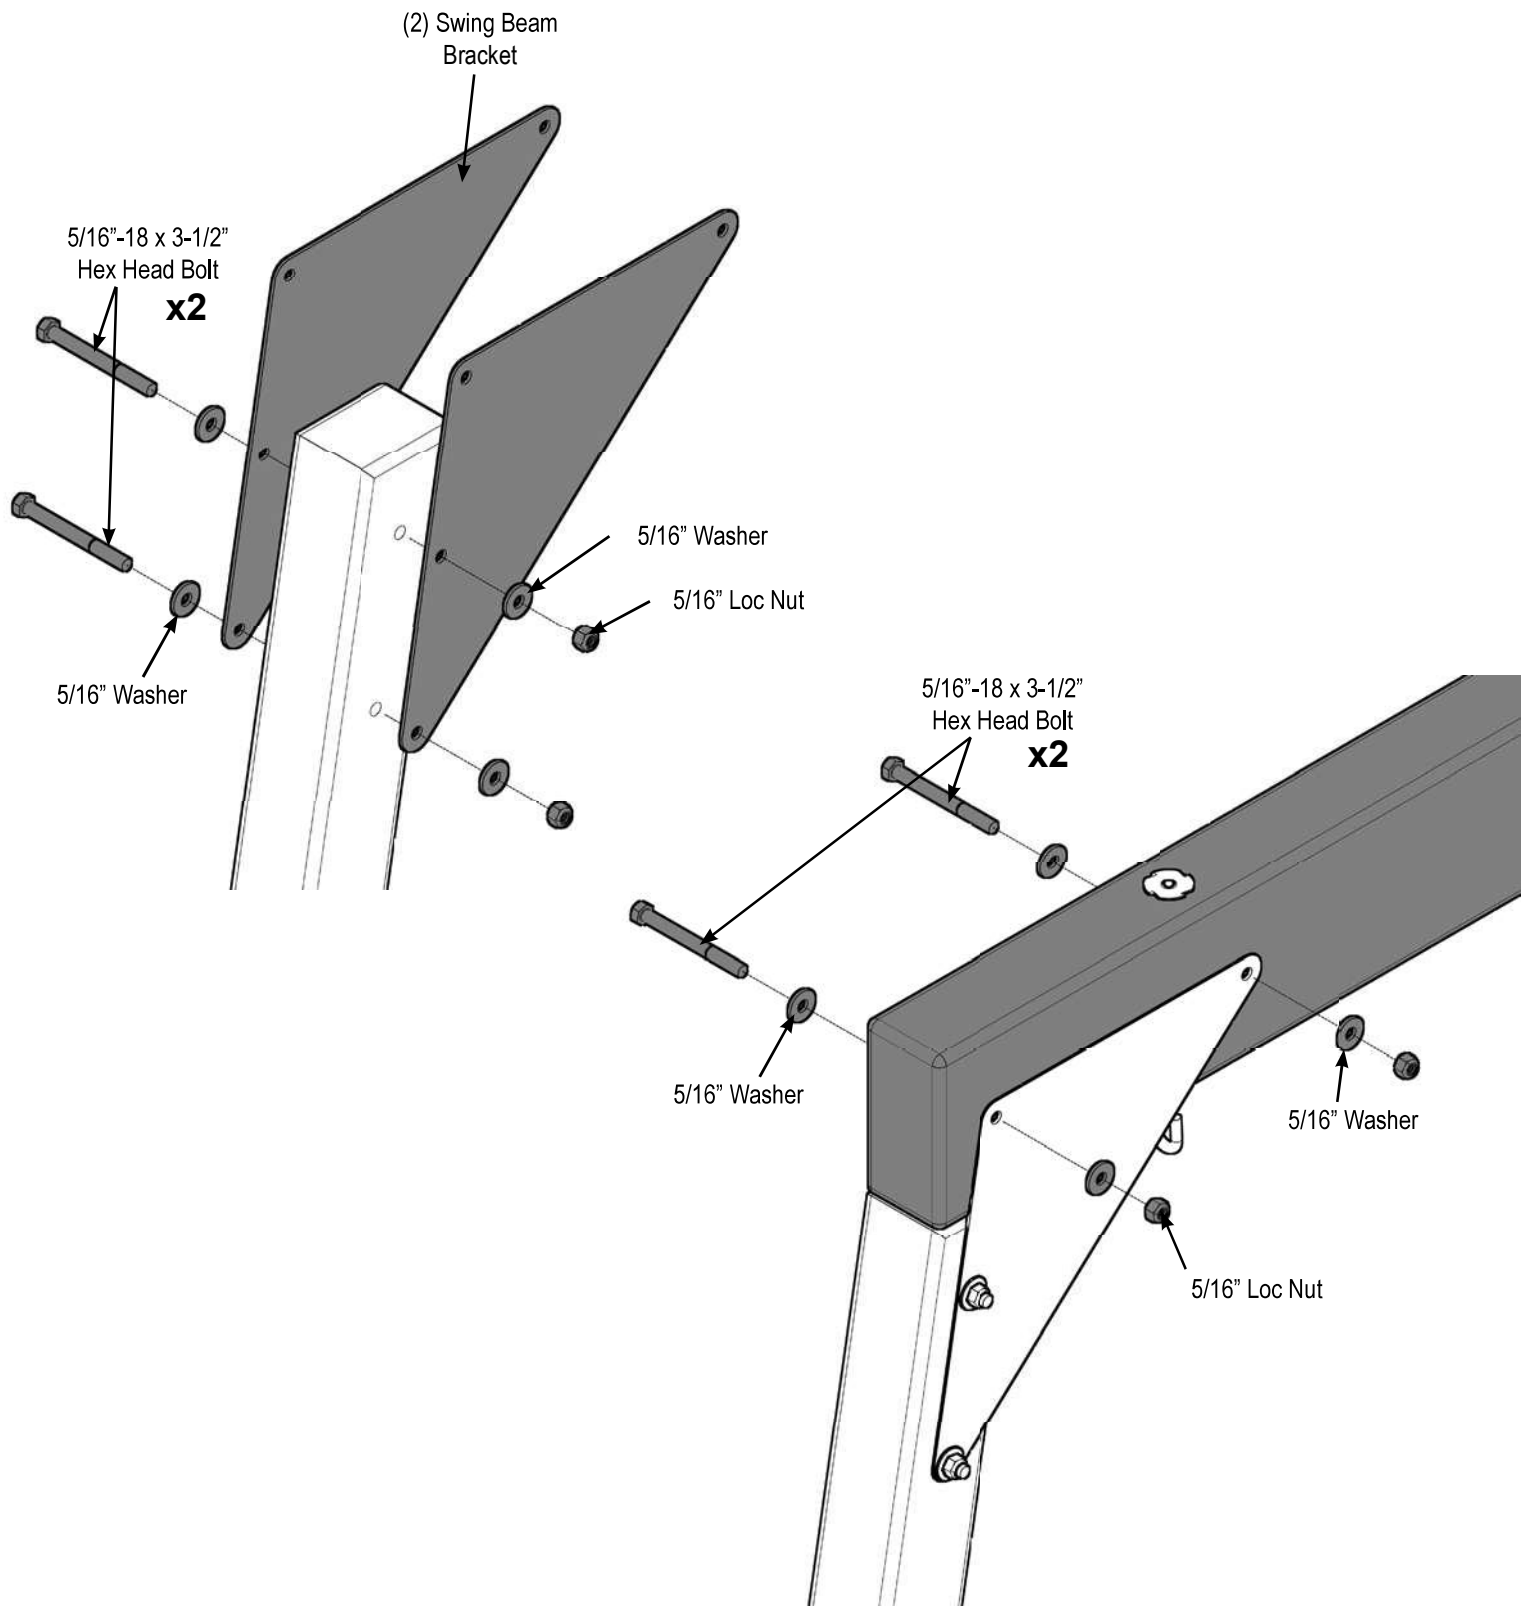


1. Attach Swing Beam Bracket to A-Frame & Swing Beam as shown.

## STEP 25

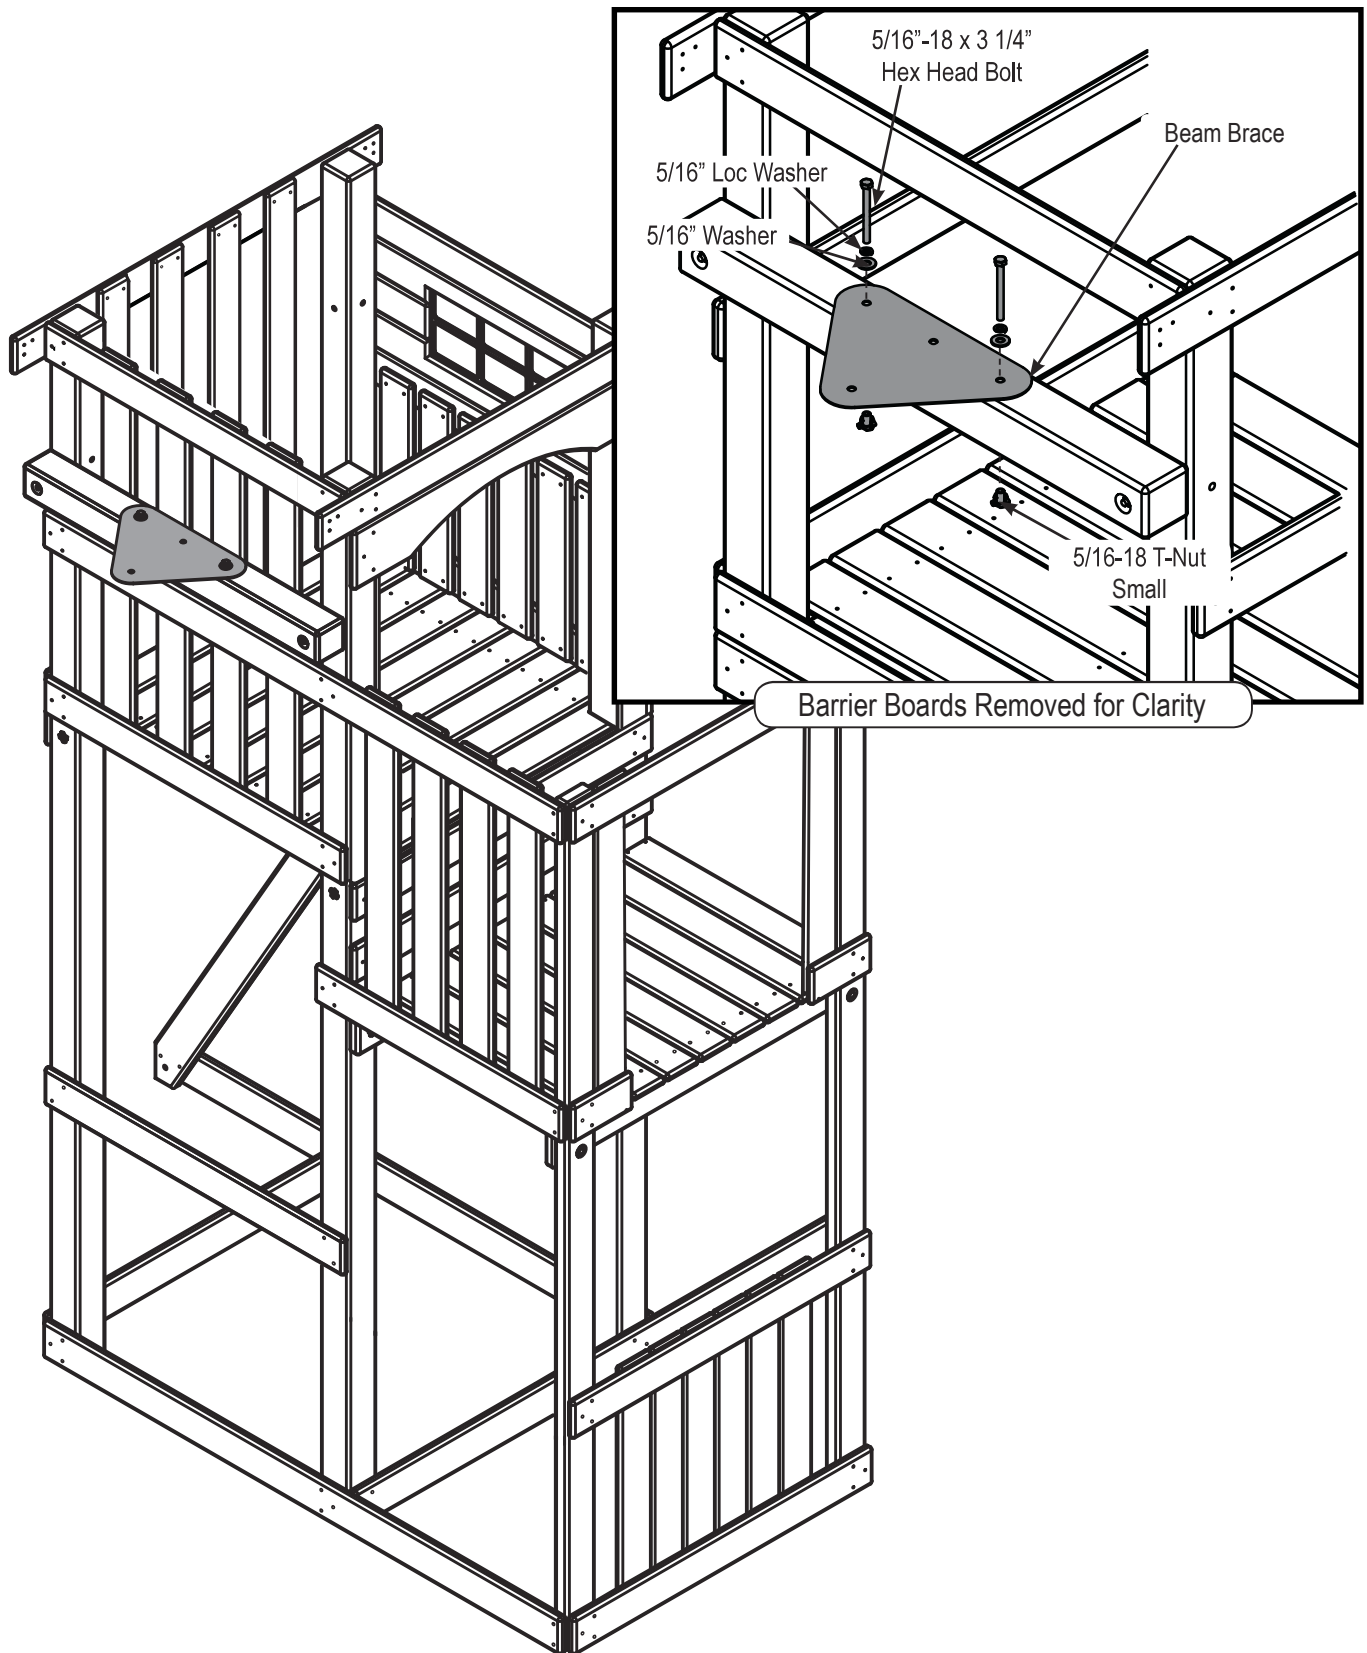







1. Install Swing Beam Brace as shown.

## STEP 26

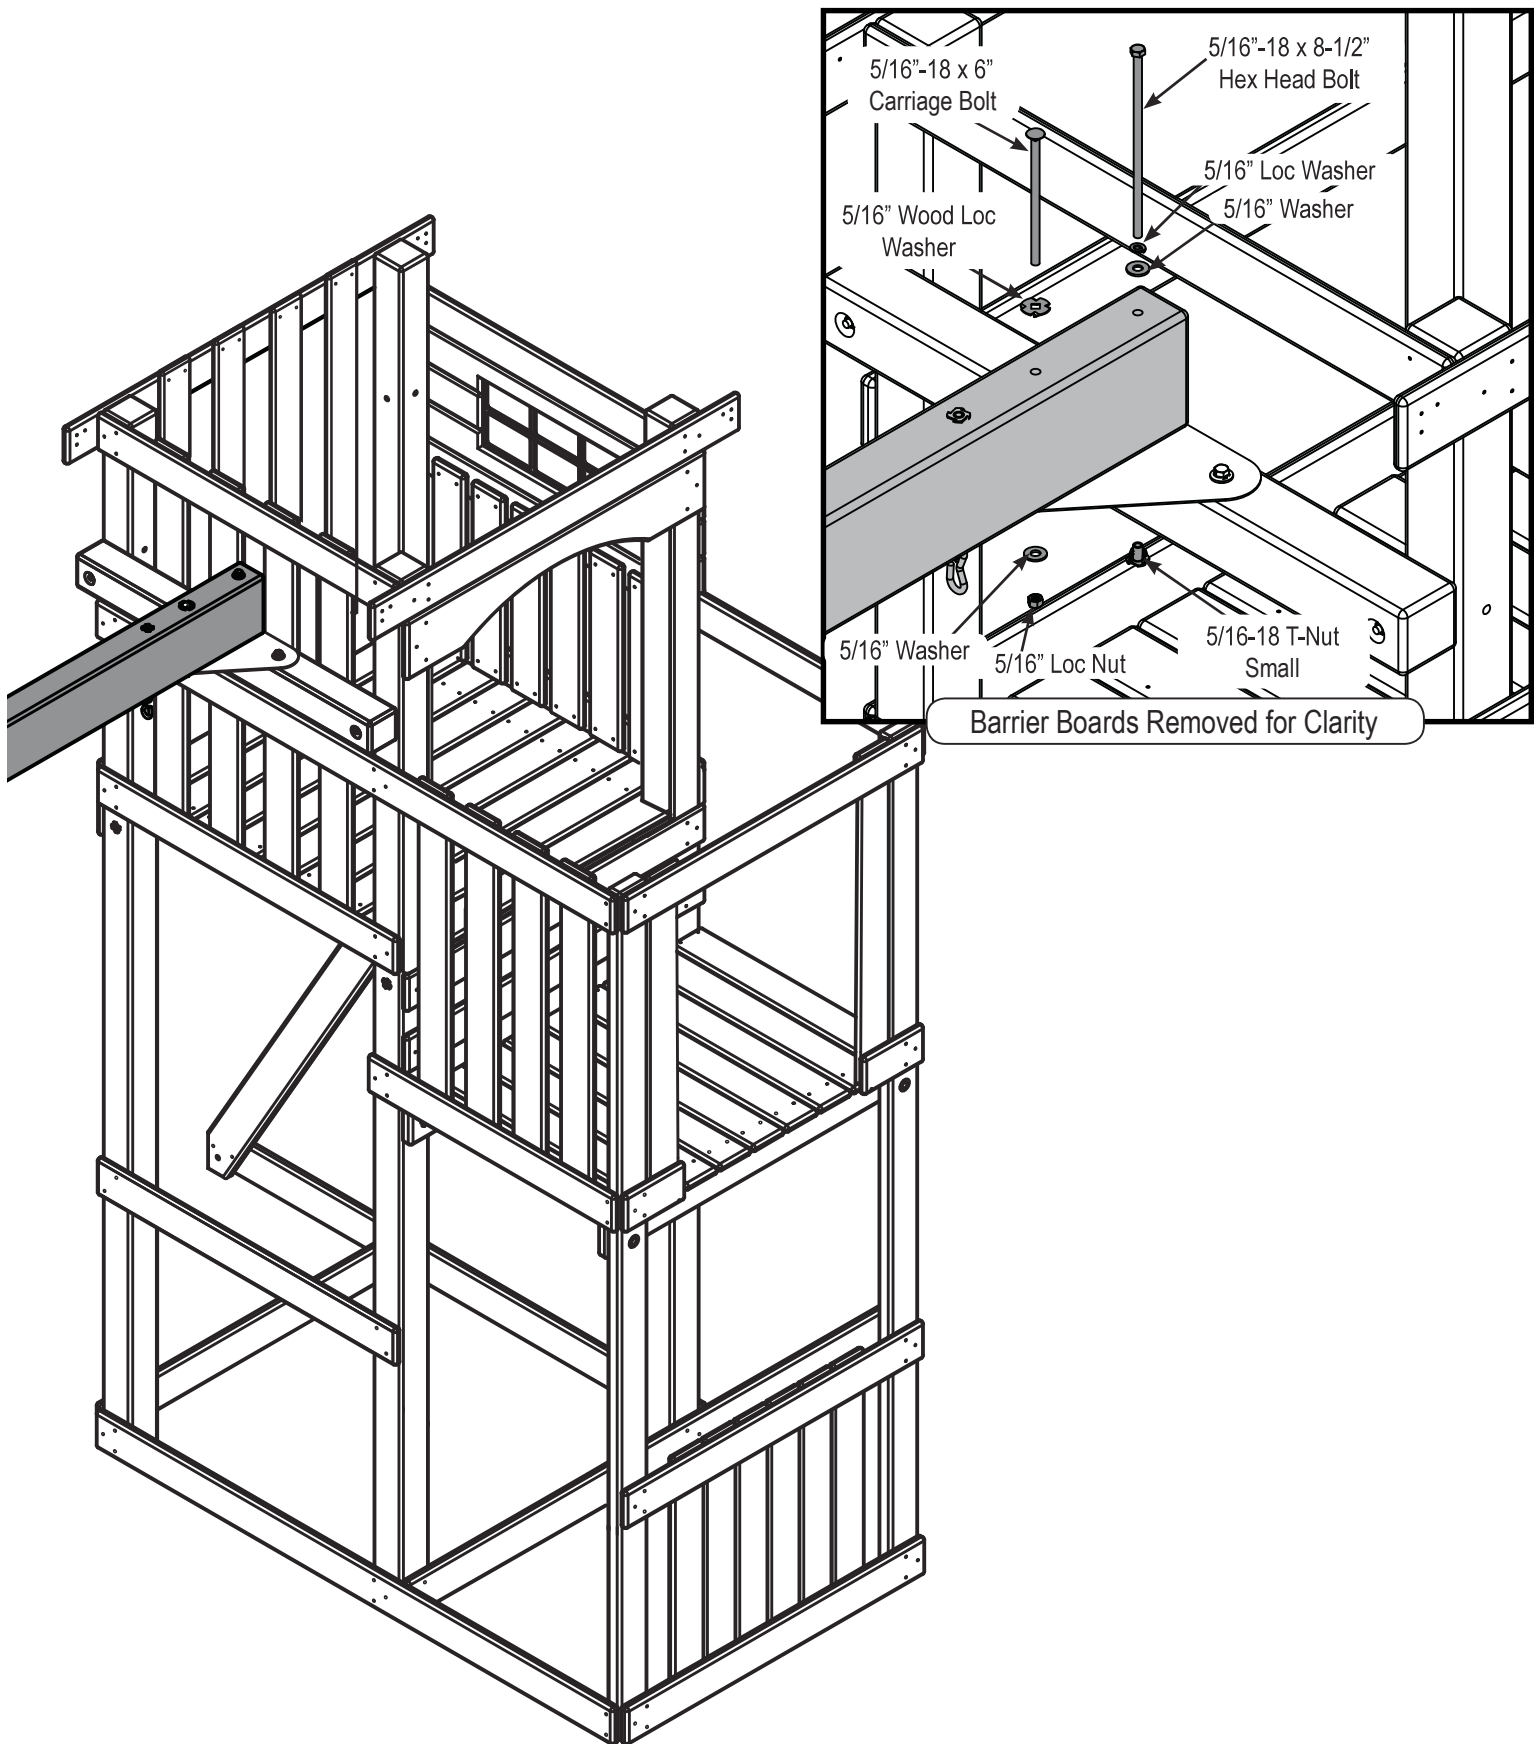

1. Install Swing Beam as shown.

# STEP 27

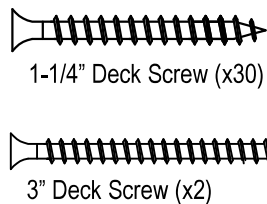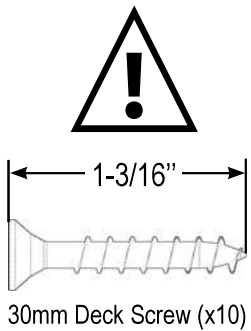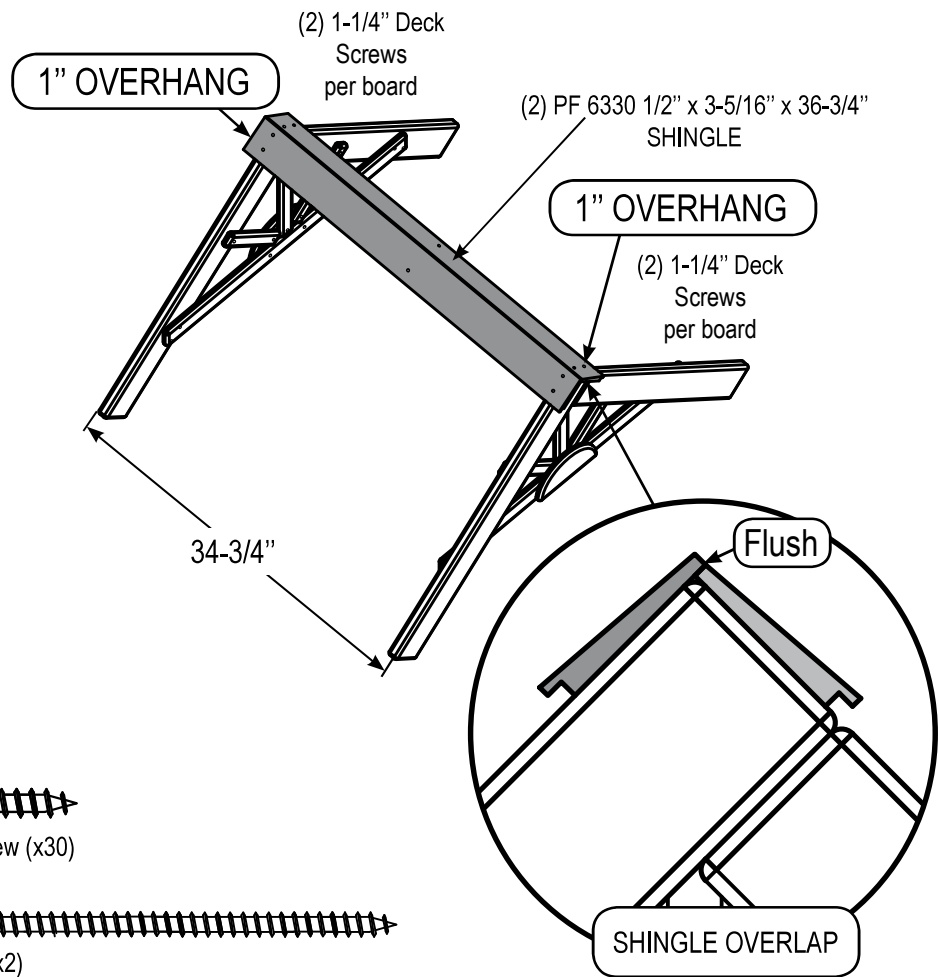
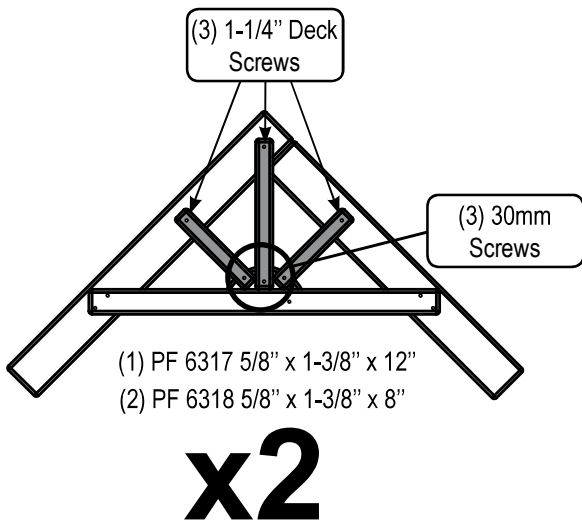
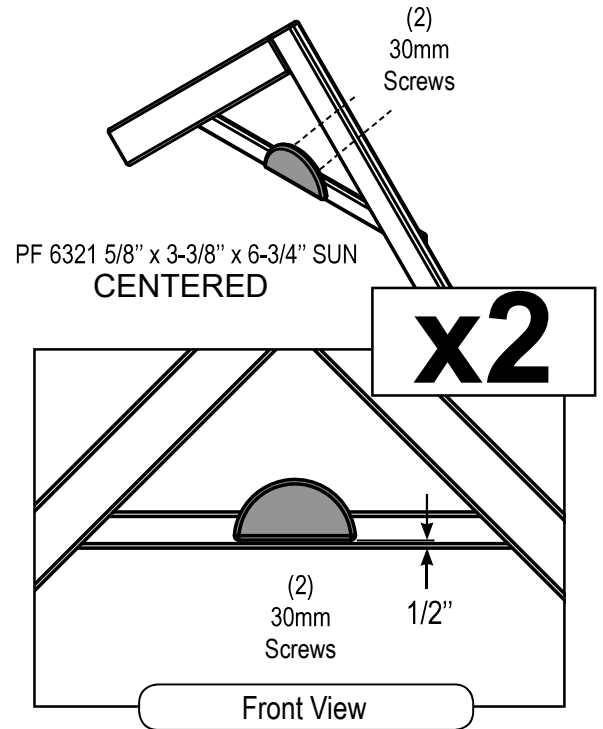
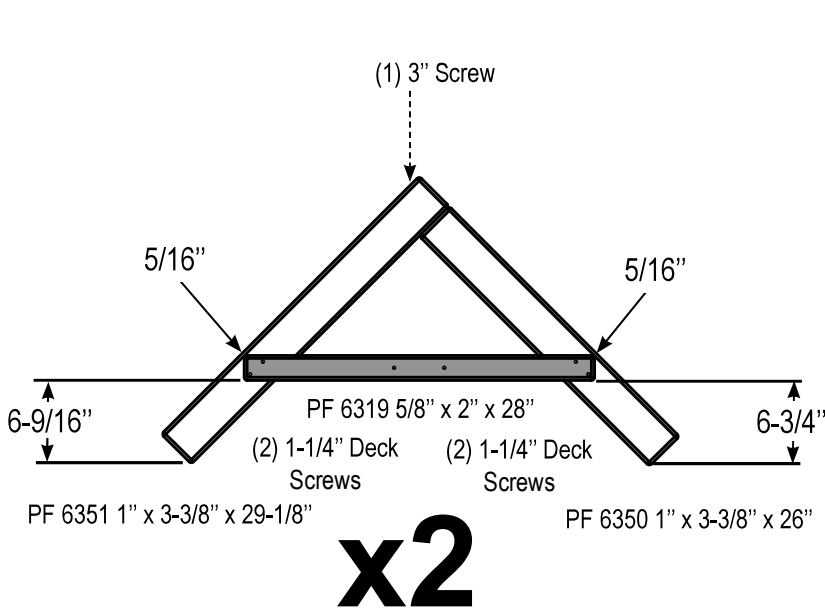


1. Assemble Roof Frame as shown.  
**NOTE:** Overlap Shingles as shown.

## STEP 28



### NOTE:

TURN ROOF ASSEMBLY ON END.  
CENTER AND CLAMP PF 6355  
BEFORE INSTALLING SCREWS.

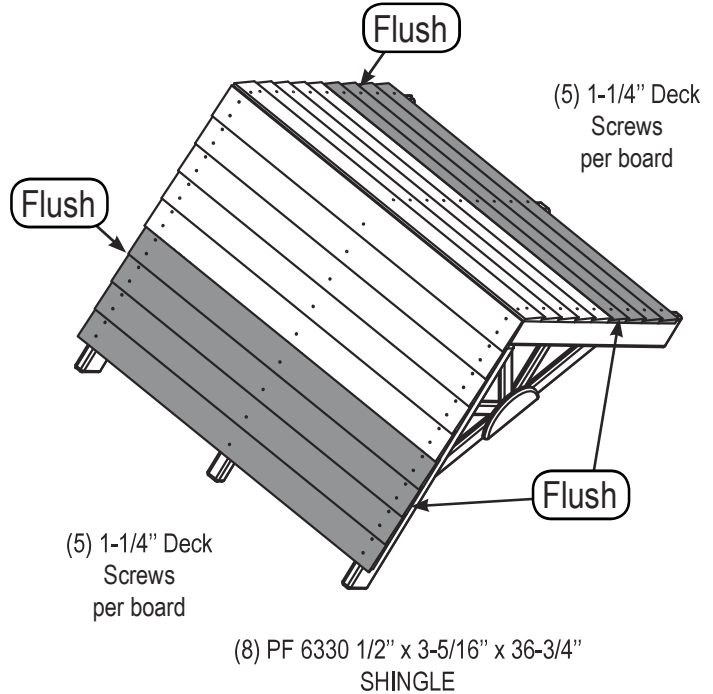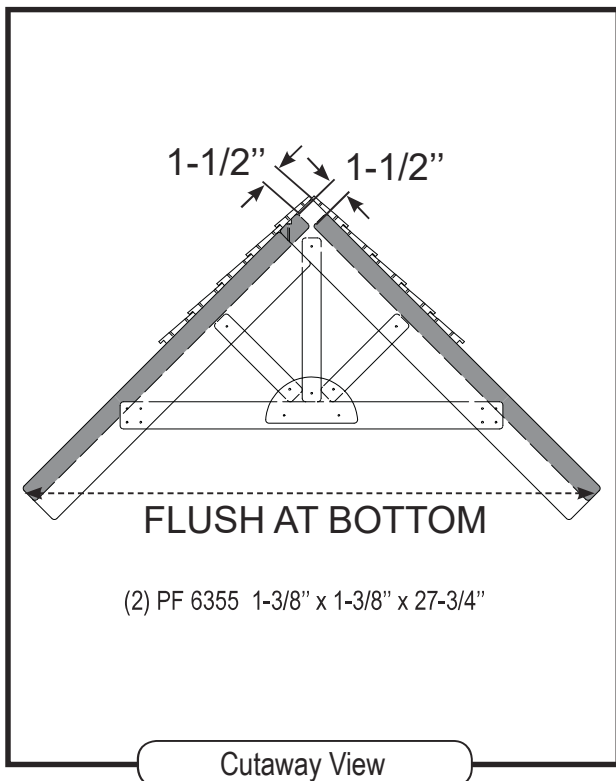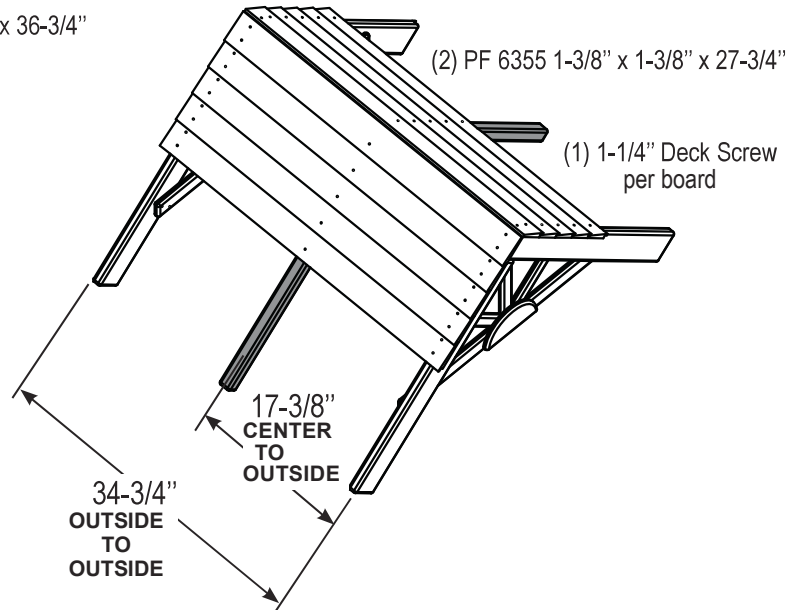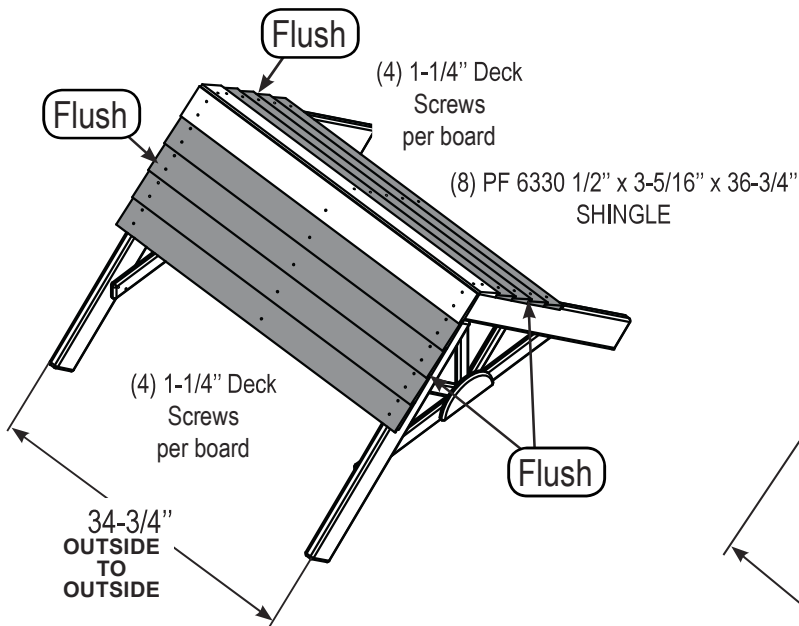

1. Complete Roof Assembly as shown.

## STEP 29

 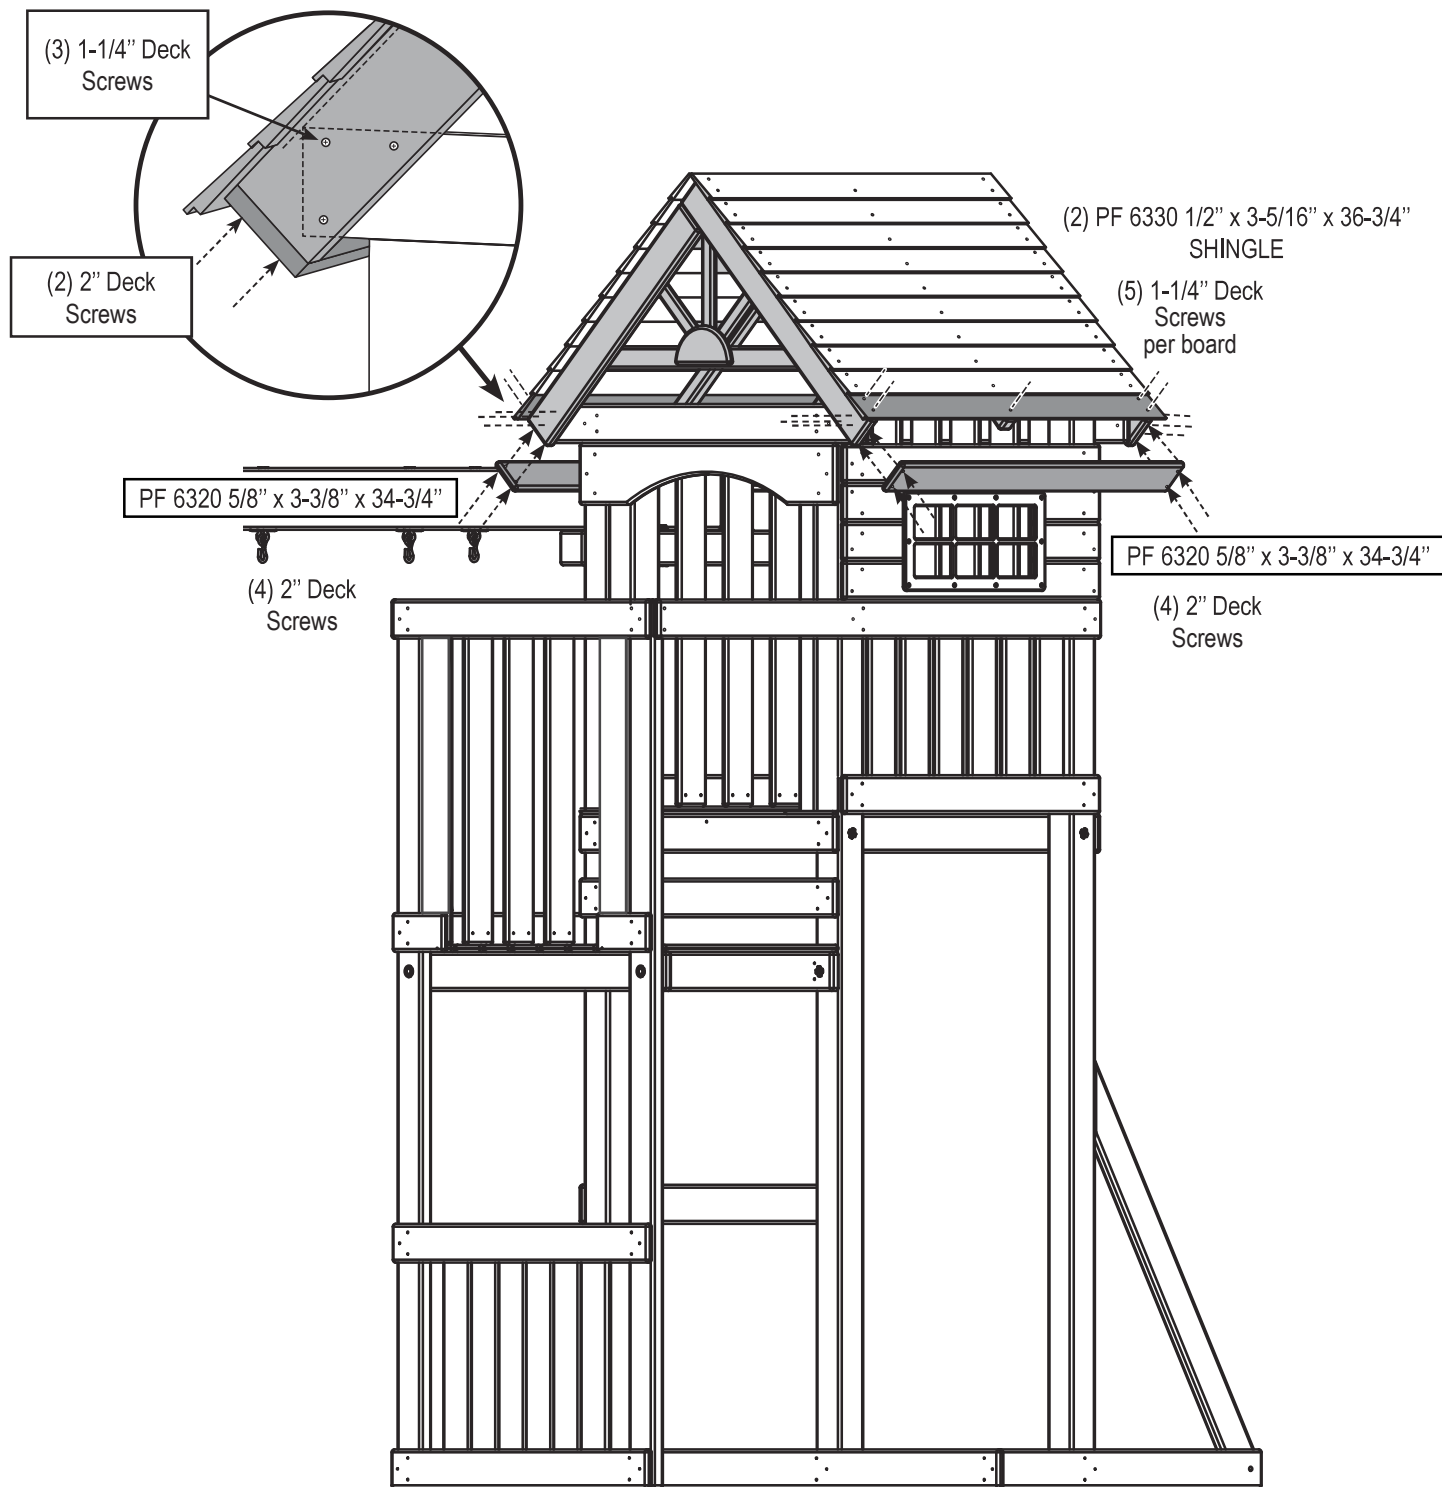


1. Attach roof as shown.
2. Attach (2) shingles.
3. Attach (2) end roof boards.




# STEP 30

ALIGN SCREWS  
WITH PRE DRILLS

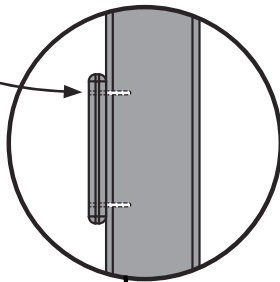


(5) PF 6341 5/8" x 5-3/8" x 26-7/8"

PF 6315 1" x 3-3/8" x 53" ROCK WALL SIDE

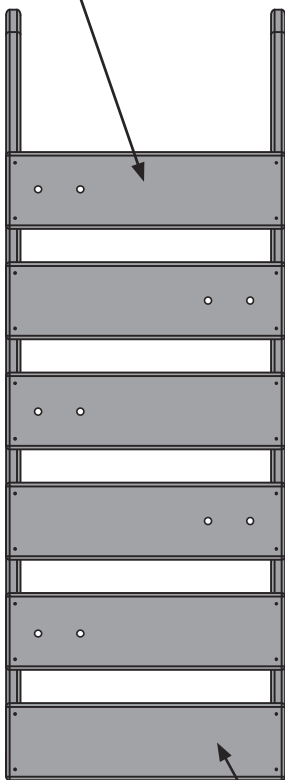

PF 6315 1" x 3-3/8" x 53" ROCK WALL SIDE

 (4) 2" Deck  
Screws  
per board




Flush


(1) PF 6340 5/8" x 5-3/8" x 26-7/8"



 2-1/2" Deck Screw (x6)





2" Deck Screw (x24)

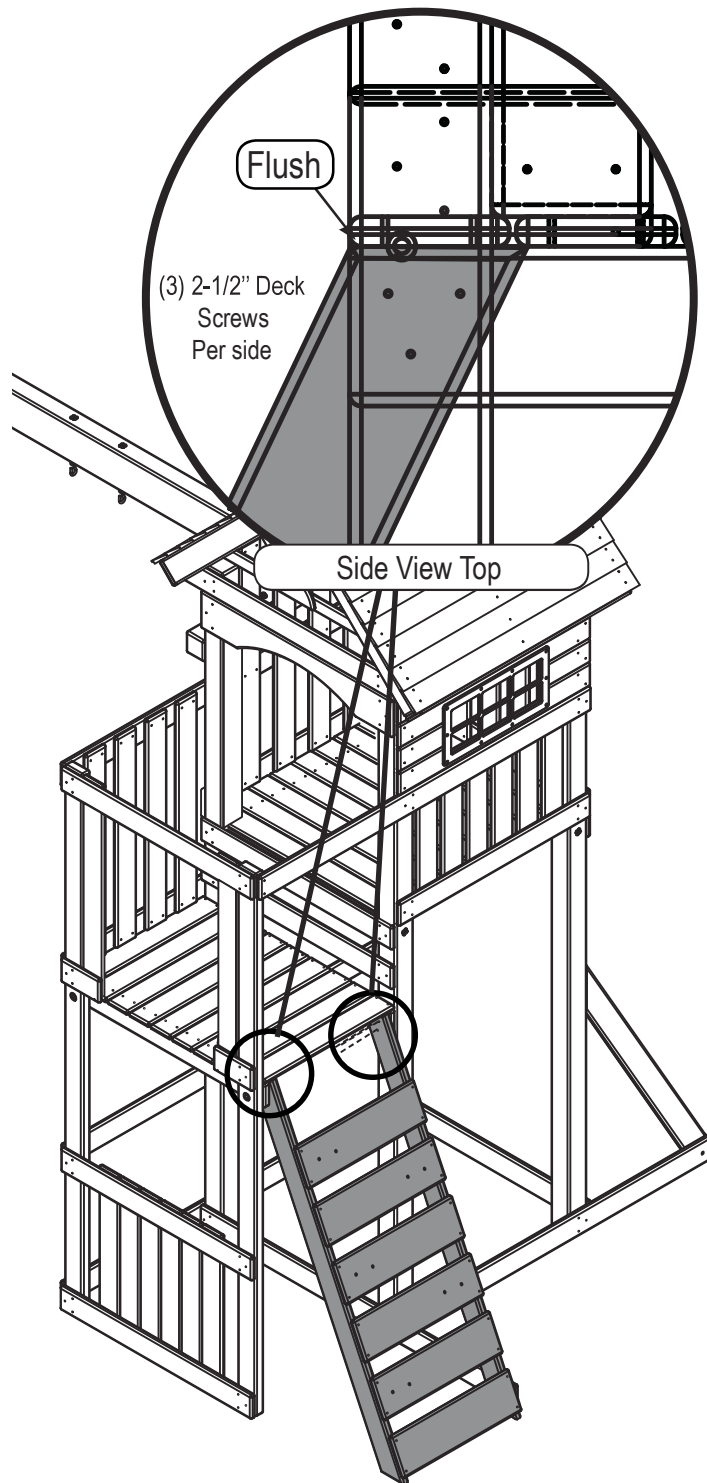


1. Align and install rock wall boards to the image above.
2. Attach rock wall to frame as shown

## STEP 31

 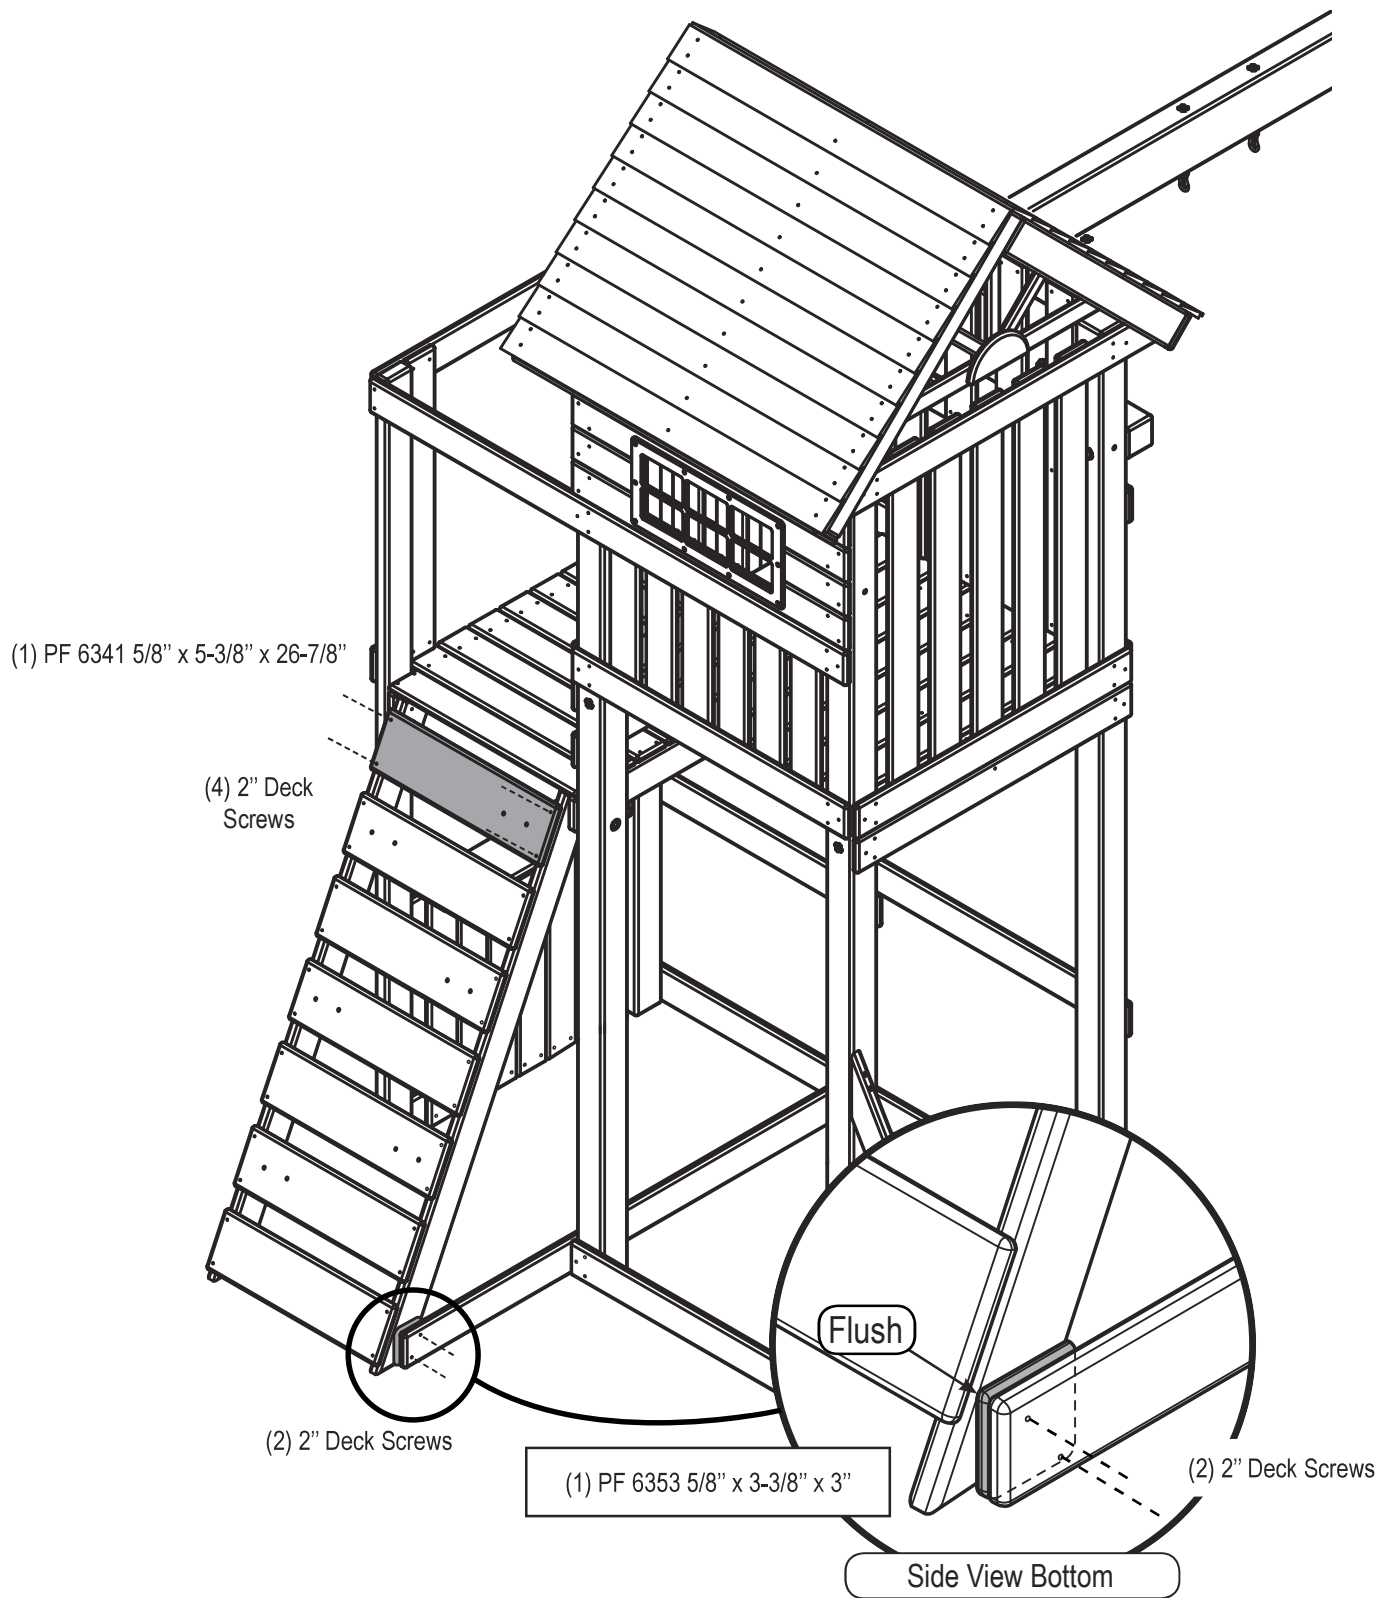


1. Attach rock wall board and spacer as shown.

STEP 32

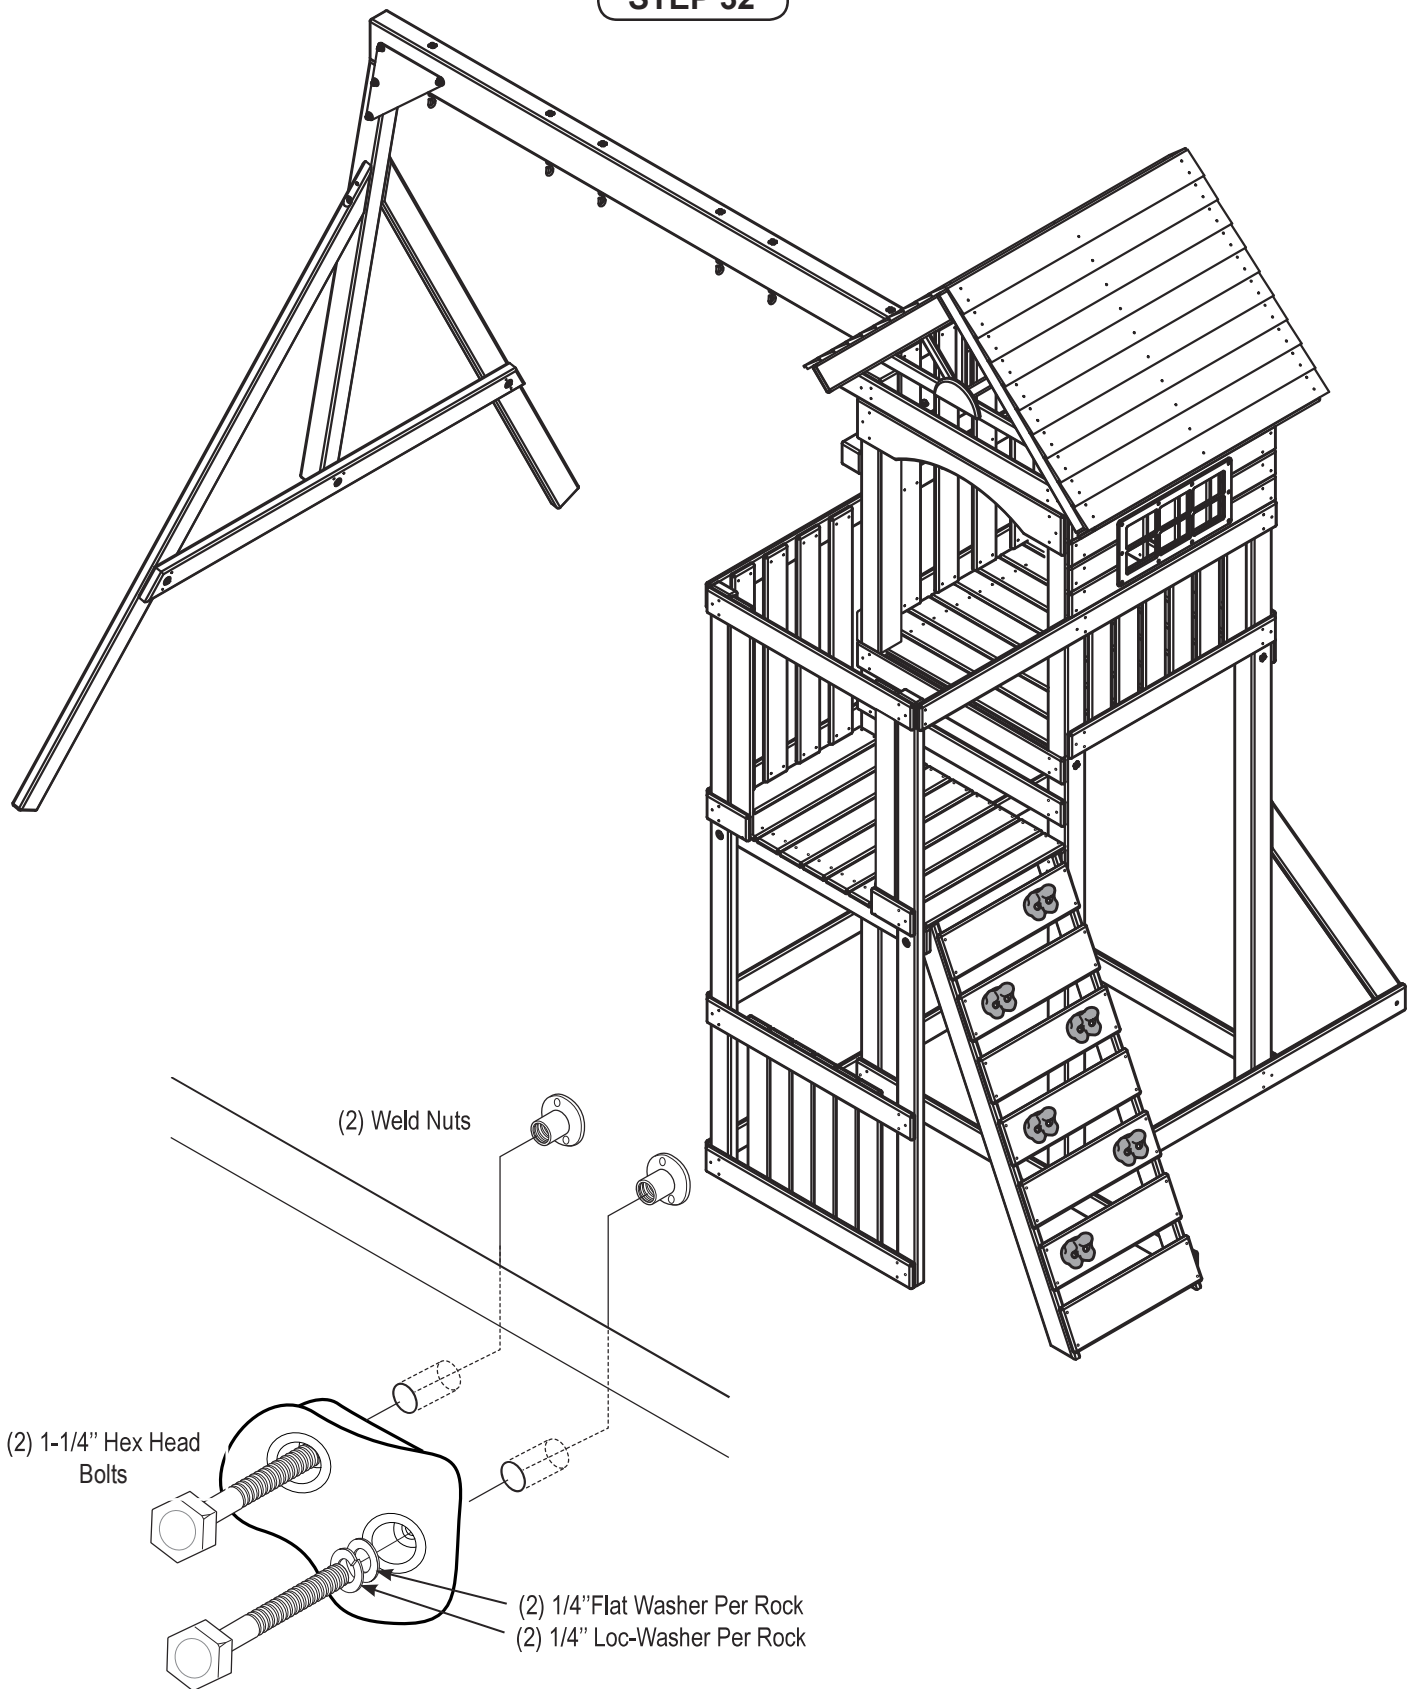

1. Attach Climbing Rocks as shown.


# STEP 33

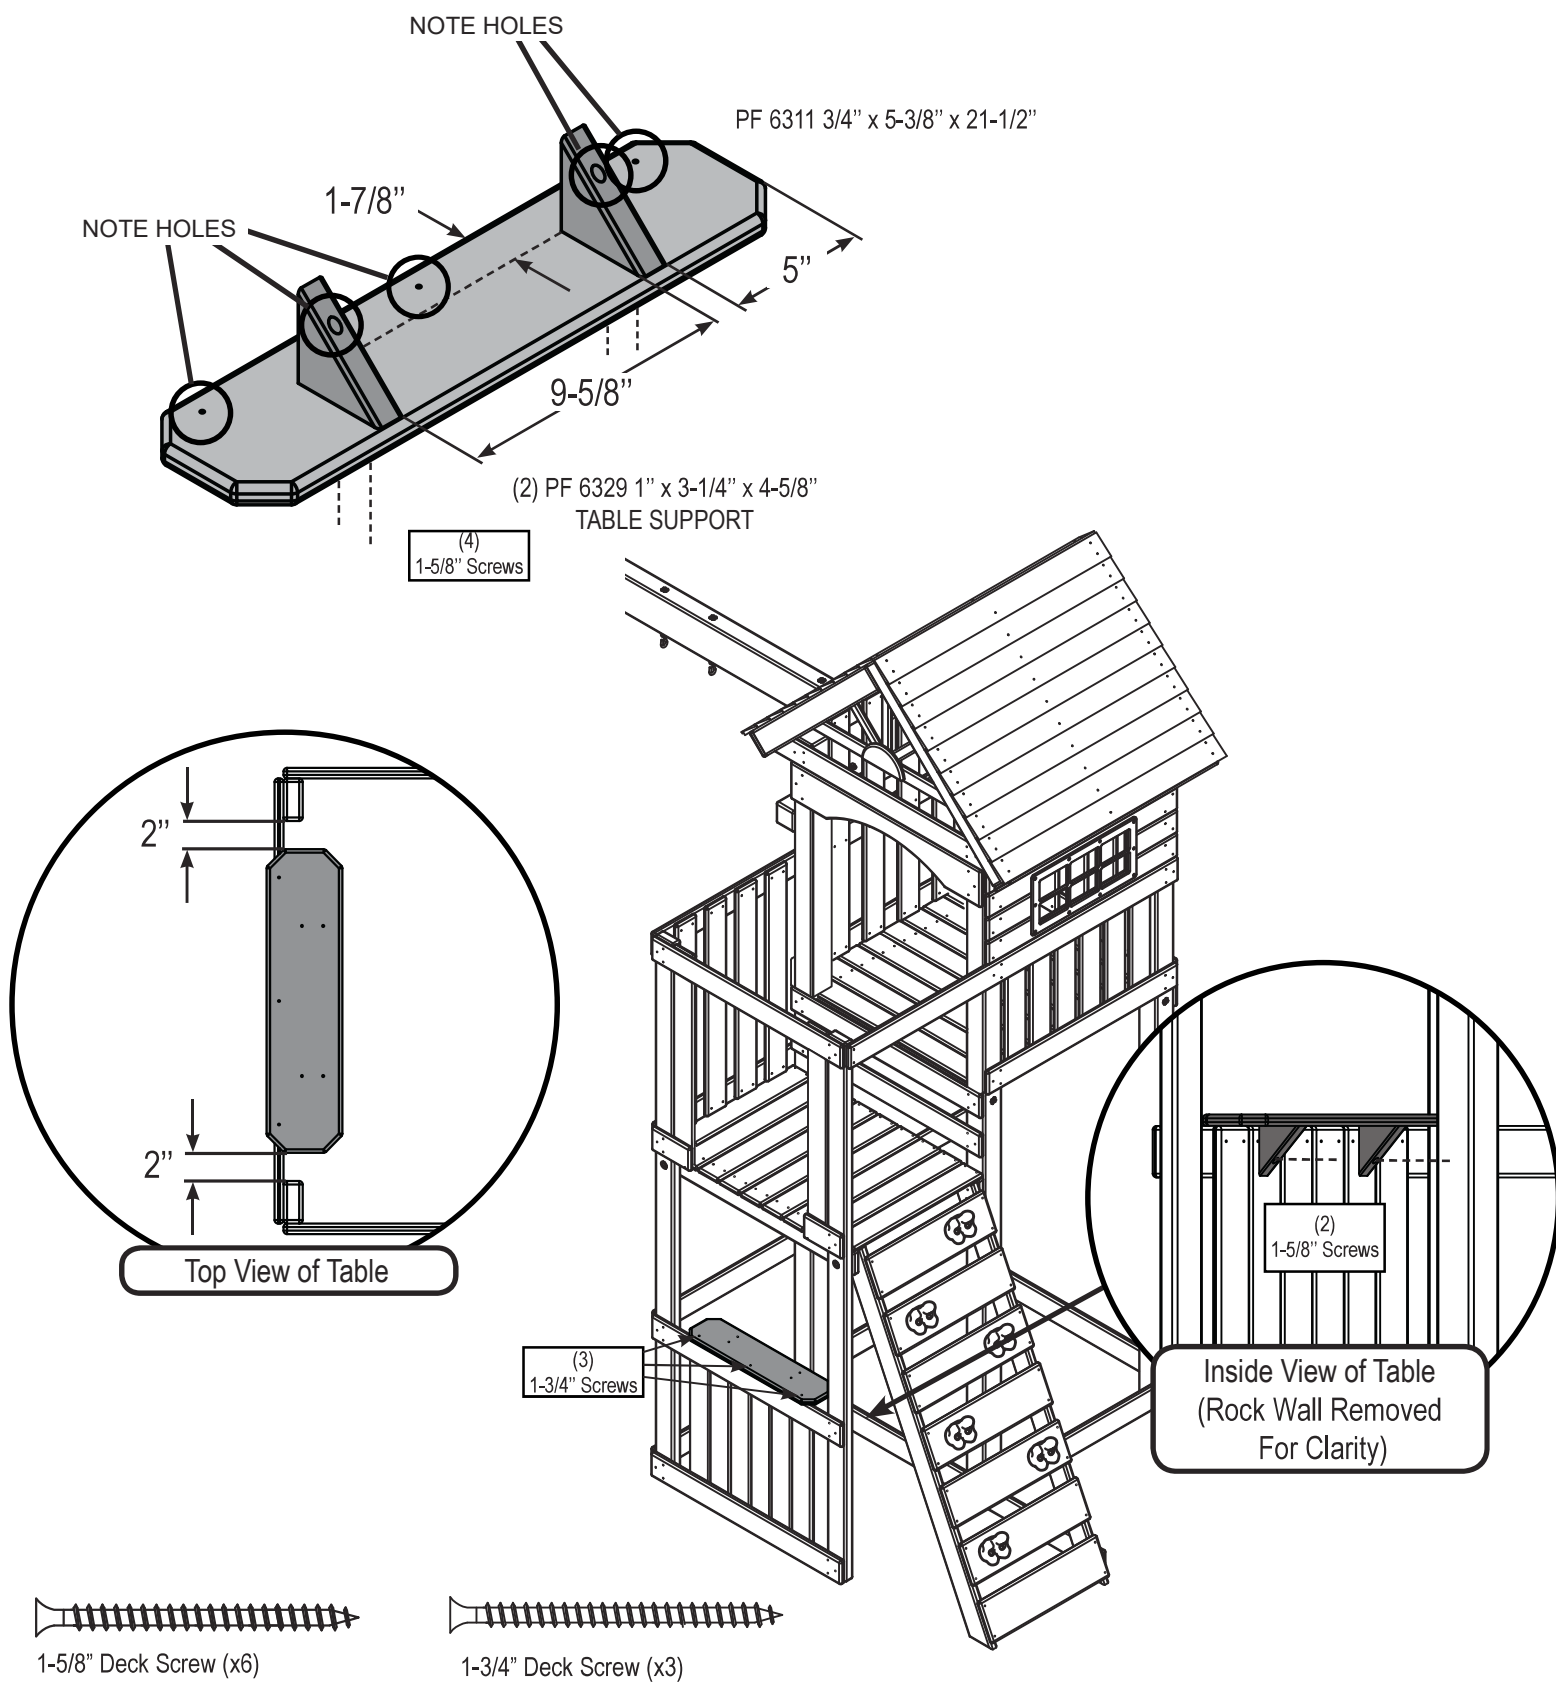



1. Attach Table Supports and Table Top as shown.

# STEP 34


(2) PF 6302 3/4" x 3-3/8" x 9-3/4" TABLE SUPPORT  
(2) PF 6300 3/4" x 3-3/8" x 15-3/4" BENCH SUPPORT

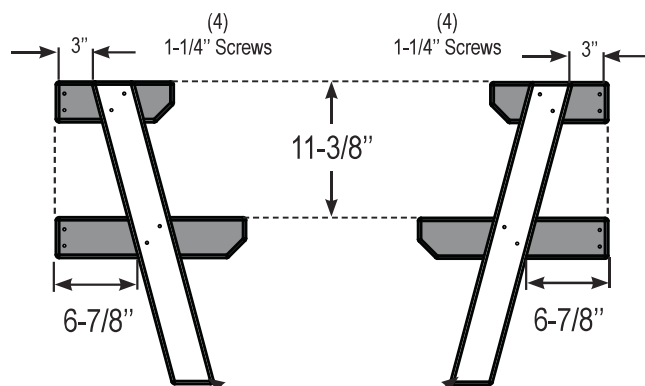

(2) PF 6301 3/4" x 3-3/8" x 26-7/8" PICNIC TABLE LEG

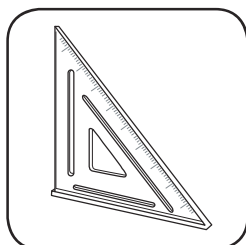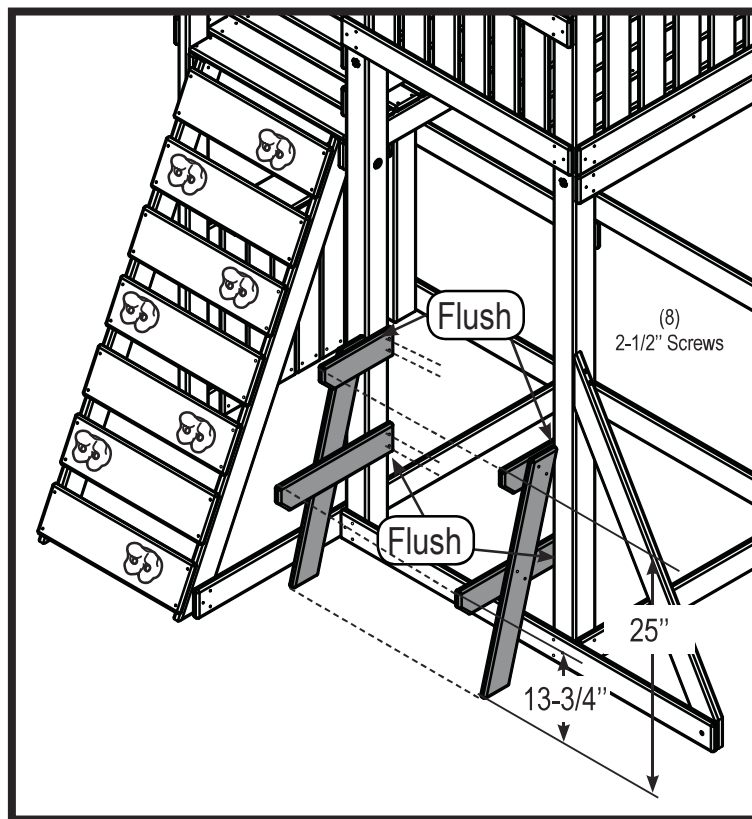

Check to make sure  
structure is square

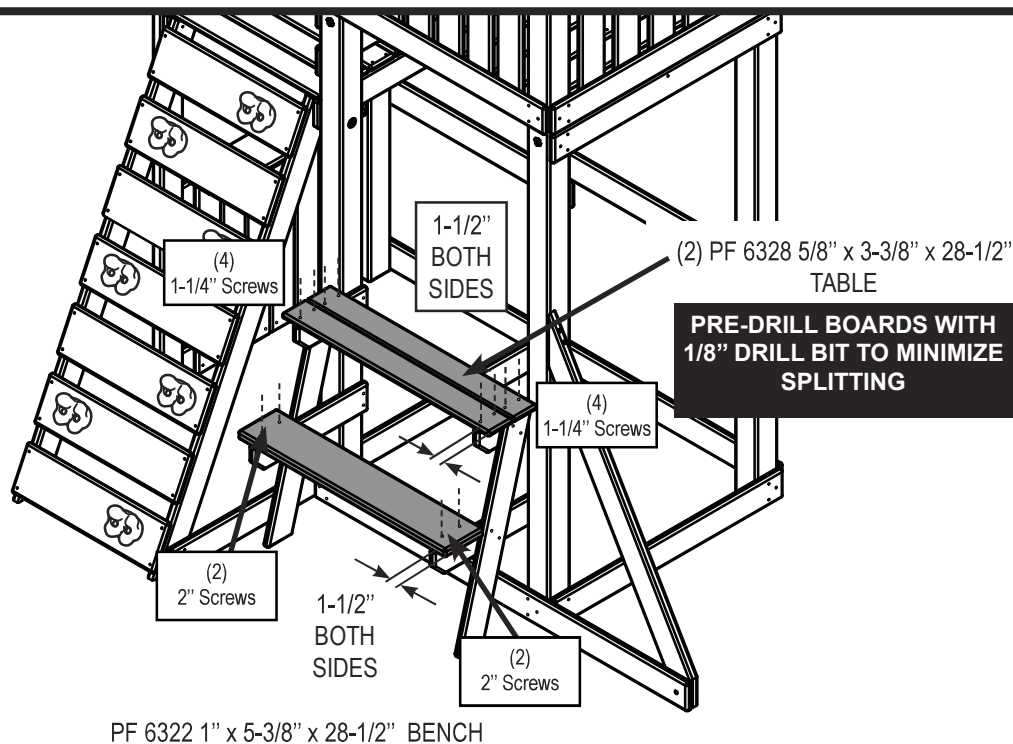

PF 6322 1" x 5-3/8" x 28-1/2" BENCH



1-1/4" Deck Screw (x16)



2" Deck Screw (x4)





2-1/2" Deck Screw (x8)

1. Assemble and install Picnic Table as shown.

**Note:** Pre-Drill boards with 1/8" drill bit as shown to prevent splitting.


# STEP 35

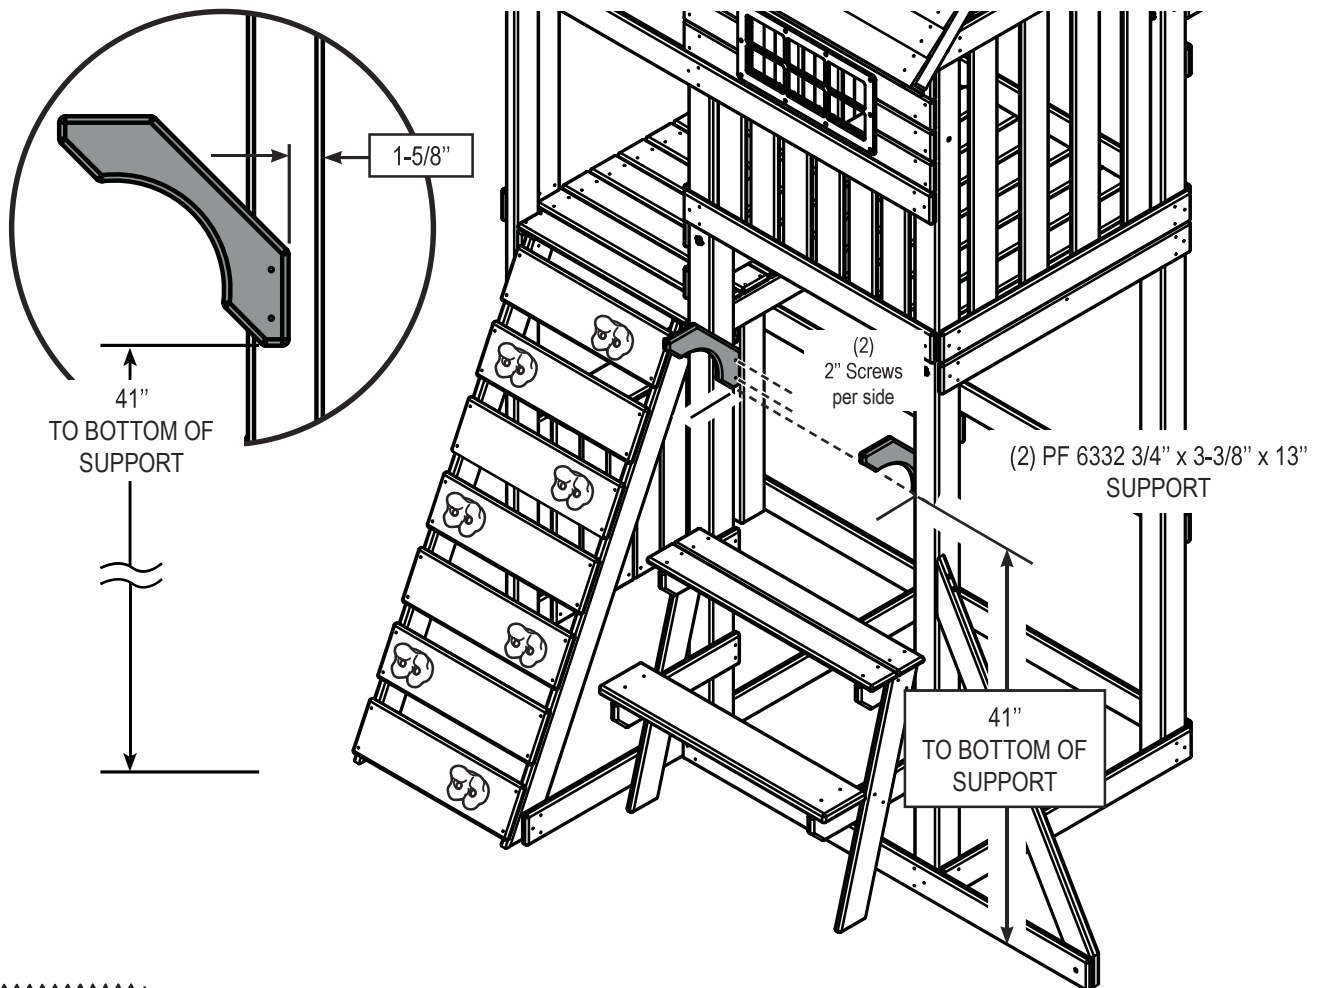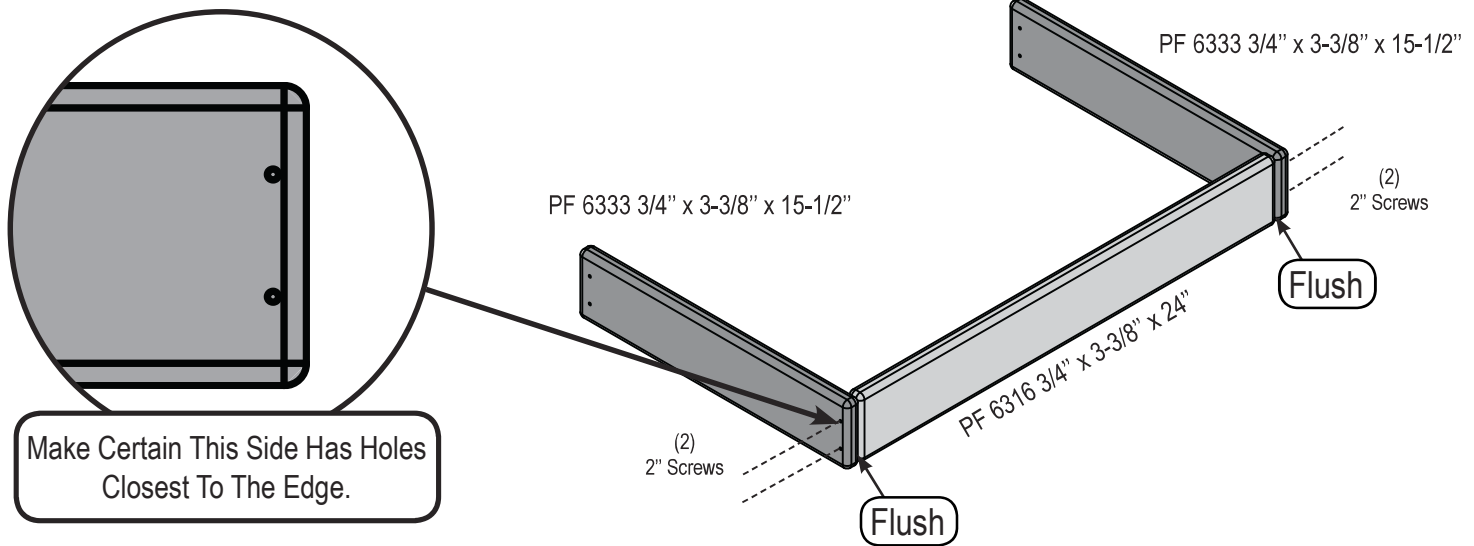

1. Assemble Tarp Frame and Attach Supports to tower as shown.



## STEP 36

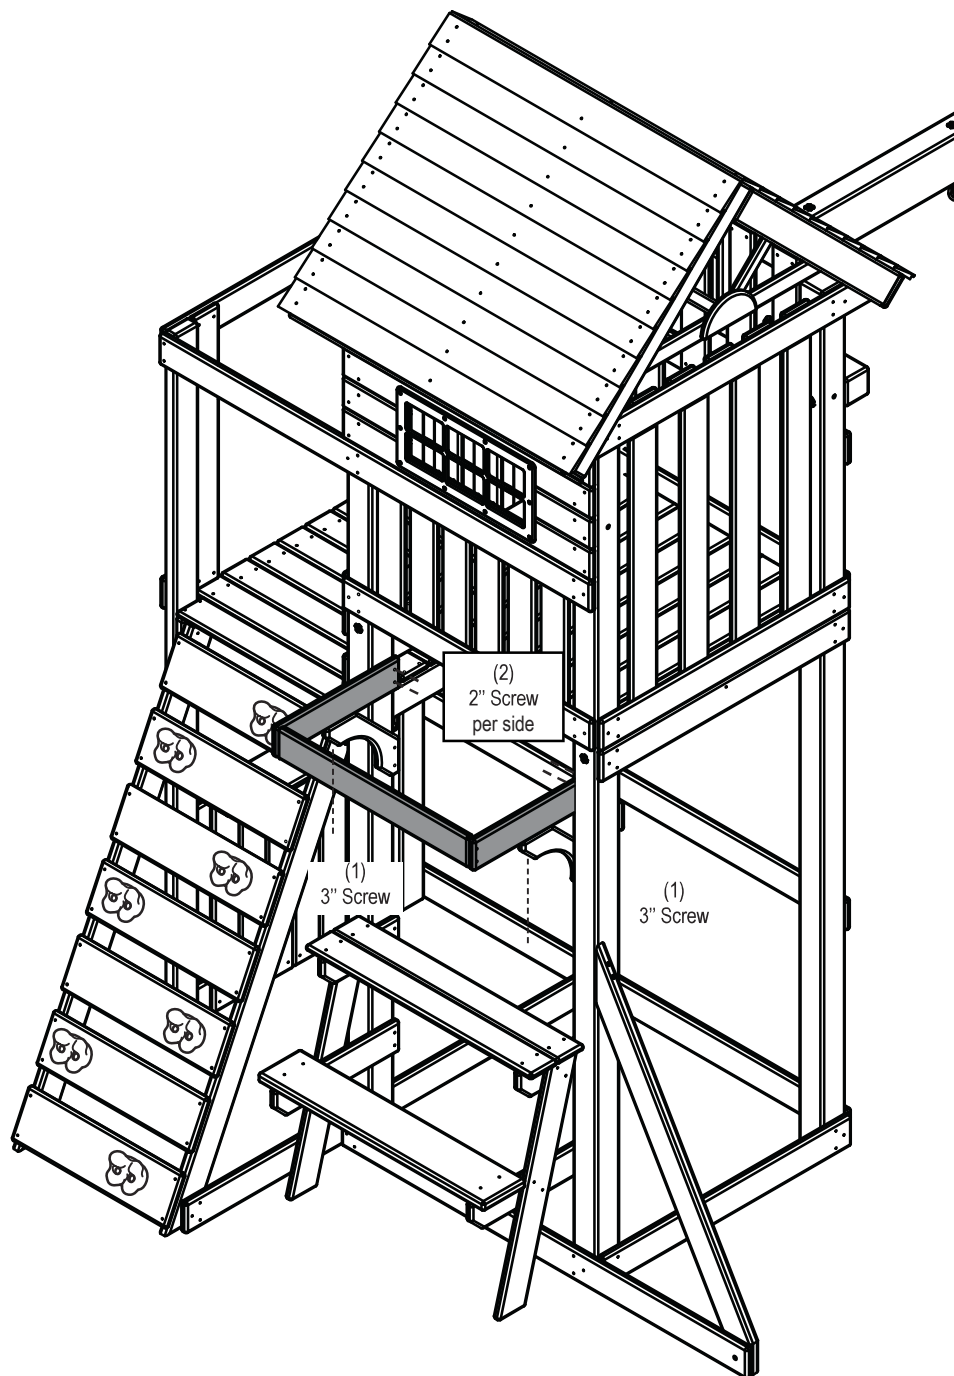


1. Attach Tarp Support Frame to tower as shown.

## STEP 37

PF 6331 5/8" x 3-3/8" x 31-1/2"



CENTERED

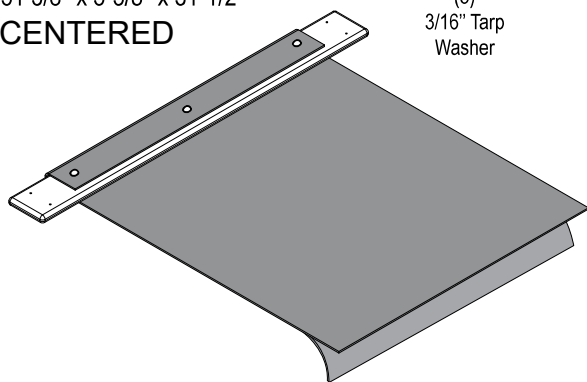


FLAP DOWN

(3)  
3/4" Screws  
(3)  
3/16" Tarp  
Washer


(2)  
2-1/2" Screw  
per joint

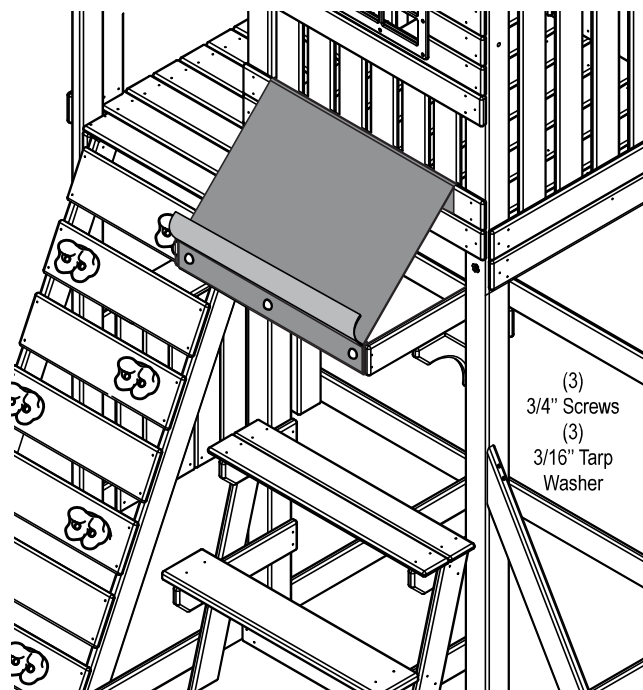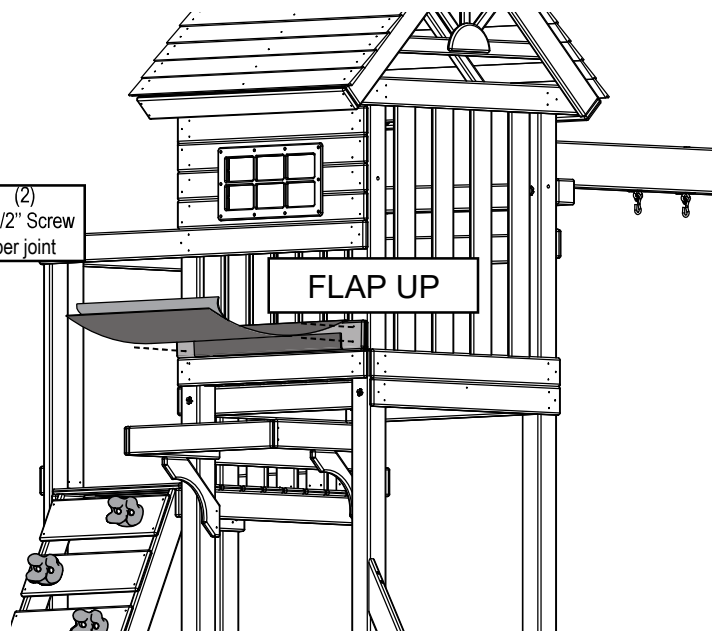

 
(3)  
3/4" Screws  
(3)  
3/16" Tarp  
Washer



3/4" Pan Head Screw (x6)

 

2-1/2" Deck Screw (x4)

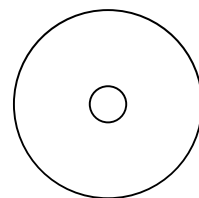


3/16" Tarp Washer (x6)

1. Attach Tarp to Support Board as shown, wrapping around underneath the board, **FLAP ON THE UNDERSIDE.**
2. Attach the Support Board to the Tower so that the Tarp is sandwiched between board and barrier, **FLAP ON TOP.**
3. Lift the Flap and secure the Tarp onto the Frame as shown. The Flap will fall down to cover the hardware.



# STEP 38

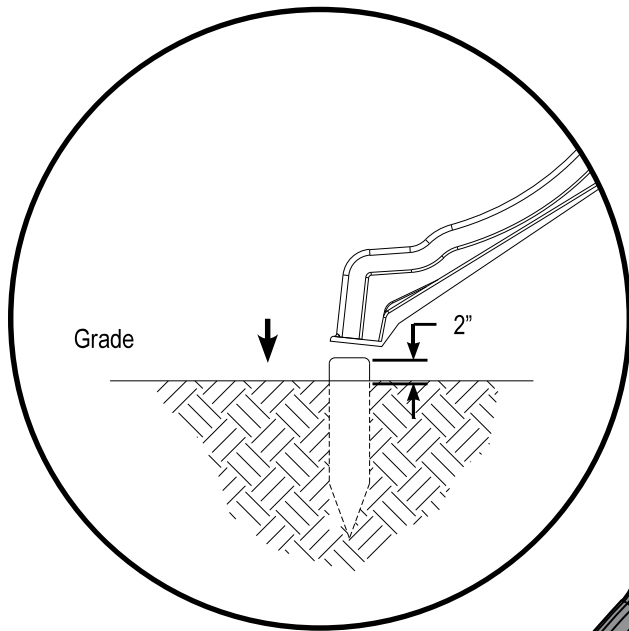


(2) 30mm Deck  
Screws


PF 6295  
1-3/8"x3-3/8"x17-1/4"  
Slide Stake

1-3/4" Truss Screw (x3)

 **NOTE:**  
ATTACH SLIDE INTO  
DECK SUPPORT




30mm Deck Screw (x2)

 

#14 1-3/4" Truss Screw (x3)







1. Attach slide as shown.

STEP 39

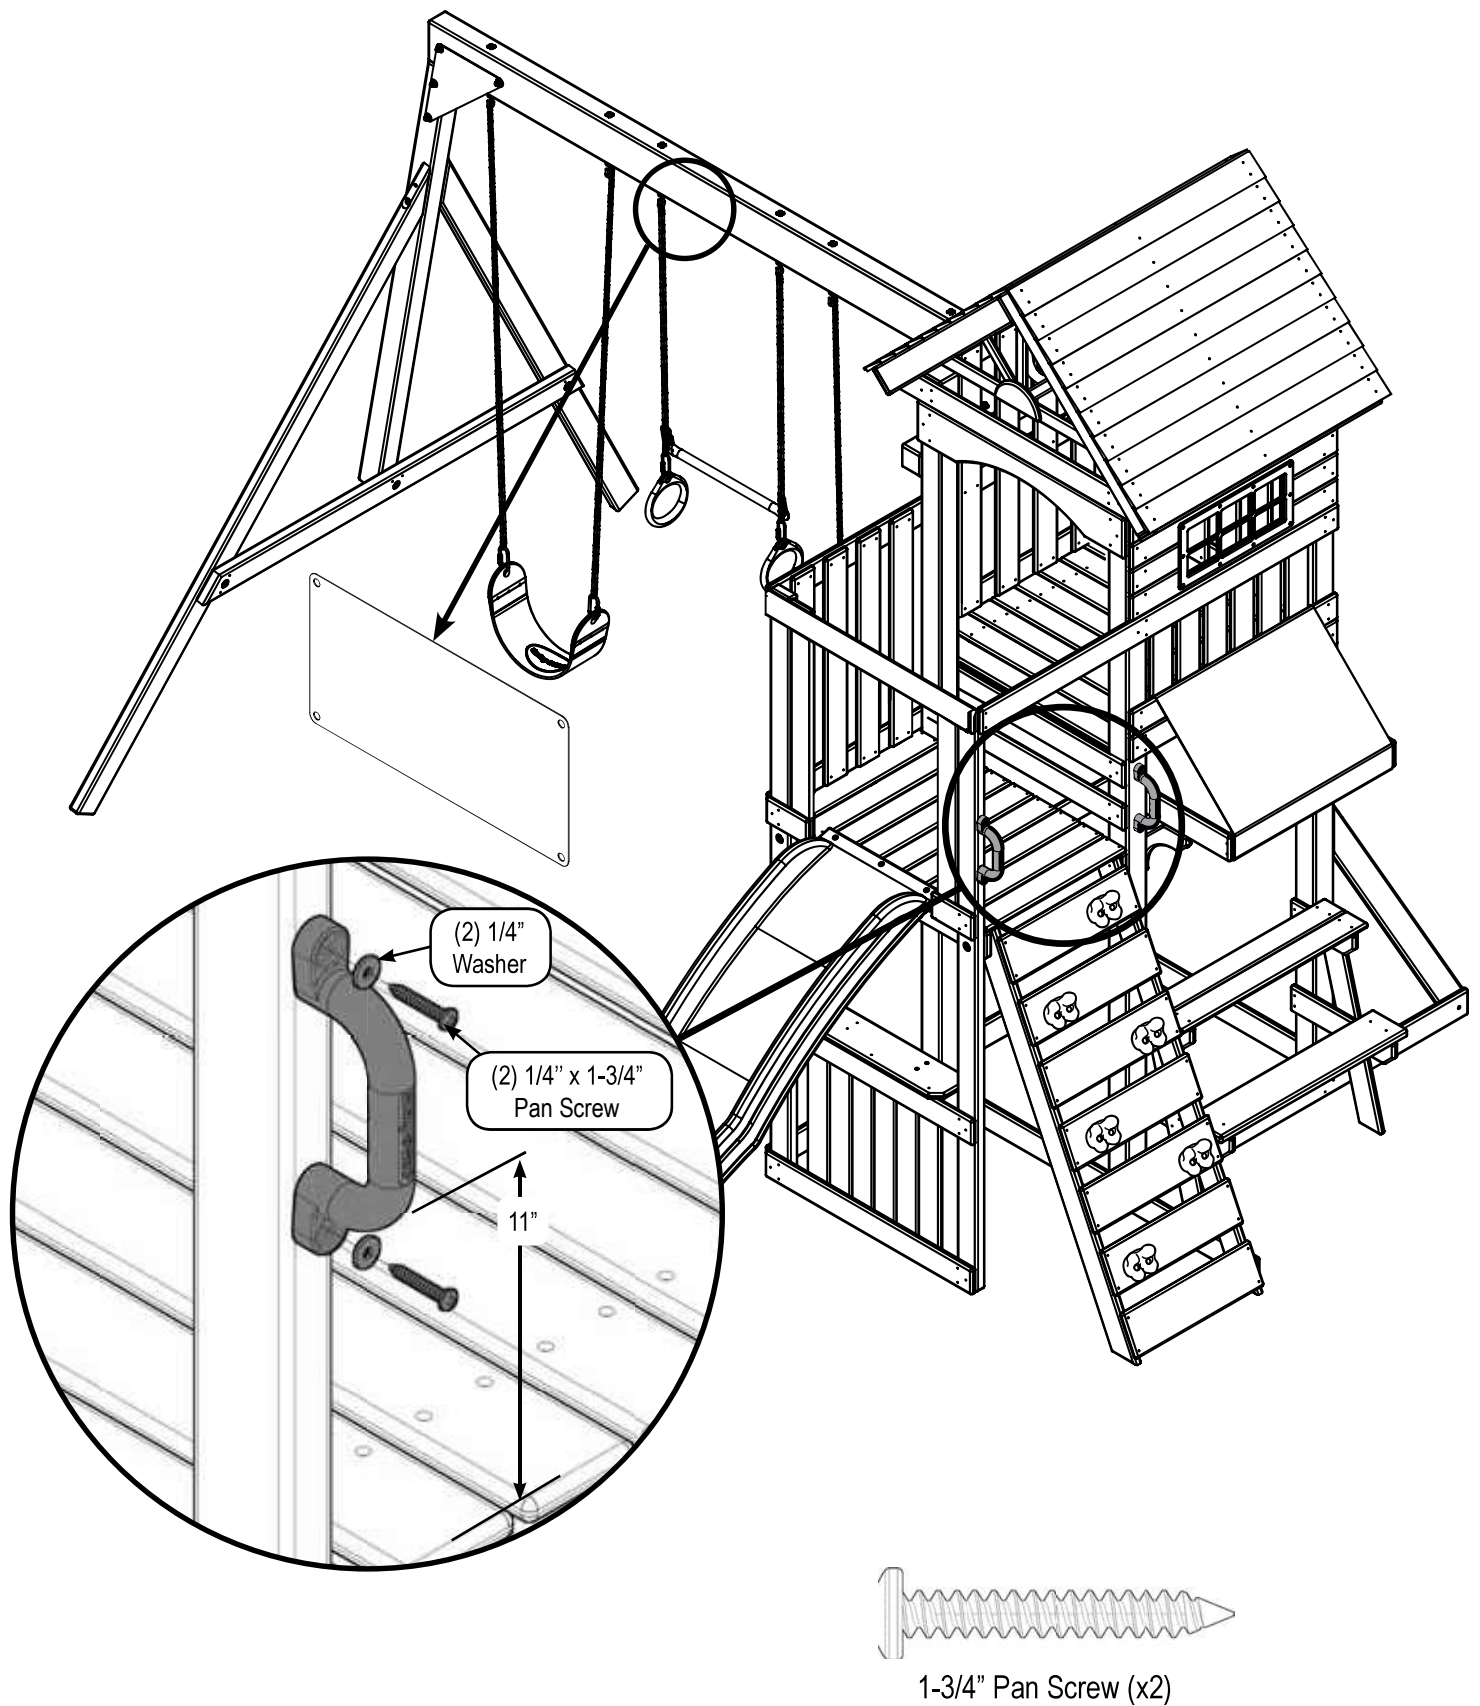

1. Attach Safety Handle and Name Plate as shown.




## STEP 40

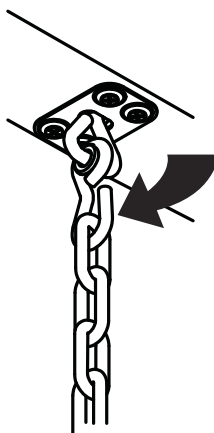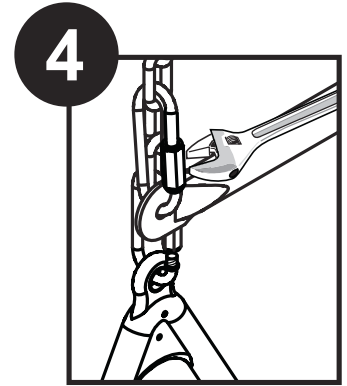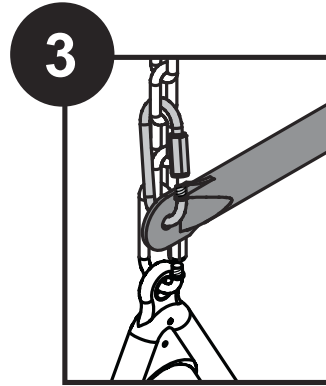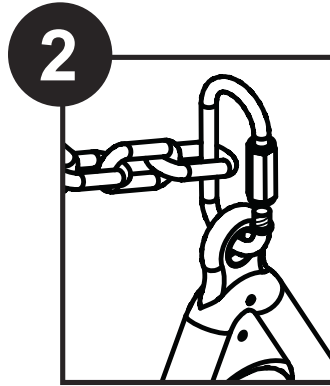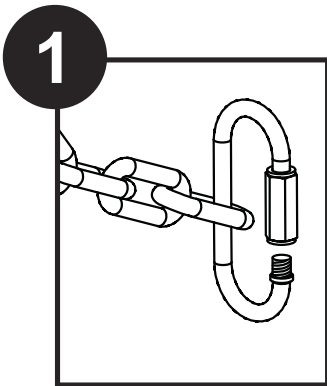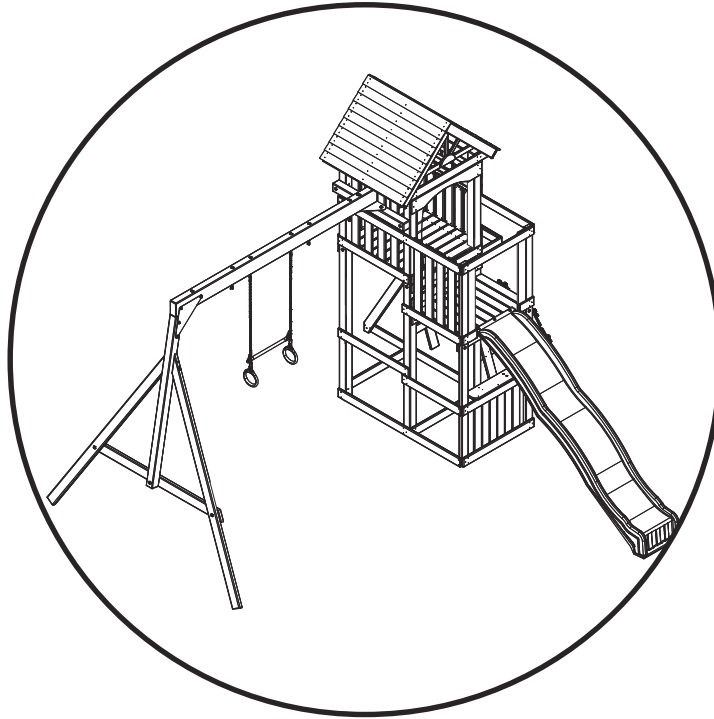

**NOTE:**  
Crimp swing hanger  
tightly closed



### Ring-Trap Combo Assembly

1. Attach Quick Link to chain oriented as shown.
2. Attach Quick Link to gym ring as shown. Attach second set of Quick Links (3) links up. Attach Trapeze Bar as shown.
3. Tighten all Quick Links closed with wrench.

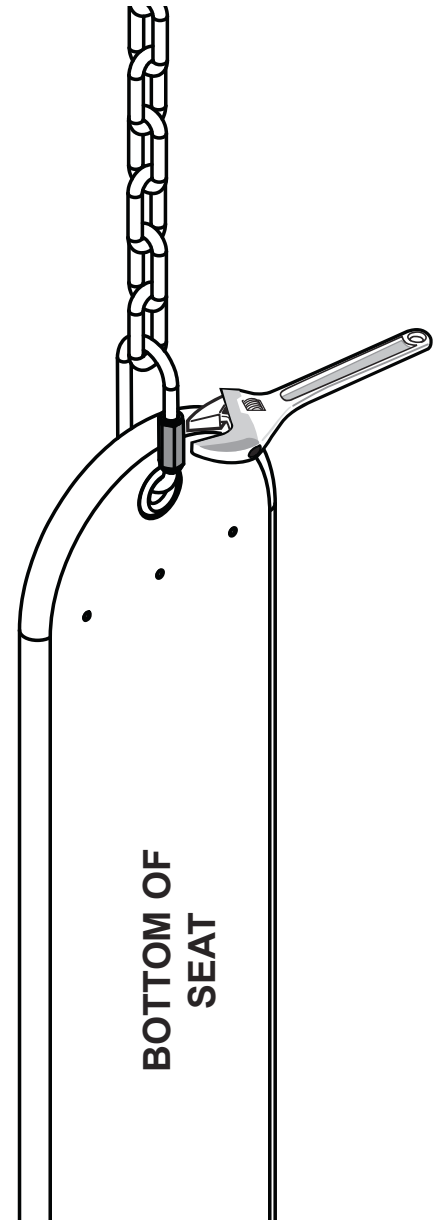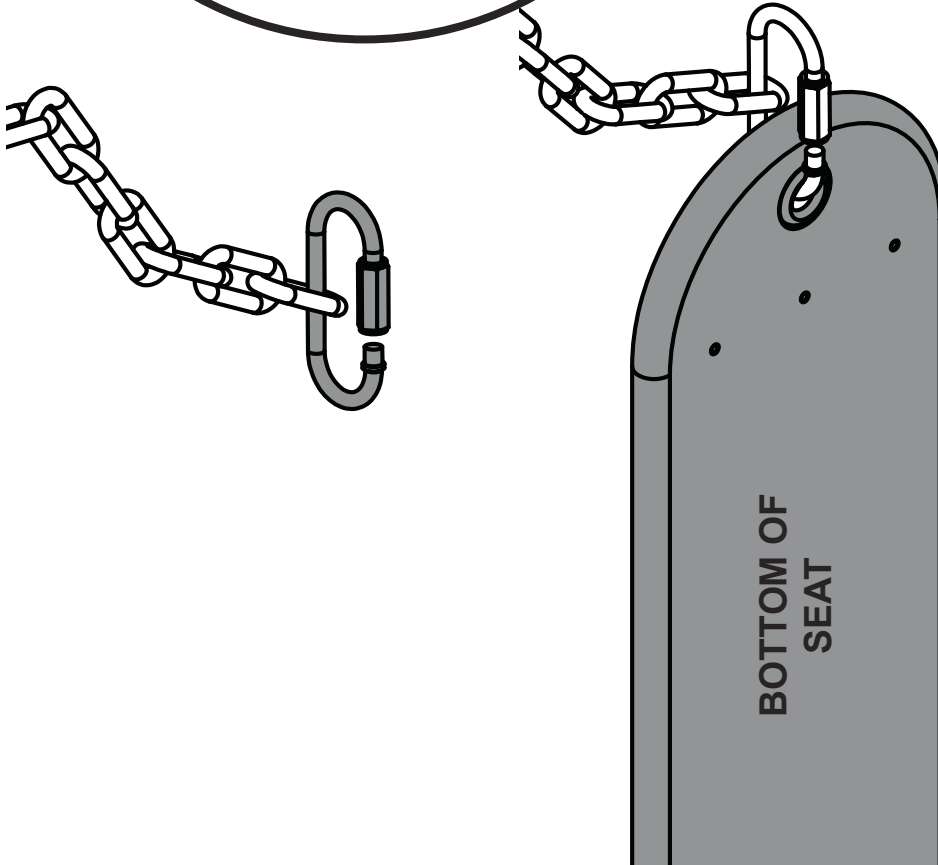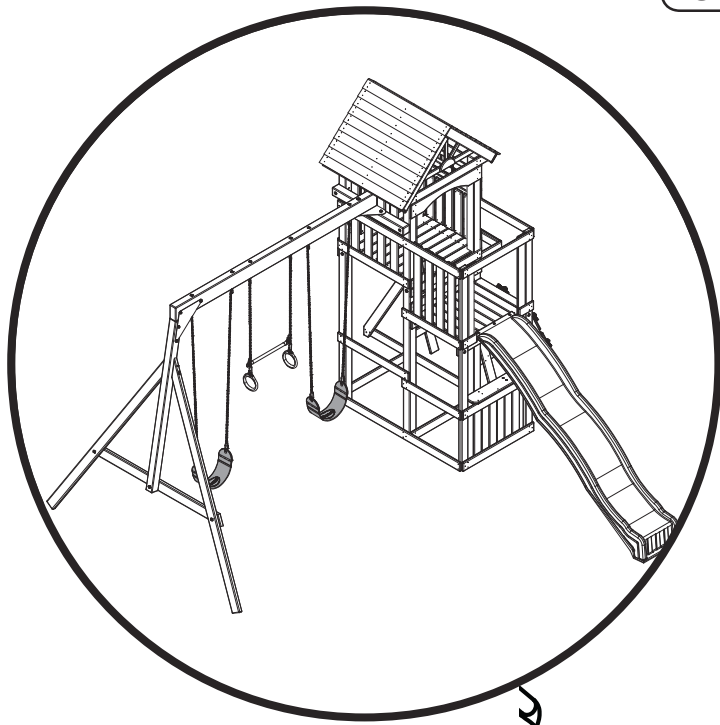

### Swing Seat Assembly



1. Take one length of chain and place the outermost link of chain through the Quick Link as shown.
2. Place the Quick Link through the Grommet of the swing seat as shown.
3. Tighten the threaded sleeve of the Quick Link with a suitably sized wrench so that the seat is securely attached and the Quick Link cannot be easily loosened. Repeat for second chain, Quick Link and Swing Seat Grommet.

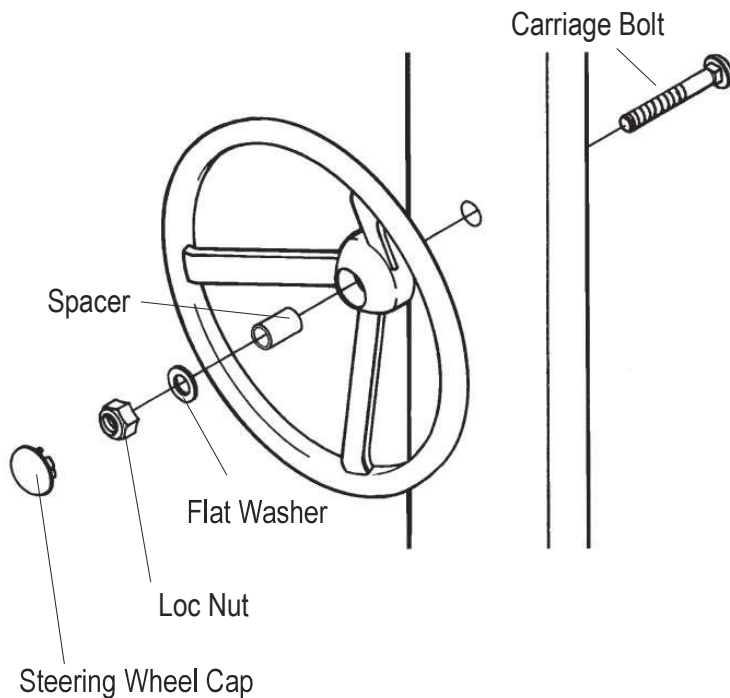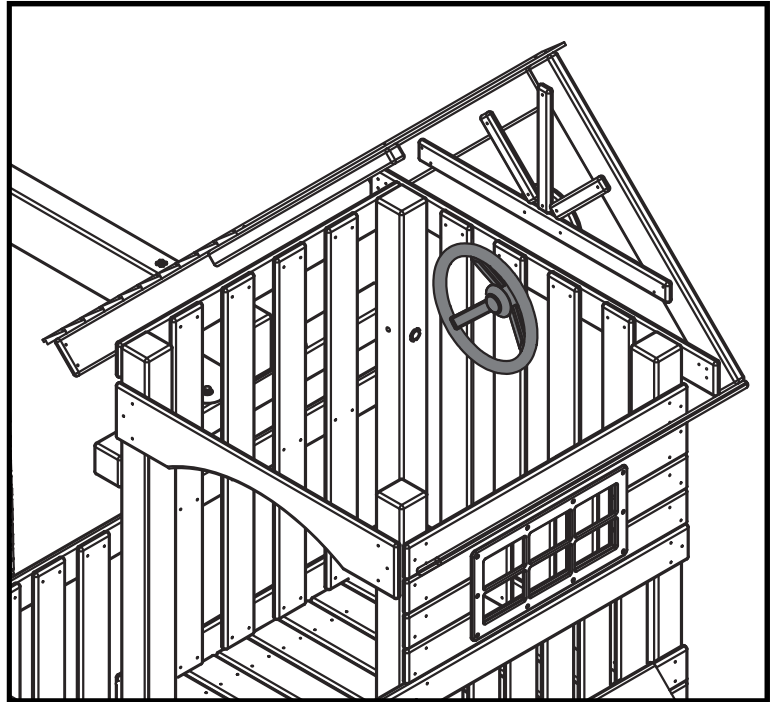

### Steering Wheel Assembly

1. Choose a desired location for the Steering Wheel and drill a 5/16" diameter hole through the lumber.  
**NOTE:** If lumber is greater than 2" in depth, you will need to counterbore the hole appropriately.
2. Mount Steering Wheel to climbing unit as indicated.
3. Snap Steering Wheel cap into place.


### STEP 43

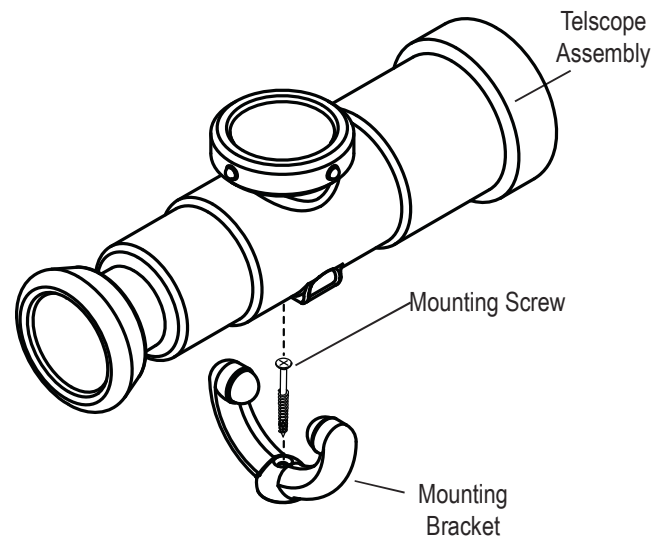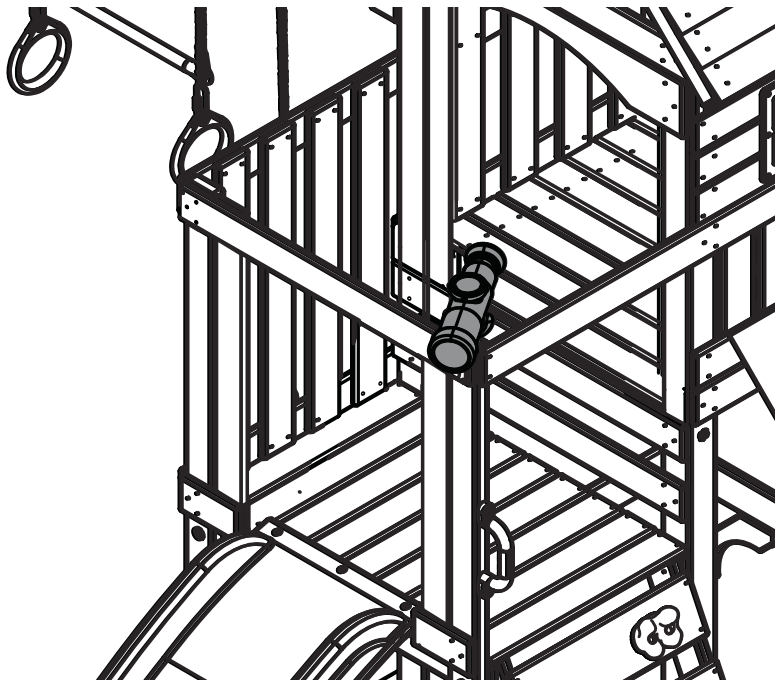

#### Telescope Assembly

1. Position Mounting Bracket in desired location.
2. Attach Mounting Bracket to the unit using the Mounting Screw provided.
3. Insert the Telescope into the Mounting Bracket as shown.

### STEP 44




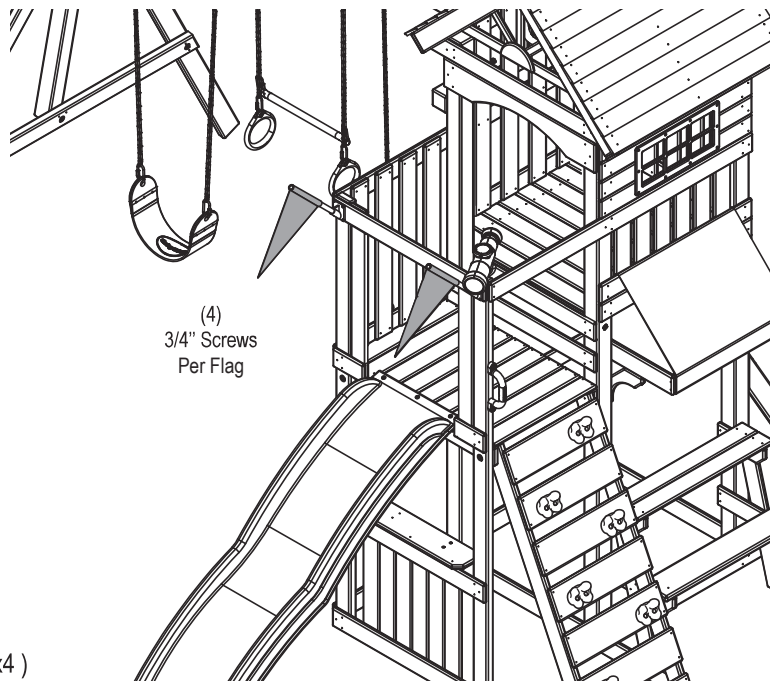


3/4" Flat Head Screw (x4)

#### Flag Assembly

1. Secure Flags as shown.

#### STEP 45

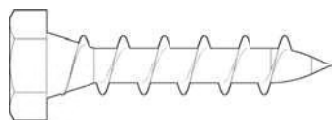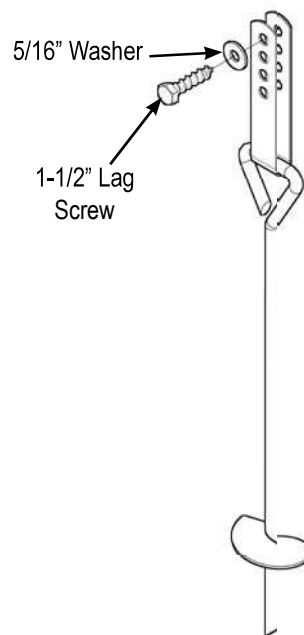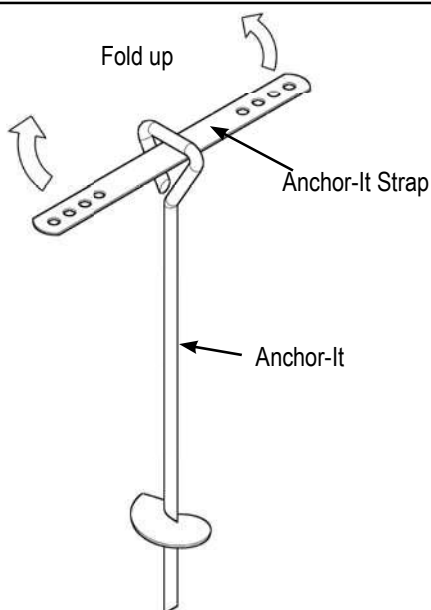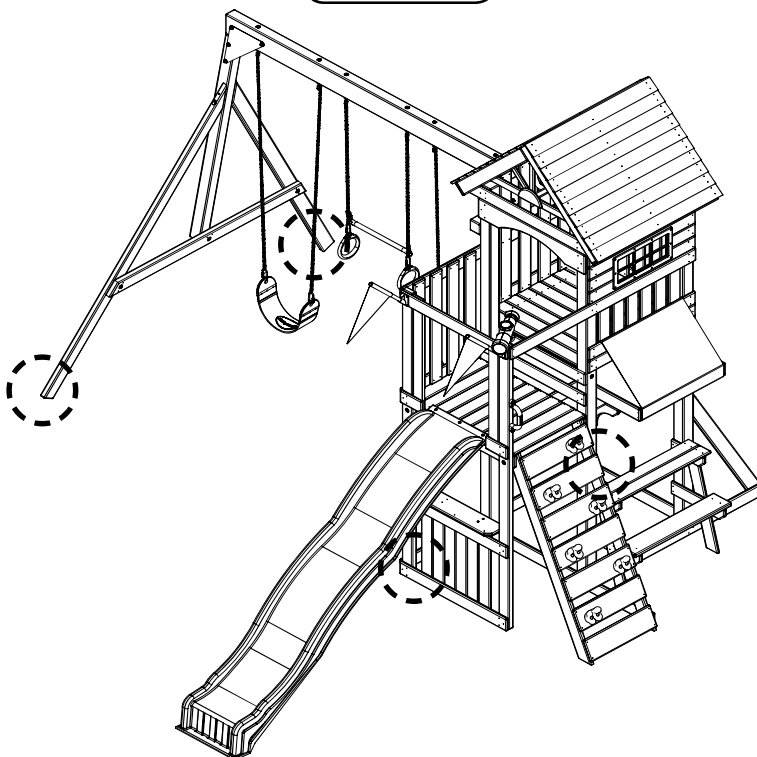

5/16" x 1-1/2" Lag Screw (x4)

1. Place swing set in final location and mount Anchor-It(s) at locations circled above.
2. Twist the Anchor-It into the ground until only the loop is exposed.
3. Place Anchor-It Strap thru loop, fold the ends together and attach to the unit as shown.

**Note: Keep as little play as possible using any of the holes in the strap that work best.**

**TIP:** When installing Anchor-Its in rocky or hard soil, create a starter hole at the desired locations using either a 16" Concrete Drill Bit, or a long screw driver then insert and install the Anchor-Its as shown. This will allow you to get traction with the Anchor-It faster and allow the device to seat more securely.





# Warranty and Registration

LA 9081

LDR 10-17-2016

## Swing-N-Slide® MANUFACTURERS LIMITED WARRANTY

**Swing-N-Slide®** takes great pride in the quality and durability of our products. Our Manufacturer's Limited Warranty provides confidence and demonstrates our commitment to providing quality residential playground products.

### MANUFACTURER'S LIFETIME LIMITED WARRANTY

**Swing-N-Slide®** warrants its thermoformed slides and climbing mountains to be free from defects in workmanship and materials, under normal use and conditions, for the lifetime of the product.

### MANUFACTURER'S 5 YEAR LIMITED WARRANTY

**Swing-N-Slide®** warrants its Custom Ready-to-Build Play Set kits to be free from defects in workmanship and materials, under normal use and conditions, for a period of 5 years.

### MANUFACTURER'S 5 YEAR LIMITED WARRANTY

**Swing-N-Slide®** warrants its No-Cut and Wood Complete Ready-to-Assemble Play Set kits against wood rot and termite damage, and to be free from defects in workmanship and materials, under normal use and conditions, for a period of 5 years for structural wood components.

**Cosmetic defects** that do not affect the structural integrity of the product, or natural defects of wood such as warping, splitting, checking, twisting, shrinkage, swelling or any other physical properties of wood that do not present a safety hazard, are not covered by this warranty.

### MANUFACTURER'S ACCESSORY, PLAYHOUSE WARRANTY

**Swing-N-Slide®** warrants its playset accessories and accessories sold separately as follows: Rope, Canopy/Tarps, Playhouses – 1 year. Plastic Components, Chains, Hardware and Fasteners – 5 years. These items to be free from defects in workmanship and materials, under normal use and conditions, for the period specified.

**Swing-N-Slide®** will repair, or at its discretion, replace any part within the stated warranty period which is defective in workmanship or materials. This decision is subject to verification of the defect upon delivery of the defective part to **Swing-N-Slide®** at 1212 Barberry Drive, Janesville, Wisconsin, 53545. Any part(s) returned to **Swing-N-Slide®** must have prior approved Return Authorization Number and proof of purchase, including the date of purchase. This warranty is valid only if the product is used for the purpose for which it was designed and installed at a residential, single family dwelling. This warranty is void if the product is put to commercial or institutional use. This warranty does not cover (a) products which have been damaged by acts of Nature, negligence, misuse, or accident, or which have been modified or repaired by unauthorized persons; (b) the cost of labor; or the cost of shipping the product, any part, or any replacement product or part.

**Swing-N-Slide®** DISCLAIMS ALL OTHER REPRESENTATIONS AND WARRANTIES OF ANY KIND, EXPRESS, IMPLIED, STATUTORY OR OTHERWISE, INCLUDING THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE. **Swing-N-Slide®** WILL NOT BE LIABLE FOR ANY INCIDENTAL OR CONSEQUENTIAL DAMAGES. This warranty is non-transferable and does not extend to the owners of the product subsequent to the original purchaser. Some states do not allow limitations on implied warranties or exclusion of incidental or consequential damages, so these restrictions may not be applicable to you. This warranty gives you specific legal rights. You may also have other rights, which vary from state to state.

### This warranty also does not apply to:

- Structures not erected, maintained or inspected in conformance with **Swing-N-Slide®** installation plans
- Structures that have had parts added or substituted not in conformance with **Swing-N-Slide®** installation plans
- Parts that have been modified, altered or misused
- Parts that have not been used as designed or intended
- Damage due to acts of Nature, vandalism, abnormal use or abuse as determined by **Swing-N-Slide®**





---

## **PRODUCT WARRANTY & REGISTRATION**

Please register online to properly *initiate* your product warranty & registration

### **Benefits of registering online:**

- Quick & simple from home or mobile
- Record your purchase in our system
  - Initiate product warranty
  - Improved customer support
- Notification of new product information

Register your product online at  
**[www.OnlineWarranty.net](http://www.OnlineWarranty.net)**



WE PUT *Kids* FIRST!

Got Questions? We've got answers!  
Call our Customer Support Representatives

**1-800-888-1232**

**Available Monday - Friday, 7am - 5pm (CST)**

Weekend support available April through July

**Technical support from experienced customer service  
representatives who have actually built a swing set themselves.**