 
 
 

 
 
 
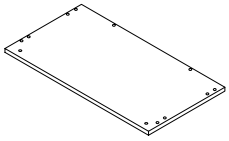 
 
 
 
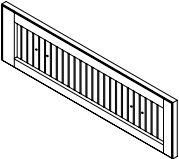 
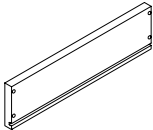 
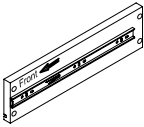 
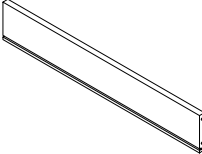 
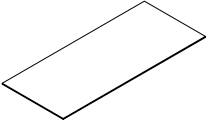 
 
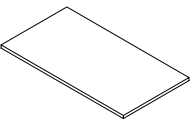 
 

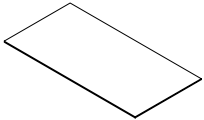 


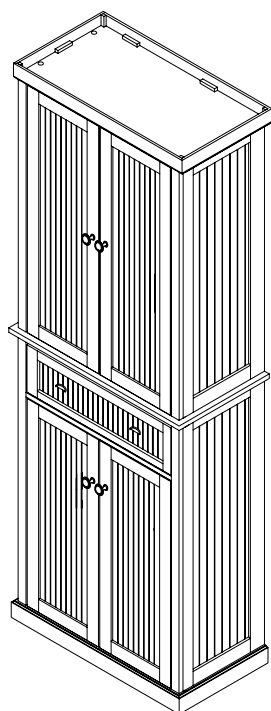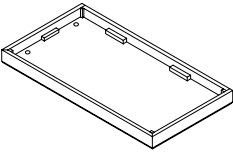


 
 
 

 
 
 

 

 
 

 

Kitchen Pantry CF3103

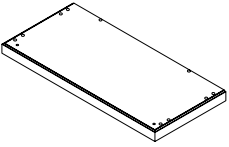

PART LIST

 
				
<p>Top Panel 1 PC</p>	<p>Bottom Panel 1 PC</p>	<p>Upper Left Side Panel 1 PC</p>	<p>Upper Right Side Panel 1PC</p>	<p>Lower Left Side Panel 1 PC</p>
				
<p>Lower Right Side Panel 1 PC</p>	<p>Middle Shelf 1 PC</p>	<p>Upper Door 2 PCS</p>	<p>Lower Left Door 1 PC</p>	<p>Lower Right Door 1 PC</p>
				
<p>Drawer Front Panel 1 PC</p>	<p>Drawer Left Side Panel 1 PC</p>	<p>Drawer Right Side Panel 1 PC</p>	<p>Drawer Back Panel 1 PC</p>	<p>Drawer Bottom Panel 1 PC</p>
				
<p>Front Rail 1 PC</p>	<p>Adjustable Shelf 4 PCS</p>	<p>Back Rail 4 PCS</p>	<p>Back Partition Rail 2 PCS</p>	<p>Back Panel 4 PCS</p>

HARDWARE LIST

 
#1  Ø1/4"*1-3/4" Long Hex Socket Head Bolt 13 PCS(Extra 1)	#2  Ø1/4"*1" Short Hex Socket Head Bolt 5 PCS(Extra 1)	#3  Ø4mm*7/8" Long Flat Head Screw 9 PCS(Extra 1)	#4  Ø3mm*1/2" Screw 33 PCS(Extra 1)	#5  Ø4.5mm*3/8" Handle Bolt 5 PCS(Extra 1)
#6  Ø4.5mm*7/8" Knob Bolt 5 PCS(Extra 1)	#7  Ø8mm*1-1/8" Wood Dowel 17 PCS(Extra 1)	#8  Ø8mm*2" Long Wood Dowel 7 PCS(Extra 1)	#9  Ø1/4"*11mm Spring Washer 17 PCS(Extra 1)	#10  Ø1/4"*13mm Flat Washer 17 PCS(Extra 1)
#11  Knob 4 PCS	#12  Handle 2 PCS	#13  Magnet 4 PCS	#14  Shelf Holder 17 PCS(Extra 1)	#15  4mm Allen Wrench 1 PC
#16  Safety Strap Kit 1 PC				

ADDITIONAL TOOLS(Not Provided)

Note:It is not recommended to use power tools during assembly.

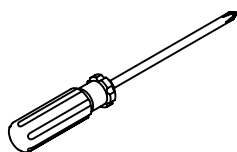


Please do not use tools to assemble this unit unless specifically indicated.

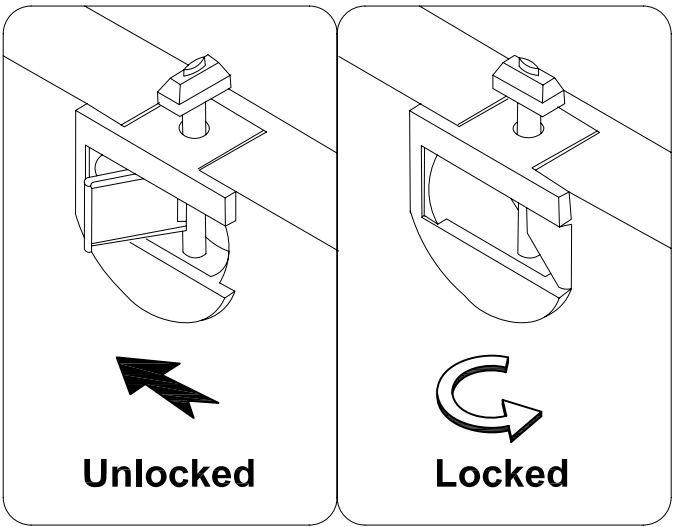



Reference the images above any time the instructions state "lock the hardware".
Note: Be sure to check all hardware is locked when completed.

Step 1. Attach magnets (part #13) to top panel (part A), bottom panel (part B), middle shelf (part G) and front rail (part P) using screws (part #4) and Phillips head screwdriver.

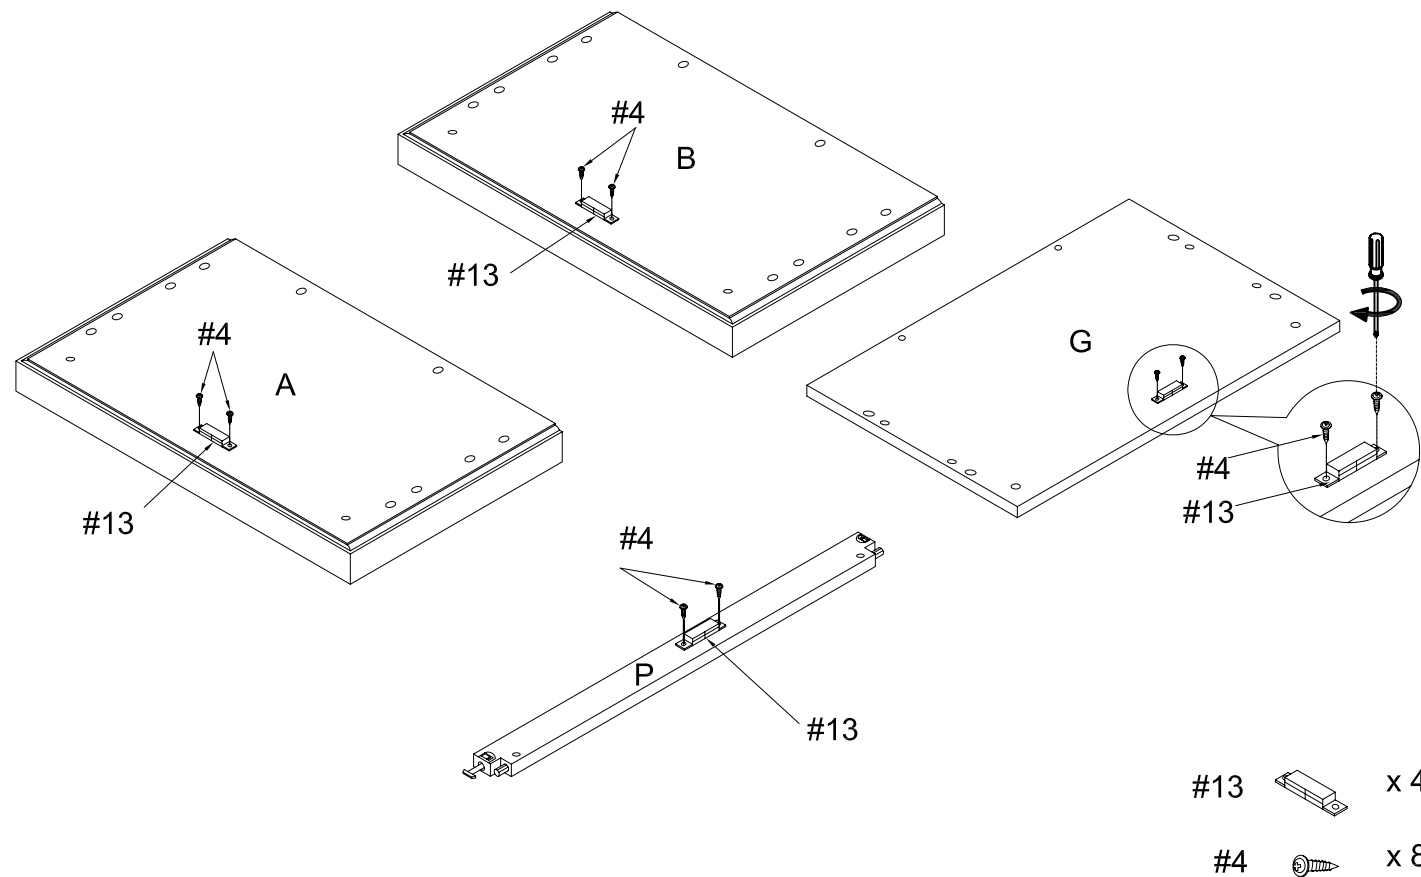


Step 2. Attach back rails (part R) to back partition rail (part S) using wood dowels (part #7), then slide back panels (part T) into grooves of part R & S as shown. Please repeat this step for another set of back panels.

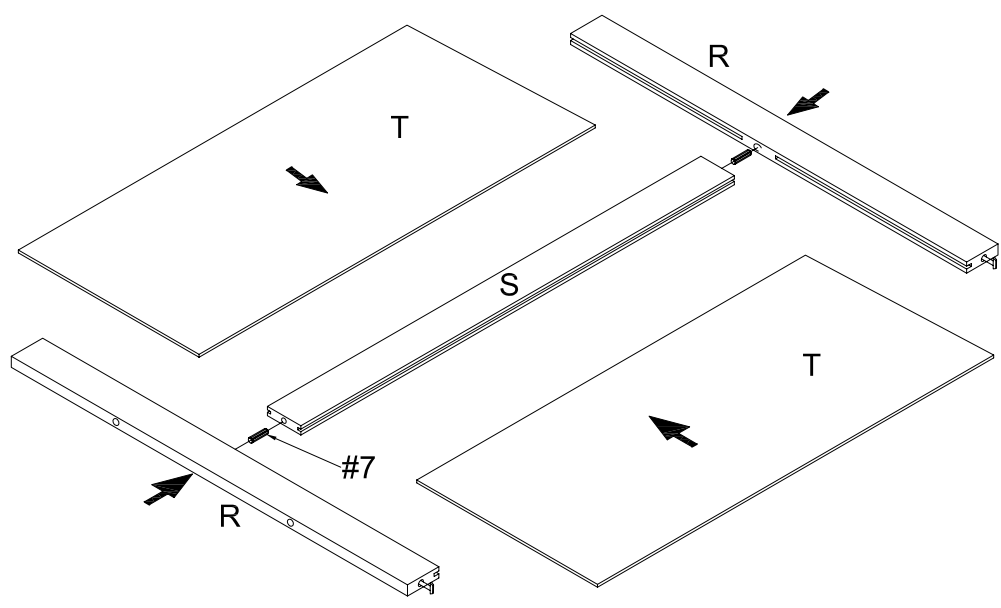


 


 

#7  x 4

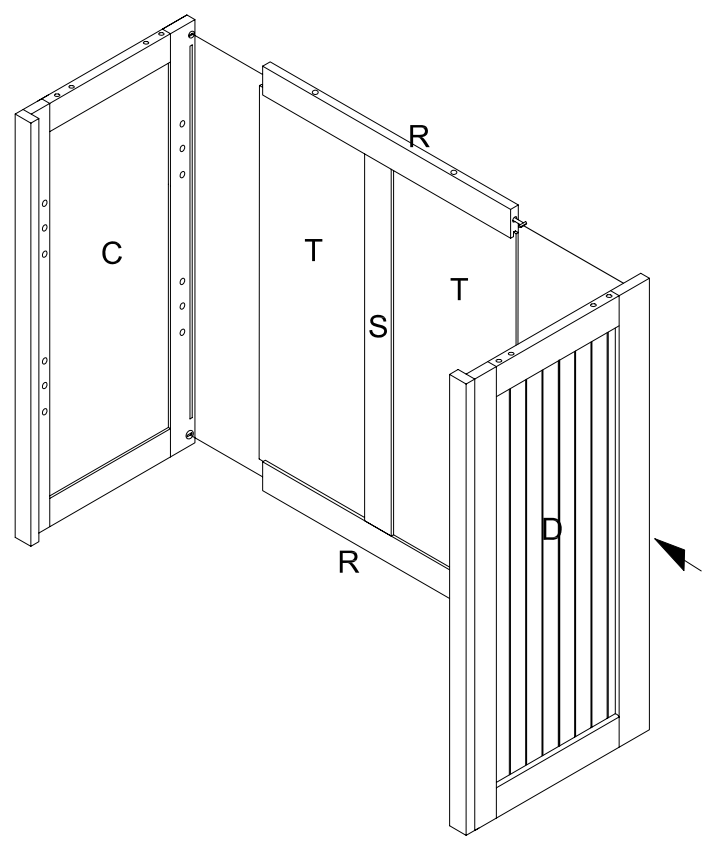Step 3. Attach upper left side panel (part C) and upper right side panel (part D) to back rail (part R) as shown and lock the hardware.

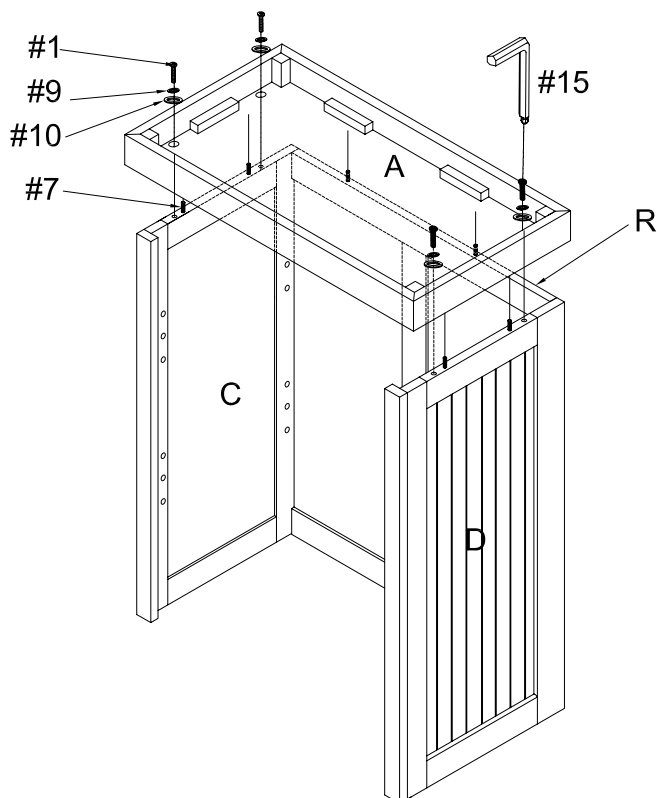


Step 4. Attach top panel (part A) to upper left side panel (part C), upper right side panel (part D) and back rail (part R) using wood dowels (part #7), long hex socket head bolts (part #1), spring washers (part #9), flat washers (part #10) and allen wrench (part #15).

 






#1		x 4
#9		x 4
#10		x 4
#7		x 6
#15		x 1

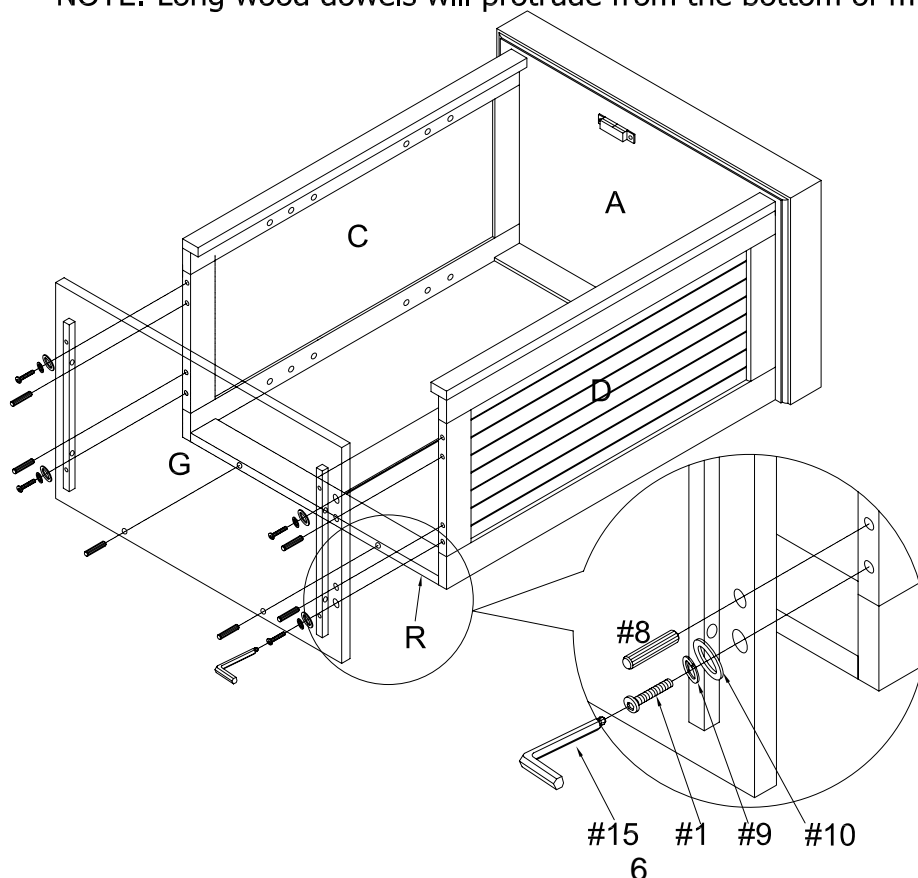
Step 5. Carefully lay down assembled unit (part A, C, D, R, S & T) on a soft surface such as carpet as shown. Attach middle shelf (part G) to upper left side panel (part C), upper right side panel (part D) and back rail (part R) using long wood dowels (part #8), long hex socket head bolts (part #1), spring washers (part #9), flat washers (part #10) and allen wrench (part #15).

NOTE: Long wood dowels will protrude from the bottom of middle shelf (part G).




 



 
#1		x 4
#9		x 4
#10		x 4
#8		x 6
#15		x 1

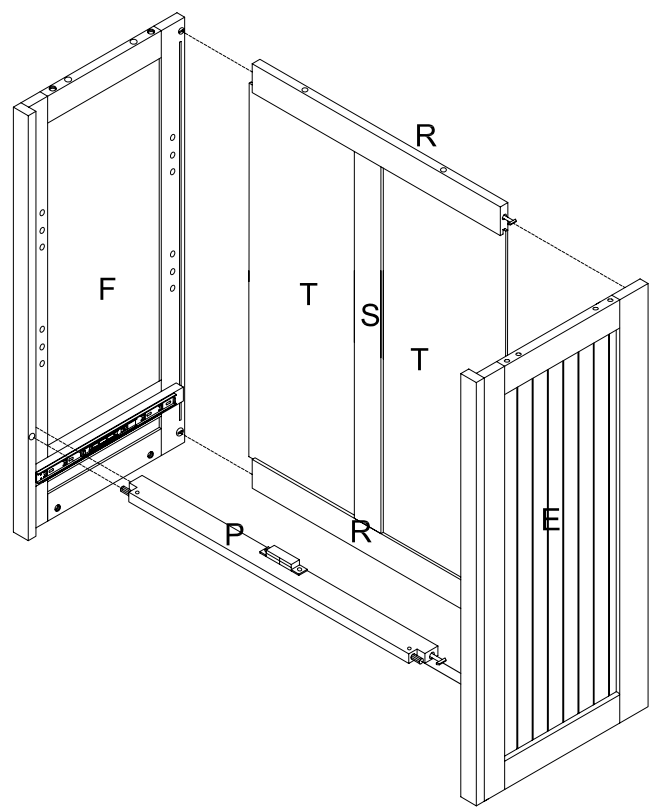Step 6. Attach lower left side panel (part E) and lower right side panel (part F) to back rails (part R) and front rail (part P) as shown and lock the hardware.




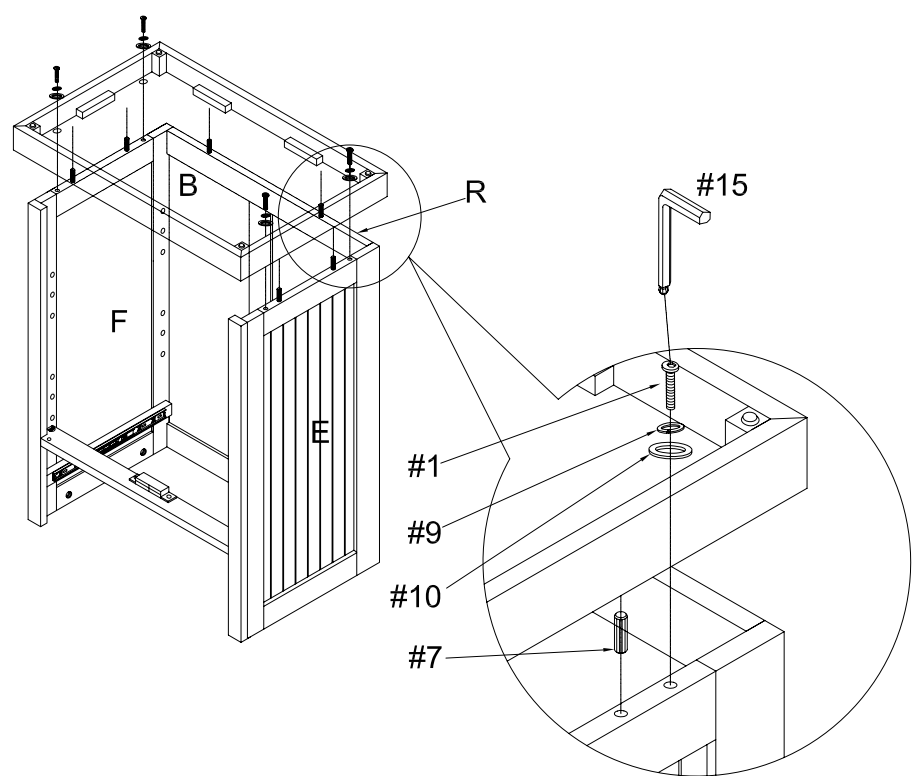 



Step 7. Attached bottom panel (part B) to lower left side panel (part E), lower right side panel (part F) and back rail (part R) using wood dowels (part #7) , long hex socket head bolts (part #1), spring washers (part #9), flat washers (part #10) and allen wrench (part #15). NOTE: Please fully tighten bolts at this time.



 
- | | | |
|-----|---|-----|
| #1 |  | x 4 |
| #9 |  | x 4 |
| #10 |  | x 4 |
| #7 |  | x 6 |
| #15 |  | x 1 |

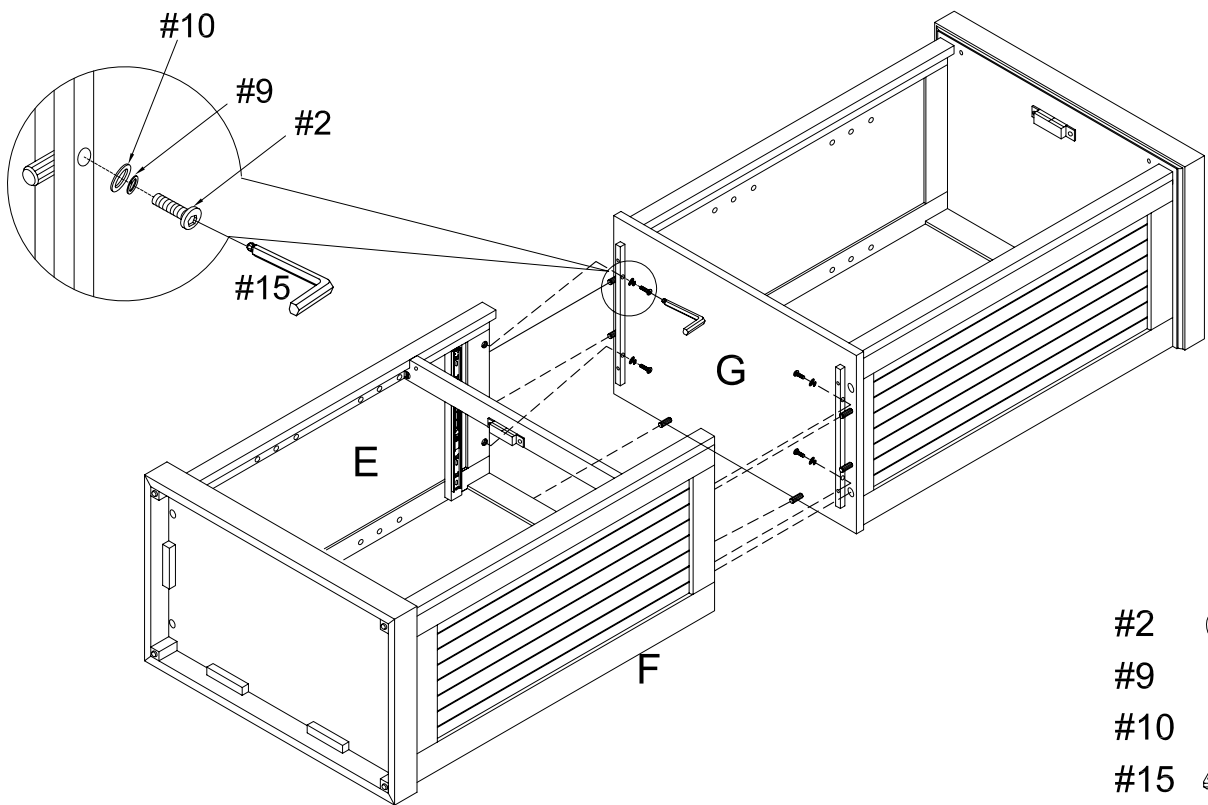Step 8. Carefully lay the assembled top and bottom cabinets as shown, and attach them together using short hex socket head bolts (part #2), spring washers (part #9), flat washers (part #10) and allen wrench (part #15).



 
- | | | |
|-----|---|-----|
| #2 |  | x 4 |
| #9 |  | x 4 |
| #10 |  | x 4 |
| #15 |  | x 1 |

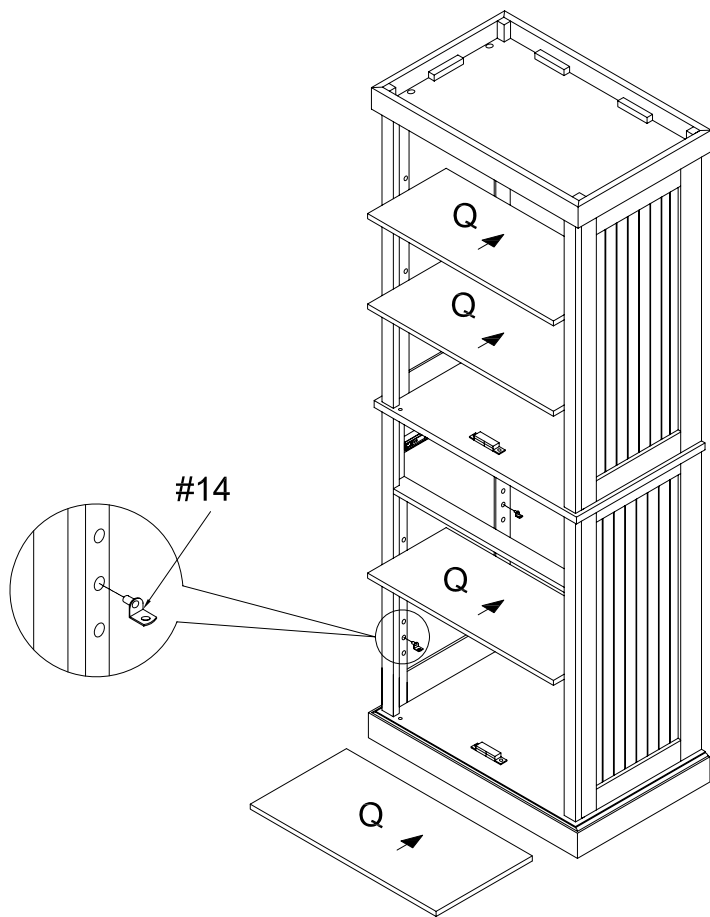

Step 9. Carefully turn the cabinet upright. Insert shelf holders (part #14) into desired position, and slide adjustable shelves (part Q) in place.



 
- | | | |
|-----|---|------|
| #14 |  | x 16 |
|-----|---|------|

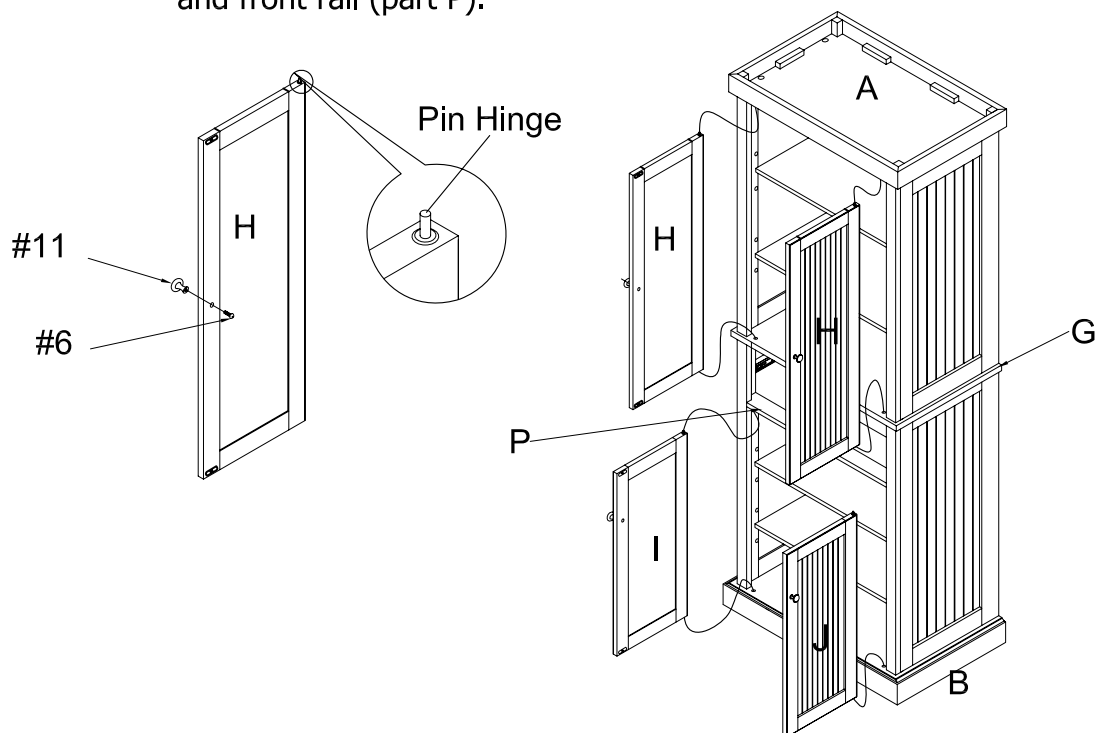Step 10. Attach knobs (part #11) to upper doors (parts H), lower left door (part I) and lower right door (part J) using knob blots (parts #6) & Phillips head screwdriver. Install doors (parts H, I & J) by placing bottom pin hinge (pre-installed in doors) into pre-drilled holes of middle shelf (part G) and bottom panel (part B), and then depressing the top spring-loaded pin hinge to it can be placed in pre-drilled holes of top panel part A) and front rail (part P).



 
#11  x 4
#6  x 4

Step 11. Fasten back rails (part R) and back partition rails (part S) to back panels (part T) using screws (part #4) and Phillips head screwdriver.

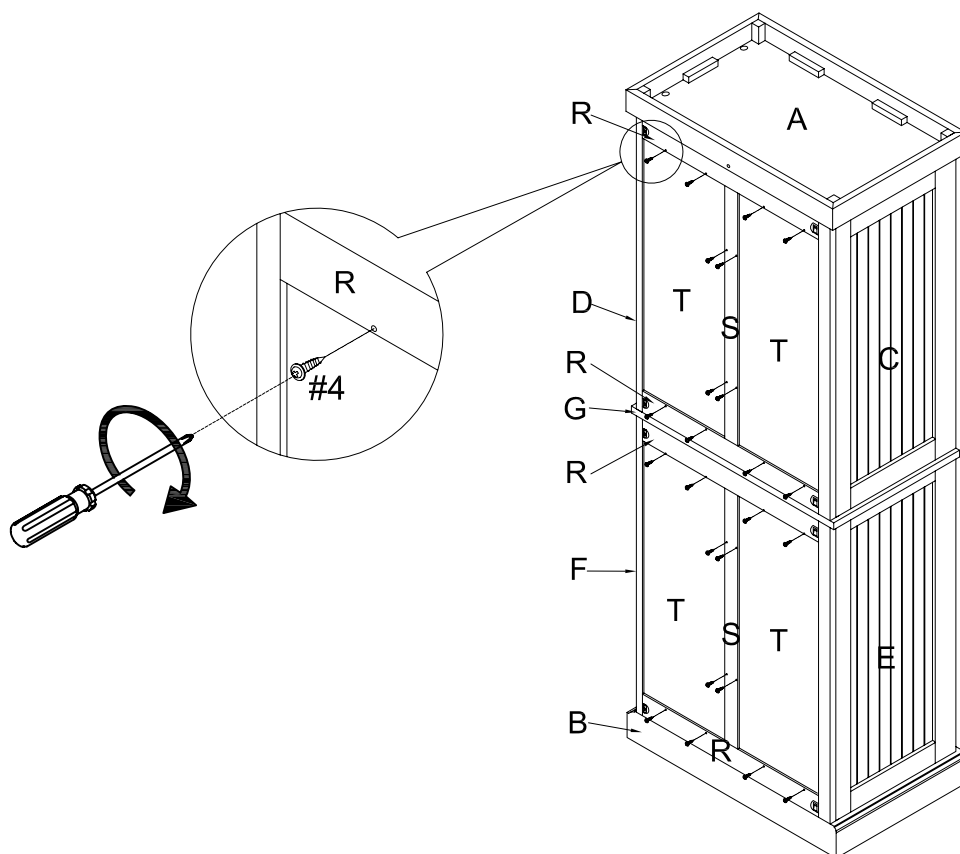 


#4  x 24

 
Step 12. Attach drawer left side panel (part L) and drawer right side panel (part M) using long flat head screws (part #3) and Phillips head screwdriver.
 Slide drawer bottom panel into grooves of assembled unit (part L, M & N).

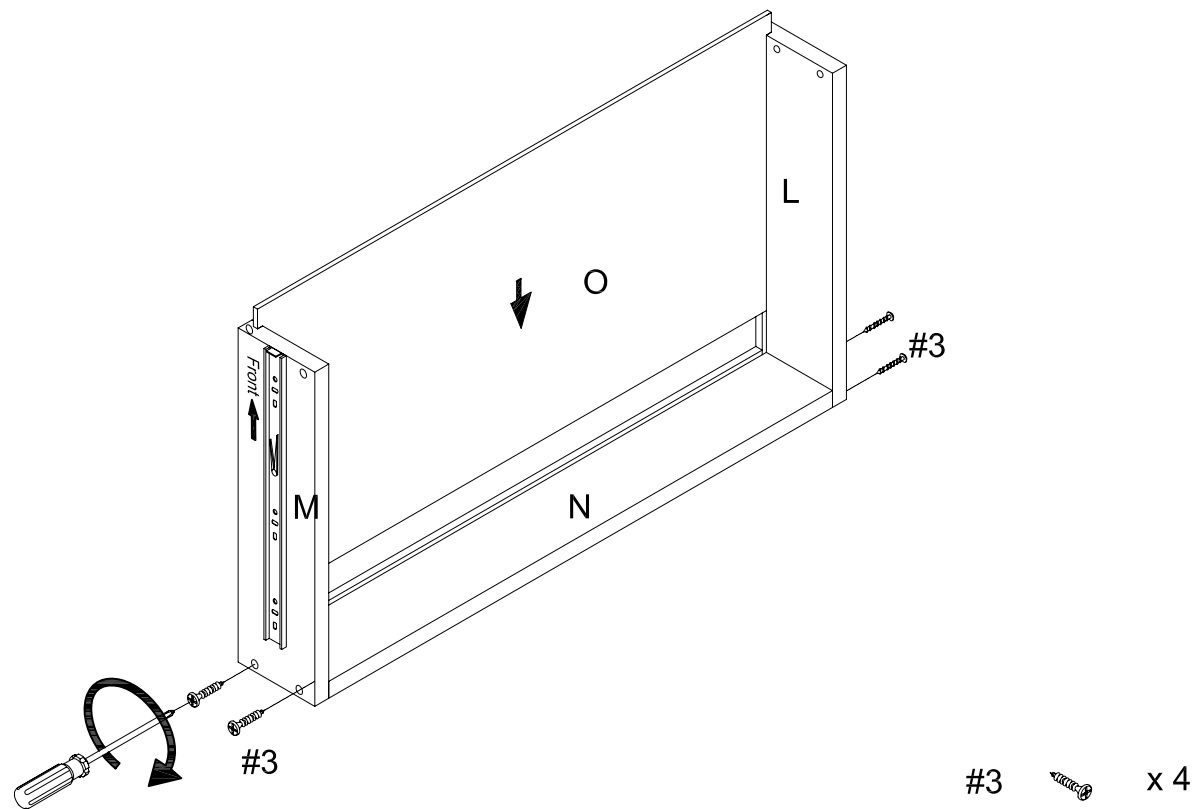

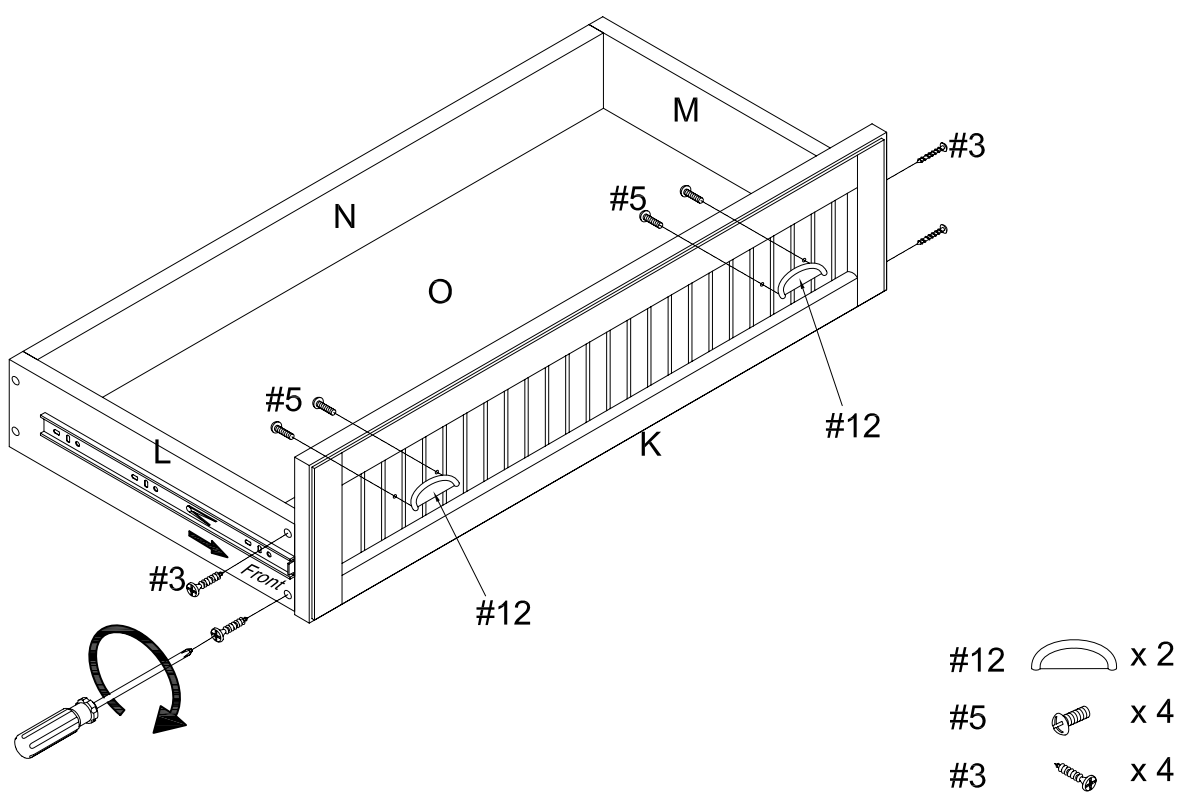


 


Step 13. Attach drawer front panel (part K) to drawer left side panel (part L) and drawer right side panel (part M) using long flat head screws (part #3)) and Phillips head screwdriver as shown.
 Attach handles (part #12) to drawer front (part K) using handle bolts (part #5) and Phillips head screwdriver.

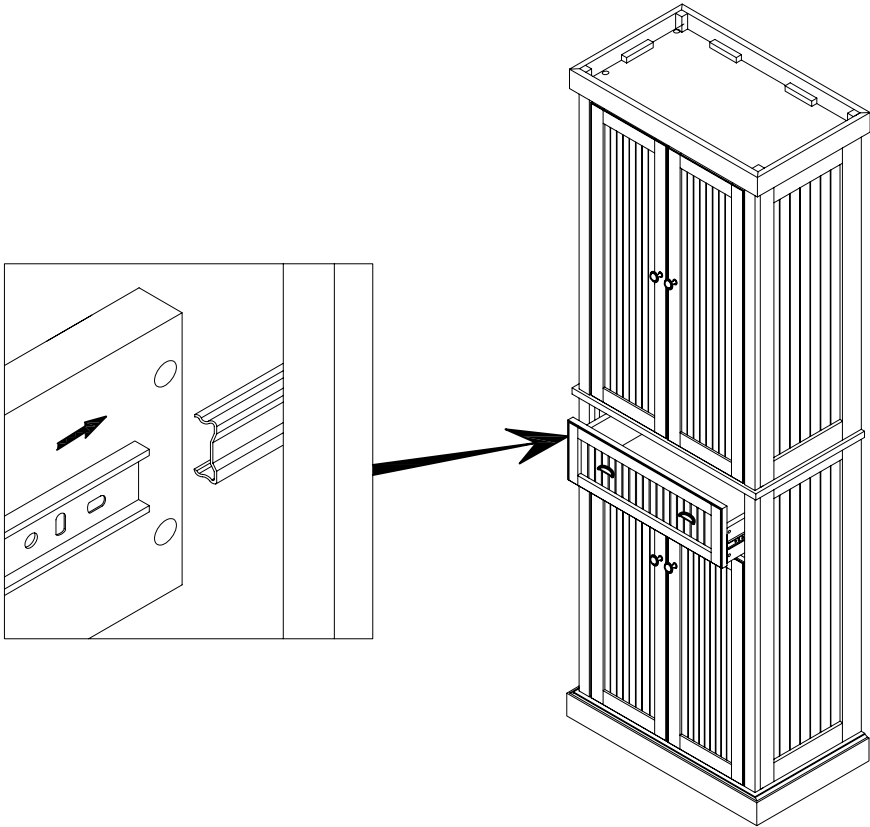

Step 14. Slide drawer into place.

 


#16	A	B	C	D	E
					
Safety Strap Kit	Wall Anchor	Washer	Short Screw	Long Screw	Safety Wall Strap
1 PC	1 PC	2 PCS	1 PC	1 PC	1 PC

SAFETY STRAP WALL ASSEMBLY INSTRUCTION

- 1.) Insert short screw (part C) through washer (part B) and safety wall strap (part E), and attach to top panel of (part A) using Phillips head screwdriver.
- 2.) Drill a 11/32"(6mm) hole where you want to secure the unit . The drilled hole will be at the same height as the hole in top panel (part A) where the safety strap is attached. Tap wall anchor (part A) into the hole.
- 3.) Insert long screw (part D) through washer (part B) and wall safety strap into wall anchor (part A) using a Phillips head screwdriver.

Note: This item is not intended for clothing storage use.

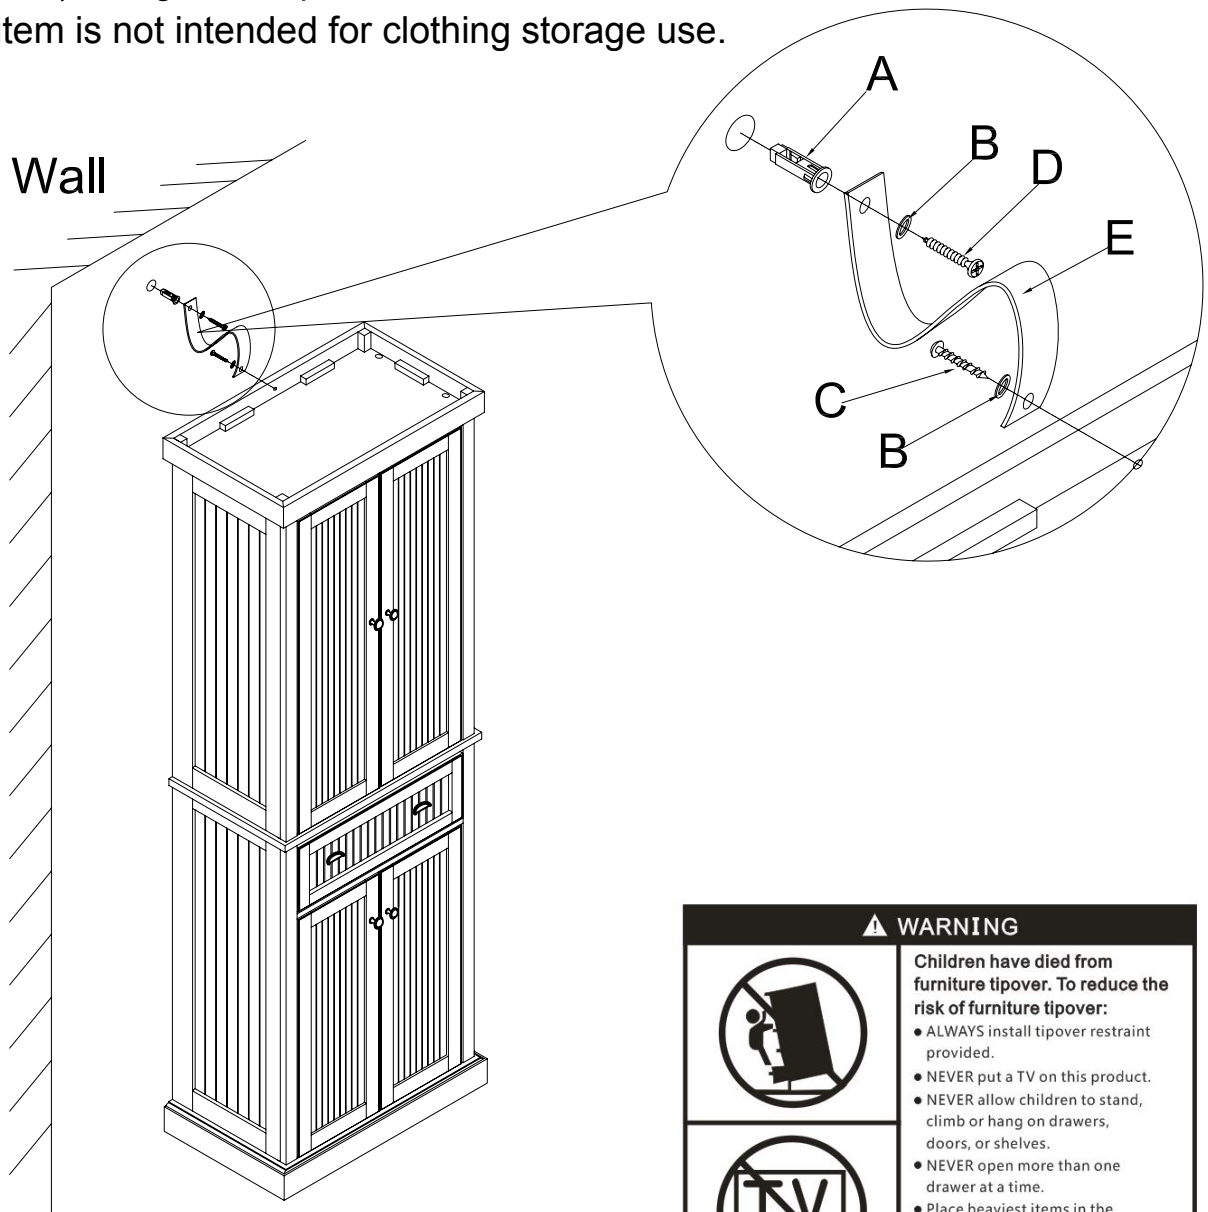

⚠ WARNING



Children have died from furniture tipover. To reduce the risk of furniture tipover:

- ALWAYS install tipover restraint provided.
- NEVER put a TV on this product.
- NEVER allow children to stand, climb or hang on drawers, doors, or shelves.
- NEVER open more than one drawer at a time.
- Place heaviest items in the lowest drawers.



*This is a permanent label.
Do not remove!*