

ASSEMBLY INSTRUCTIONS COASTER FINE FURNITURE



Fine Furniture for every stage of life

701024
TV CONSOLE

ITEM:701024



ASSEMBLY INSTRUCTIONS


ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



WARNING!

1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.

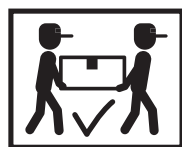


ASSEMBLY TIME

40 MINUTES

MAX TV SIZE: 65"


PARTS IDENTIFICATION

 A LEFT SIDE
PANEL

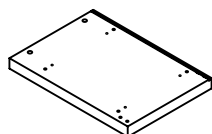

1 PC

 B RIGHT SIDE
PANEL

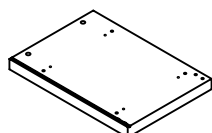


1 PC

C LEFT DIVIDE
PANEL




1 PC

 D RIGHT DIVIDE
PANEL




1 PC

 E BOTTOM PANEL

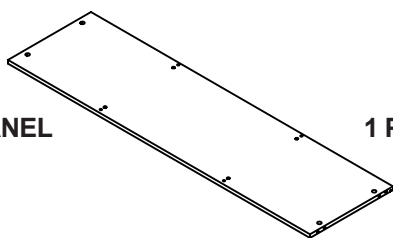


1 PC

 F CROSS BRACE

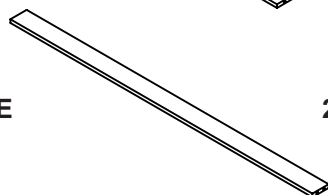


2 PCS

 G CROSS PANEL

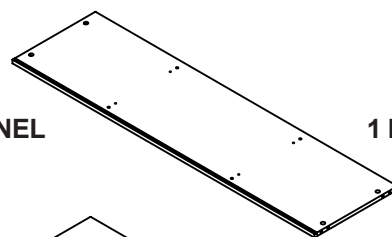


1 PC

 H TOP PANEL

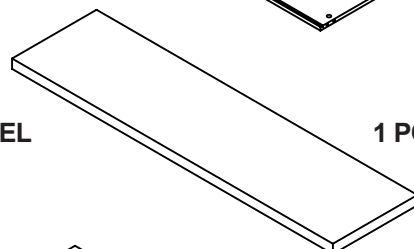


1 PC

 I UPPER BACK
PANEL

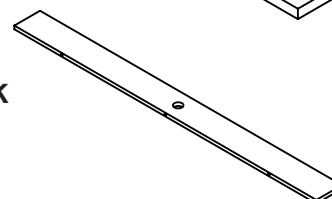


1 PC

 J DOWN BACK
PANEL

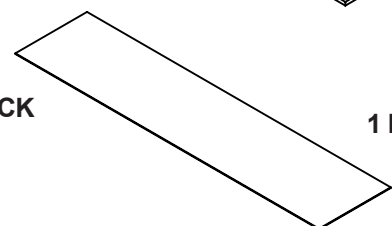


1 PC

 K DRAWER
FRONT PANEL



2 PCS

 L DRAWER BACK
PANEL




2 PCS

NOTE:

Phillips head screw driver is required in the assembly process; however, manufacturer does not provide this item.

ITEM:701024

 

 

 








M LEFT DRAWER SIDE PANEL  2 PCS

O DRAWER BOTTOM PANEL  2 PCS

N RIGHT DRAWER SIDE PANEL  2 PCS

Z

 HARDWARE IDENTIFICATION

NO	DESCRIPTION	FIGURE	Q'TY	NO	DESCRIPTION	FIGURE	Q'TY
1	GLUE 40g		1 PC	8	GLIDES L = 350mm		2 SET
2	WOODEN DOWEL Ø 8x30mm		42 PCS	9	GLIDES SCREW Ø 3x12mm		24 PCS
3	CAM BOLT Ø 7x35.5mm		20 PCS	10	HANDLE		2 PCS
4	CAM LOCK Ø15x12mm		20 PCS	11	HANDLE BOLT M5x25mm		4 PCS
5	SCREW Ø 4.5x42mm		4 PCS	12	NUT M5		4 PCS
6	DRAWER SCREW Ø 4.3x35mm		8 PCS	13	STICKER Ø 20mm		4 PCS
7	PLASTIC FEET Ø 15mm		6 PCS				

Z8,Z10,Z11,Z12 not included in blister packaging.

 
 
 
 
 
NOTE:

Phillips head screw driver is required in the assembly process; however, manufacturer does not provide this item.


ITEM: 701024

STEP 1

COASTER
FINE FURNITURE

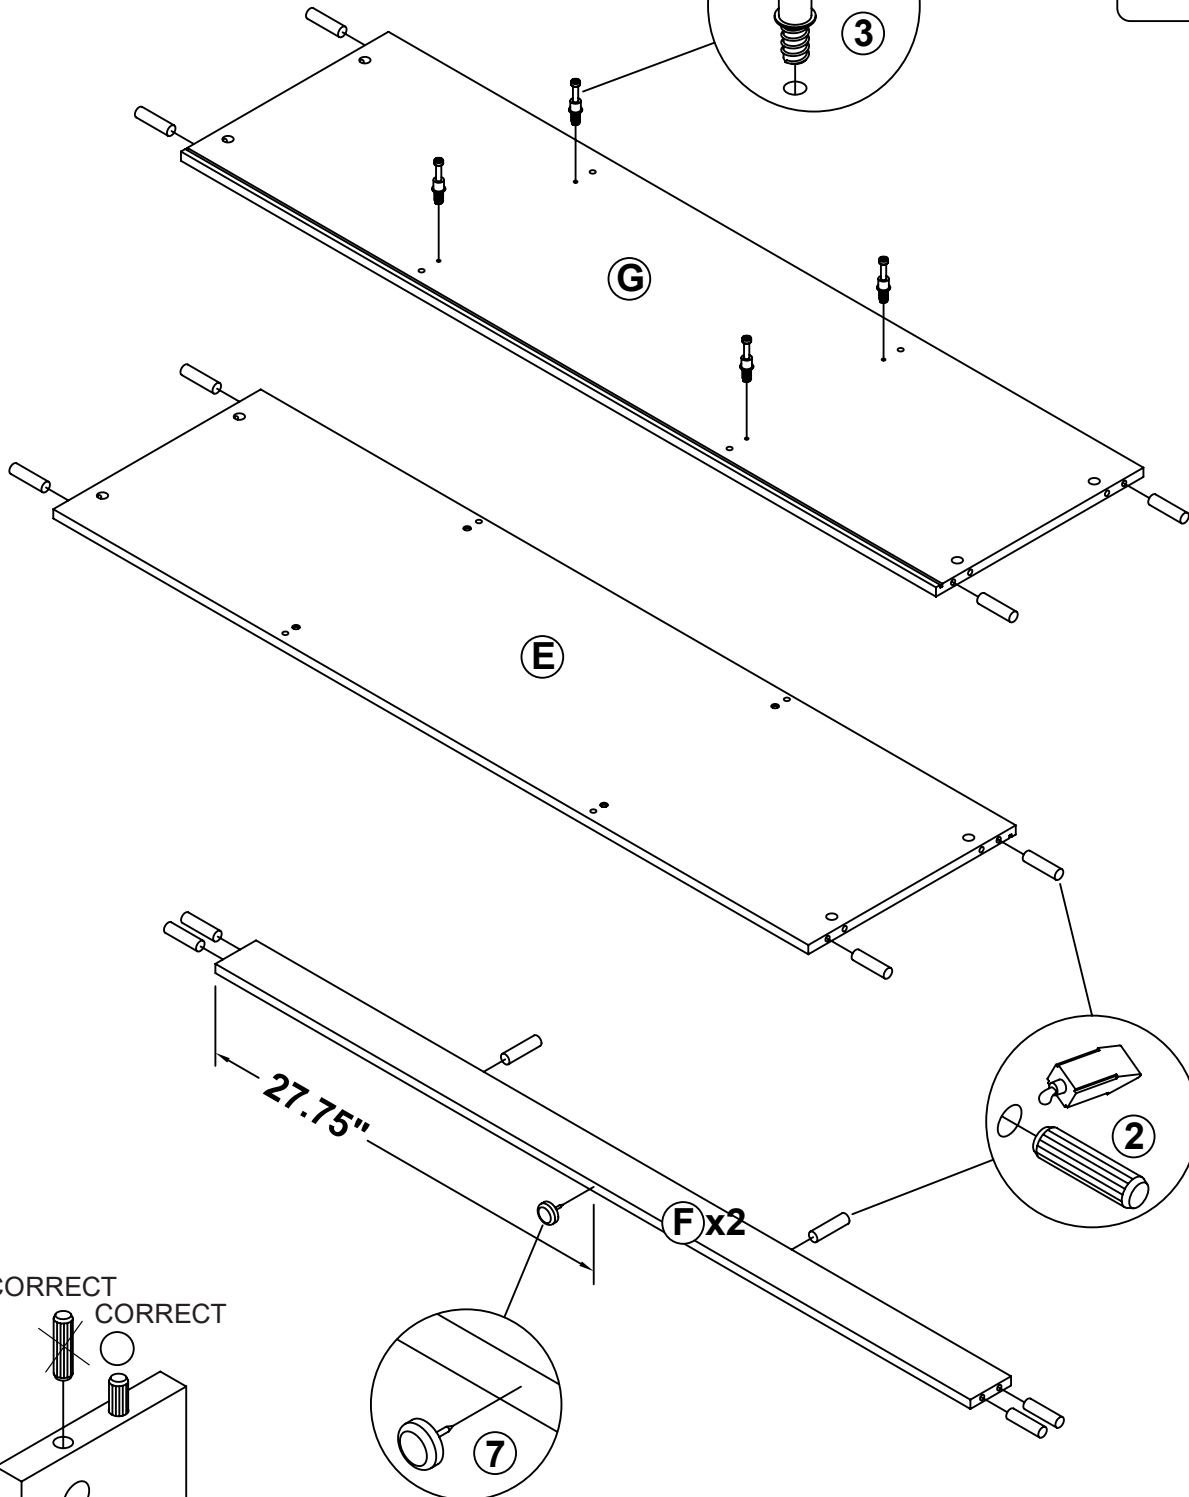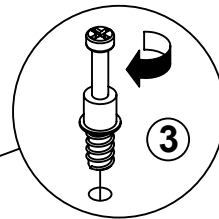

INCORRECT
CORRECT

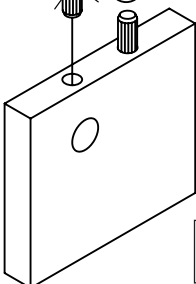 



Apply glue on all wooden dowels to ensure integrity of the structure.

ITEM: 701024



COASTER
FINE FURNITURE

STEP 2

  Apply glue on all wooden dowels to ensure integrity of the structure.

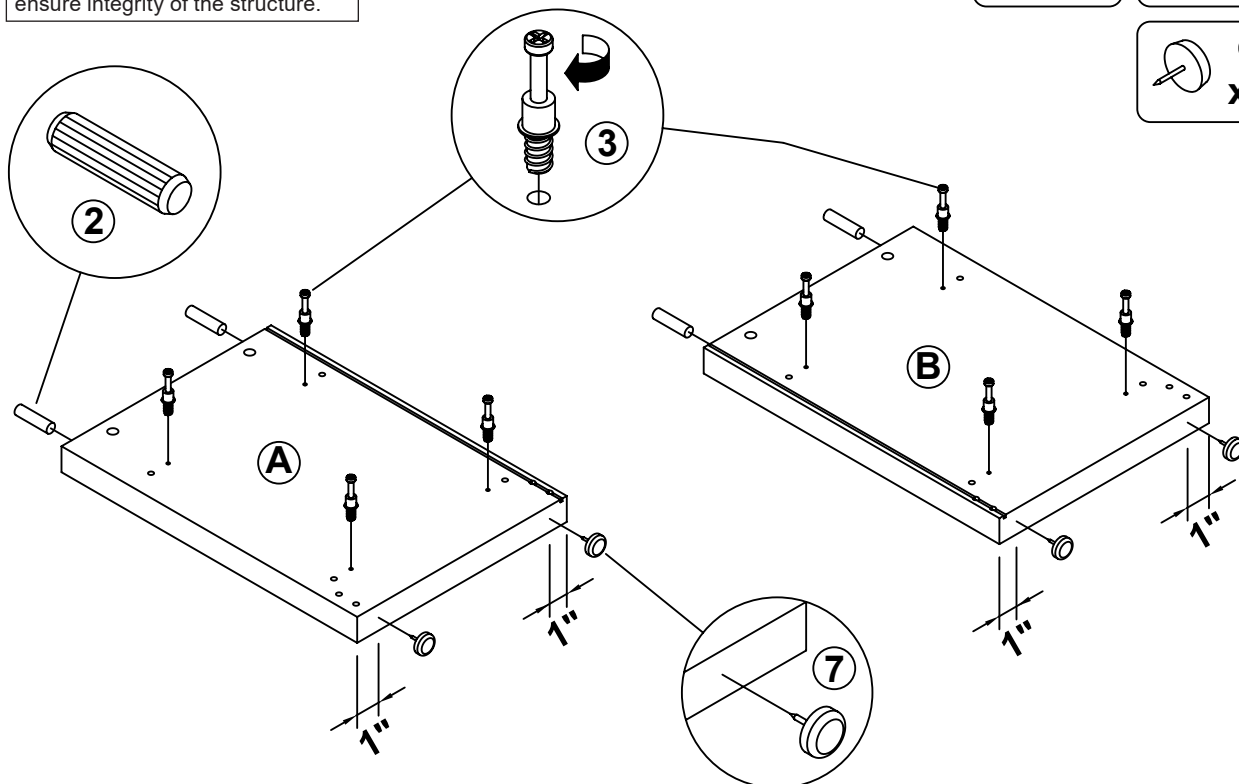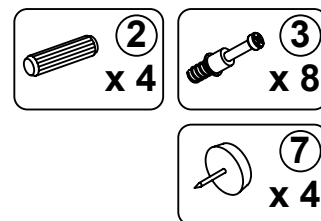

  STEP 3

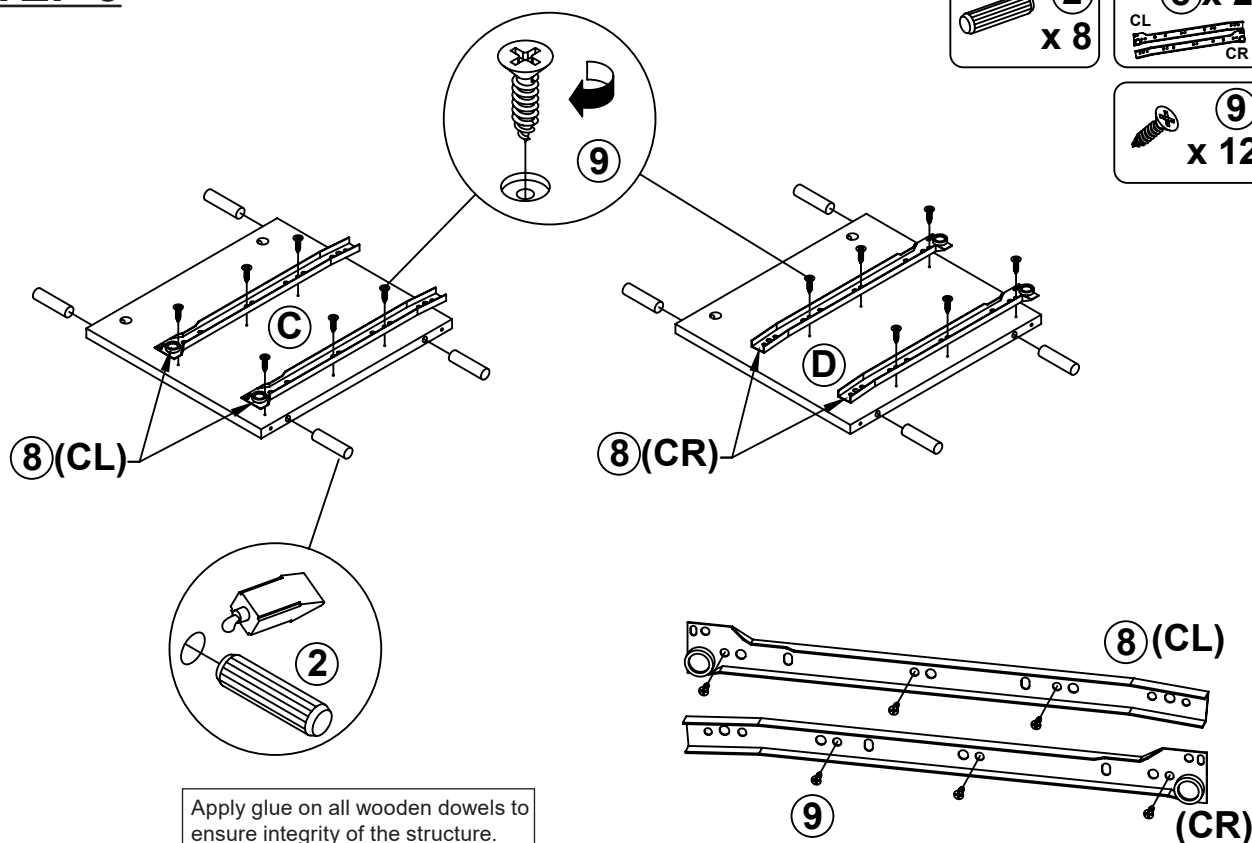
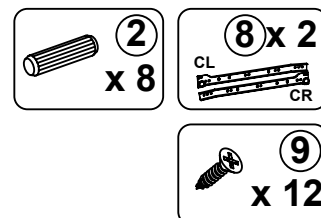


Apply glue on all wooden dowels to ensure integrity of the structure.


ITEM: 701024

STEP 4

 
 
COASTER
FINE FURNITURE

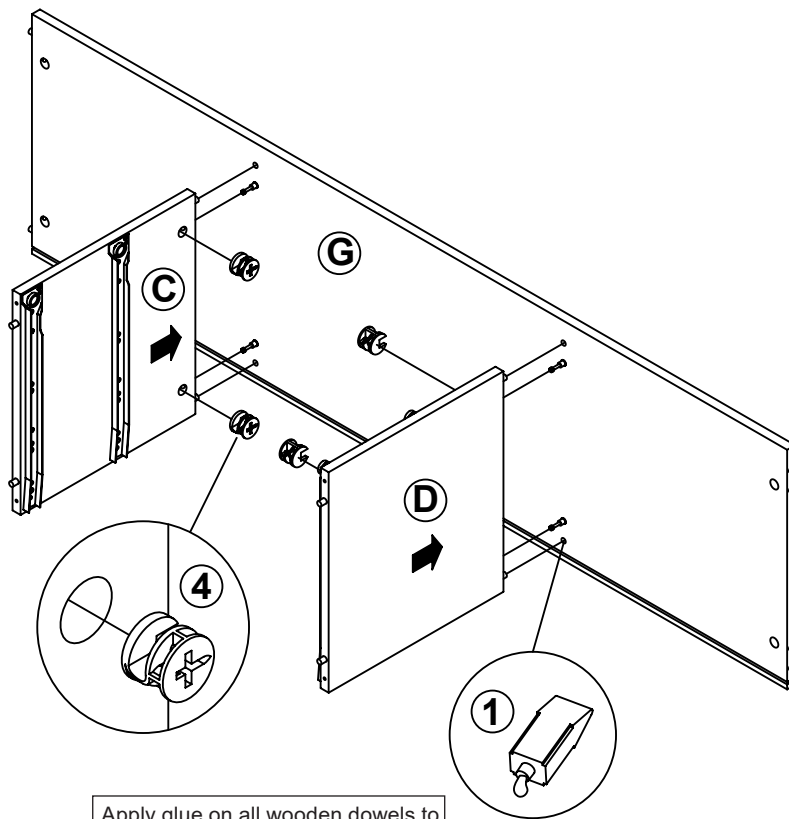

 Apply glue on all wooden dowels to ensure integrity of the structure.

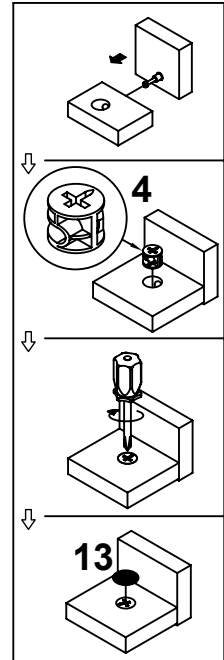


  STEP 5

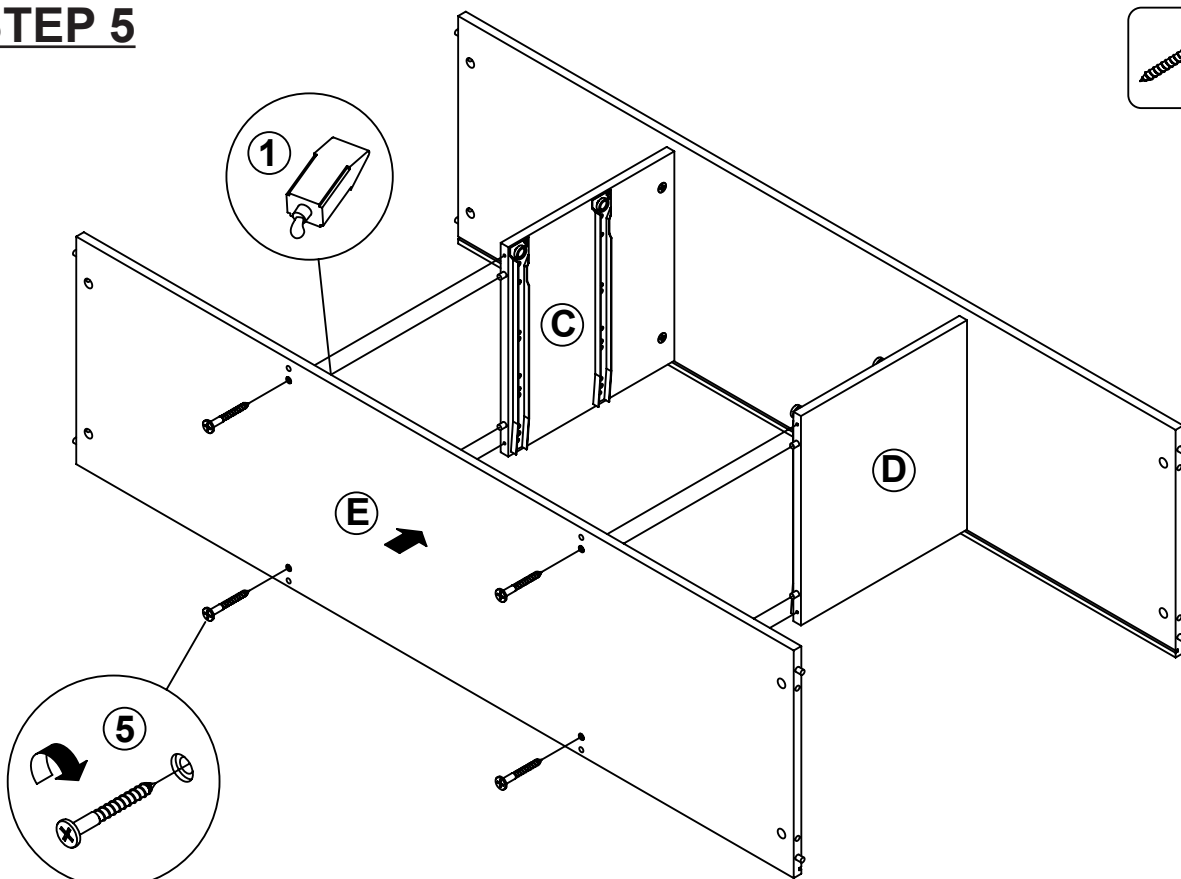


ITEM: 701024

 STEP 6

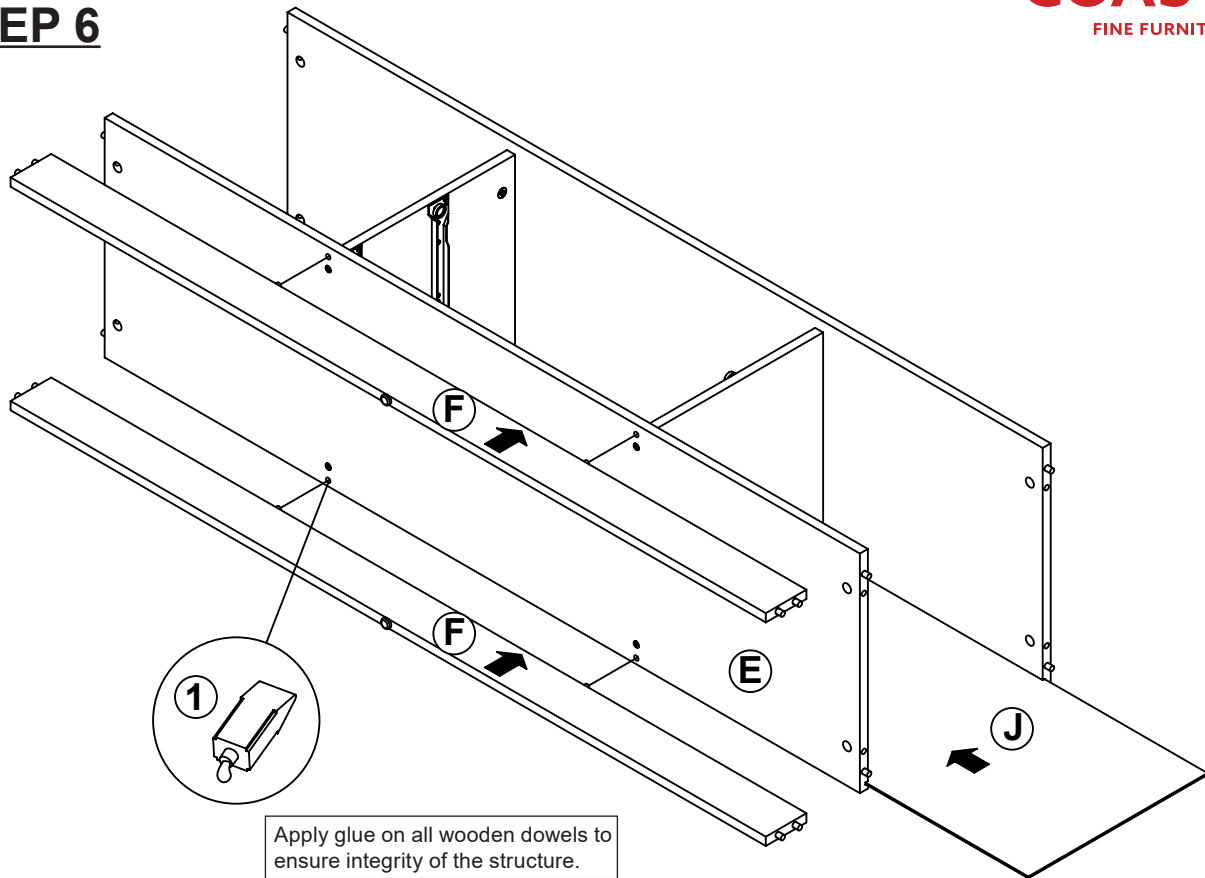

 
STEP 7

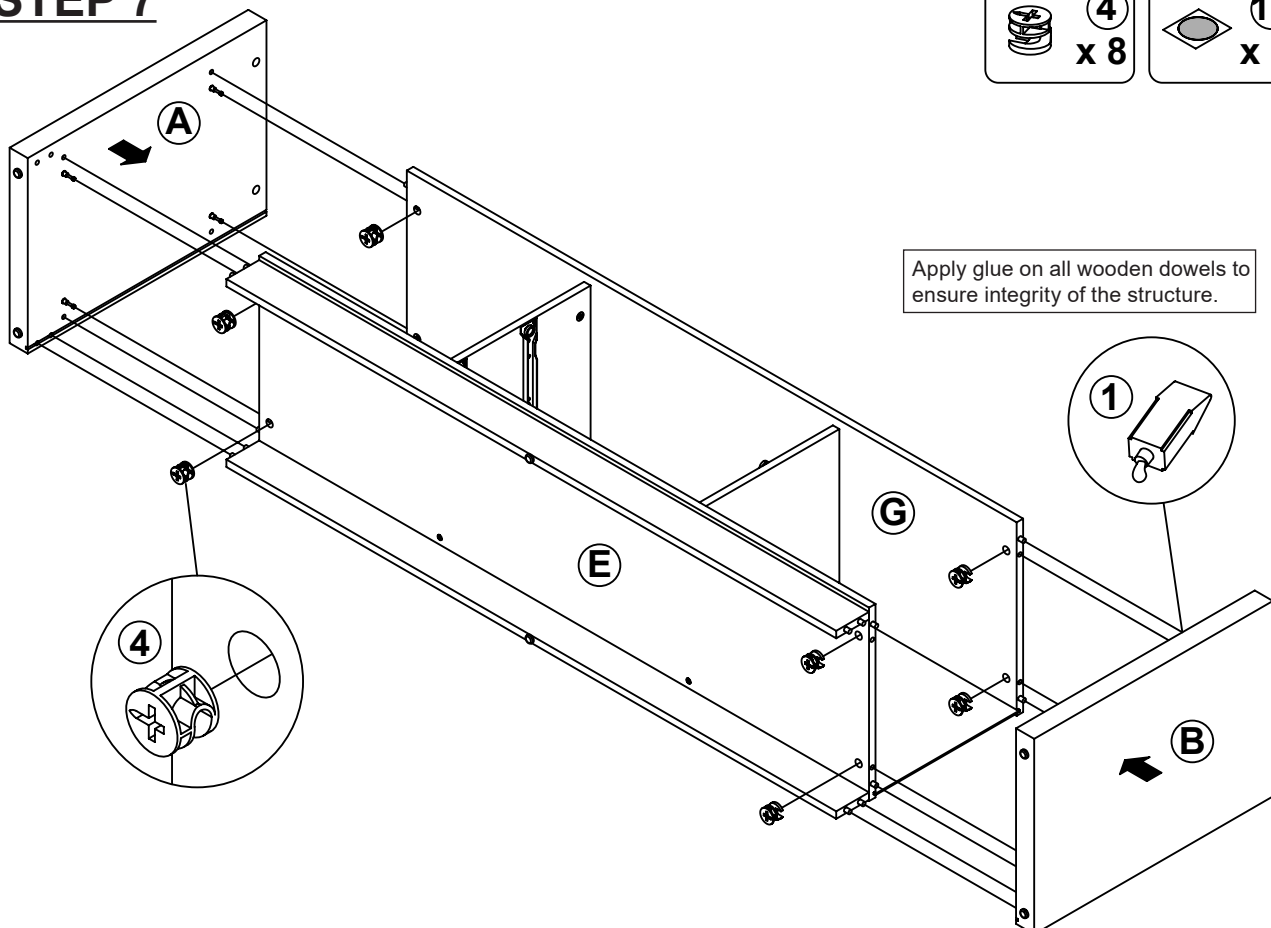


ITEM: **701024**

COASTER
FINE FURNITURE

 STEP 8

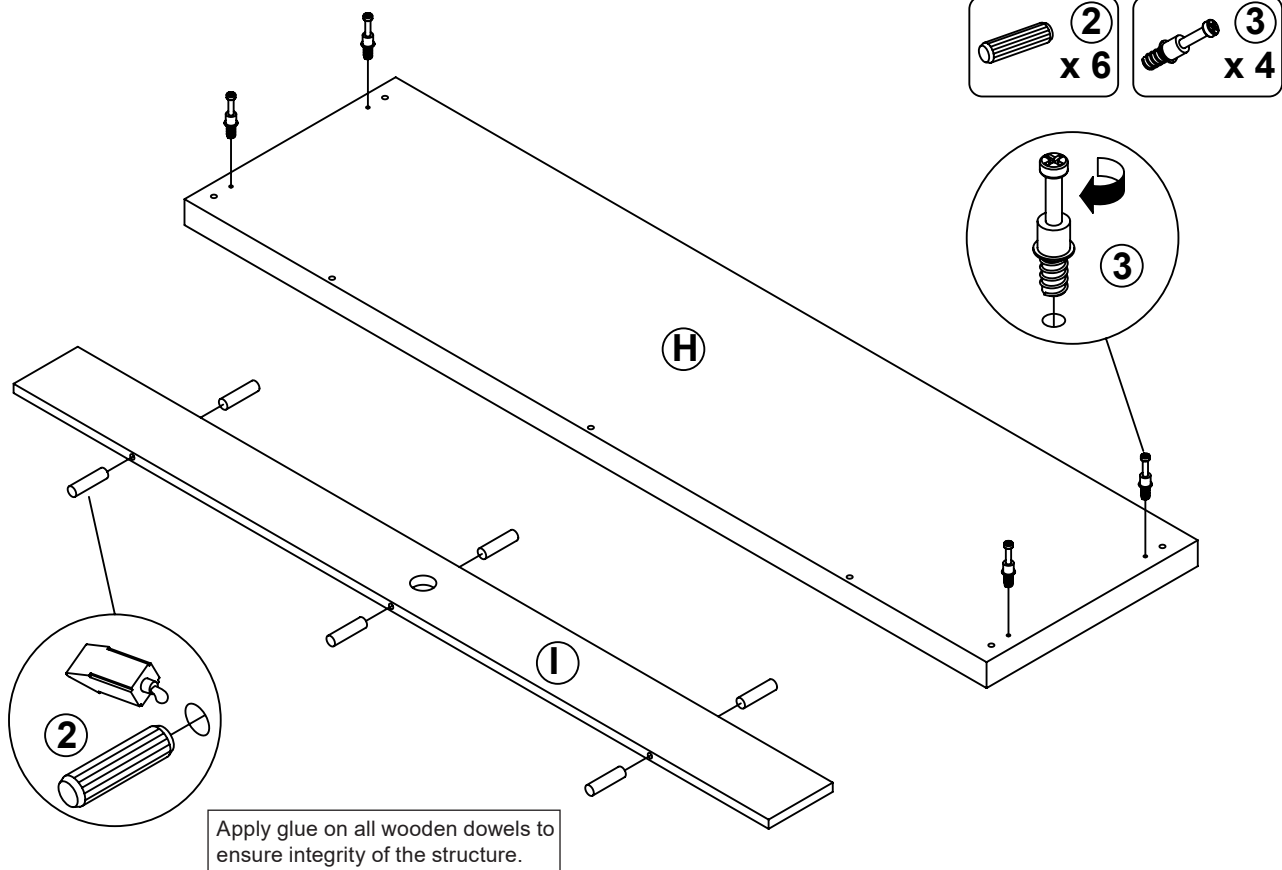


 STEP 9

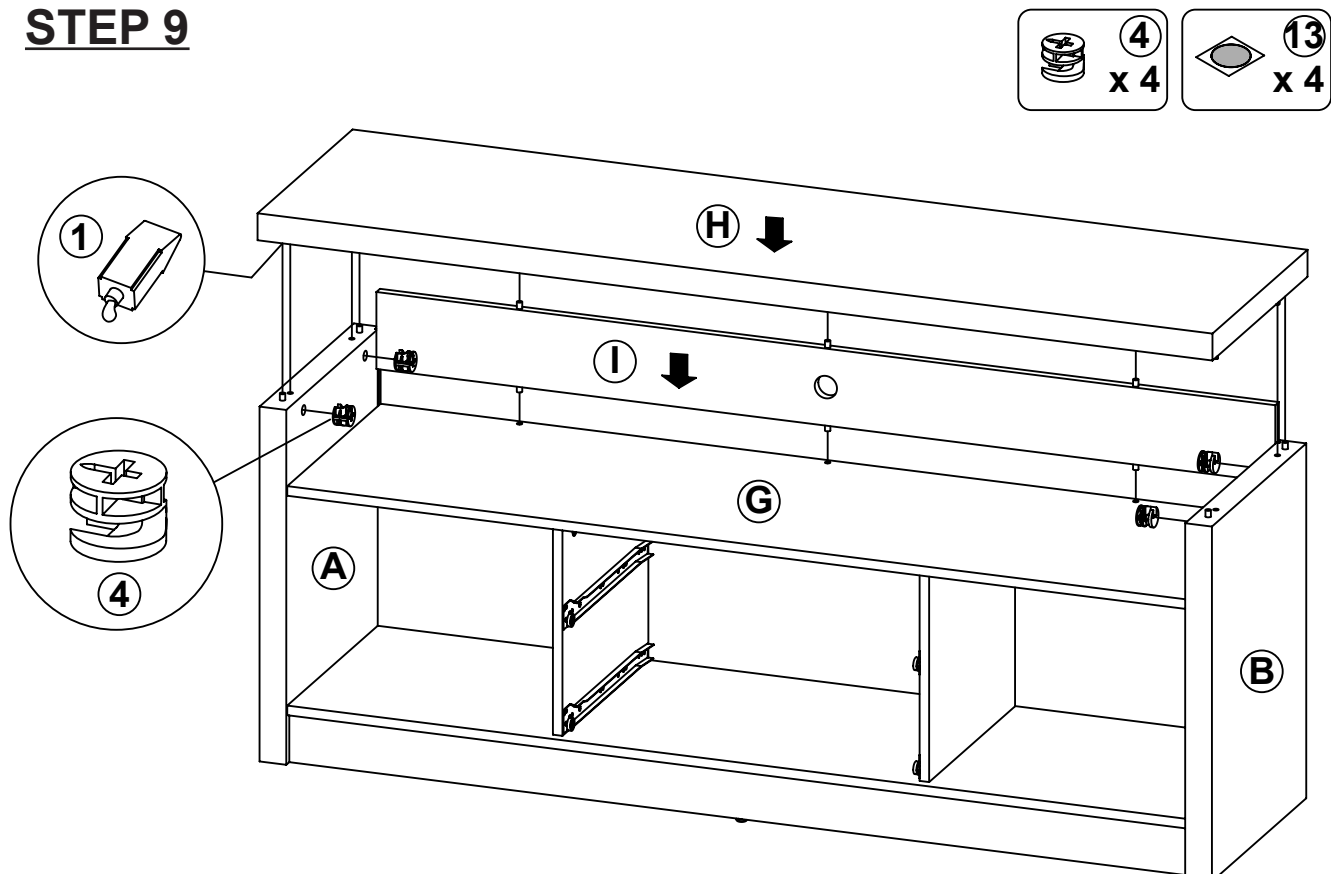


ITEM: **701024**

 
STEP 10-1

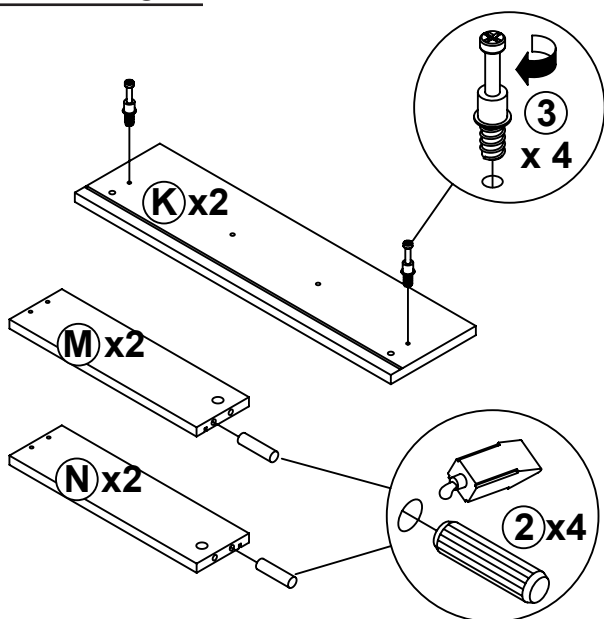

 
STEP 10-2

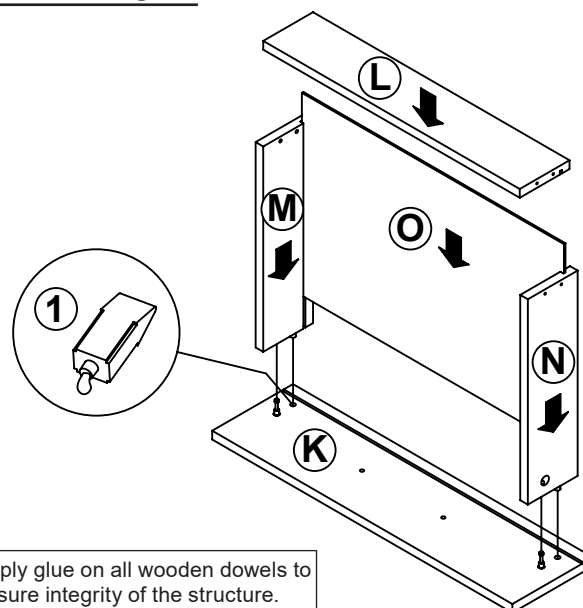

 
STEP 10-3

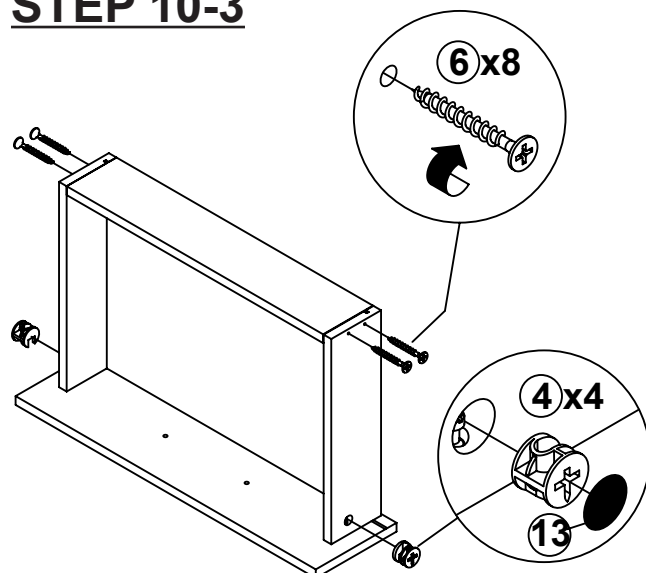

 STEP 10-4

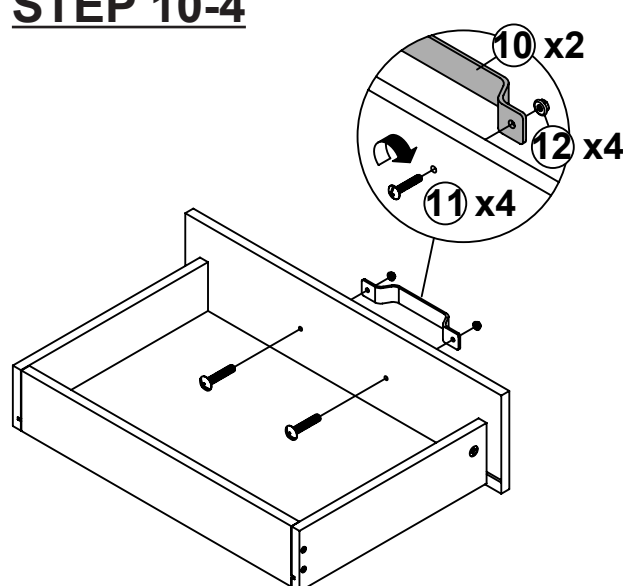


 STEP 10-5

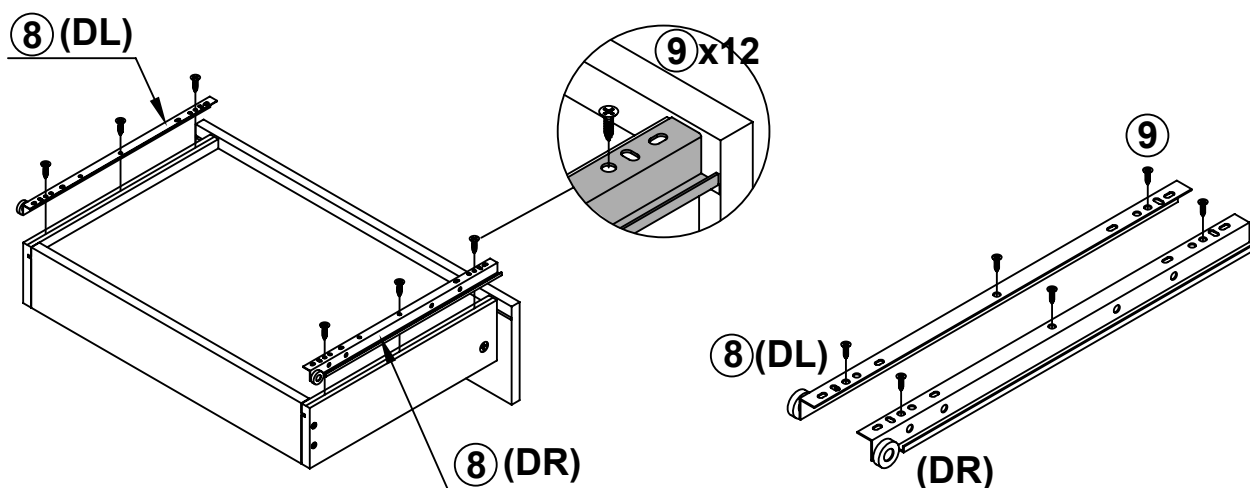



ITEM: **701024**

 STEP 11


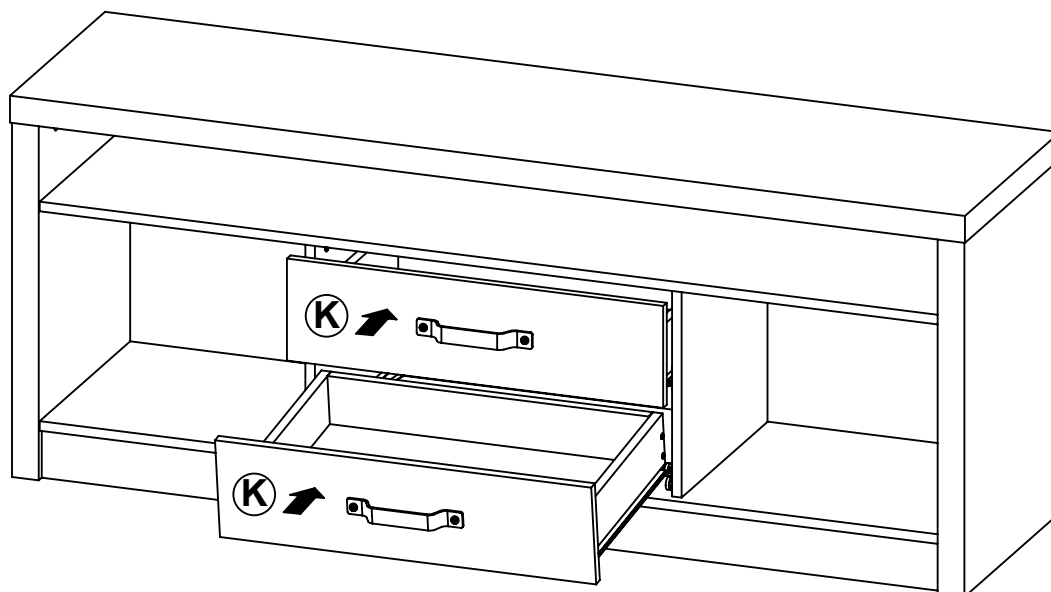


STEP 12

  COMPLETE

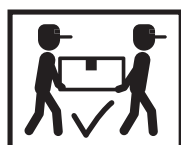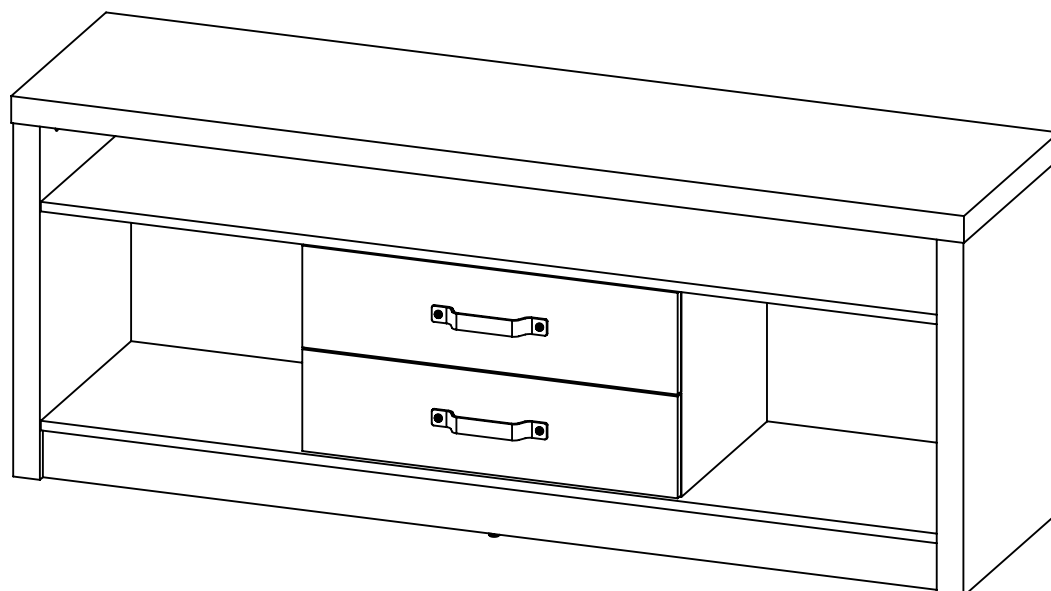

ITEM: 701024

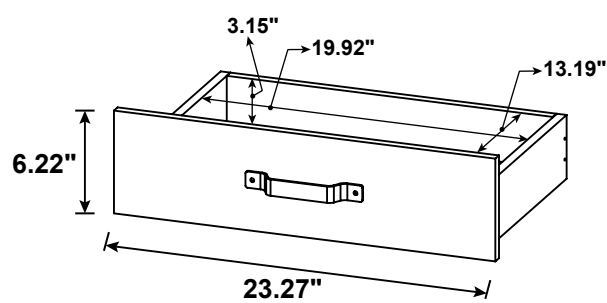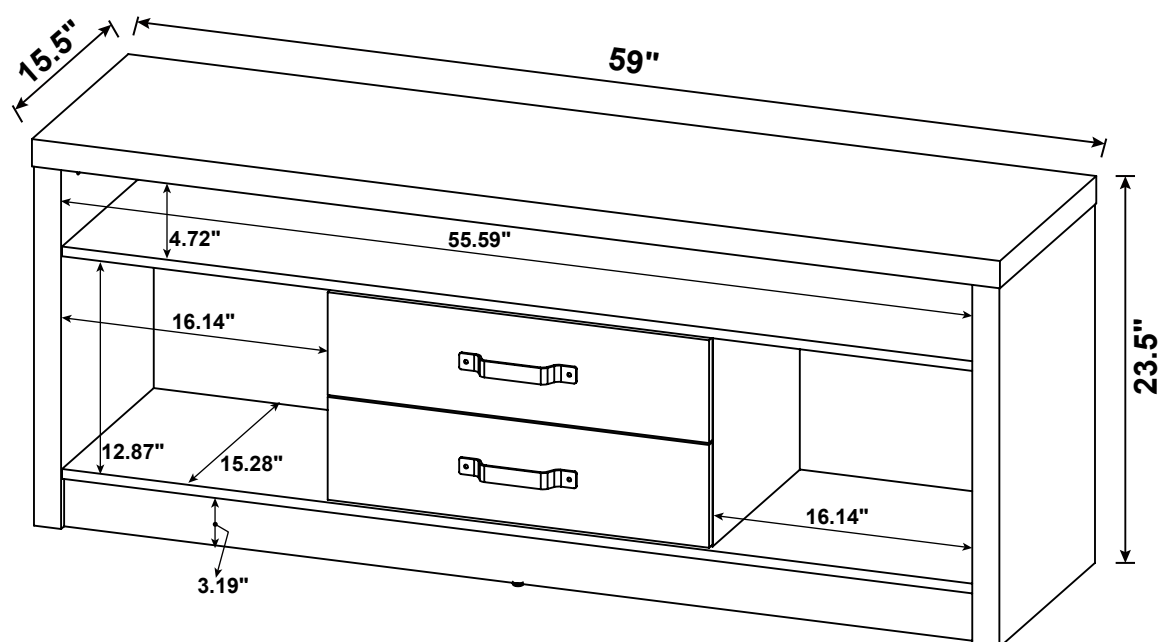  

Note : Dimension tolerance $\pm 5\%$