


2400 / 2410 / 2420 - 270 DRESSER


Assembly Instruction

<b>A. Components : Qty</b>		<b>B. Hardware :</b>		<b>Qty</b>
1. Bun Feet	: 4 Pcs	a. Allen Bolt	:	4 Pcs
2. Center Leg	: 1 Pc	b. Lock Washer	:	4 Pcs
		c. Flat Washer	:	4 Pcs
		d. Allen Key	:	1 Pc

STEP - 1

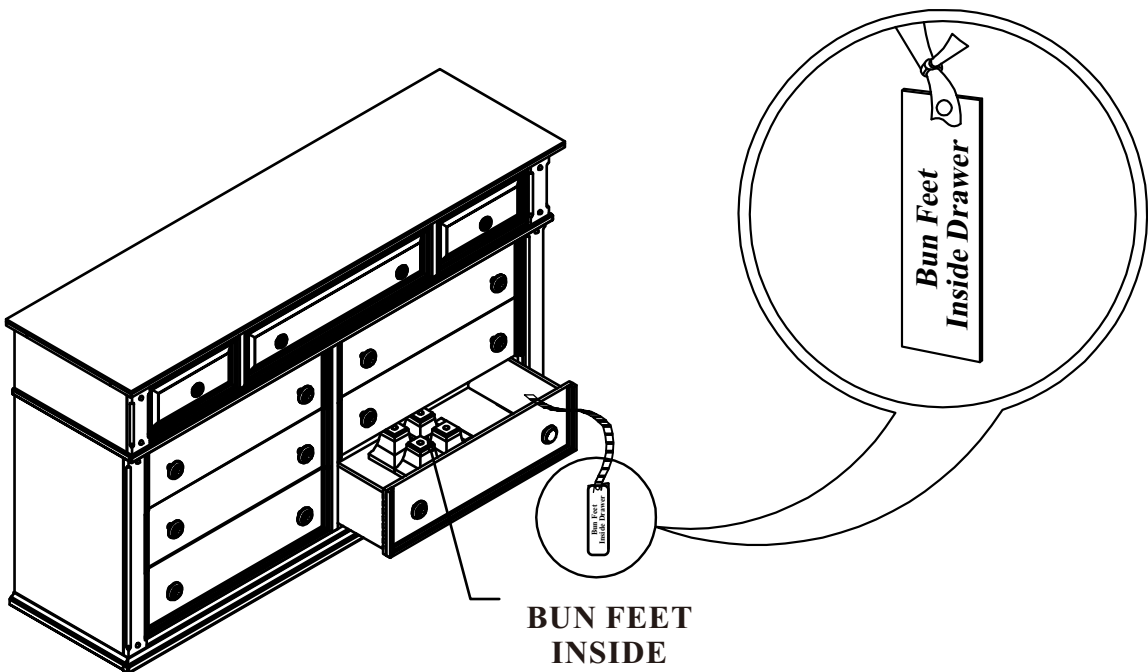



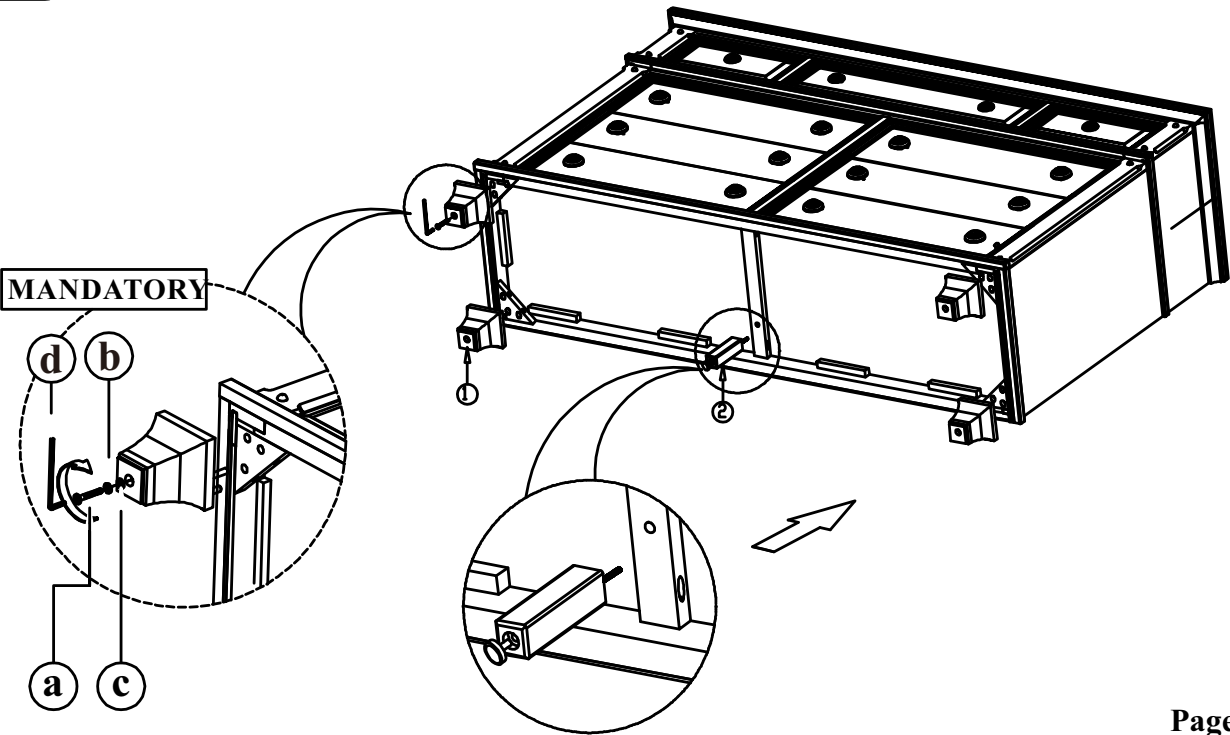


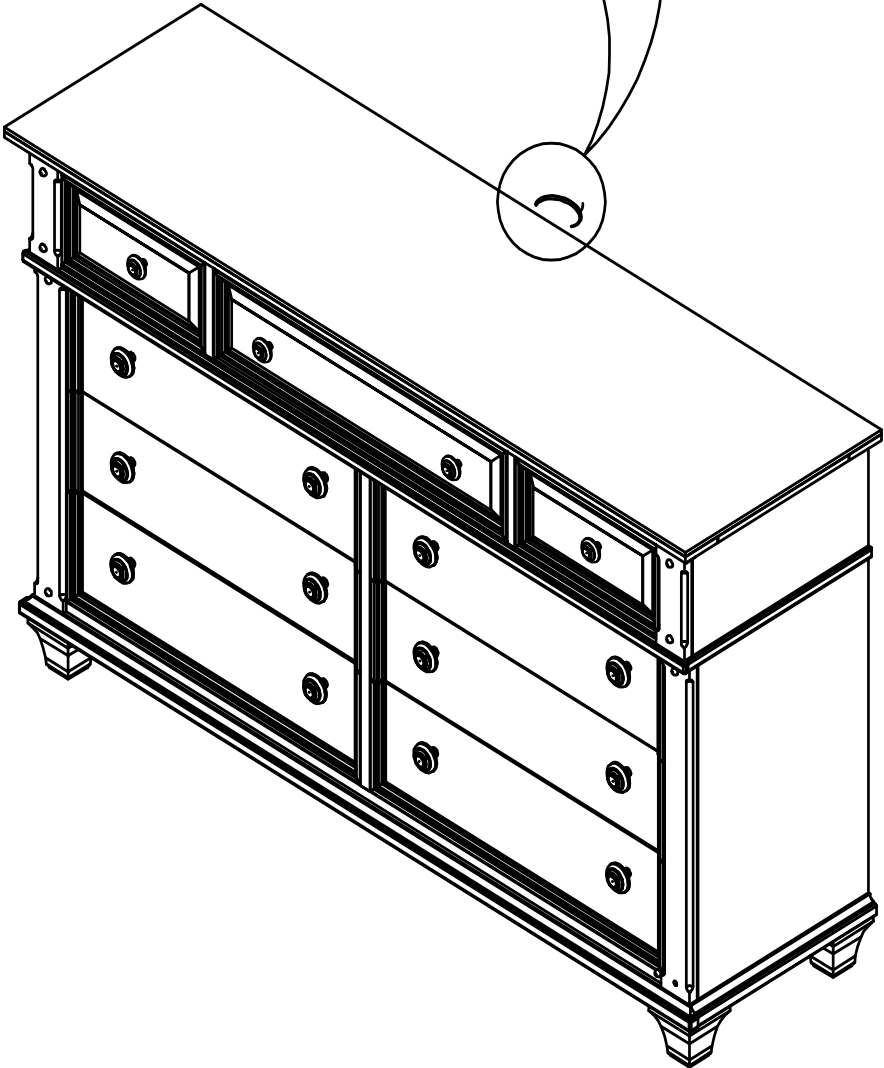
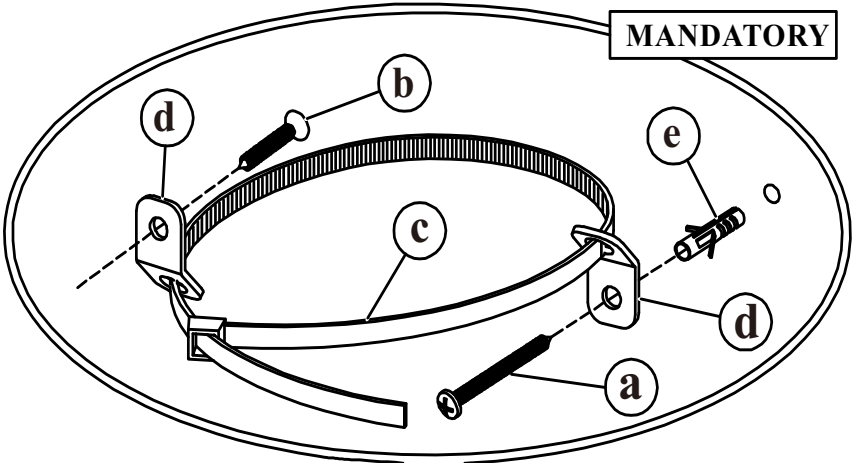
STEP - 2



2400 / 2410 / 2420 - 270 DRESSER

Assembly Instruction

A. Components :	Qty				B. Hardware :	Qty
		1. Dresser	1x			
						
			a			
			b			
			c			
			d			
			e			



**⚠ WARNING**

Serious or fatal crushing injuries can occur from furniture tipover. To help prevent tip-over :

- Install tipover restraint provided.
- Place heaviest items in the lowest drawers.
- Unless specifically designed to accommodate, do not set Tv's or other heavy objects on top of this product.
- Never allow children to climb or hang on drawers, doors or shelves.
- Never open more than one drawer at a time.
- (OR)
- Do not defeat or remove the drawer interlock system.

Use of tip over restraints may only reduce, but not eliminate the risk of tip-over.

*This is a permanent label. Do not attempt to remove.*