
Assembly Instructions

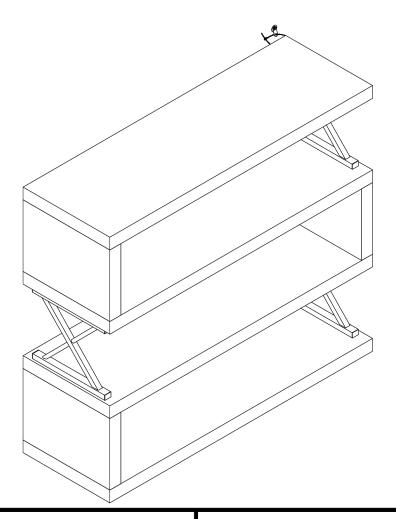

ASSEMBLY RATING

The Assembly Rating is a 5-point system that shows the degree of effort needed in assembling a specific product (with 1 being easy and 5 being difficult). For some products, two persons are recommended.

EASY OOOODIFFICULT

Tools Required For Assembly:

Allen Wrench

(Included)

Phillips Screwdriver

(Not Included)




Page 1 of 8 Rev: 17-12-25


ASSEMBLY & CARE ADVICE

FOR YOUR FURNITURE TO LAST, CORRECT ASSEMBLY AND PROPER MAINTENANCE ARE NECESSARY. PLEASE FOLLOW THE INFORMATION PROVIDED BELOW TO FULLY ENJOY YOUR FURNITURE.


BASIC ASSEMBLY TECHNIQUES

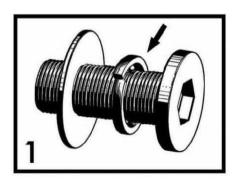


When lock or spring washer is used in an assembly, please make sure the lock or spring washer is placed between the larger flat washer and the head of the screw or bolt.

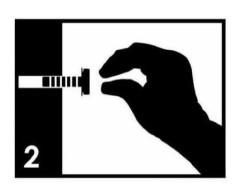


Position each part correctly and insert screws or bolts into their respective holes by hand tighten or using the proper hand tool. Only tighten when step is completed or when instructed to do so.

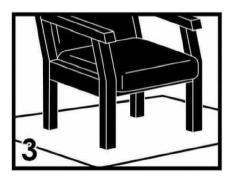


Use cardboard or carpet area when assembling furniture to prevent scratches. Make sure the furniture rests on a flat and level surface with each leg evenly touching the floor.

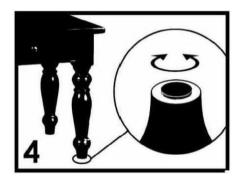

Some furniture comes with height adjustment knobs underneath each leg. To lower or to raise each leg, you need to turn clockwise or counterclockwise, respectively.

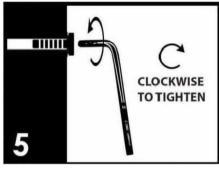

Make sure all parts are properly aligned, then use the appropriate hand tool to completely tighten the bolts or screws. Do not use power tools and do not overtighten.

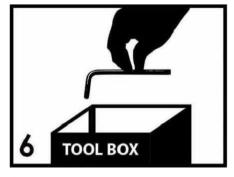


Save the instructions and store the Allen wrench or any supplied tool for later maintenance. After two weeks, check and tighten any loose hardware and repeat again every six months thereafter.

IT IS THE USER'S RESPONSIBILITY TO MAINTAIN THE FURNITURE. THE HARDWARE MAY LOOSEN OVER TIME AND MAY CAUSE THE FURNITURE TO BE WOBBLY AND UNABLE TO SUPPORT ITS INTENDED WEIGHT CAPACITY. THIS MAY LEAD TO COLLAPSE AND MAY CAUSE SERIOUS INJURY.




FAILURE TO FOLLOW THE GUIDELINES ABOVE MAY RESULT IN INJURY AND/OR PROPERTY DAMAGE.


FURNITURE OF AMERICA.ALL RIGHTS RESERVED.

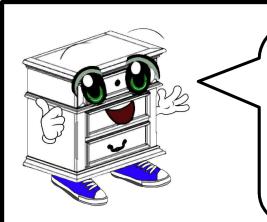

Before you begin, please read Page 2 of "Assembly and Care Advice".

And remember, do not tighten until each step is completed or instructed.

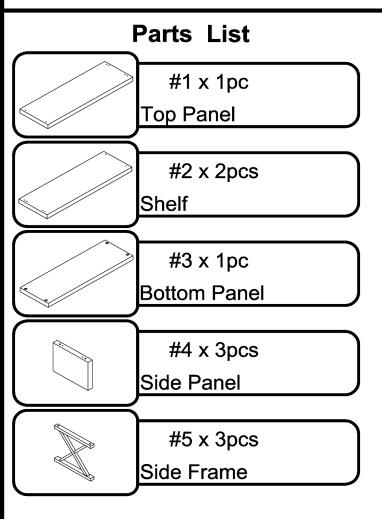

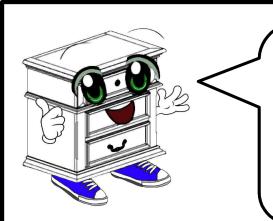

Before you begin, please read Page 2 of "Assembly and Care Advice".

And remember, do not tighten until each step is completed or instructed.

Hardware List

#A x 2pcs Bolt 1/4" X 1-3/8"



#I x 2pcs Rod 1/4" X 16-1/8"



#B x 2pcs Bolt 1/4" X 2-1/8"




#J x 1pc Screw M4x37



#C x 6pcs Nut M6x22




#K x 2pcs Metal Plate

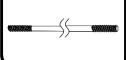

#D x 2pcs Rod 1/4" X 14-3/8"



#L x 1pc Anchor

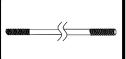

#E x 2pcs Rod 1/4" X 15-1/8"



#M x 1pc Girding



#F x 4pcs Washer




#G x 12pcs Dowel



#H x 1pc Allen Wrench M4





Exploded View

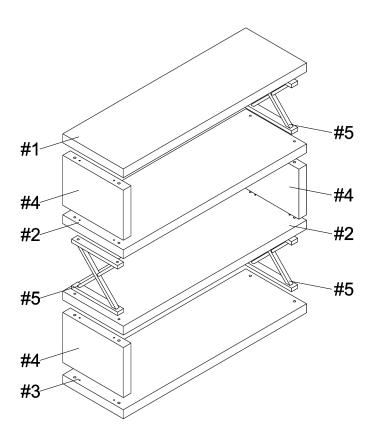




#A x 2pcs #D x 2pcs #G x 2pcs #K x 1pc 2) Align side frame (#5) to the holes of the top panel (#1), then secure by using bolts (#A).

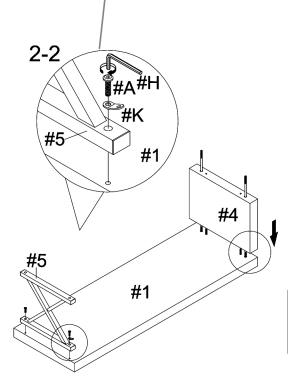

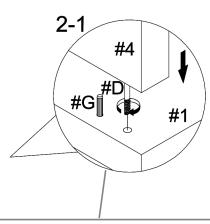


1) Attach dowels (#G) and shorter rods (#D) to the holes of the top panel (#1), then attach side panel (#4) to top panel (#1).

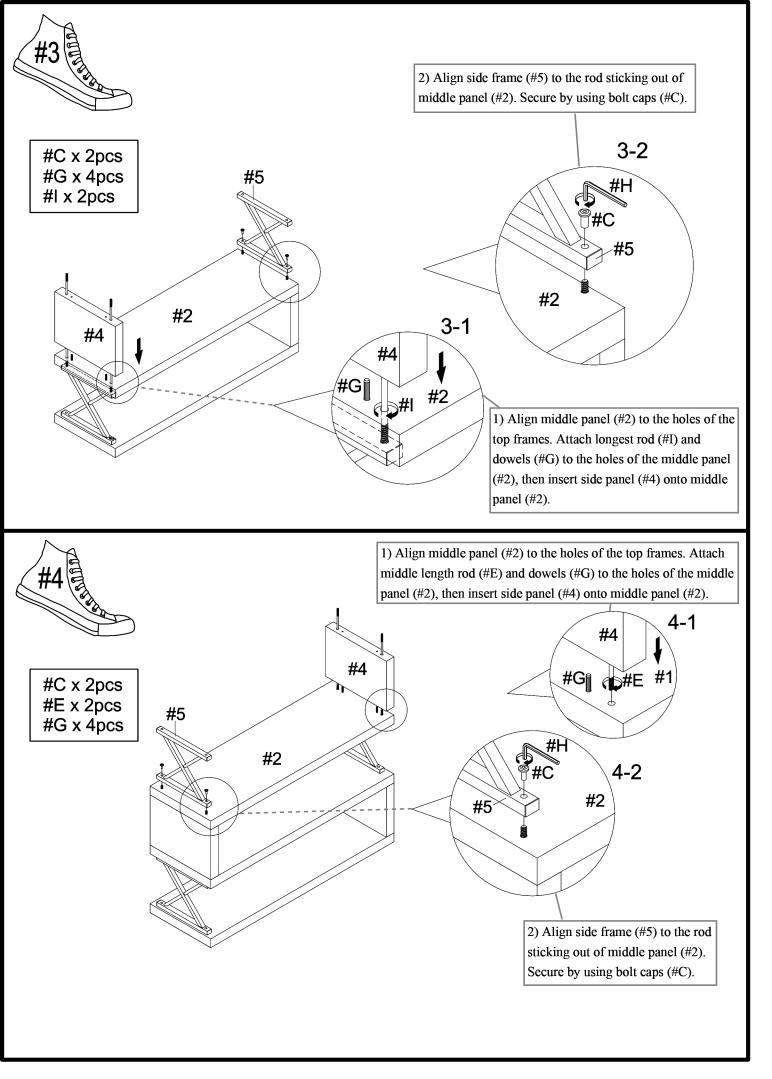





#B x 2pcs #C x 2pcs #F x 4pcs #G x 2pcs 1) Attach dowels (#G) onto side panel (#4), then align bottom panel (#3) to the holes of the side panel (#4) and frame (#5). Secure bottom panel (#3) to side panel (#4) by using washer (#F) and bolt end (#C).

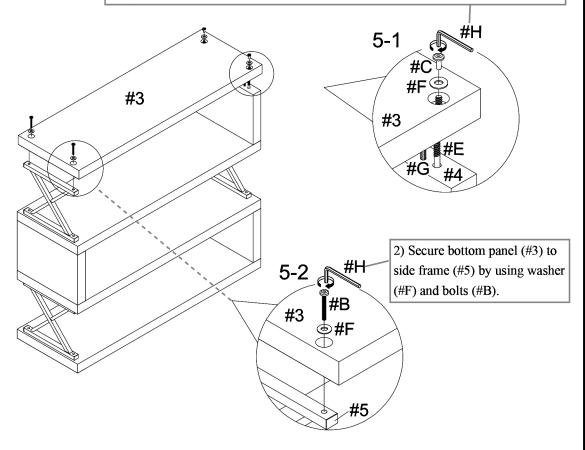



ASSEMBLY COMPLETED

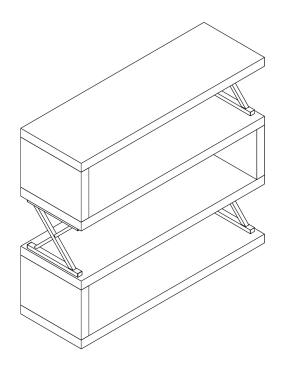

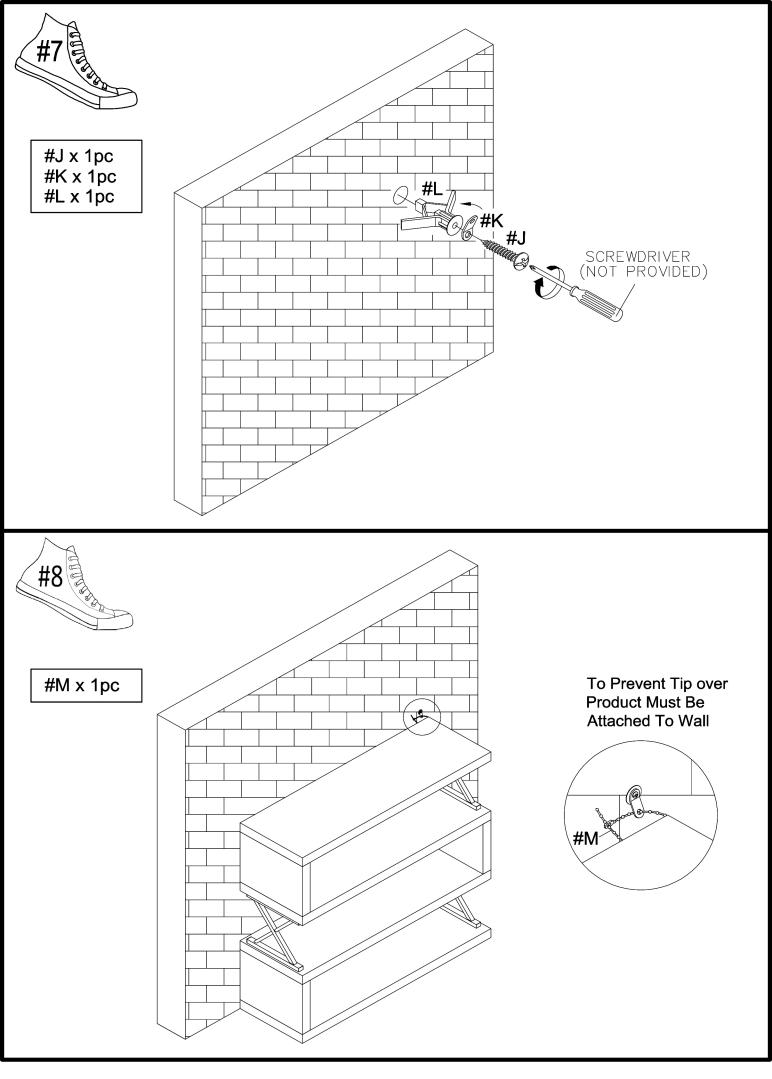

Page 8 of 8