 


Assembly Instructions

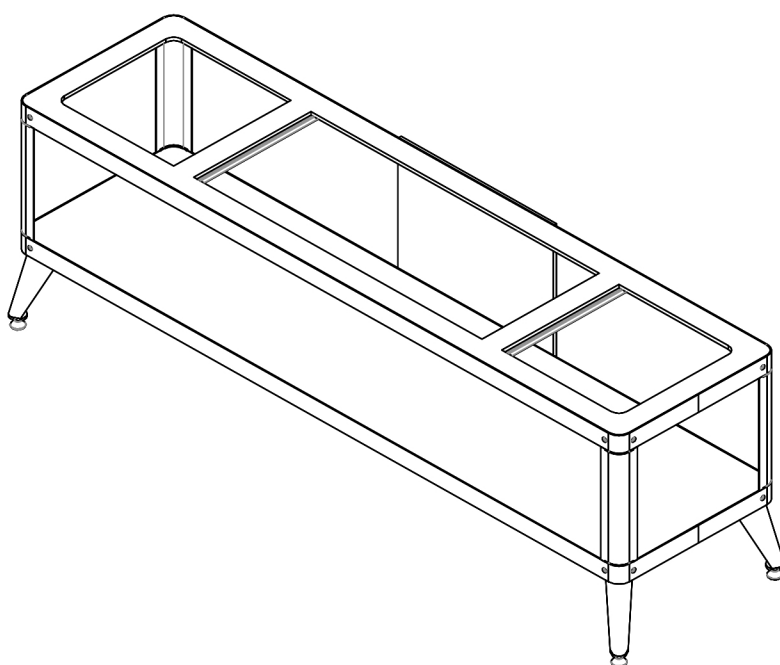

 
ASSEMBLY RATING

The Assembly Rating is a 5-point system that shows the degree of effort needed in assembling a specific product (with 1 being easy and 5 being difficult). For some products, two persons are recommended.

EASY  DIFFICULT

Tools Required For Assembly:

Allen Wrench



Phillips Screwdriver

 


2 PERSONS RECOMMENDED


ASSEMBLY & CARE ADVICE

FOR YOUR FURNITURE TO LAST, CORRECT ASSEMBLY AND PROPER MAINTENANCE ARE NECESSARY. PLEASE FOLLOW THE INFORMATION PROVIDED BELOW TO FULLY ENJOY YOUR FURNITURE.


BASIC ASSEMBLY TECHNIQUES

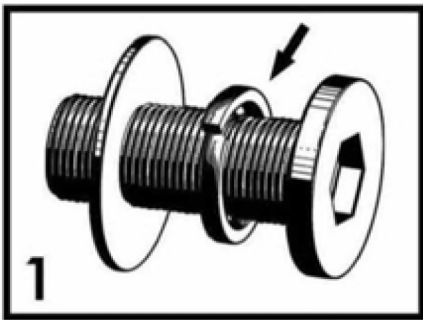

 
When lock or spring washer is used in an assembly, please make sure the lock or spring washer is placed between the larger flat washer and the head of the screw or bolt.

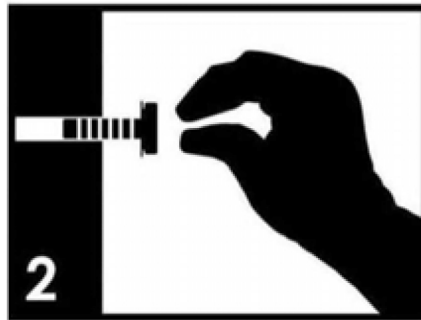

 
Position each part correctly and insert screws or bolts into their respective holes by hand tighten or using the proper hand tool. Only tighten when step is completed or when instructed to do so.

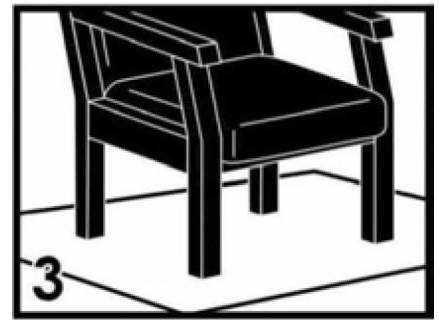

 Use cardboard or carpet area when assembling furniture to prevent scratches. Make sure the furniture rests on a flat and level surface with each leg evenly touching the floor.

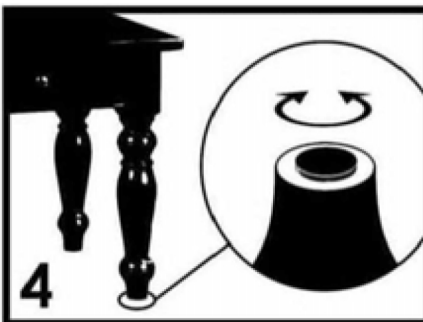

 Some furniture comes with height adjustment knobs underneath each leg. To lower or to raise each leg, you need to turn clockwise or counterclockwise, respectively.

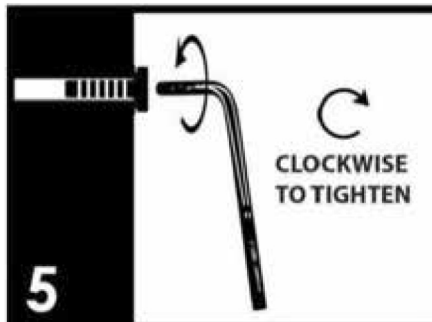

Make sure all parts are properly aligned, then use the appropriate hand tool to completely tighten the bolts or screws. Do not use power tools and do not overtighten.



Save the instructions and store the Allen wrench or any supplied tool for later maintenance. After two weeks, check and tighten any loose hardware and repeat again every six months thereafter.

IT IS THE USER'S RESPONSIBILITY TO MAINTAIN THE FURNITURE. THE HARDWARE MAY LOOSEN OVER TIME AND MAY CAUSE THE FURNITURE TO BE WOBBLY AND UNABLE TO SUPPORT ITS INTENDED WEIGHT CAPACITY. THIS MAY LEAD TO COLLAPSE AND MAY CAUSE SERIOUS INJURY.



 
FAILURE TO FOLLOW THE GUIDELINES ABOVE MAY RESULT IN INJURY AND/OR PROPERTY DAMAGE.




Before you begin, please read Page 2 of "Assembly and Care Advice".

And remember, do not tighten until each step is completed or instructed.


Parts List

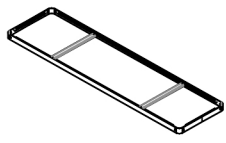

#1 x 1pc
Top Frame

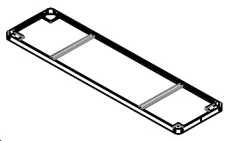 


#2 x 1pc
Bottom Frame

 


#3 x 4pcs
Support Panel


 
#4 x 4pcs
Leg

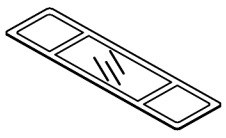

#5 x 1pc
Top Glass

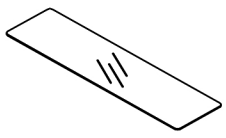 

#6 x 1pc
Bottom Glass



#7 x 1pc
Back Glass

 
Hardware List



#A x 28pcs
Bolt M6x10L



#B x 4pcs
Bolt M6x20L



#C x 4pcs
Nut



#D x 4pcs
Leveler



#E x 4pcs
Flat Washer

 


#F X 1pc
Allen Wench 4mm



#1

#D x 4pcs

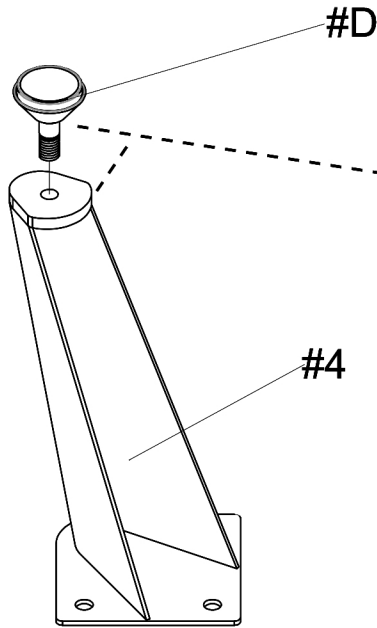


Insert the levelers (#D) into the holes along the bottom of the legs (#4). Turn right to tighten.

x 4



#2
 
#A x 12pcs

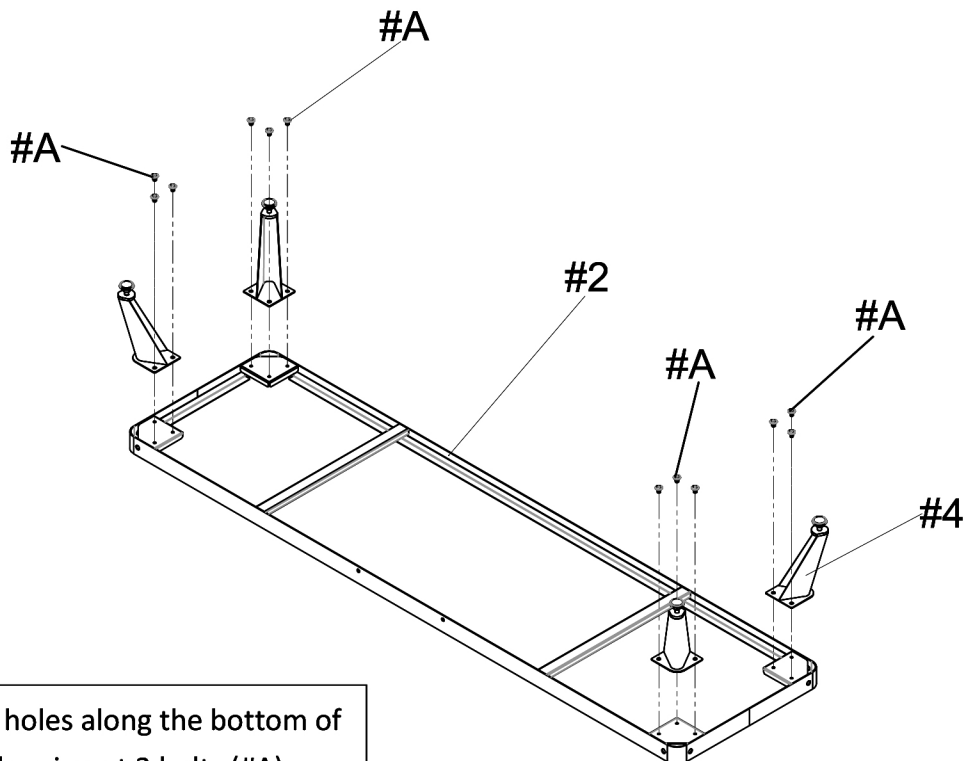


Align the legs (#4) to the holes along the bottom of the bottom frame (#2), then insert 3 bolts (#A) into each leg and secure using the Allen wrench.




#A x 8pcs

 Align the support panels (#3) to the holes along the corners of the bottom frame (#2), then insert 2 bolts (#A) into each corner. Secure using the Allen wrench.

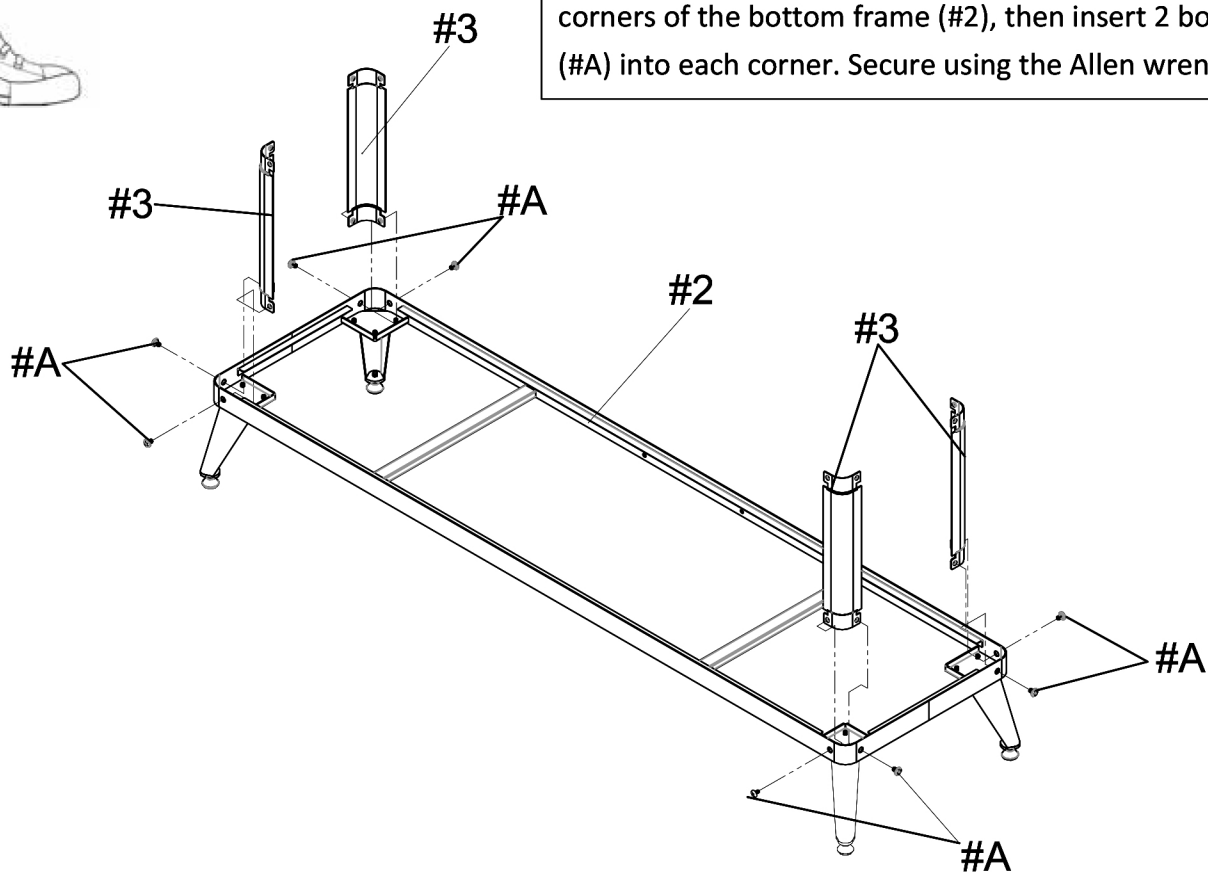

 Slide the bottom glass (#6) down onto the bottom frame (#2).

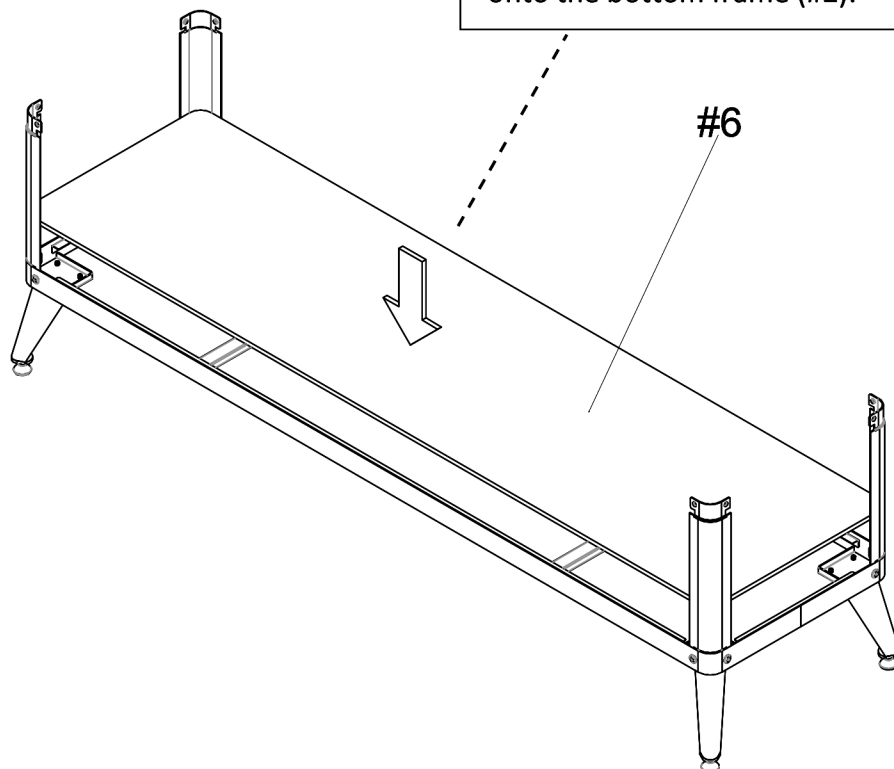



#5

#A x 8pcs

#A

#A

#1

#A

#A

Place the top frame (#1) onto the top of the support panels (#3), then insert 2 bolts (#A) into each corner. Secure.



 
#6

Place the top glass (#5) onto the top frame (#1).

#5




#B x 4pcs
#C x 4pcs
#E x 4pcs

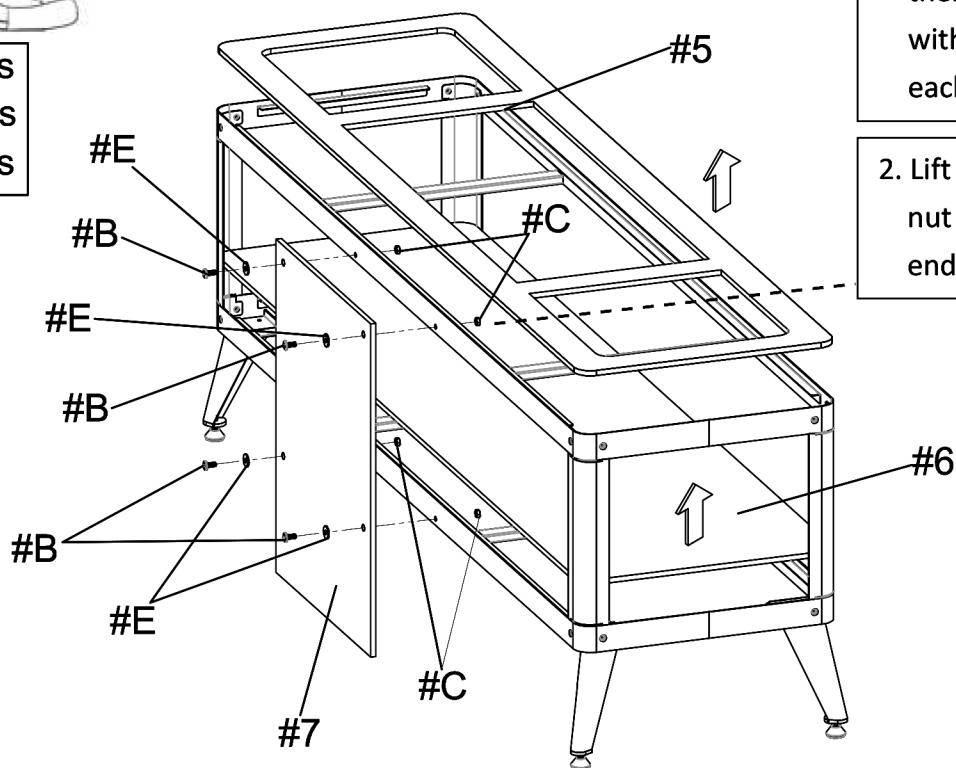

1. Align the back glass (#7) to the holes along the back, then insert the bolts (#B) with flat washers (#E) into each hole and secure.

 2. Lift the glass to apply a nut (#C) into the other ends of each bolt.

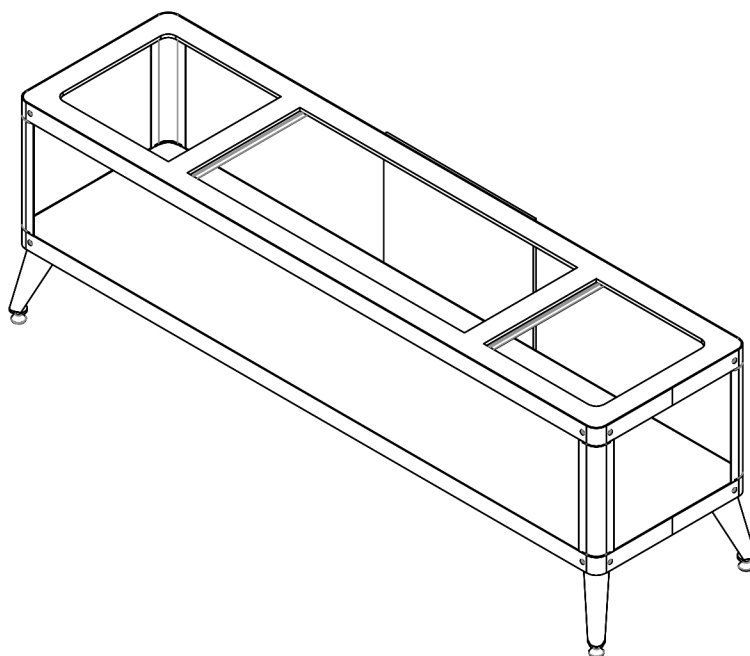

ASSEMBLY IS COMPLETED