 
# ASSEMBLY INSTRUCTIONS

### **TOOLS REQUIRED**



### Allen Wrench

(Included)




### Phillips Screwdriver

(Not Included)



2 - People Recommended



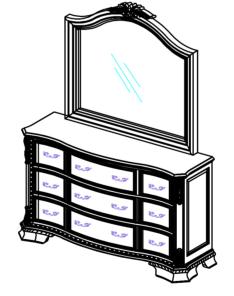

### **ASSEMBLY RATING**



EASY DIFFICULT

The Assembly Rating is a 5-point system showing the level of effort needed to assemble a specific product.

VERSION # 20-03-16



Are you missing anything?  Double-check all parts, hardware and accessories listed on Page 6 are accounted for.	Check out our Quick Tips!  We recommend reviewing the pre-assembly handouts. Even experts need a refresher now and then!
Should we send any replacements?  Are there any irregularities or flaws in the parts? We can send replacements!	Prep Time!  Please review the assembly instructions and all diagrams prior to assembling. Arrange parts as recommended on Page 7 and group identical hardware together to make assembling easier.

# PRE ASSEMBLY INTRODUCTION

We understand building ready-to-assemble furniture can be a challenging experience for some. To help avoid confusion, we have provided some helpful tips that may speed up the process.





#### **Teamwork**

ALWAYS have at least two people to help with transporting and assembling the product to avoid potential injury and/or damage.





#### **Suitable Location**

Assembling near the area of the intended location is highly recommended.





### **Sufficient Space**

Make sure you have enough space to move around during the assembly.





#### **Avoid Scratches**

Use cardboard, blankets or a carpeted area while assembling furniture to prevent scratches.





### Flat Surface

Make sure the furniture rests on a flat and level surface with each leg evenly touching the floor.

# ASSEMBLY AND CARE ADVICE




FAILURE TO FOLLOW THE GUIDELINES BELOW MAY RESULT IN INJURY AND/OR PROPERTY DAMAGE.



Position each part correctly and insert screws or bolts into their respective holes.




Use the appropriate hand tools or power tools for assembly. Select steps, such as tightening screws and/or bolts, may require hand tools to avoid causing damage during assembly.

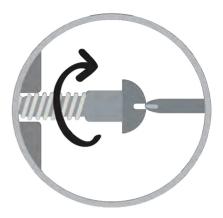

Turn clockwise to tighten and only tighten when step is completed or when instructed to do so.



Save the instructions and store any supplied tools for later maintenance.

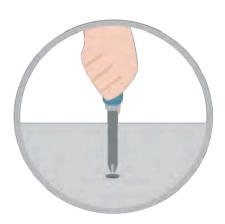


After two weeks, check and tighten any loose hardware and repeat again every six months thereafter.

IT IS THE USER'S RESPONSIBILITY TO MAINTAIN THE FURNITURE. THE HARDWARE MAY LOOSEN OVER TIME AND MAY CAUSE THE FURNITURE TO BE WOBBLY AND UNABLE TO SUPPORT ITS INTENDED WEIGHT CAPACITY. THIS MAY LEAD TO COLLAPSE AND MAY CAUSE SERIOUS INJURY.

DRESSER&MIRROR




- Please keep instructions for future reference.
- Check the quantity and irregularity of parts and hardware before you start.

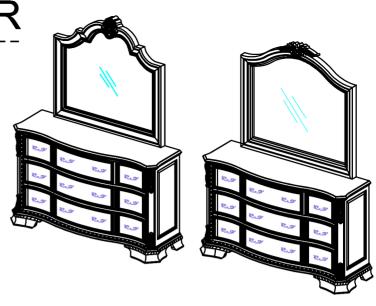

### **PARTS**



 

Mirror





Dresser





Support Rail





Center Leg 86\*30\*30mm

### HARDWARE



Bolt Ø1/4" x 1-1/2"





Flat washer Ø1/4"



1pc




Allen wrench 4mm





Anti Tip Kit


## Exploded View

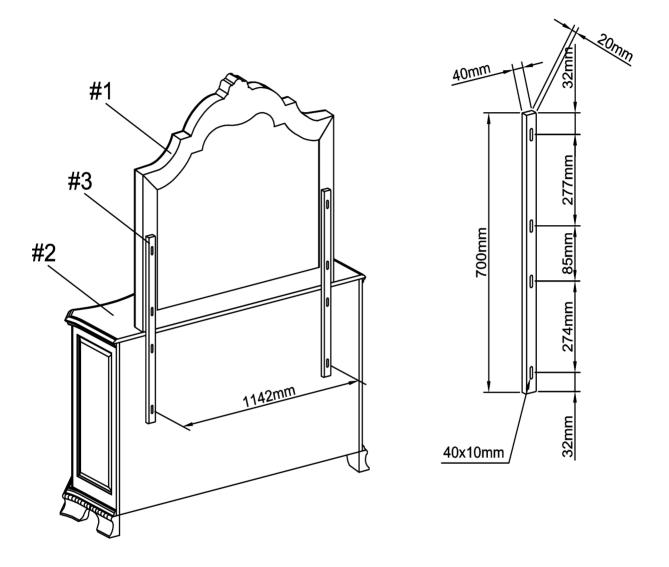

## packed in 3 cases

Carton	Disignation	Part		Hardware
	Dresser	#2		Ø #A 8pcs
				#B 8pcs
	Support Leg	#4	<b>♦</b>	#C 1pc
				#D 1Set
	Support Rail	#3		
	Mirror	#1		
	Mirror	#1		


### ASSEMBLY INSTRUCTIONS

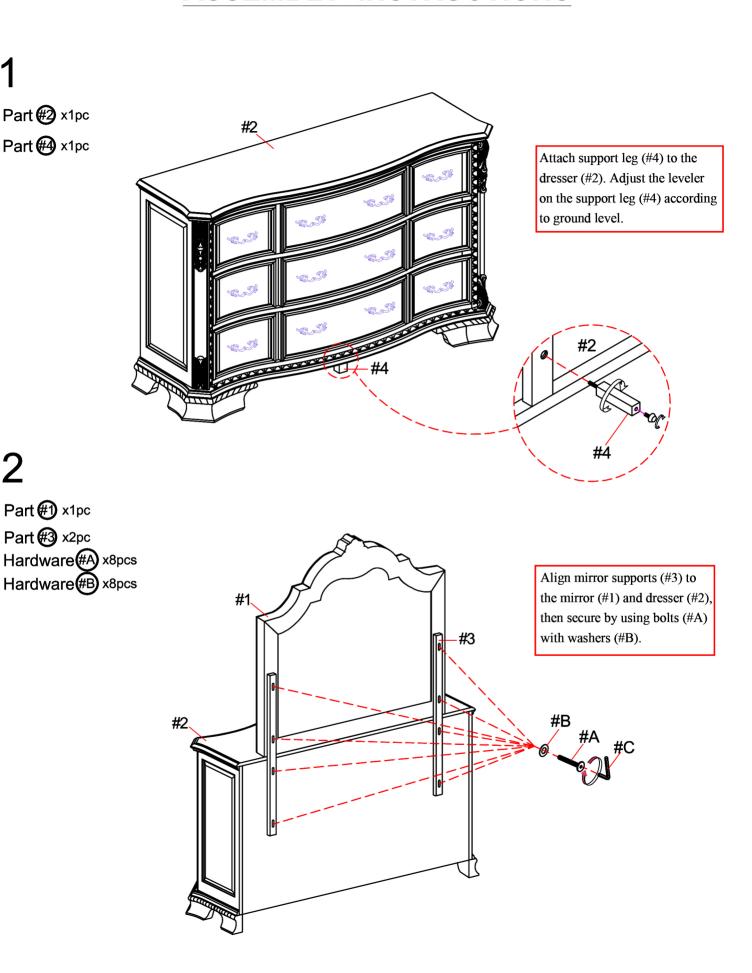

### ASSEMBLY INSTRUCTIONS

**3** Hardware**#**⊅ x1Set

### CM7267D-M

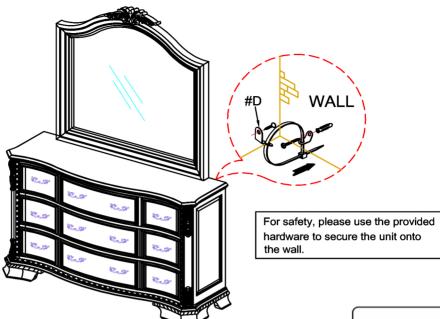

# ASSEMBLY COMPLETED



Please ensure the furniture rests on an even and flat surface. If the product wobbles or feels loose, double-check all bolts and/or screws are properly tightened and secured.

### CM7267D-CM7296M

