
Assembly Instructions

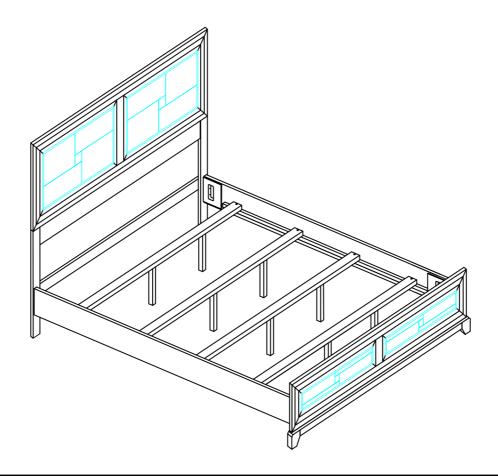

ASSEMBLY RATING

The Assembly Rating is a 5-point system that shows the degree of effort needed in assembling a specific product (with 1 being easy and 5 being difficult). For some products, two persons are recommended.




Tools Required For Assembly:

Allen Wrench

Wrench

Phillips Screwdriver

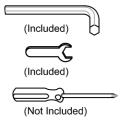




2 PERSONS RECOMMENDED


ASSEMBLY & CARE ADVICE

FOR YOUR FURNITURE TO LAST, CORRECT ASSEMBLY AND PROPER MAINTENANCE ARE NECESSARY. PLEASE FOLLOW THE INFORMATION PROVIDED BELOW TO FULLY ENJOY YOUR FURNITURE.


BASIC ASSEMBLY TECHNIQUES

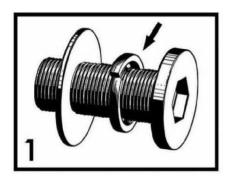


When lock or spring washer is used in an assembly, please make sure the lock or spring washer is placed between the larger flat washer and the head of the screw or bolt.

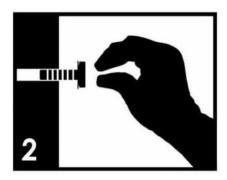


Position each part correctly and insert screws or bolts into their respective holes by hand tighten or using the proper hand tool. Only tighten when step is completed or when instructed to do so.

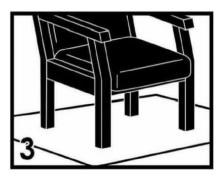


Use cardboard or carpet area when assembling furniture to prevent scratches. Make sure the furniture rests on a flat and level surface with each leg evenly touching the floor.

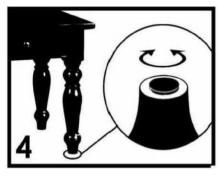

Some furniture comes with height adjusetment knobs underneath each leg. To lower or to raise each leg, you need to turn clockwise or counterclockwise, respectively.

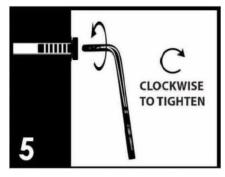

Make sure all parts are properly aligned, then use the appropriate hand tool to completely tighten the bolts or screws. Do not use power tools and do not overtighten.

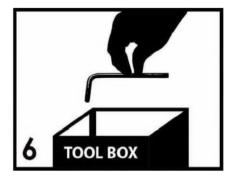



Save the instructions and store the Allen wrench or any supplied tool for later maintenance. After two weeks, check and tighten any loose hardware and repeat again every six months thereafter.

IT IS THE USER'S RESPONSIBILITY TO MAINTAIN THE FURNITURE. THE HARDWARE MAY LOOSEN OVER TIME AND MAY CAUSE THE FURNITURE TO BE WOBBLY AND UNABLE TO SUPPORT ITS INTENDED WEIGHT CAPACITY. THIS MAY LEAD TO COLLAPSE AND MAY CAUSE SERIOUS INJURY.



FAILURE TO FOLLOW THE GUIDELINES ABOVE MAY RESULT IN INJURY AND/OR PROPERTY DAMAGE.

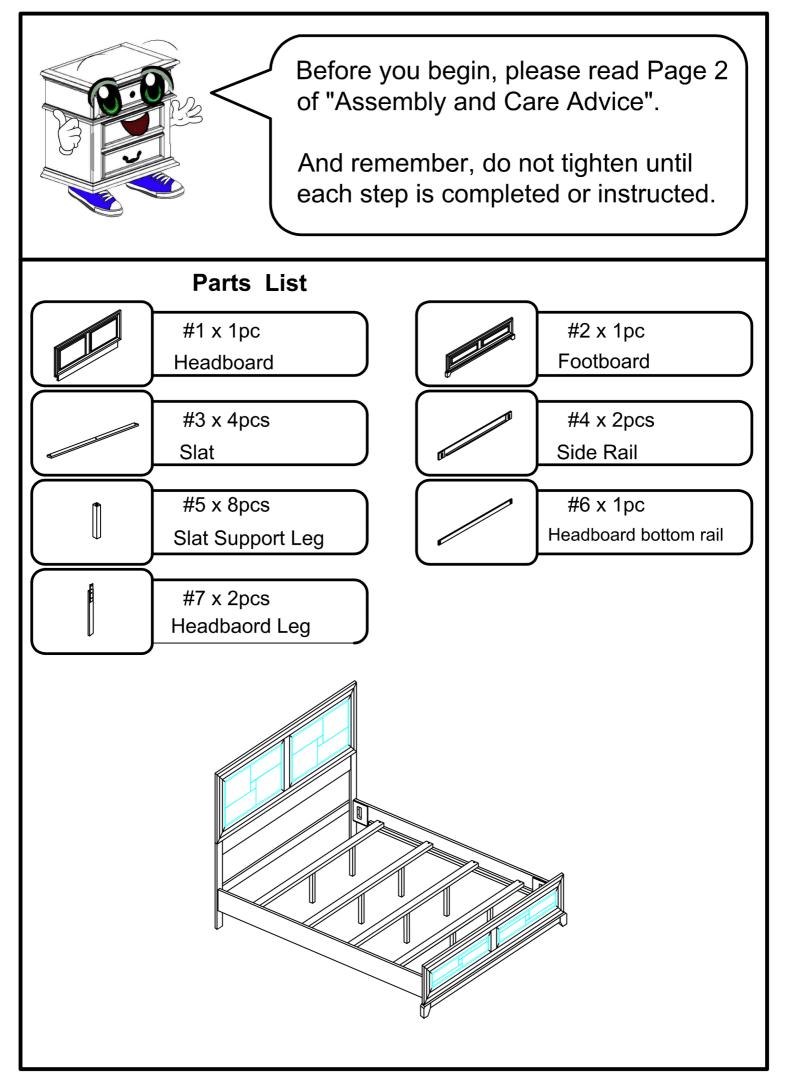

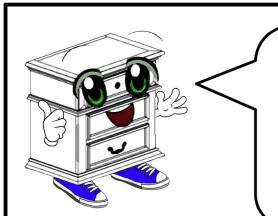

Before you begin, please read Page 2 of "Assembly and Care Advice".

And remember, do not tighten until each step is completed or instructed.

Hardware List




#A x 10pcs Bolt 5/16"X1"


 
#C x 18pcs Flat Washer



#E x 8pcs Bolt 5/16"X3-1/2"



#G x 1pc Wrench 12mm



#B x 18pcs Lock Washer




#D x 1pc Allen Wrench




#F x 8pcs Hex Nut



#H x 8pcs Screw

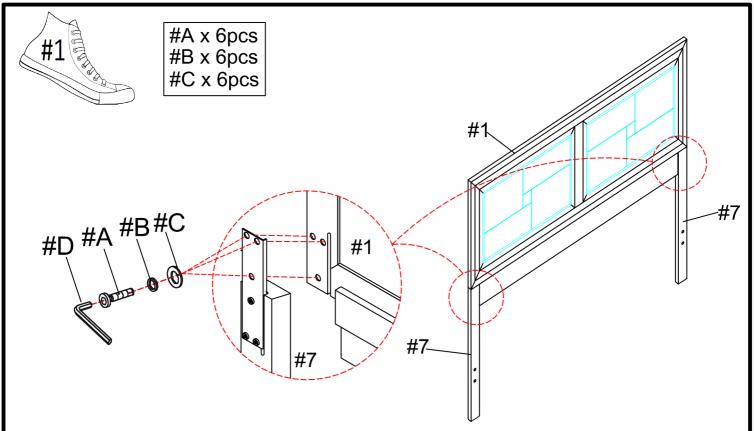

- I. Align the headboard legs (#7) with the pre-drilled holes of the headboard (#1).
- II. Prepare 6 bolt assemblies by inserting FIRST the lock washer (#B) onto the bolt (#A) and then the flat washer (#C) onto that SAME bolt (#A), in that order.
- III. Insert the bolt assemblies through the legs (#7) using the Allen wrench (#D) to lock them with the headboard (#1).

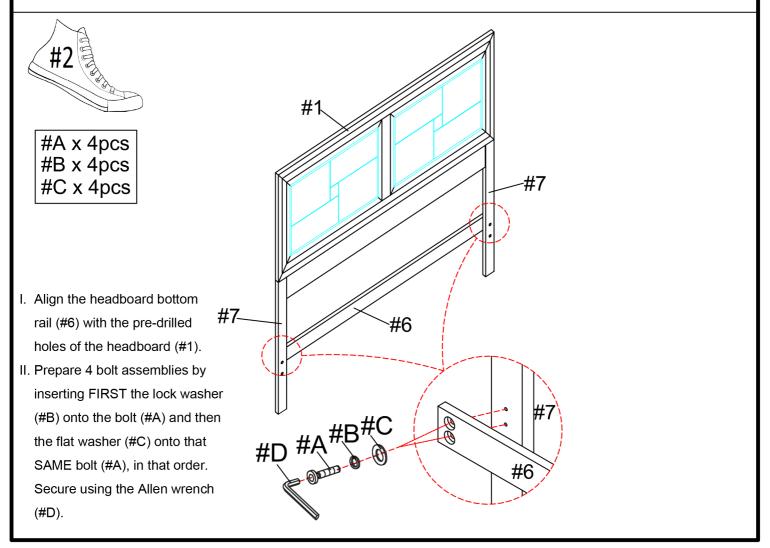


Page 5 of 7




#C x 8pcs #B x 8pcs #E x 8pcs #F x 8pcs

- Insert 2 bolts (#E) into the pre-drilled holes located on the corners of the headboard and footboard. Twist to the right by hand.
- II. Insert the pre-drilled holes on the side rails (#4) onto the bolts (#E).
- III. Insert the the flat washer (#C) then the lock washer (#B) and the hex nut (#F), in that order onto the bolts (#E). Secure within the side rails (#4) by using the wrench (#G).

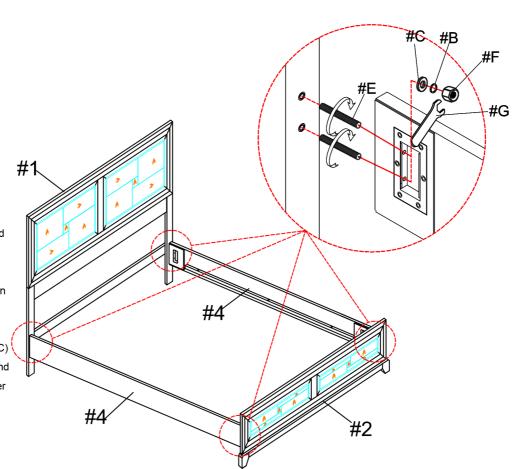



Align the threaded end of the slat support legs (#5) with the pre-drilled holes of the slats (#3) and tighten by hand until secured. Repeat the process for the remaining support legs (#5).

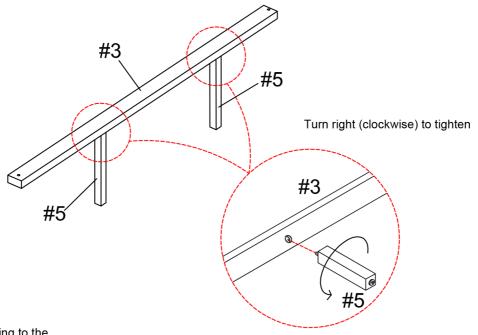


Adjust the leveler according to the ground level. To lower or to raise the slat support leg, you need to turn the leveler clockwise or counterclockwise, respectively.

x 4




#H x 8pcs

Align the ends of the slats (#3) with the pre-drilled holes on each side of the side rails (#4). Secure 8 screws (#H) onto each end of the slats (#3) by using a Phillips screwdriver.

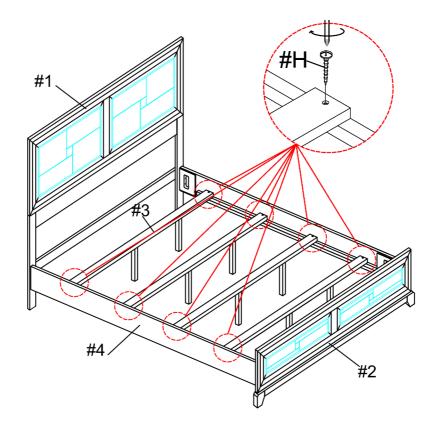



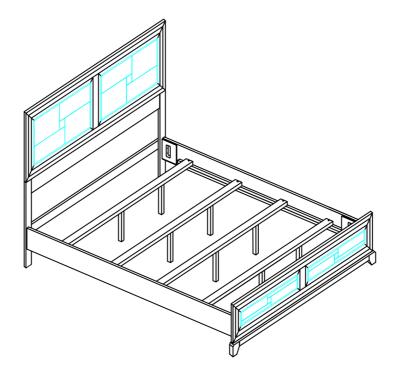

ASSEMBLY IS COMPLETED