
Assembly Instructions


Sofa

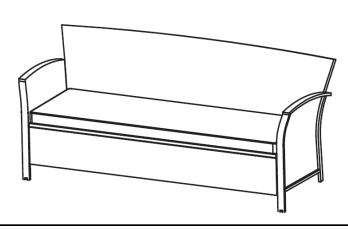

Parts List				
Label	Picture	Description	QTY	
А		Backrest	1	
В		Left Armrest	1	
С		Right Armrest	1	
D		Sofa Seat	1	
E		Seat Front Panel	1	
F		Back Middle Leg	1	
G		Seat Cushion	1	

<u>Hardware</u>			
Label	Picture	Description	QTY
1		Bolt (M6*55mm)	5
2		Bolt (M6*35mm)	5
3		Bolt (M6*20mm)	3
4		Bolt (M6*40mm)	8
(5)	0	Washer Rings	21
6		Allen Key	1

Assembly Preparation

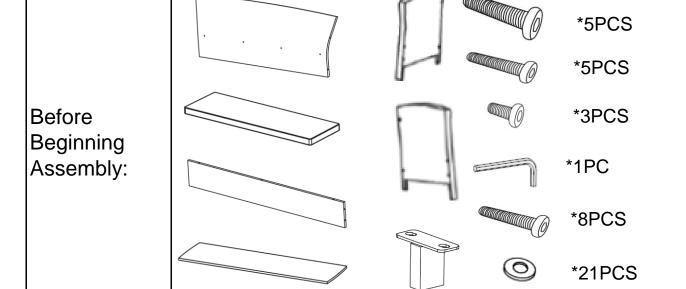



Read instructions, cover to cover-



Have 2 adults on hand for assembly-



Do not assemble on flooring or carpet-




Assemble on a clean non-marring surface (packing foam)-




Save all packaging until finished-

Assembly Steps

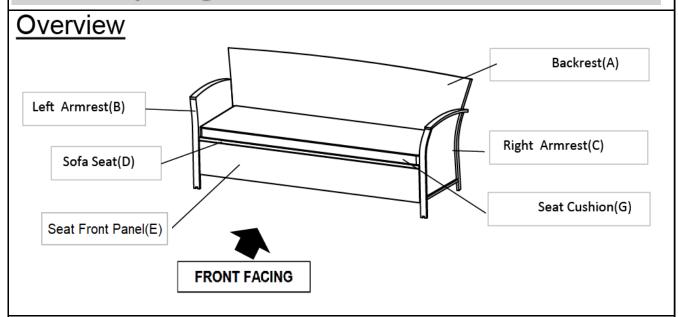

This Sofa has multiple parts and may require up to some 30 minutes to assemble. To give you an overview of the Sofa parts, the above picture is to help you put the various parts into perspective. Please read through the instructions here below to familiarise yourself with the parts and steps before assembly.




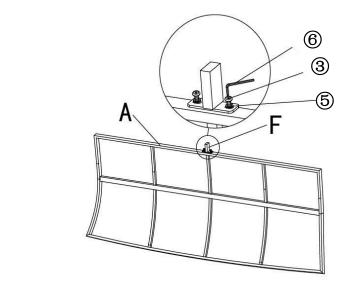

Open the carton and place all the parts onto a clean and soft surface. Unpack all packages of hardware.

Attach the Back Middle Leg(F) to Backrest (A) using Bolts (③) and Washers (⑤) with Allen Key (⑥) as shown in Picture.

DO NOT FULLY TIGHTEN THE BOLTS.

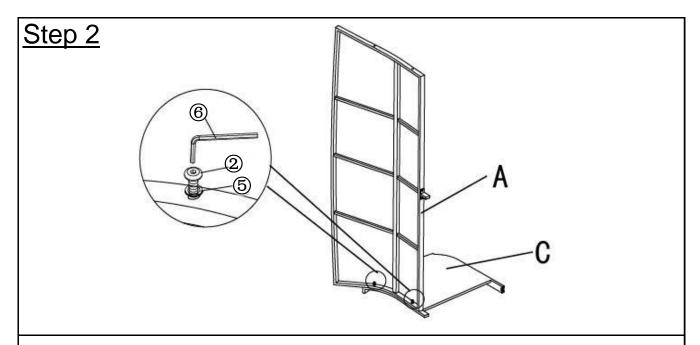


Attachthe Backrest (A) to Right Armrest (C) using Bolts (②) and Washers (⑤) with Allen Key (⑥) as shown in Picture.

DO NOT FULLY TIGHTEN THE BOLTS.

ATTENTION: There may be some PE wicker that may have covered the bolt points.

To ease assembly, guide and slide the PE wicker away from the mounting positions.


DO NOT CUT AWAY any PE WICKER as this would cause the wicker to unravel!

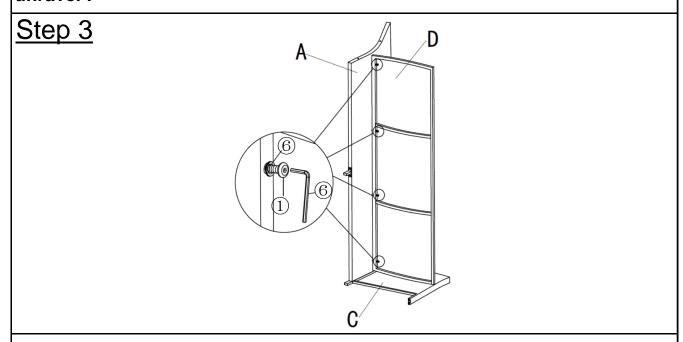

Attach Sofa Seat (D) to the Right Armrest (C) and Backrest(A) using Bolts (①) and Washers (⑤) with Allen Key (⑥) as shown in Picture.

DO NOT FULLY TIGHTEN THE BOLTS.

Step 4

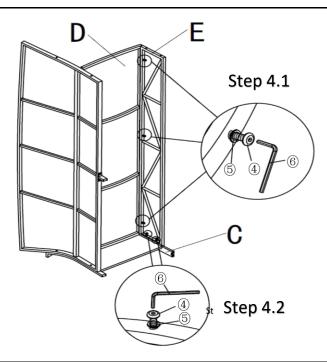


Place the Seat Front Panel (E) as picture showed above and affix to Sofa Seat (D) and Right Armrest (C).

- 4.1) Attach Seat Front Panel(E) to Sofa Seat (D) using Hardware Bolt(4) and Washer(5) with Allen Key(6) as shown above
- 4.2) Attach Seat Front Panel (E) to Right Armrest (C) using Bolts (4) and Washers (5) with Allen Key(6) as shown above

DO NOT FULLY TIGHTEN THE BOLTS.


Step 5

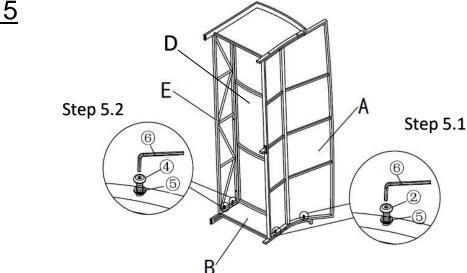

Place Left Armrest (B) against Backrest (A), Sofa Seat (D) and Front Panel (E). 5.1) Attach the Left Armrest (B) to Backrest(A) using Bolts (②) and Washers

- (⑤)with Allen Key(⑥)as shown above
- 5.2) Attach the Left Armrest(B) to Seat Front Panel (E) using Bolts (4) and Washers (5) with Allen Key (6) above

DO NOT FULLY TIGHTEN THE BOLTS.

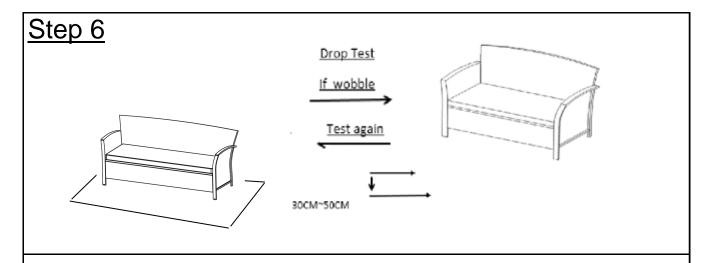

With the help of your adult partner, place the Chair on a level surface to check for wobbles.

If it wobbles, lift the Chair some 30cm to 50cm high from the ground.

Keep your feet and toes well away from the drop zone.

Drop the Chair freely and vertically with all four legs, hitting the ground, all at the same time.

This Drop Test will help to ensure that all the Bolts and gaps reach full alignment status.

Test again for evenness on a level surface.

If no wobbles are found, slowly and steadily, place the Chair facedown.


Then, proceed to tighten all Bolts at all joints in a sequential manner.

When tightening the Bolts, tighten sequentially.

DO NOT tighten any Bolt fully and then move on towards the next one.

This could cause the frame to warp. If there are still wobbles, loosen the Bolts and execute the same drop test.

If the Chair is not stable, it could lead to damage to the product.

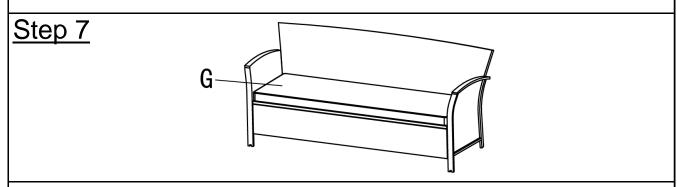

Put the Seat Cushion (G) on the Sofa.

Your sofa is ready for use.

The Sofa can only be used on the flat and level surface.

Care & Maintenance



 Prolonged exposure to rain may cause rusting which can stain floors.



Do not put hot items directly on furniture surface.



• Do not clean furniture with harsh cleansers or polish.



• To obtain the longest lifespan of your outdoor products, minimizing exposure to direct sunlight is recommended.



Children should not climb or jump on the furniture



 Do not write on furniture without a padded barrier to protect the surface.



• To obtain the longest lifespan of your outdoor products, avoid extended and lengthy exposure to rain, snow, and direct sunshine. Whenever possible cover the product and /or place under patio or awnings.



• Not for commercial use. For residential use only.



• Stains may be removed with mild soap solution and damp cloth.



Keep away from sources of ignition.



• Dust and pick-up spills using a clean, non-colored, lint-free cloth.