
ASSEMBLY INSTRUCTIONS

DGWD-V1


FTLFCT-6027 FTLFCT-6028 FTLFCT-6029

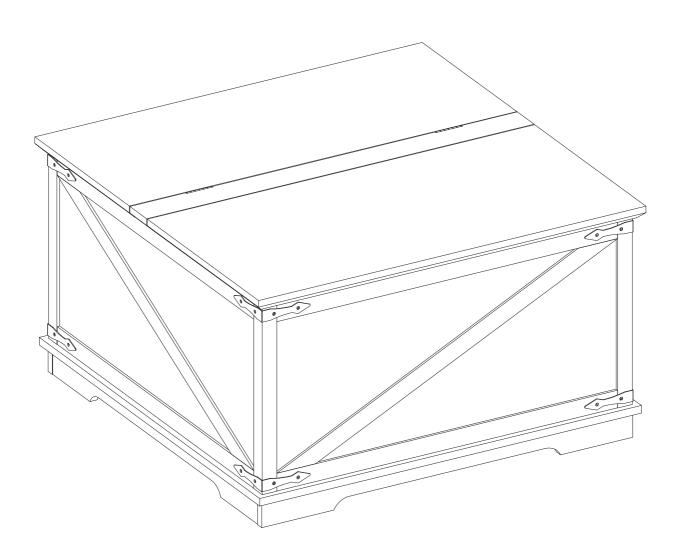


COFFEE TABLE


Notice:


- 1. Follow the installation instructions. Please confirm all accessories are preset before installation.
- 2.Do not fully tighten the screws during initial assembly. Fully tighten screws only once all pieces which are correctly assembled.
- 3.If you encounter any problems during installation, please contact our customer service.

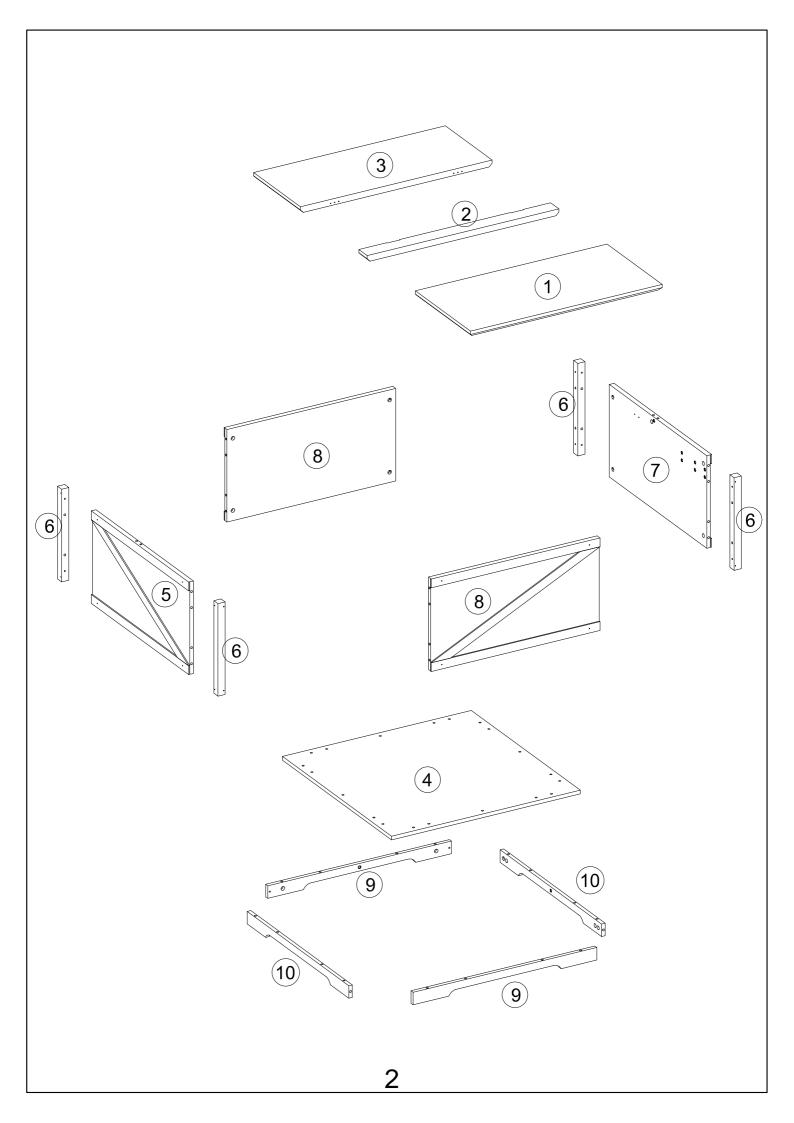


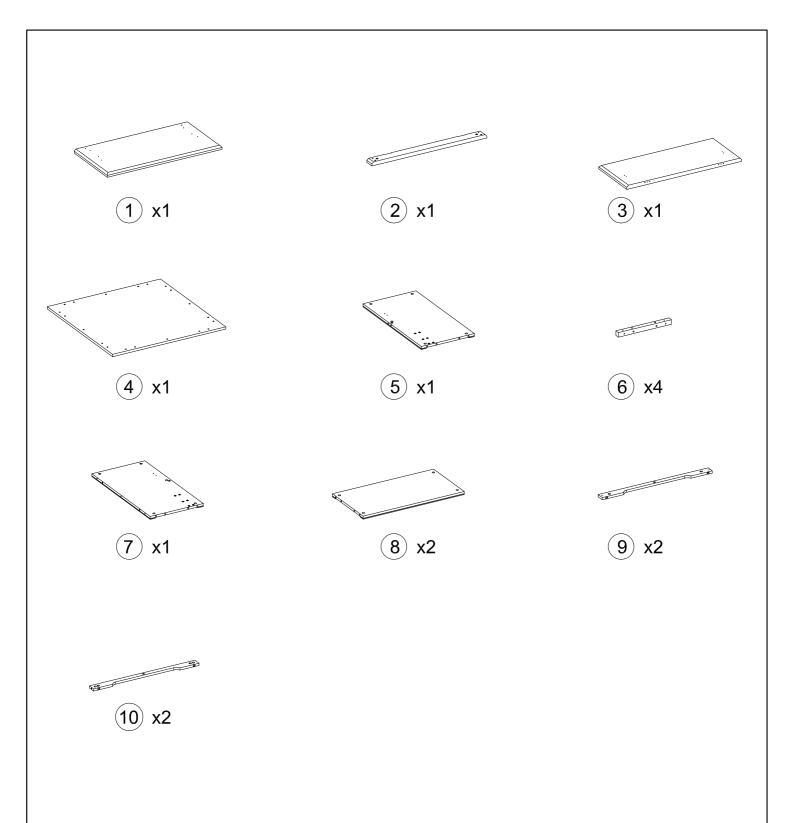



Α	x30	В	x30	С	x34	D	x12	Е	x30
						<i>ammm</i> ®		0	
Ø6x35mm		Ø15x11mm		Ø8x30mm		Ø6.7x48mm		Ø30mm	
F	x20	G	x8	Н	x1	I	x24	J	x6
-anning(%)		(g)						(O 0)	
Ø4x15mm		Ø5x14mm		M4x57mm		M6x12mm		25x25mm	
K	x8	L	x2	М	x1	N	x1	0	x1
000									
100x100mm		50x22mm							
Р	x1	Q	x1	R	x2	S	x4	Т	x4
				60		O			
						1			
U	x8	V	x1	X	x32				
		TI TI							
			Ø6x15mm						

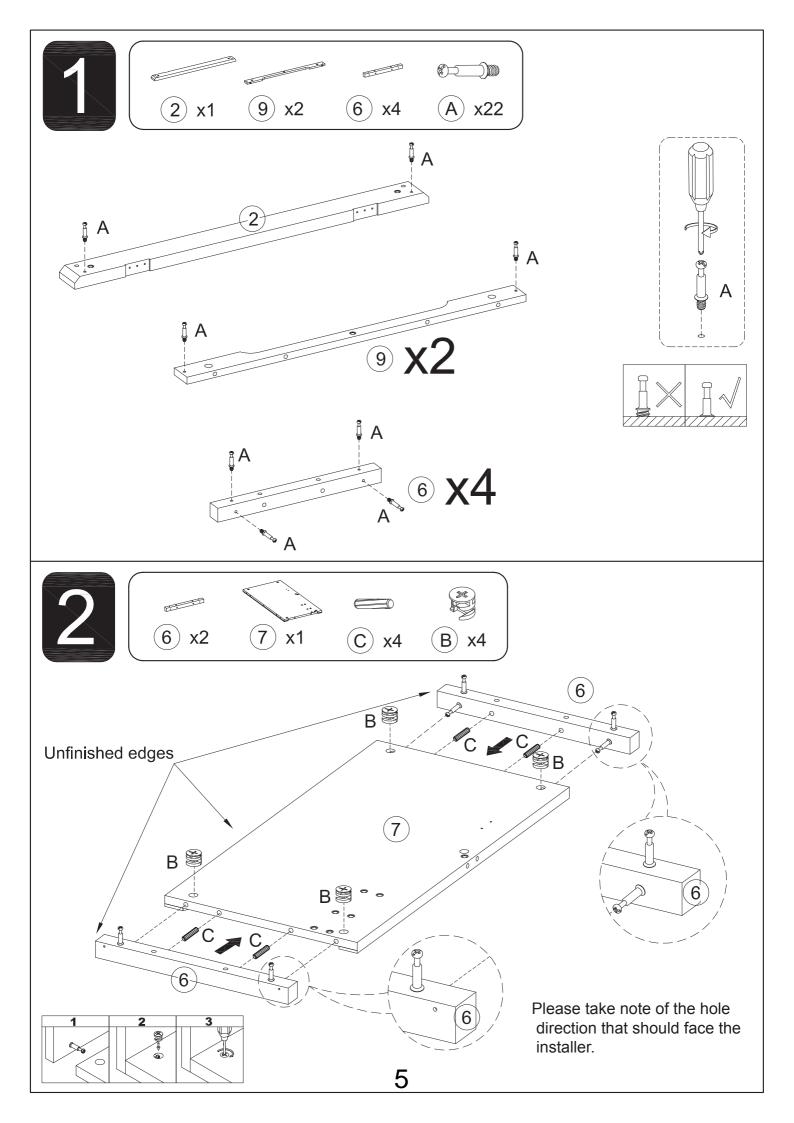


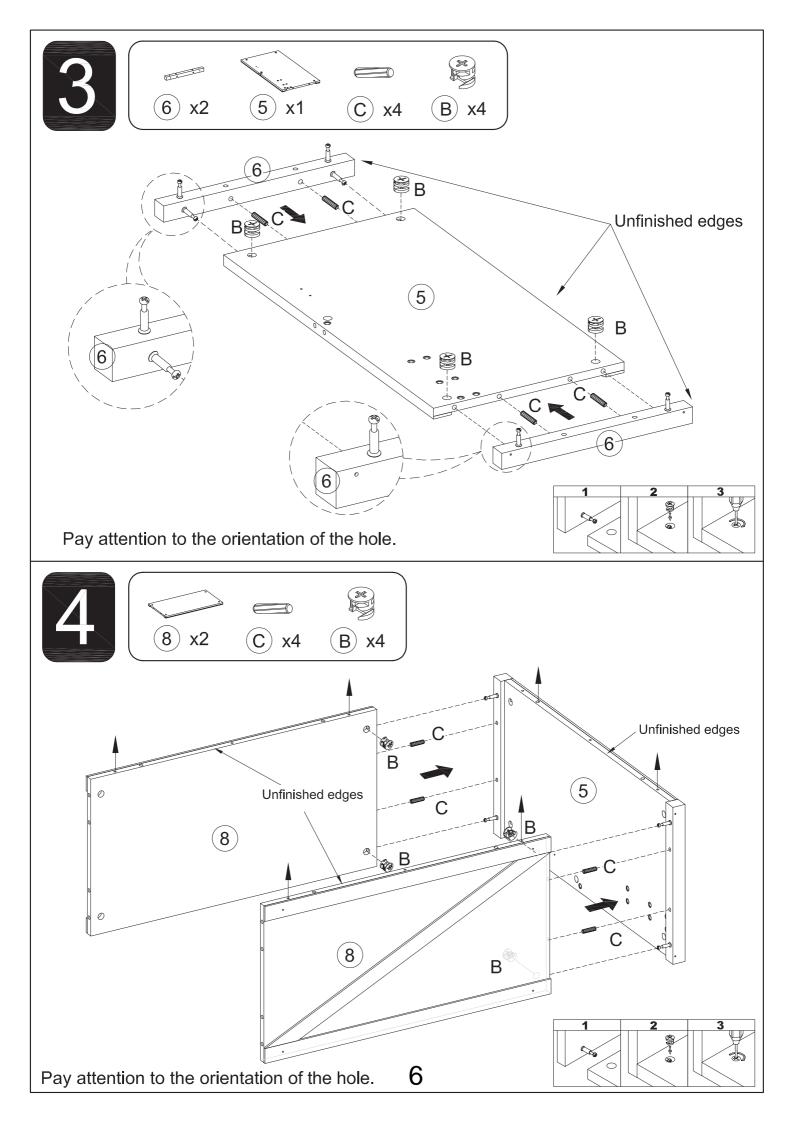


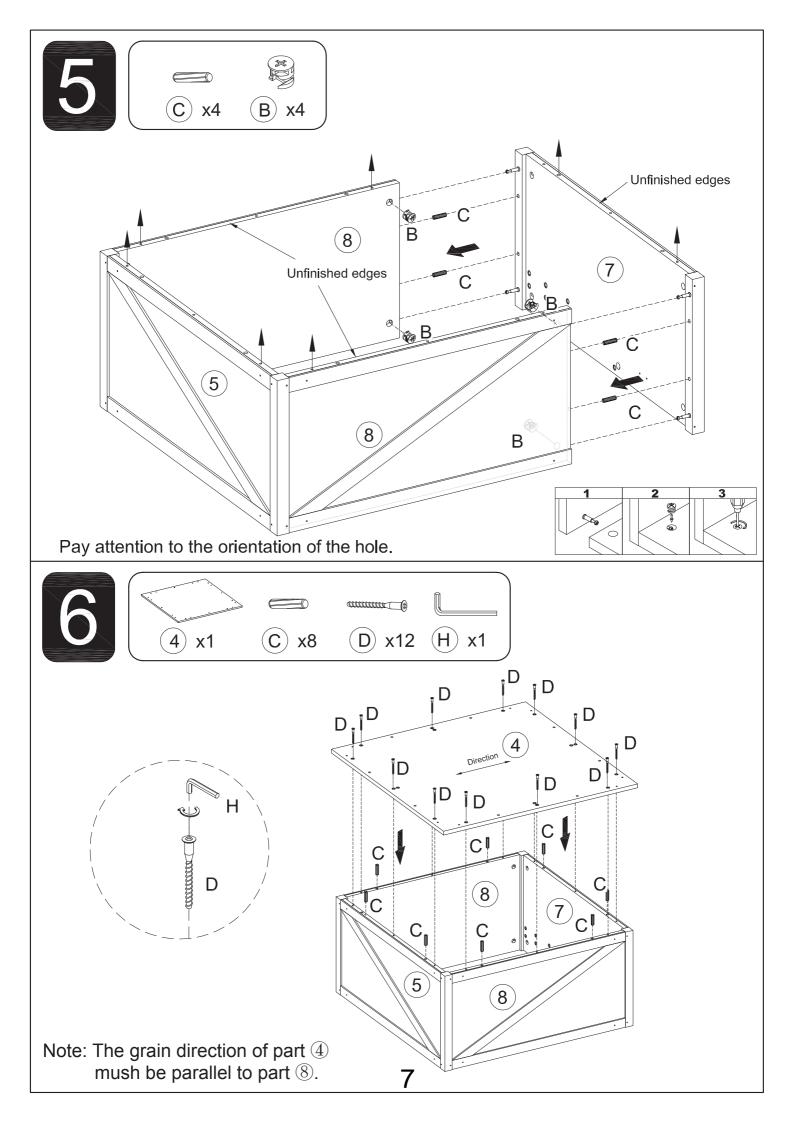


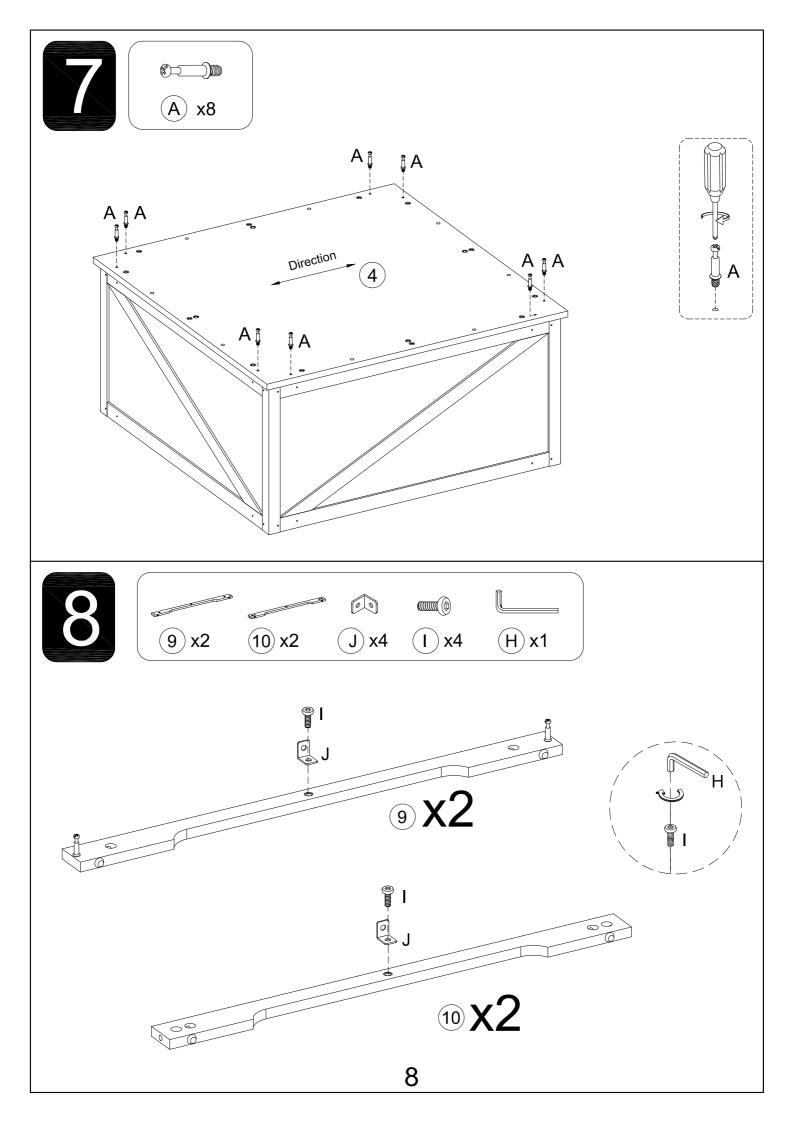


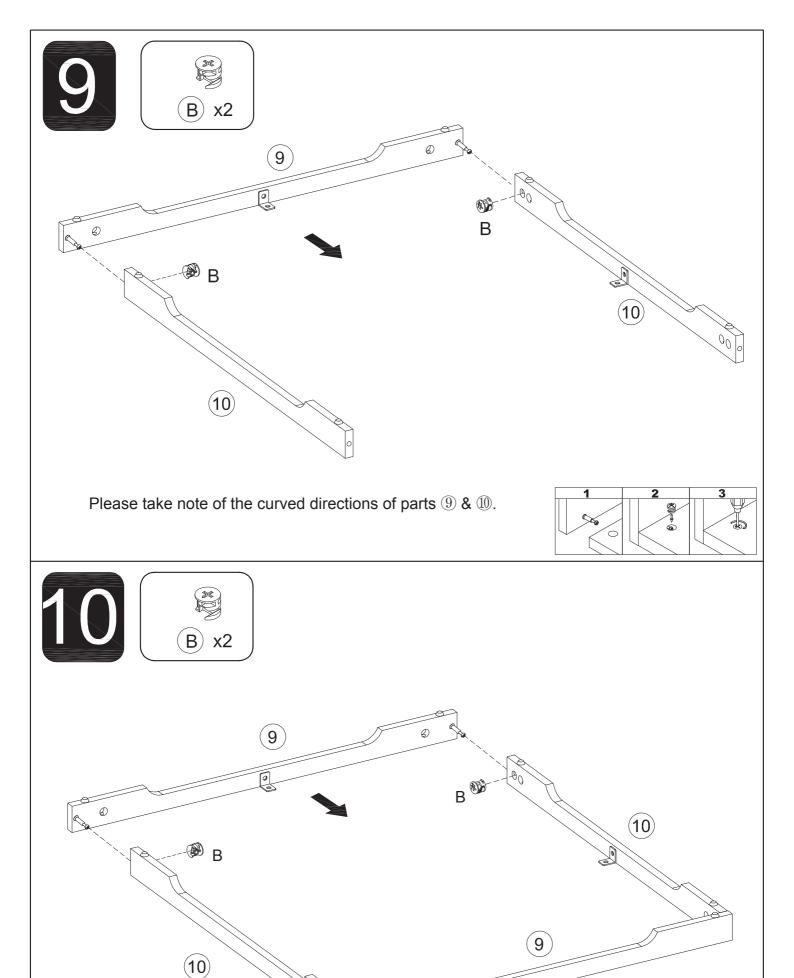


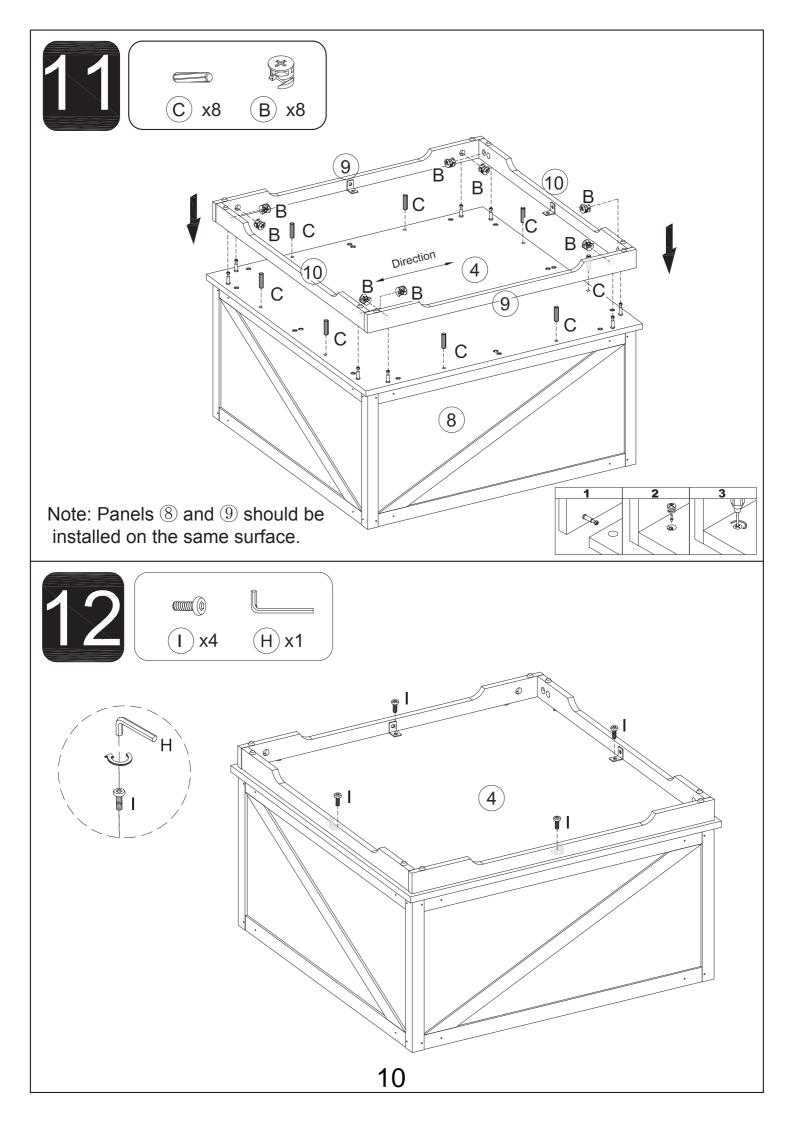


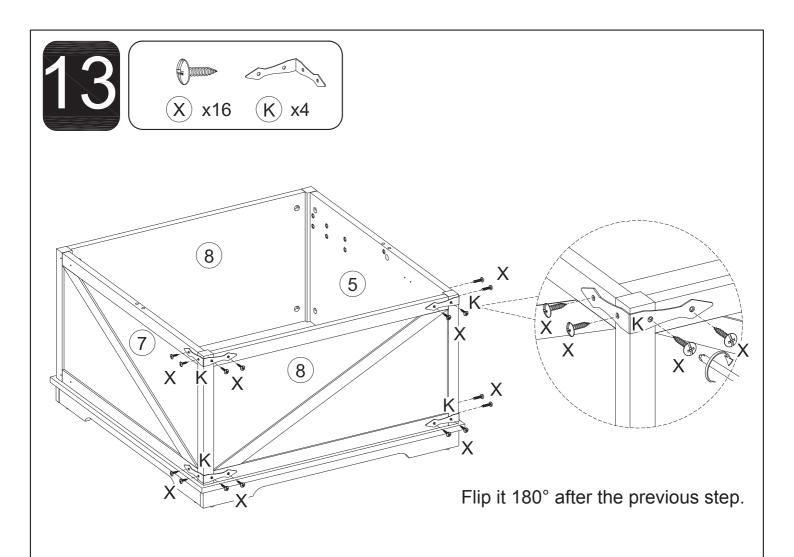


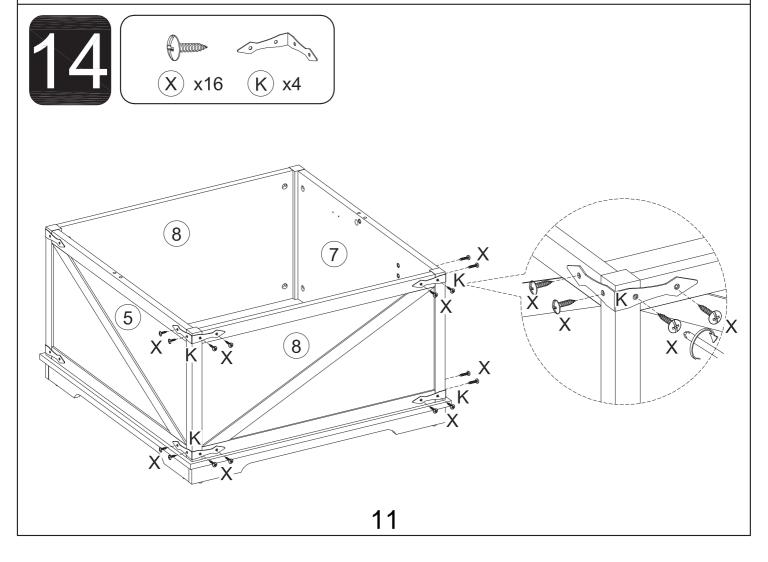

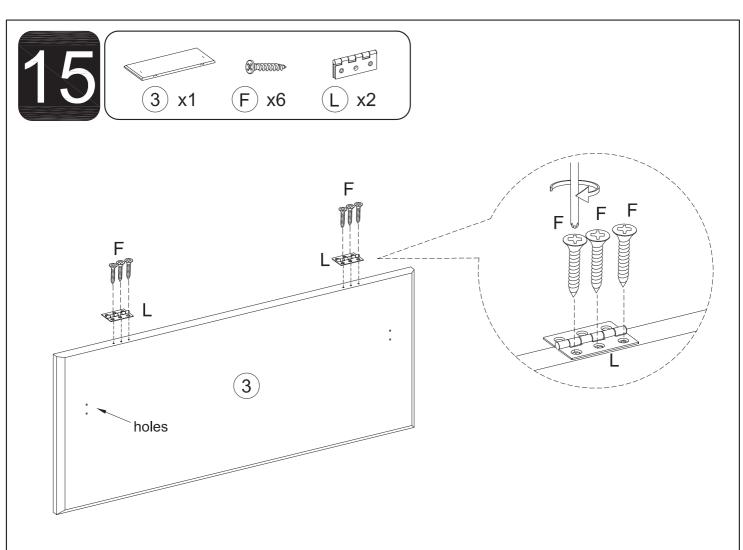


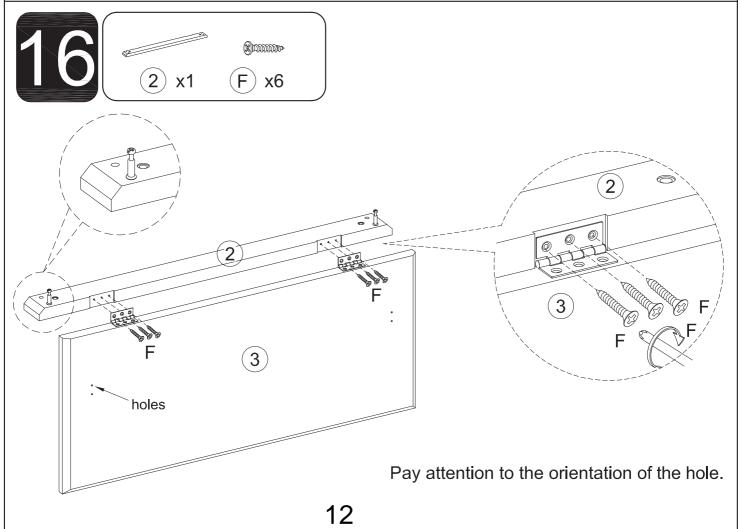

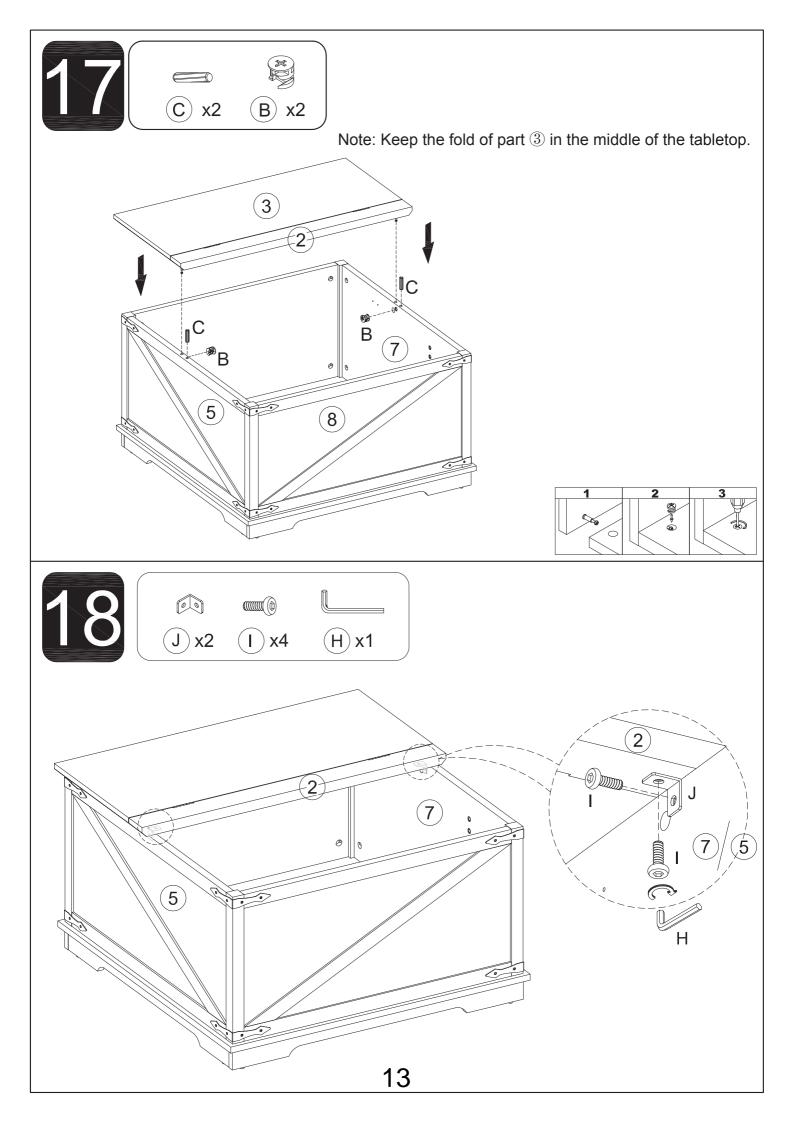


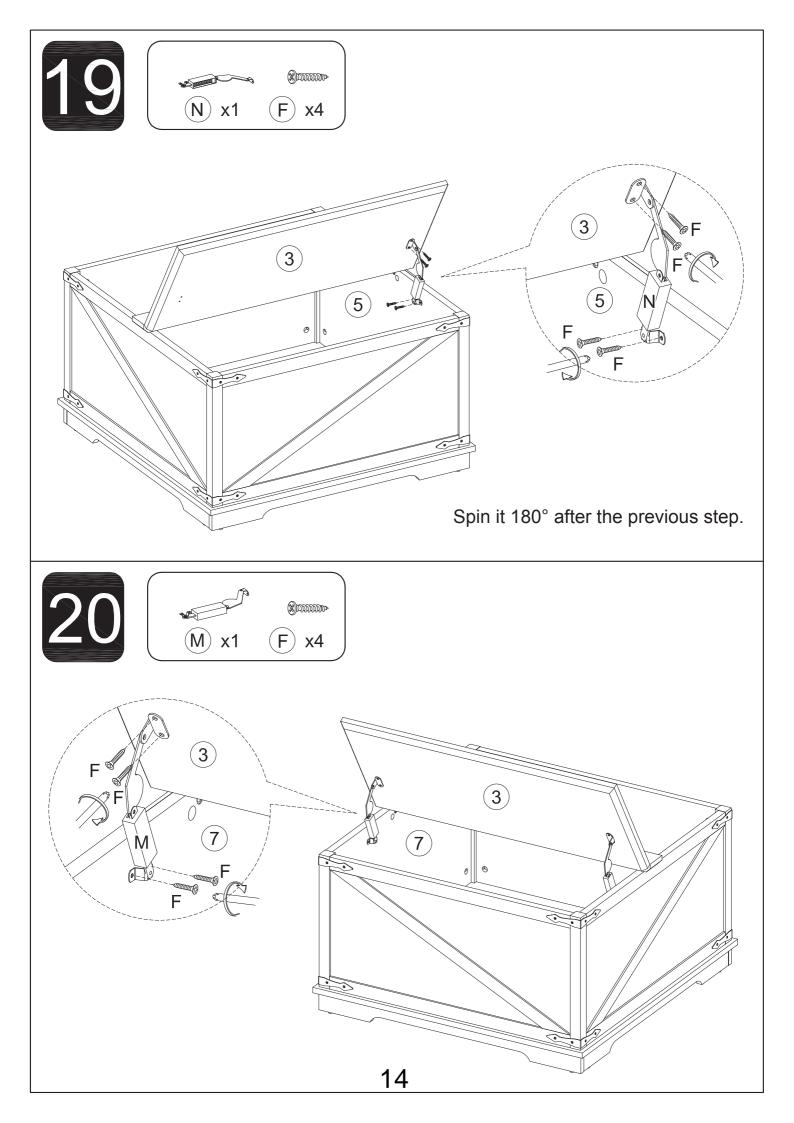








Tips: It's easier to install this lifting mechanism by loosening one screw of the hydraulic rod.

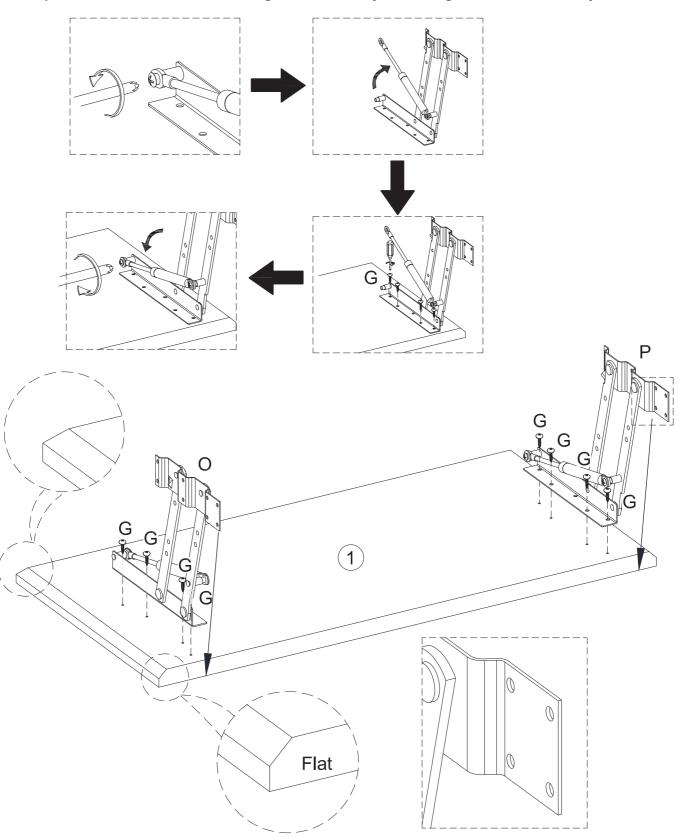


The side of part O/P with 4 holes and the flat side of panel ${\mathbin{\textcircled{1}}}$ should be on the same side.

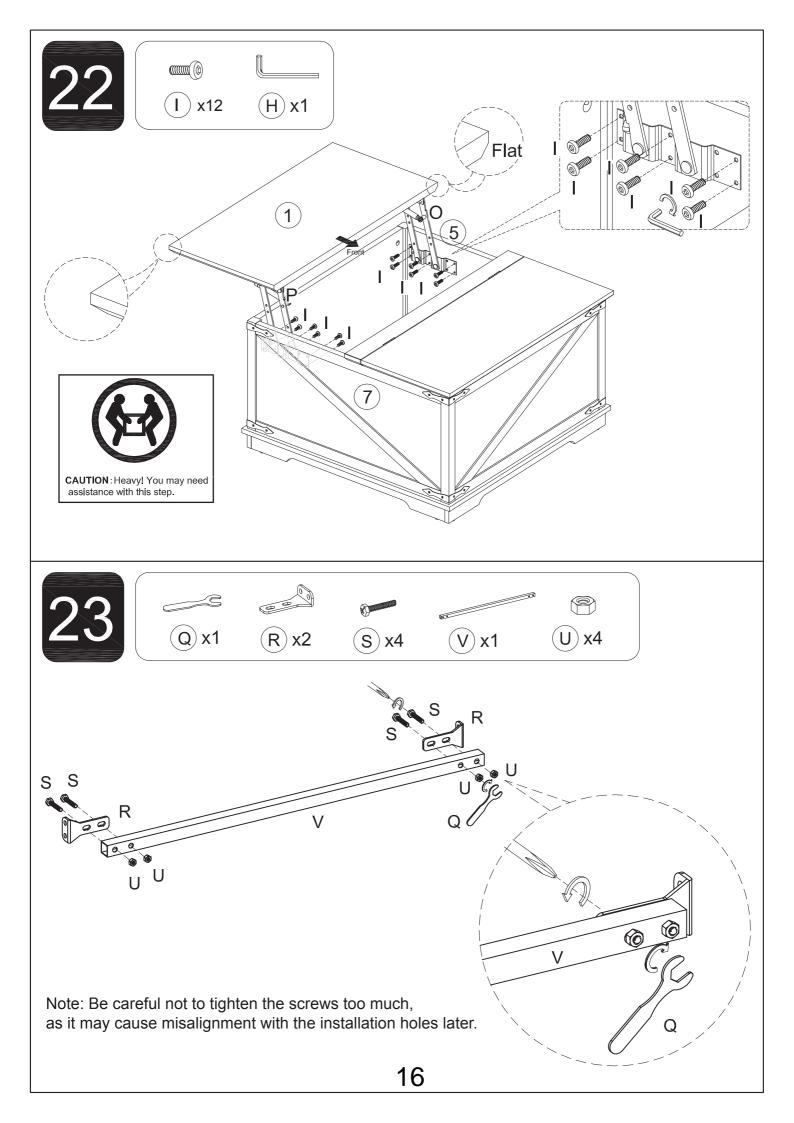

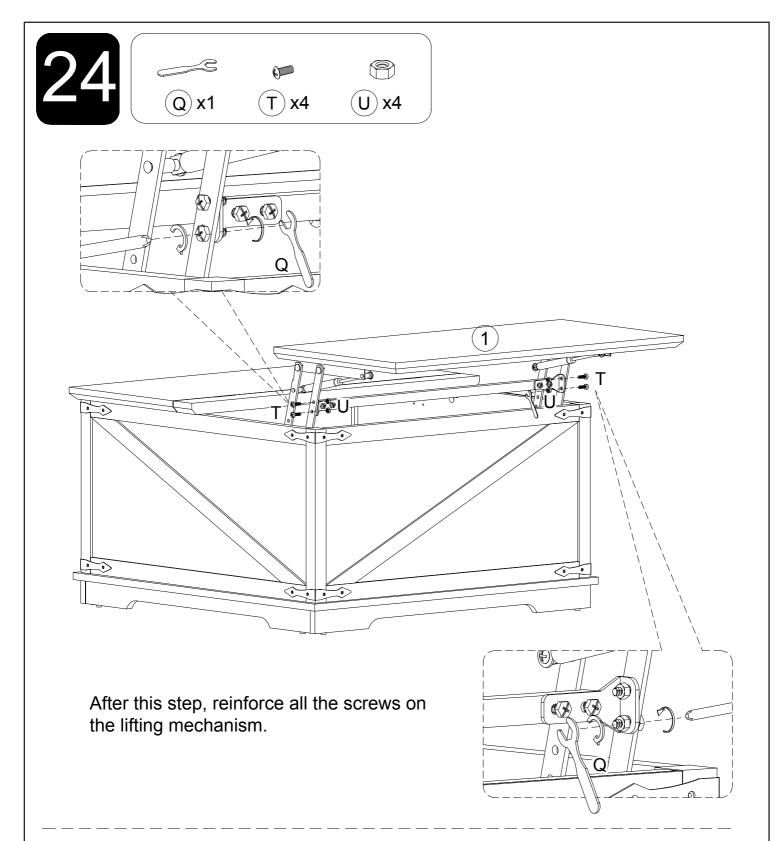





.Stick stickers (E) on cam locks (B).