

# Assembly Instructions

**Caution: You must read this before you proceed**

## Care & Maintenance



- Not for commercial use. For residential use only.



- Furniture may scratch floors. We recommend using furniture pads to protect your floors.



- Do not put hot items directly on furniture surface.



- Do not clean furniture with harsh cleansers or polish.



- Do not place furniture under direct sunlight.



- Do not place furniture near heating or cooling vents.



- Do not write on furniture without a padded barrier to protect the surface.



- Do not place furniture outside . For indoor use only.



- Stains may be removed with mild soap solution and damp cloth.




- Children should not climb or jump on the furniture.





- Dust and pick-up spills using a clean, non-colored, lint-free cloth.

# Reclining

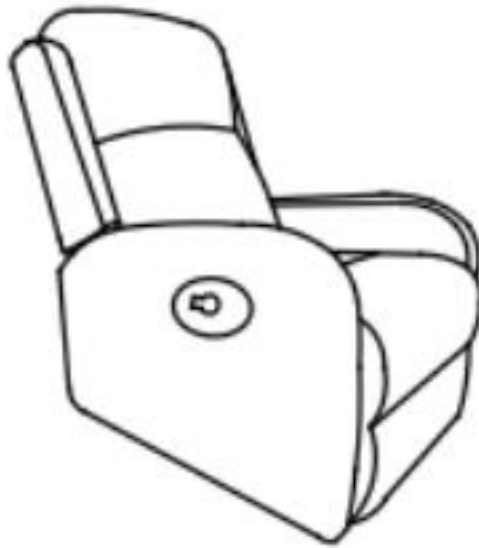




## Parts List

Label	Picture	Description	QTY
A		Chair Base	1
B		Chair Backrest	1

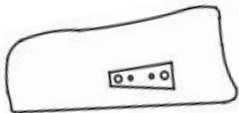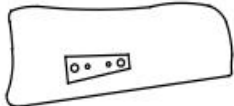C		Left Wing	1
D		Right Wing	1

## Assembly Preparation

Before  
Beginning  
Assembly:

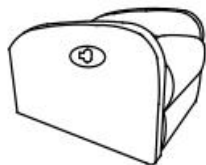

- Read instructions, cover to cover-



- Have 2 adults on hand for assembly-



- Do not assemble on flooring or carpet-




- Assemble on a clean non-marring surface (packing foam)-



- Save all packaging until finished-

## Assembly Steps

## Overview

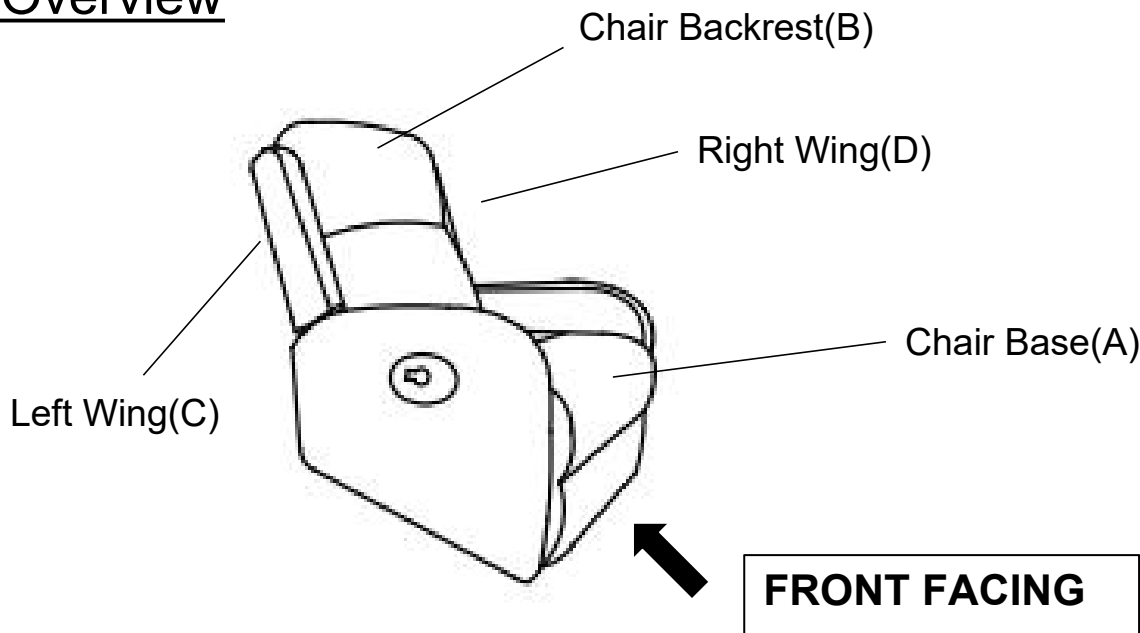


This Chair has multiple parts and may require about 15 minutes to assemble.

To give you an overview of the Chair parts, the above picture is to help you put the various parts into perspective.

Please read through the instructions below to familiarise yourself with the parts and steps before assembly.


### Step 1

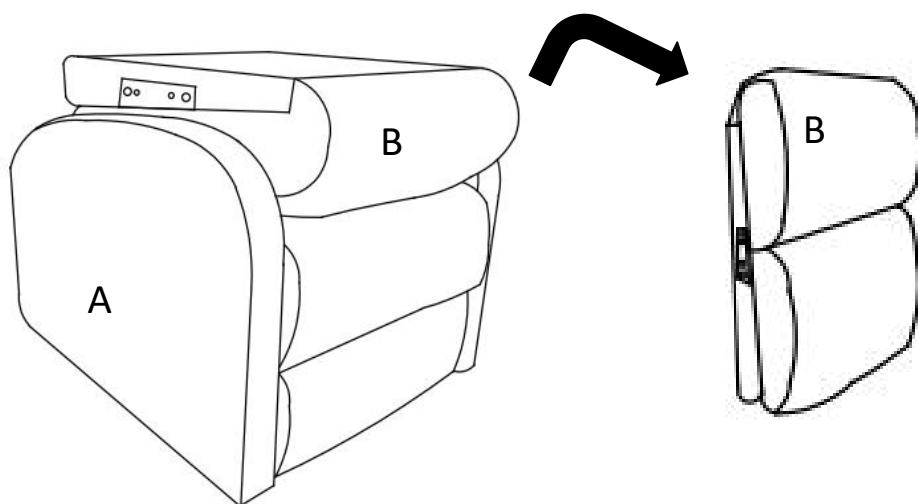

Take out the Chair Backrest(B) from Chair Base (A).


Place the Chair Base(A) facedown on a clean, non-marring surface.

## Step 2

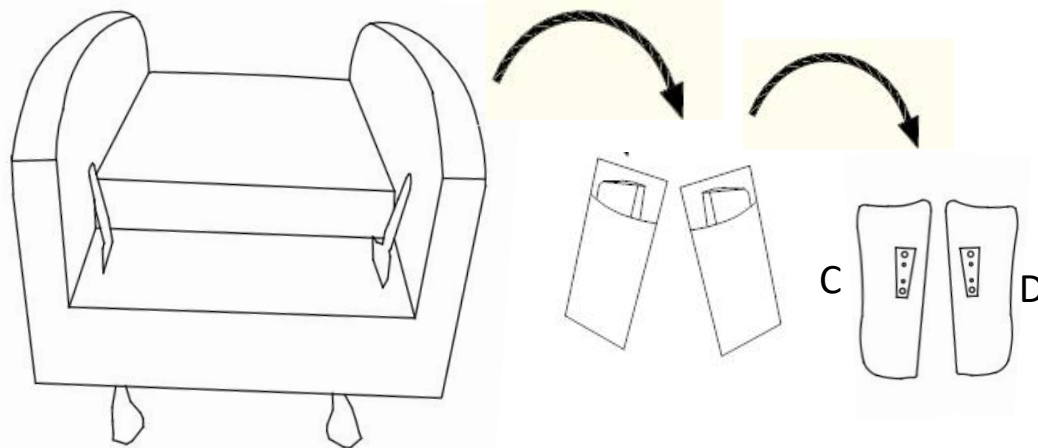


Take out the both non-wovens from the bottom of chair base(A) and open the non-woven bags to take out Left Wing(C) and Right Wing(D).

## Step 3

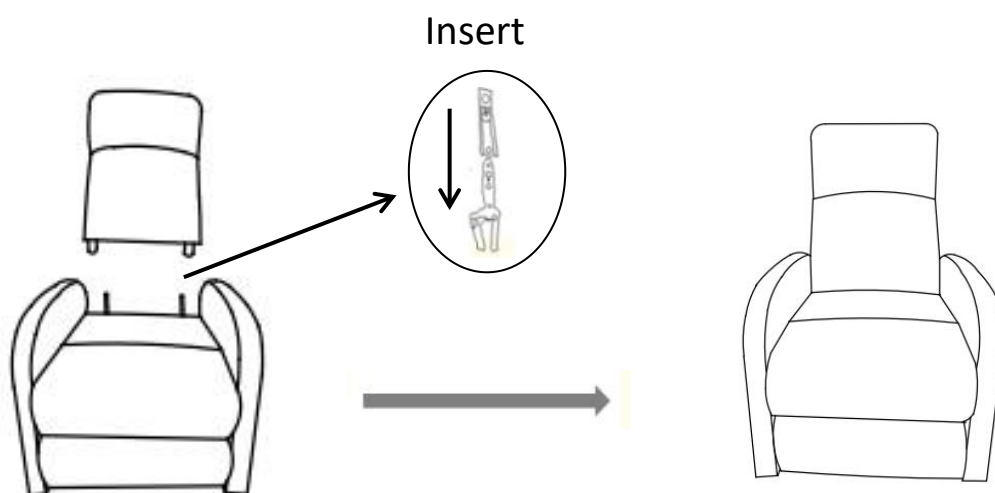

With assistance from your adult partner, hold up the fully assembled backrest ,stand behind the chair.  
Insert the small metal arms on the sides of the Chair Backrest into the prefabricated slide lock gadget on the Chair Base as shown above.  
Firmly but gently, push the Chair Backrest downwards until the Backrest is fully slotted and locked into position.

## Step 4

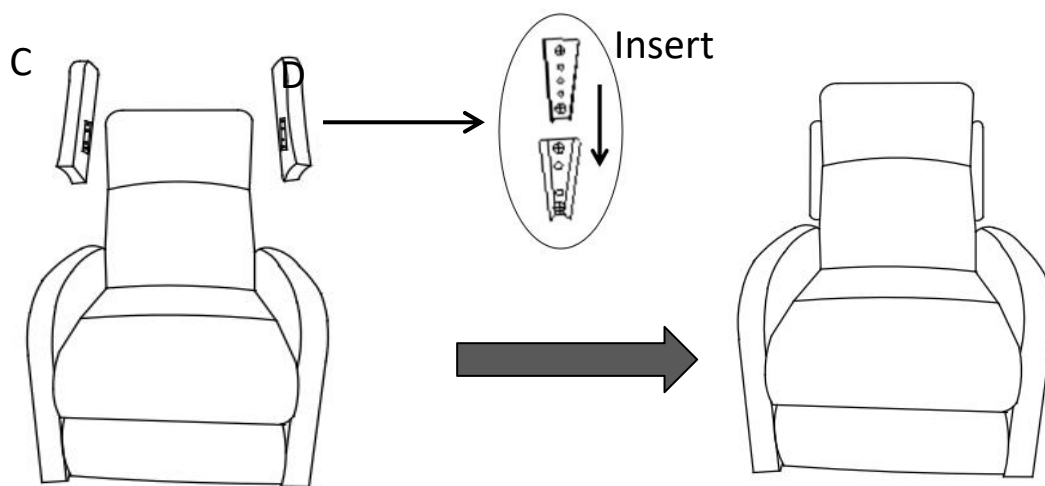


Position the Chair Backrest(B) on it's left side.

Align the mounting brackets of the Left Wing(C) with those on the left side of Chair Backrest(B).

Then slide Left Wing(C) forward by hand to make sure it locks into the position as shown in the picture.

Repeat the process from Step 3 to attach Right Wing(D) to the right side of Chair Backrest(B).


## Step 5

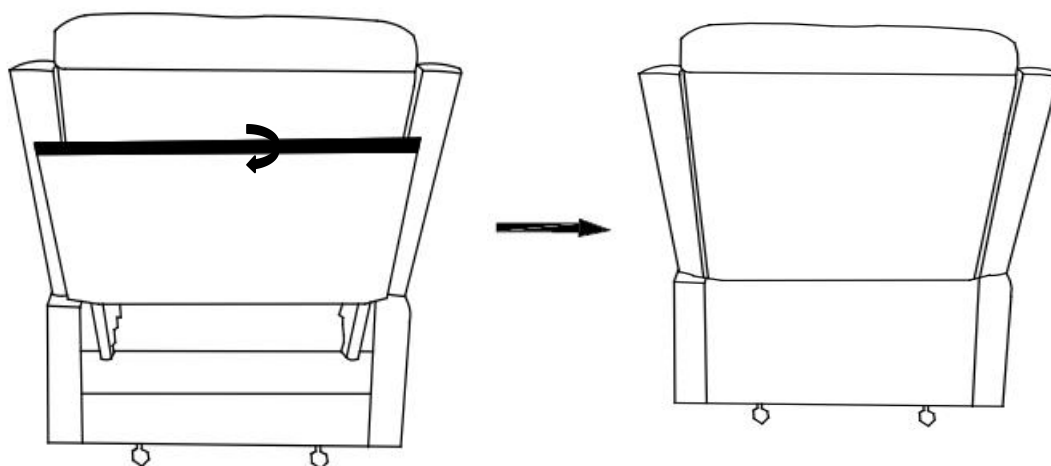

Smooth down the fabric flap on the Chair Backrest(B).

Run your hands down both sides of the flap, from top to bottom, allowing the velcro tape to adhere to the flap under the seat of the chair.

## Step 6

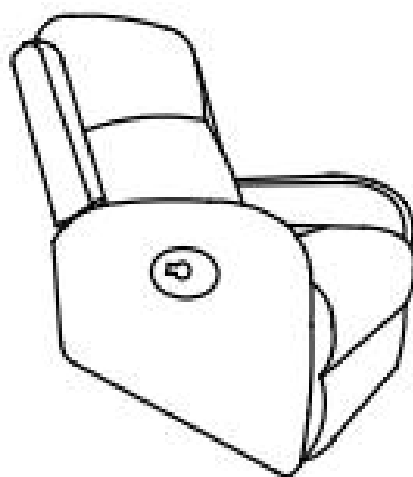


Your Glider Reclining Chair is ready for use.

**This Glider Reclining Chair can only be used on a flat, level surface.**


## Disassembly Instruction

## Step 7

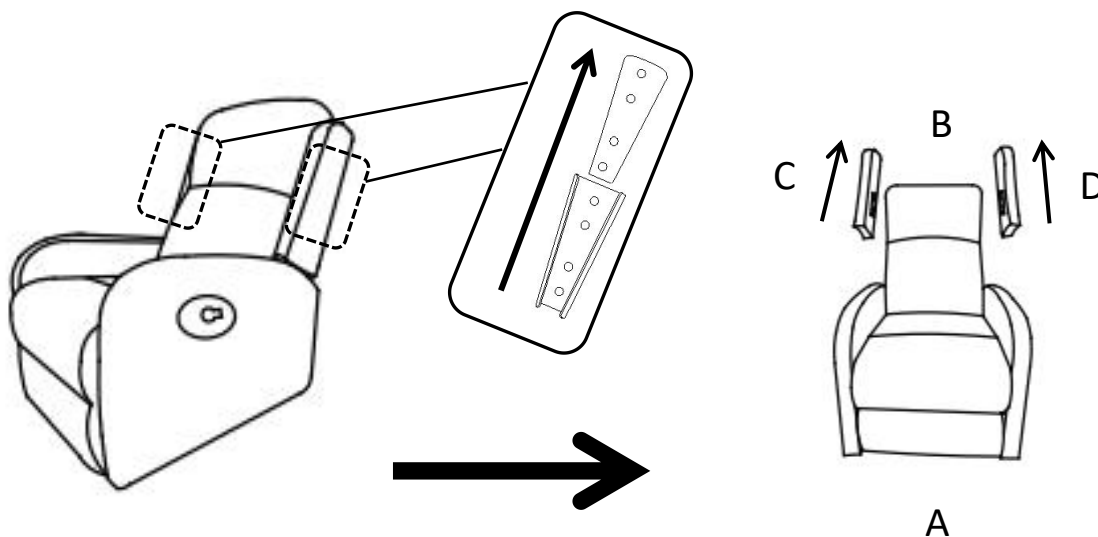

Push up the Right wing(D) and the Left wing(C) one by one until taken off from the Chair Backrest(A).

## Step 8

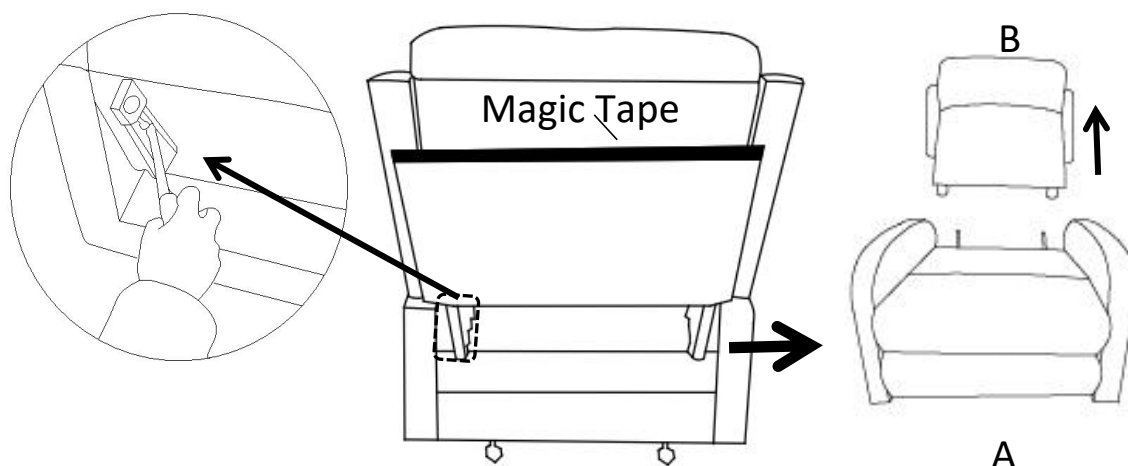

**Disassembly Note:** open the flap on the Chair Backrest(A), use a screwdriver (Don't use fingers) pressing outward on the metal ear on the preattached Metal Bracket on one side of the Chair Base(A), with assistance of you adult partner to keep the Chair Base(A) in place, pull out the Chair Backrest(B) upward at the same time, repeat the same step for another side. Then the Chair Backrest(B) can be taken out.

## Warning



Correct Way to Use



Incorrect Way to Use



Incorrect Way to Use



Incorrect Way to Use

Do not allow children to play on the chair.  
Always leave the chair in an upright and closed position after use.  
Keep hands and feet clear of the footrest mechanism and any gaps.  
Only the occupant should operate the chair.

## User Instructions.



## Recliner Chair

Please read the Instruction Manual below carefully before use.

This is a Recliner Chair. At anytime in a reclined seat position or in the upright position. You may enjoy the rocking motion by using your body weight in a back-front rocking motion.

Supervise children, when in use of this Recliner.

To get into a reclined posture - To Recline backrest

Sit into the seat.

Open the trigger on the outside of right armrest.

Use your body weight and push backwards into the seat into a fully reclined position.



To get out of chair - move Seatback into Upright Position

Tilt your body weight slightly forward and upwards.

The seat back will come up to an upright position.

Use your feet to push the footrest back. You can stand up when the footrest and the mechanism clicked.

**Where necessary, use either your arms help lift- push yourself out of the seat.**

