ASSEMBLY INSTRUCTIONS

5-DRAWER CHEST

A Top Panel

1pc

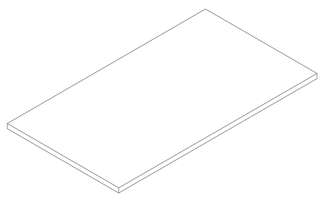

B Side Panel (Left)

1pc



C Side Panel (Right)

1pc



D Bottom Frame

1pc

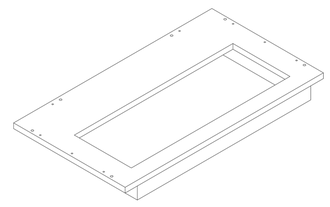

E Back Panel (Edge)

1pc

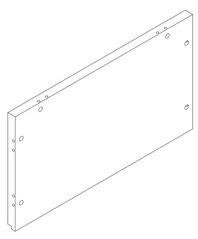

F Back Panel (Center)

1pc

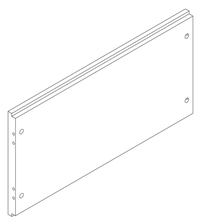

G Center Bar

1pc

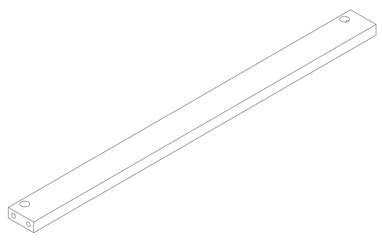

H Small Drawer Side (Left)

1pc

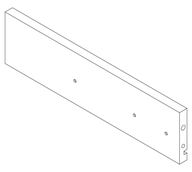

I Small Drawer Side (Right)

2pcs

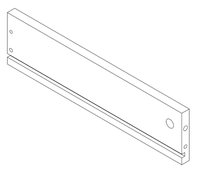

J Small Drawer Front

1pc

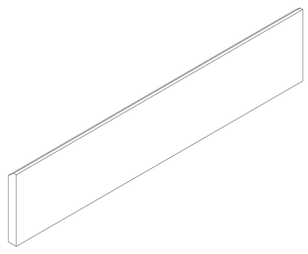

K Small Drawer Back

6pcs

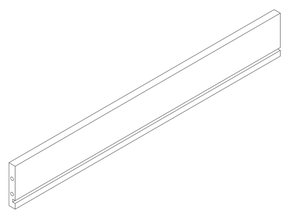

L Big Drawer Side (Left)

2pcs

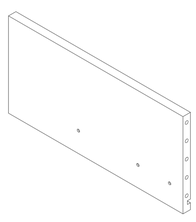

M Big Drawer Side (Right)

2pcs

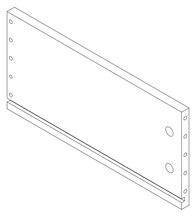

N Big Drawer Front

2pcs

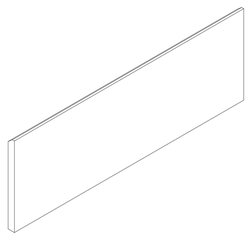

O Big Drawer Back

2pcs

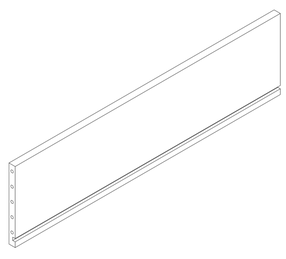

P Drawer Base

3pcs

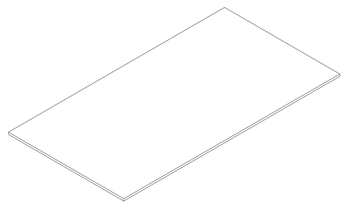

Q Runner 300mm

3pcs

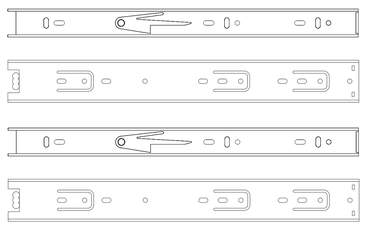

5sets

R Dowel M6 x 30mm

3pcs

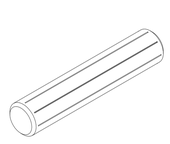

44pcs

S Dowel M8 x 35mm

3pcs

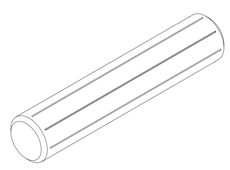

36pcs

T Cam Bolt 5 x 25mm

5pcs

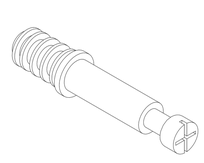

66pcs

U Cam Lock
15 x 12mm



66pcs

V Cam Lock Cover
17 x 5mm

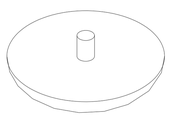

66pcs

W Screw
M3 x 16mm

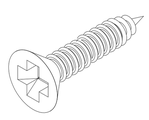

60pcs

X Screw
M4 x 38mm

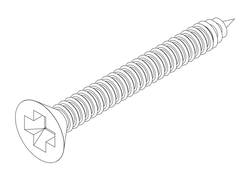

6pcs

Y Anti-Tip Kit

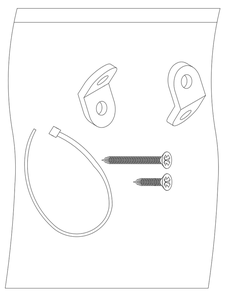

1set

These pages list all the contents included in the box. Please take the time to identify the hardware as well as the individual components to this product. As you unpack and prepare for assembly, place the contents on a carpeted or padded area to protect them from damage.

1 Insert Cam Bolt (T) into the Top Panel (A) and the Bottom Frame (D) with a screwdriver (not provided).

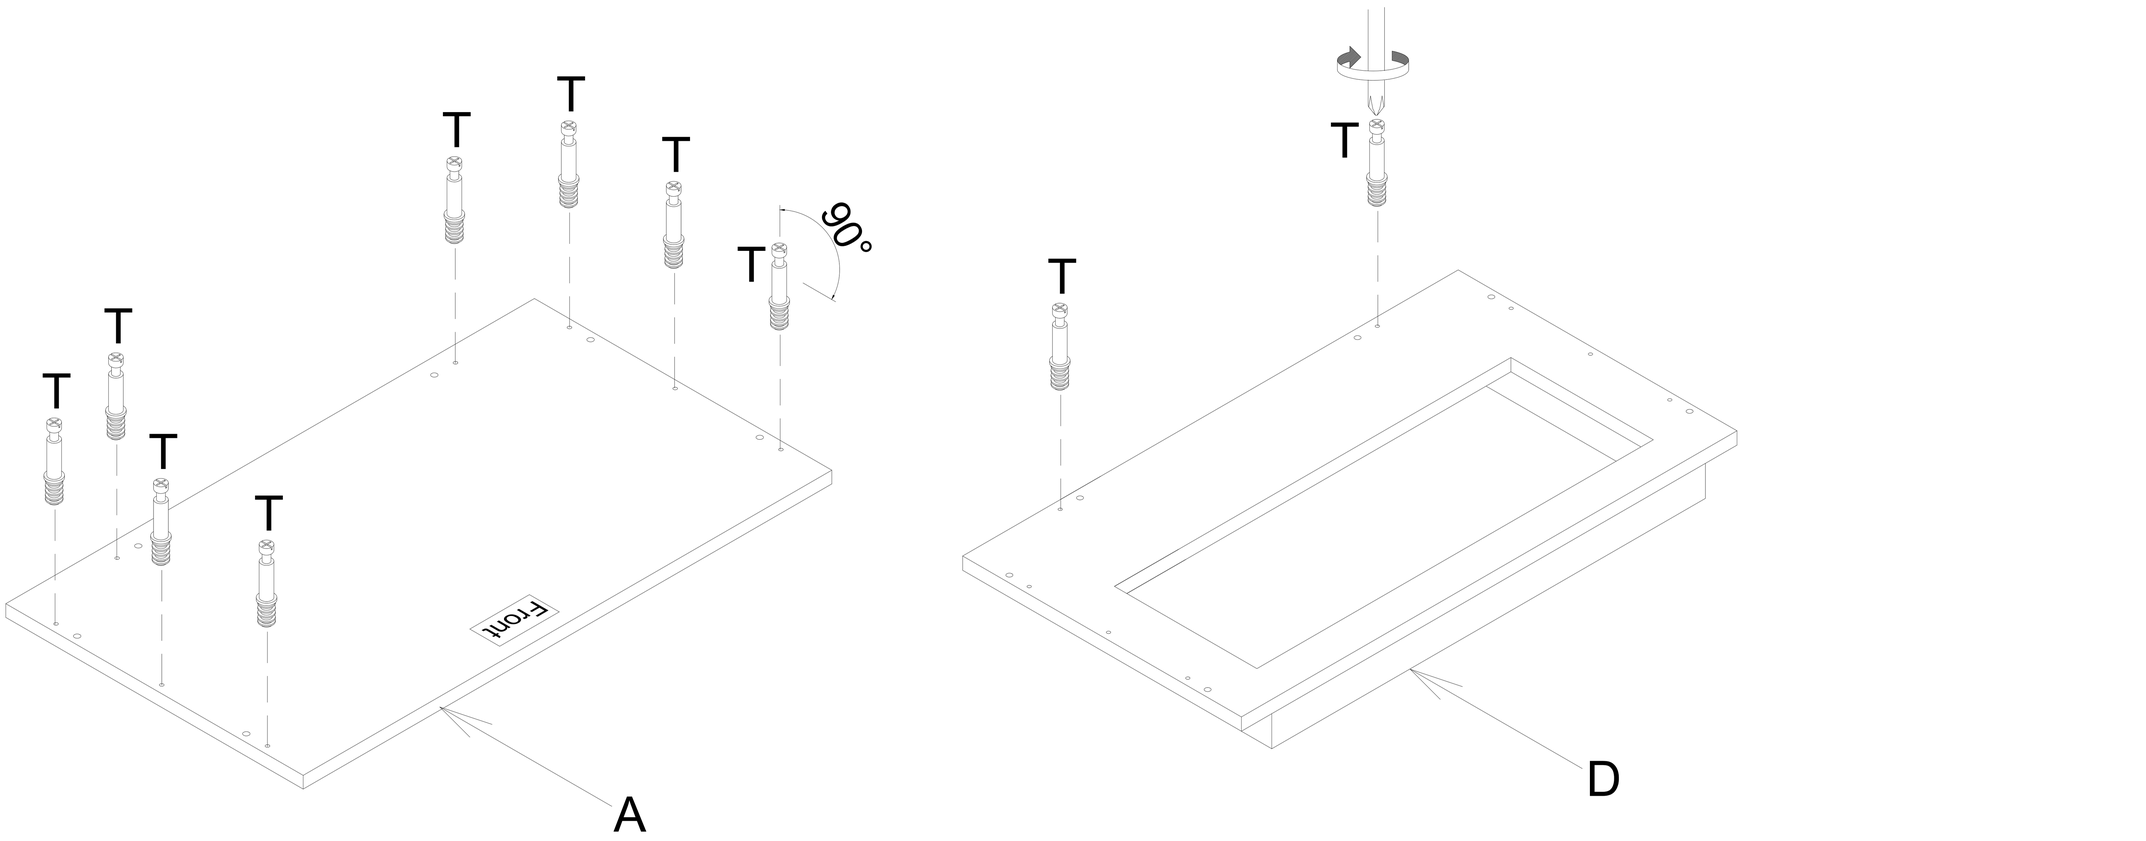

2 Insert Dowel (S), Cam Bolt (T) and Cam Lock (U) into the Left & Right Side Panel (B & C) with a screwdriver (not provided).

NOTE : - Ensure the arrows on each Cam Lock (U) point towards the nearest edge with holes.

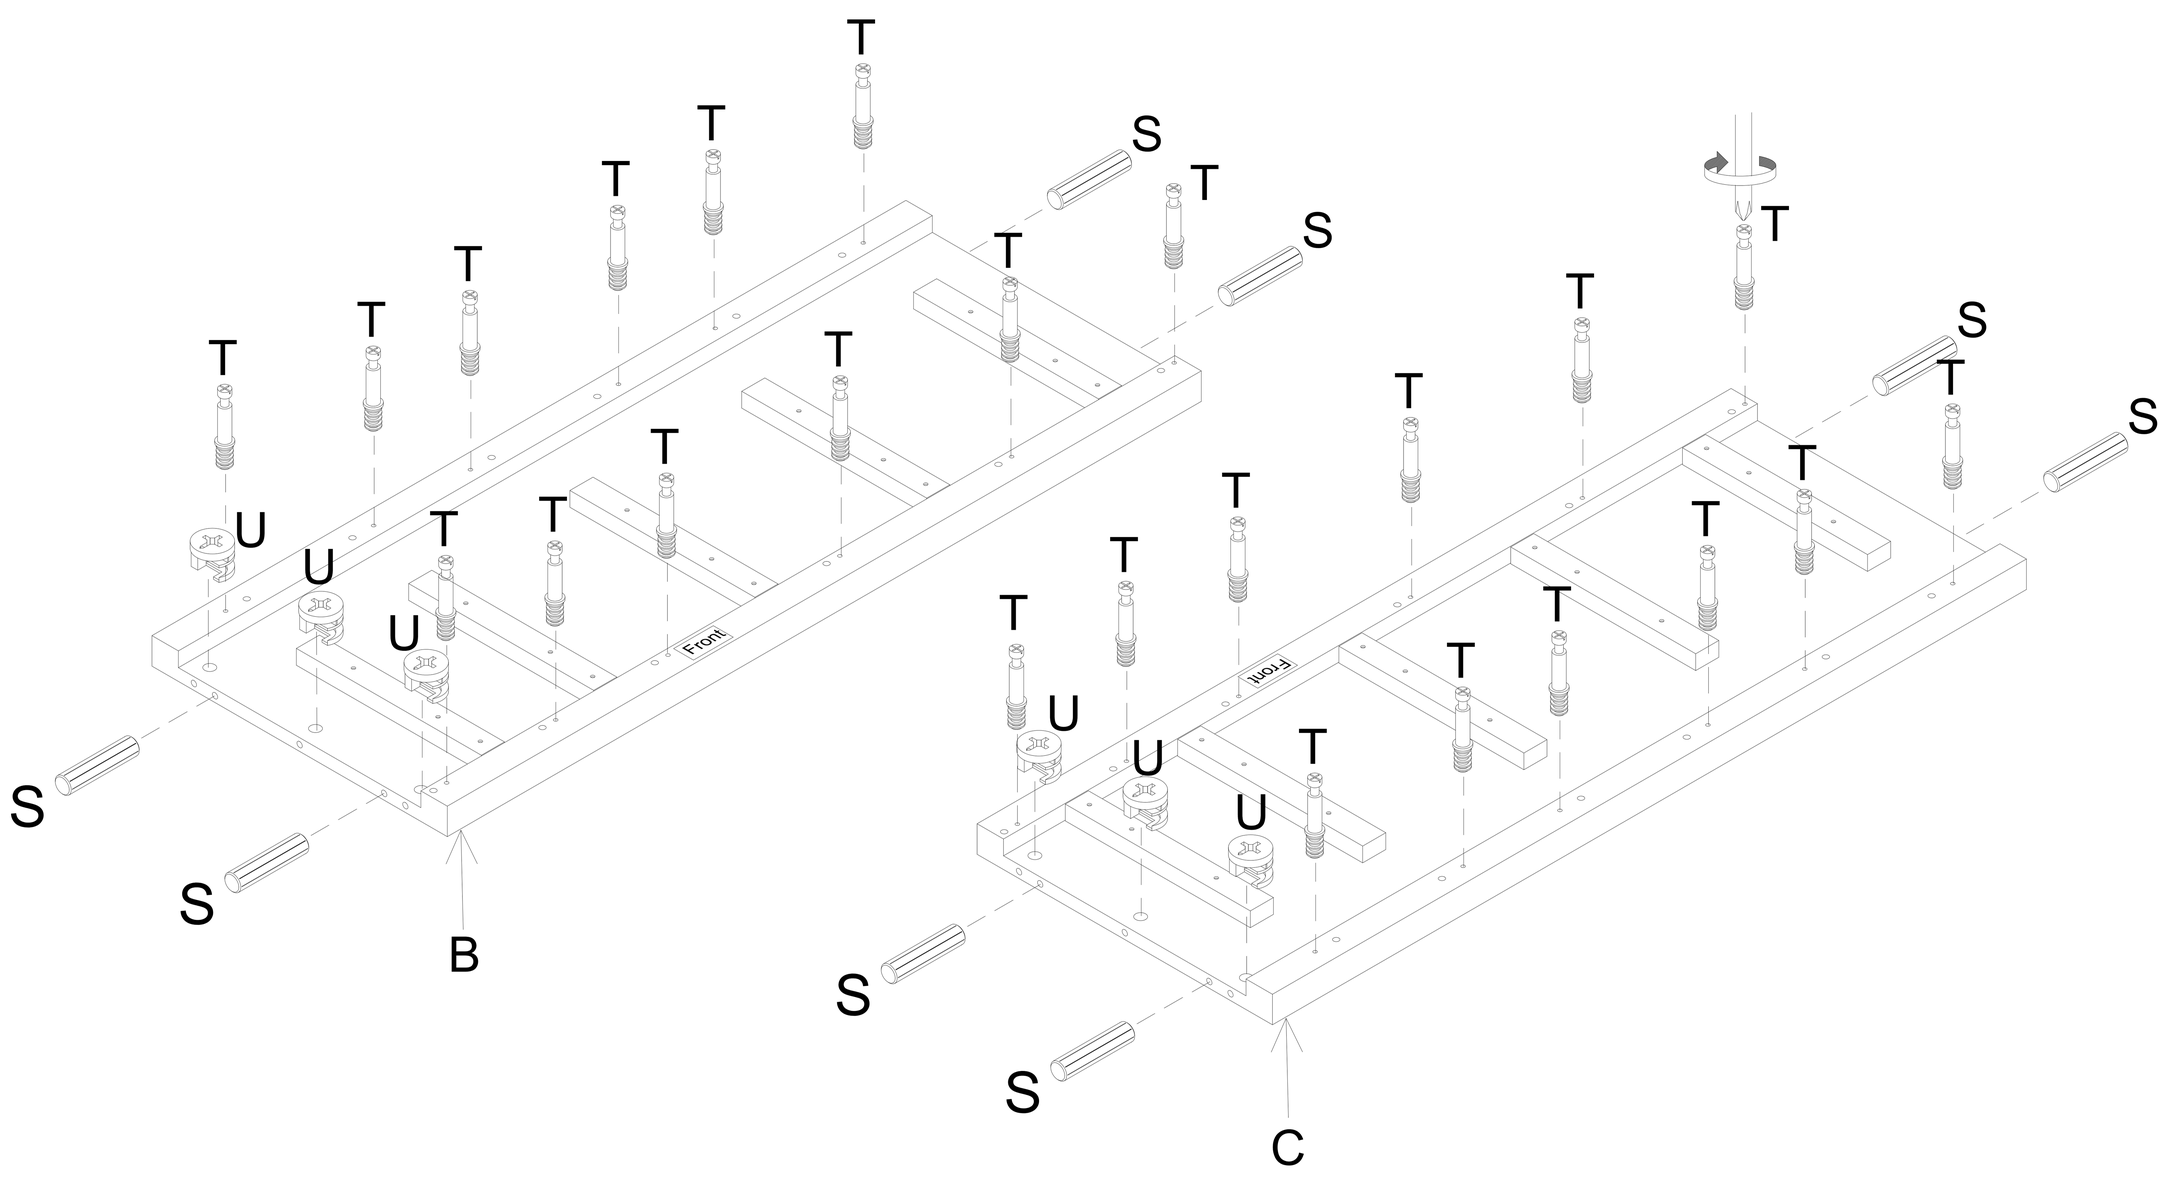

3 Insert Dowel (S) and Cam Lock (U) into the Edge Back Panel (E), the Center Back Panel (F) and the Center Bar (G).

NOTE : - Ensure the arrows on each Cam Lock (U) point towards the nearest edge with holes.

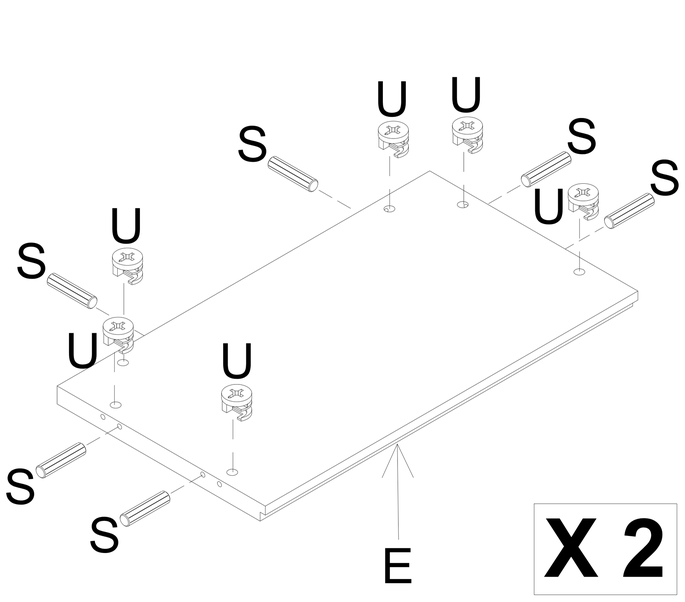

X 2

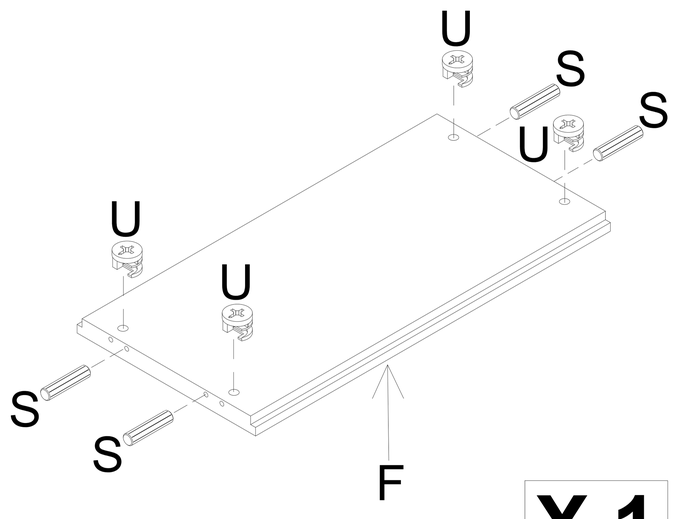

X 1

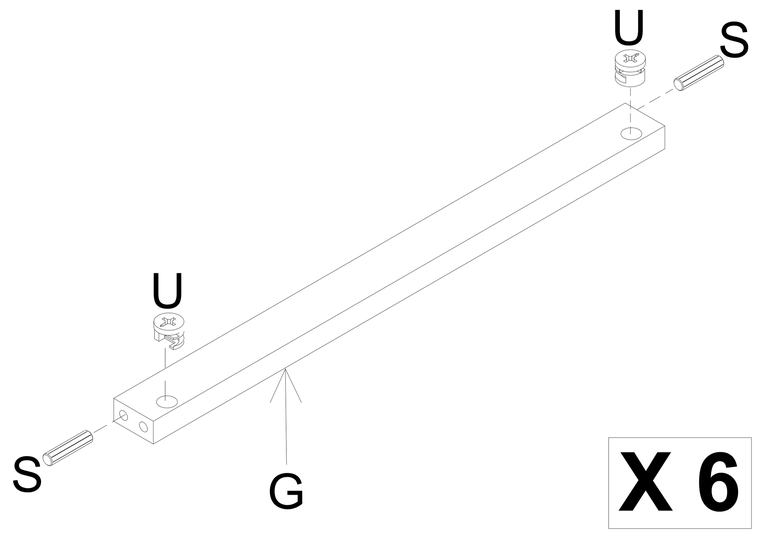

X 6

4 Disassemble the Runner (Q) into two parts. Attach one part with runner rollers to the Left & Right Side Panel (B & C) using Screw (W) with a screwdriver (not provided). Attach the other part with slides to the Left & Right Small Drawer Side (H & I) and Left & Right Big Drawer Side (L & M).

NOTE : - Runner (Q) should face the front of the panel.

- Assemble Screw (W) from the front of the runner, starting with W^1, W^2, then W^3.
- Ensure screws are installed vertically without tilting to fit properly into the holes.

EXTENSION RUNNER DISASSEMBLE STEPS:

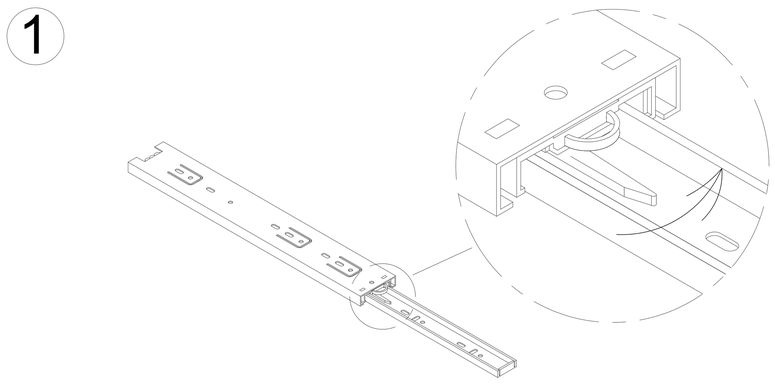

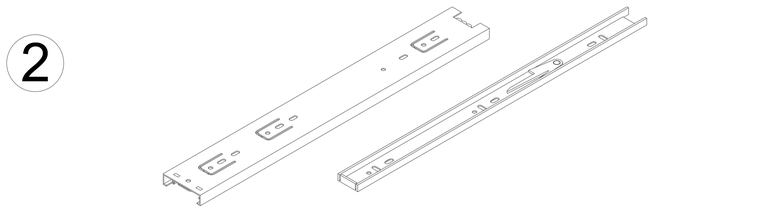

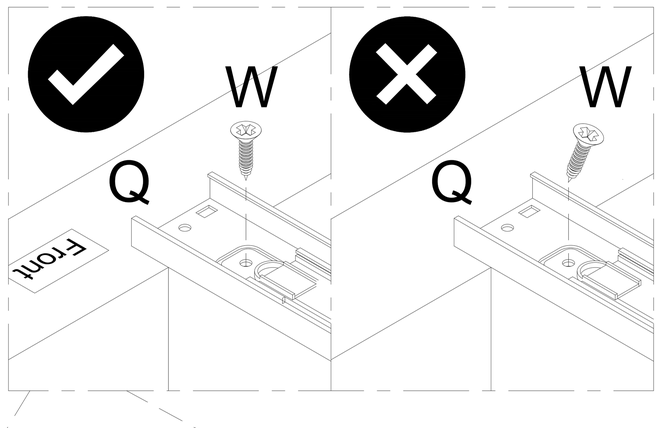

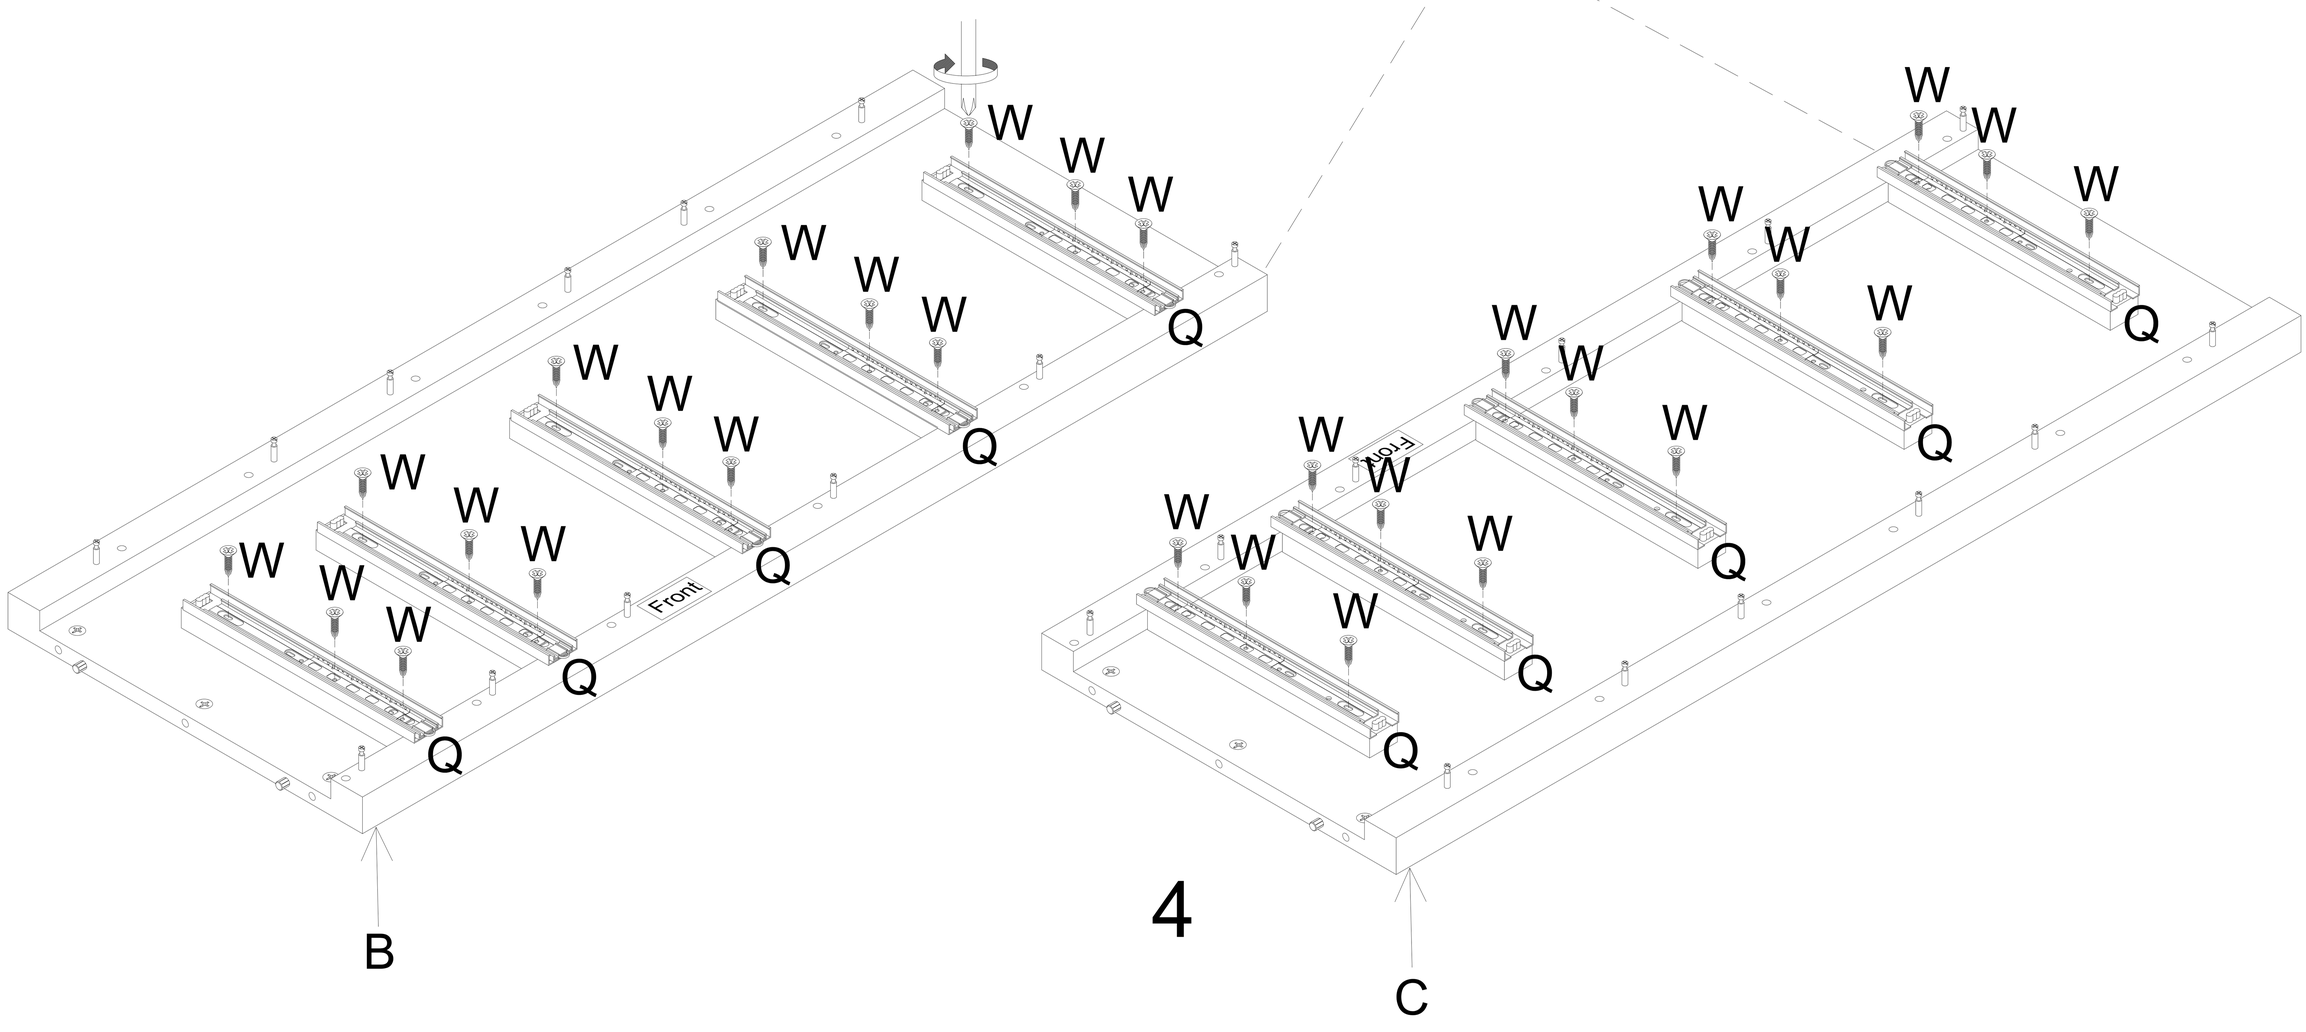

5 (i) Attach the Edge & Center Back Panel (E & F) and the Center Bar (G) to the Left Side Panel (B) and secure the Cam Lock (U) with a screwdriver (not provided).
(ii) Attach the Right Side Panel (C) to the Edge & Center Back Panel (E & F) and the Center Bar (G) and secure the Cam Lock (U) with a screwdriver (not provided). Cover the Cam Lock (U) with Cam Lock Cover (V).

NOTE : - Do not over tighten the Cam Lock (U).

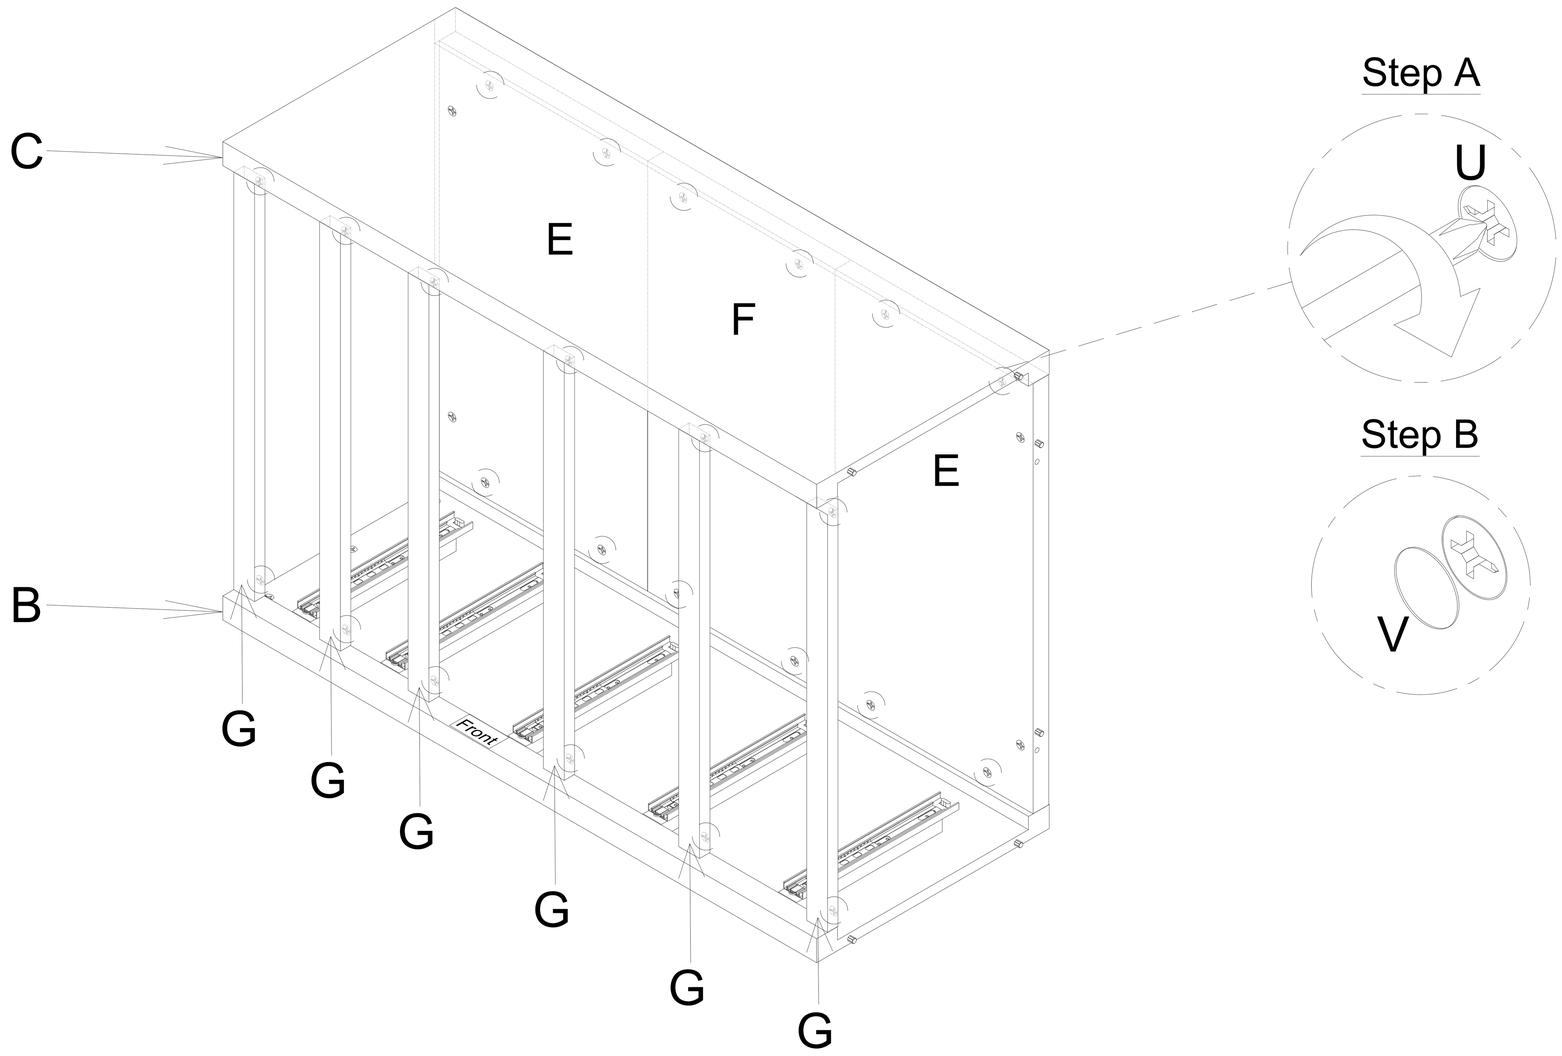

6 Turn the assembled unit to the right to lay it flat on a surface. Then, attach the Bottom Frame (D) to the Left & Right Side Panel (B & C) and Edge Back Panel (E) and secure the Cam Lock (U) and Screw (X) with a screwdriver (not provided). Cover Cam Lock (U) with Cam Lock Cover (V).

NOTE : - Do not over tighten the Cam Lock (U).

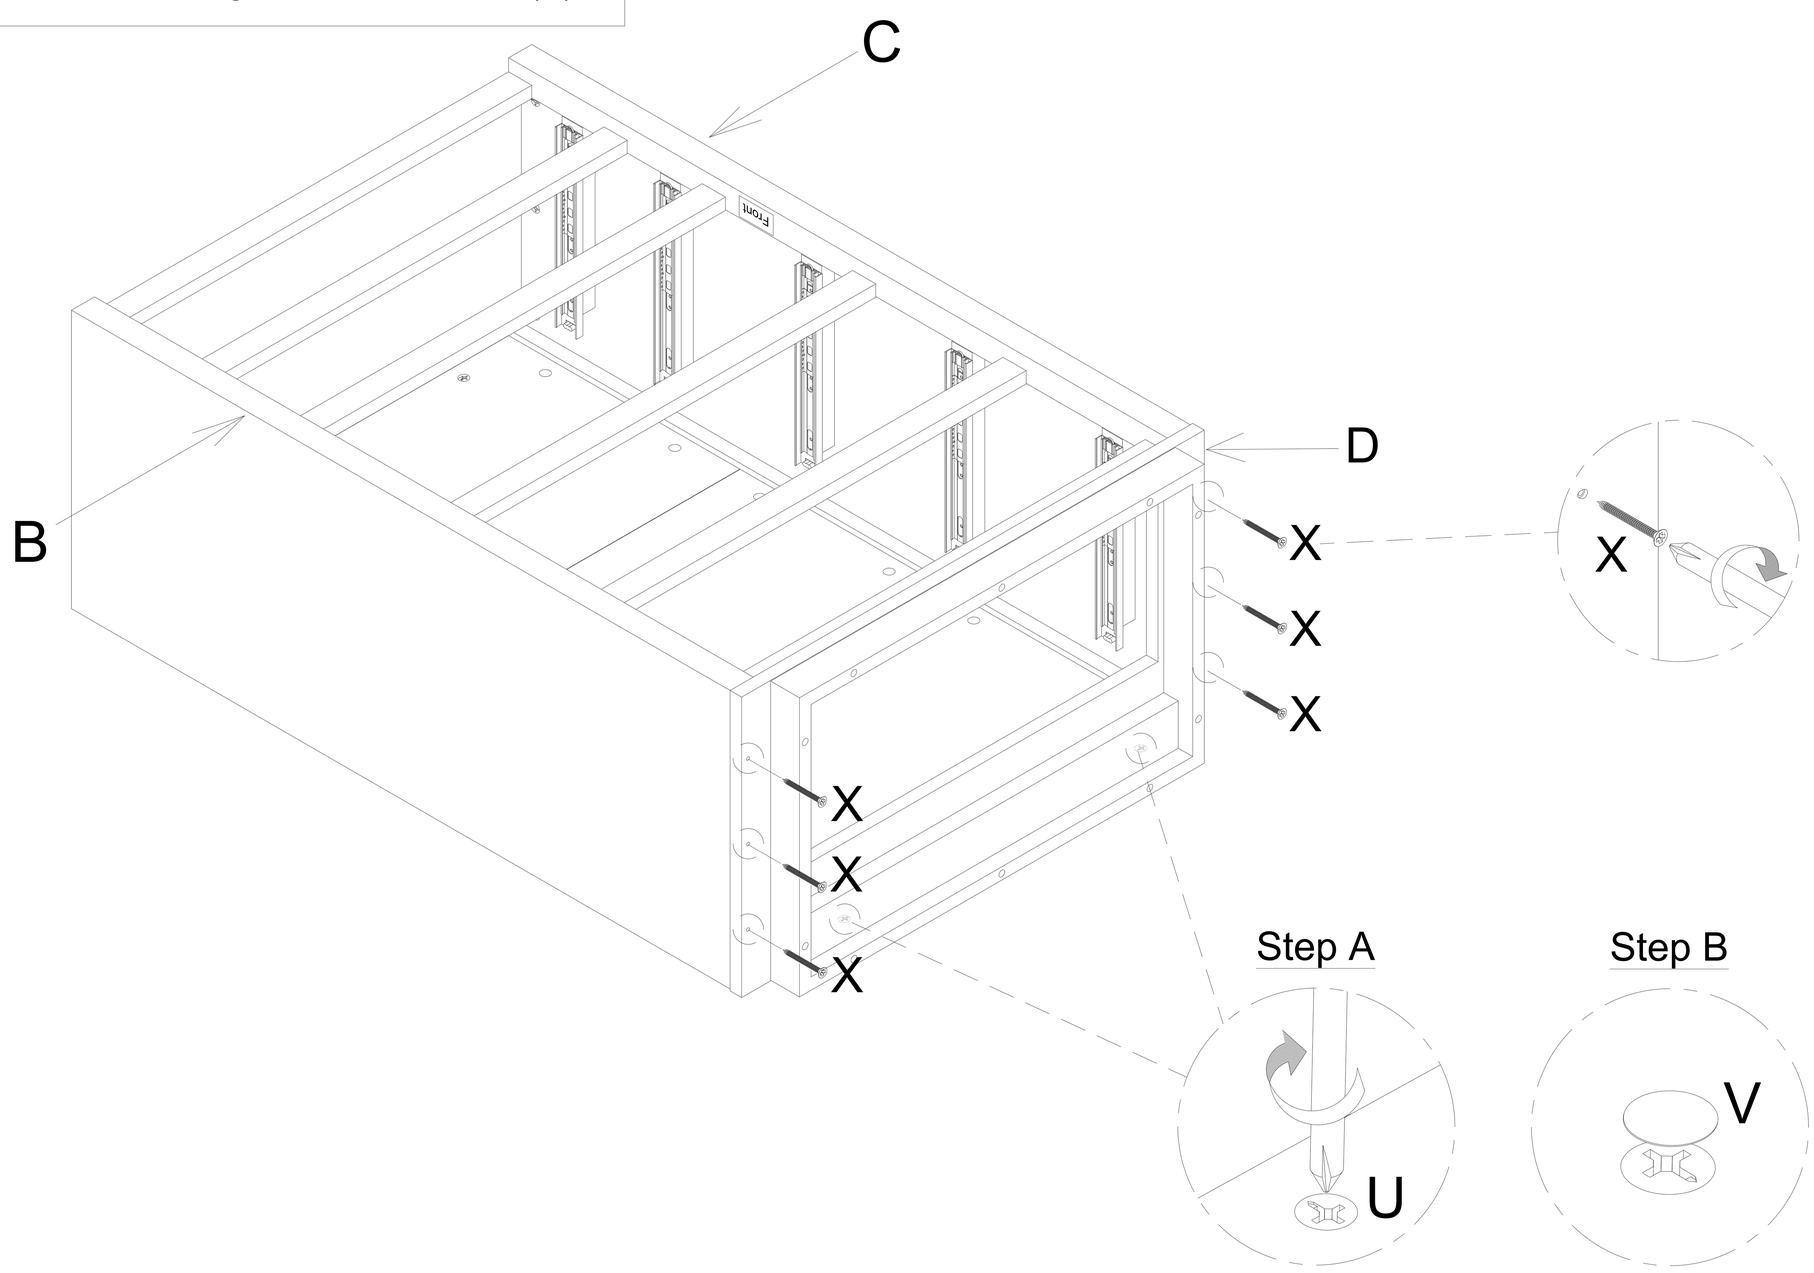

7 Attach the Top Panel (A) to the Left & Right Side Panel (B & C) and Edge Back Panel (E) and secure the Cam Lock (U) with a screwdriver (not provided). Cover the Cam Lock (U) with the Cam Lock Cover (V).

NOTE : - Do not over tighten the Cam Lock (U).

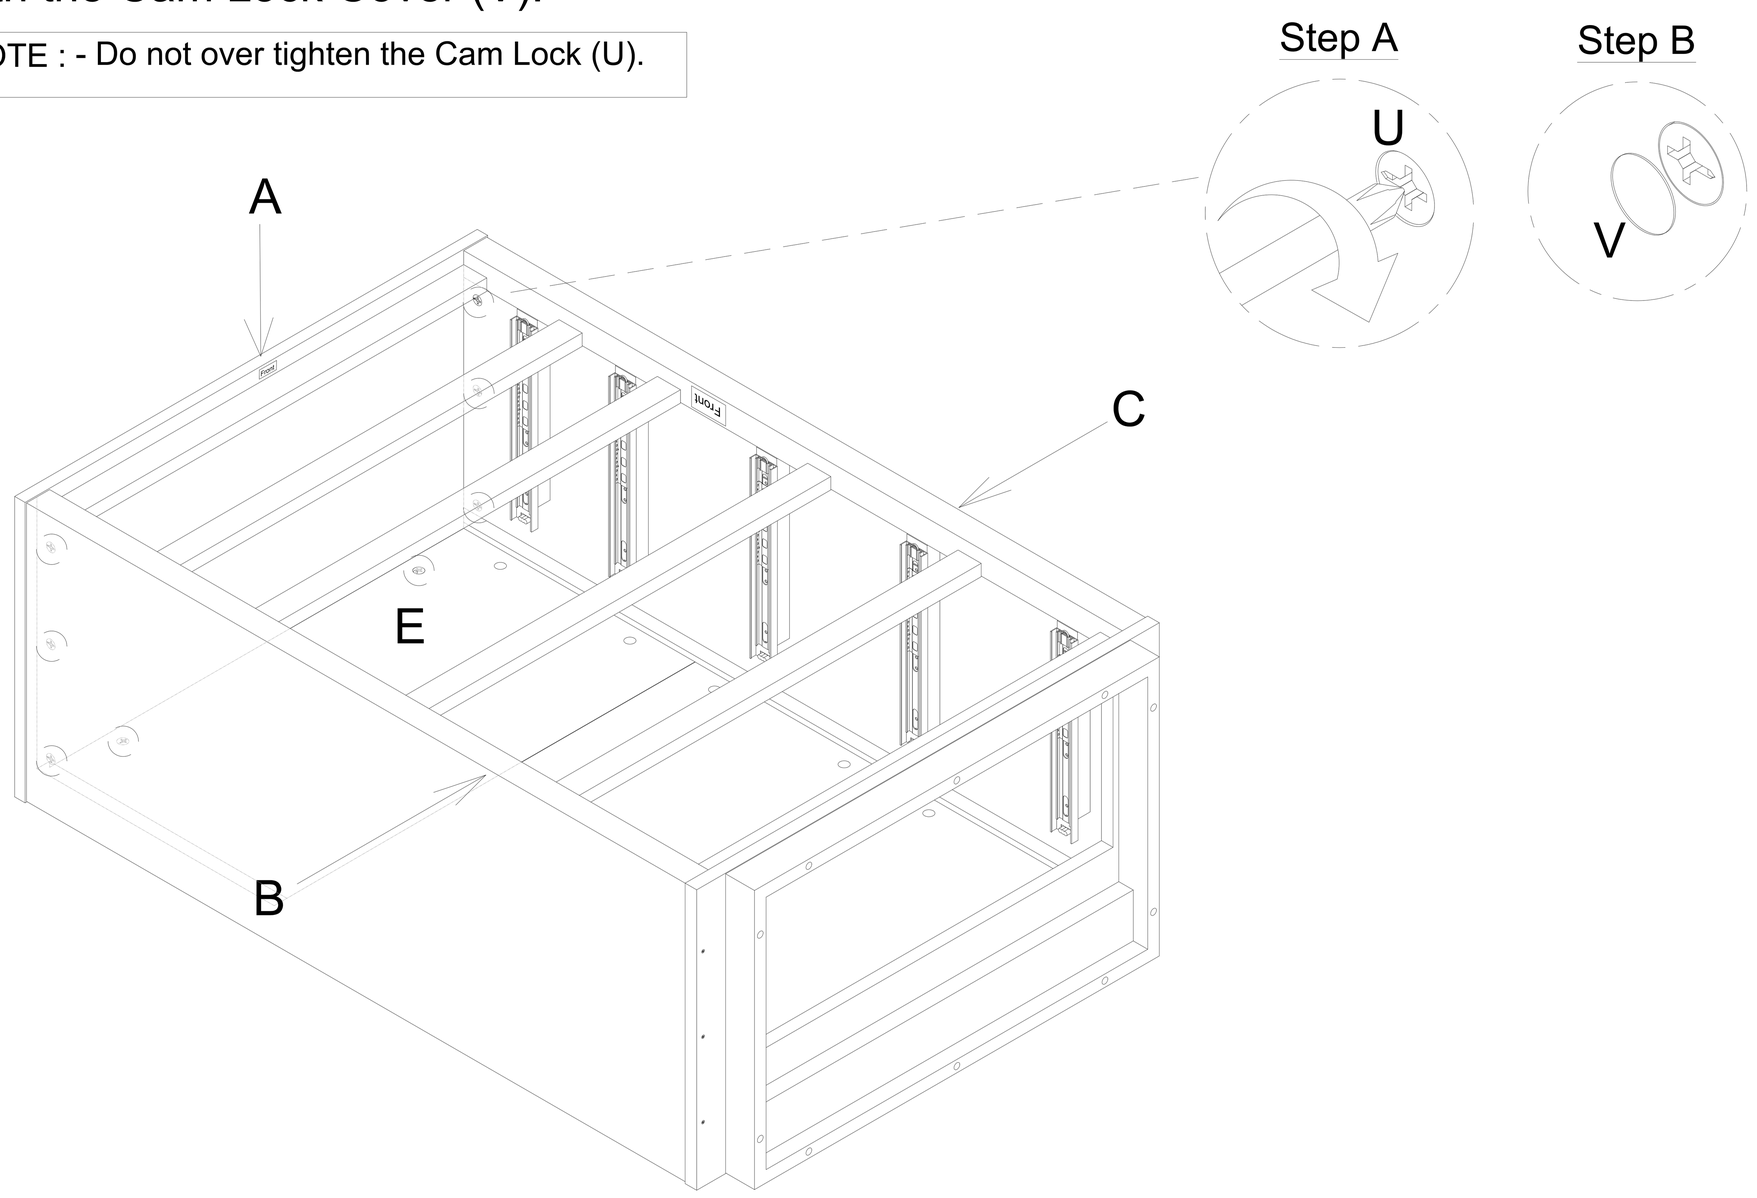

8 Attach Runner (Q) to the Left & Right Small Drawer Side (H & I) using Screw (W) with a screwdriver (not provided).

NOTE : - Do not over tighten the Screw (W).

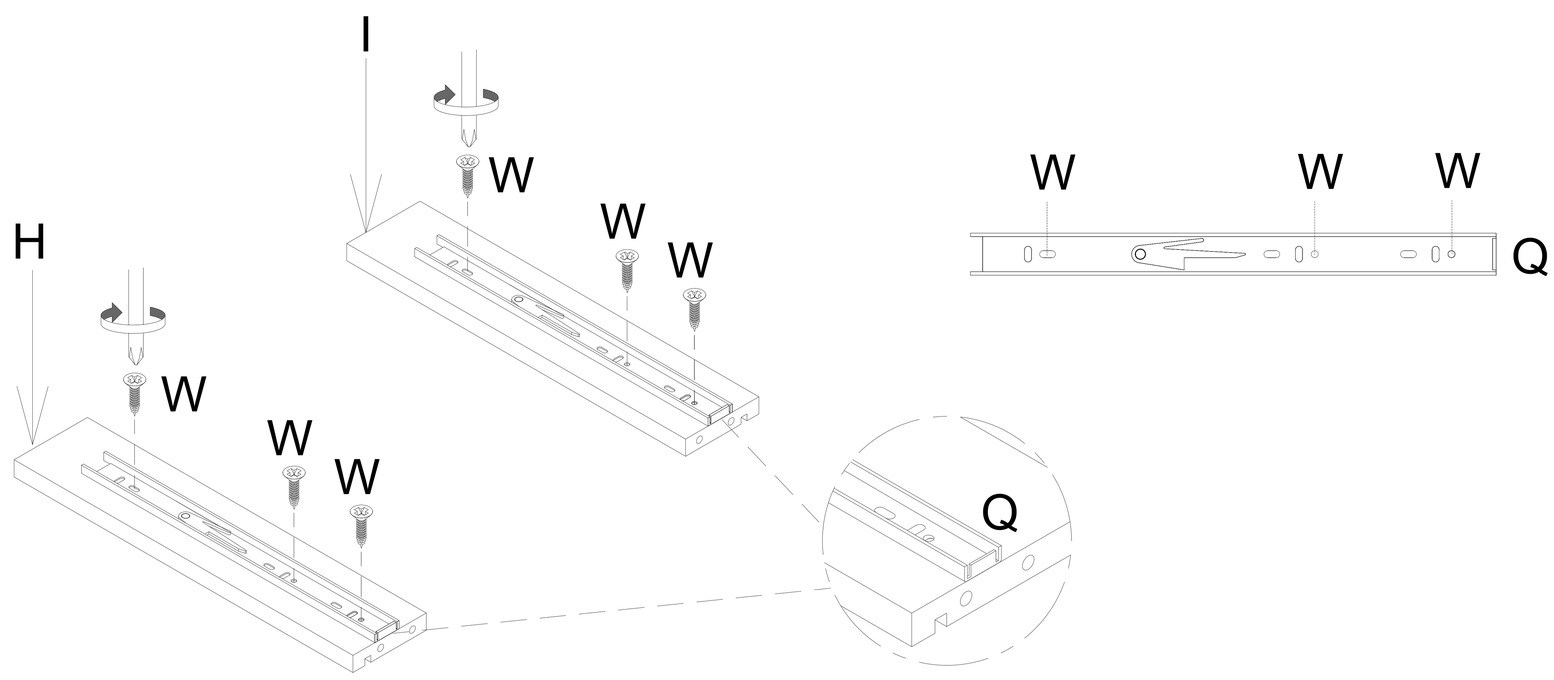

X 2

9 Attach Dowel (R) and Cam Lock (U) to the Left & Right Small Drawer Side (H & I) and the Small Drawer Back (K). Attach Cam Bolt (T) to the Left & Right Small Drawer Side (H & I) and the Small Drawer Front (J) with a screwdriver (not provided).

NOTE : - Ensure the arrows on each Cam Lock (U) point towards the nearest edge with holes.

X 2

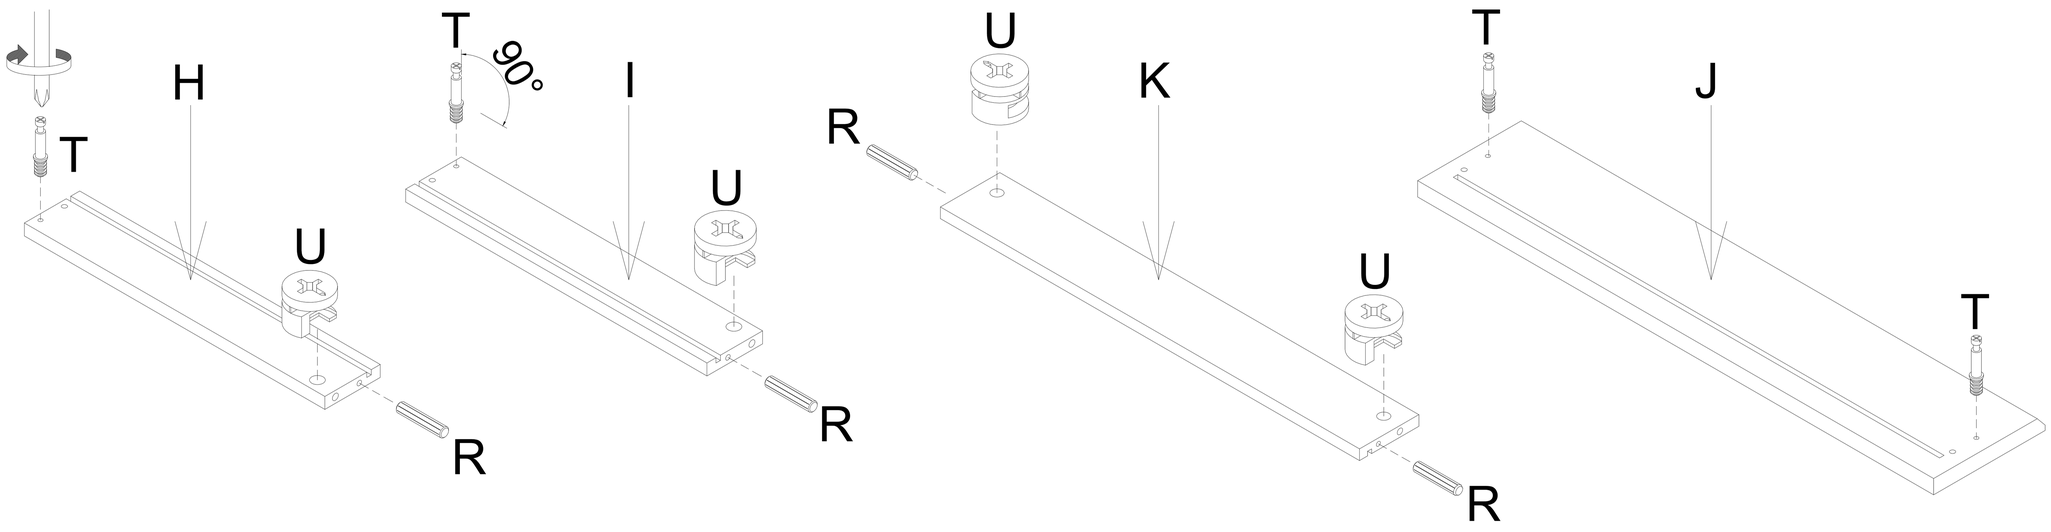

10 Attach the Left & Right Small Drawer Side (H & I) to the Small Drawer Back (K) and secure the Cam Lock (U) with a screwdriver (not provided). Cover the Cam Lock (U) with Cam Lock Cover (V).

NOTE : - Do not over tighten the Cam Lock (V).

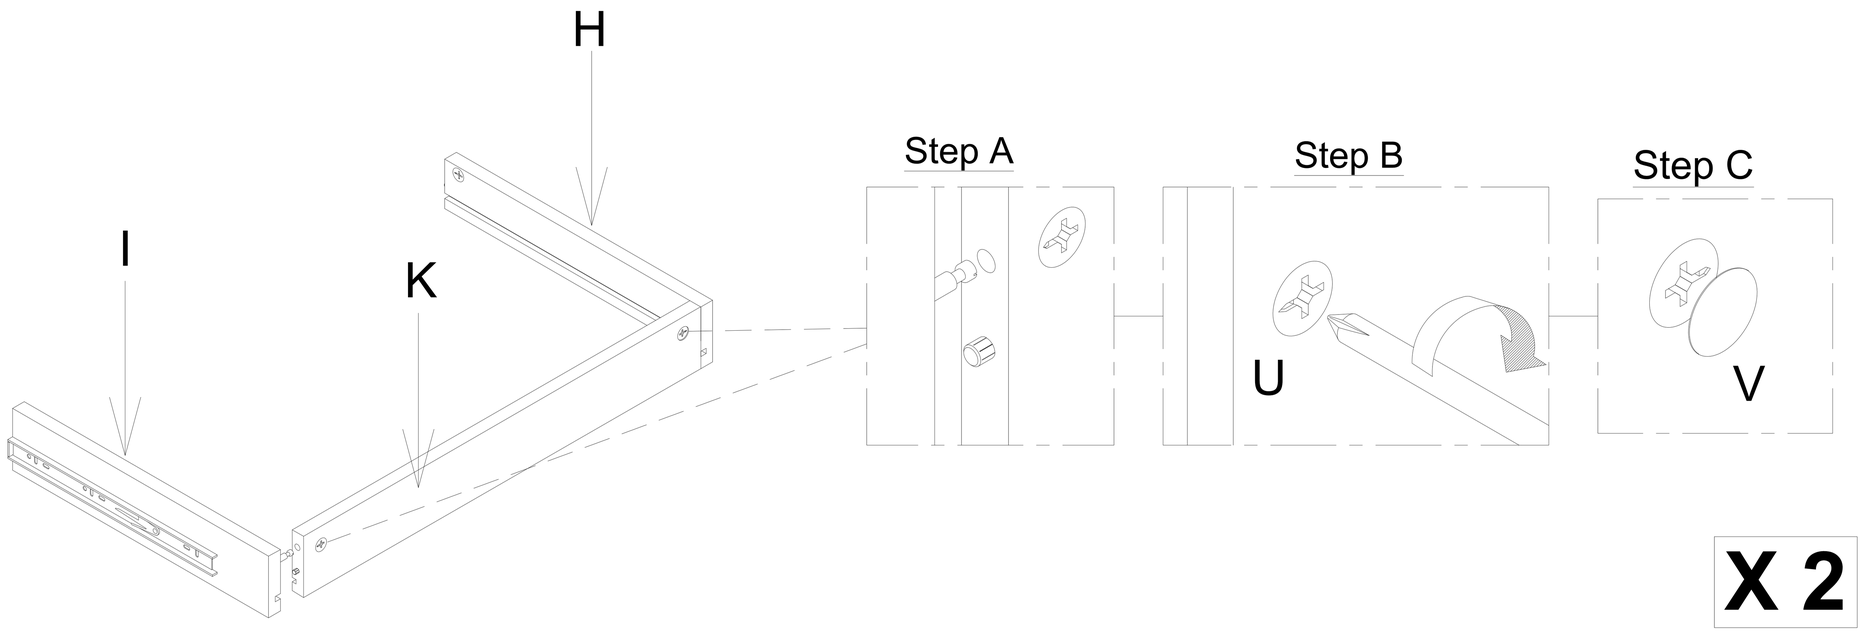

X 2

11 Slot the Drawer Base (P) into the grooves of the drawer box. Attach the Small Drawer Front (J) to the drawer box and secure the Cam Lock (U) with a screwdriver (not provided). Cover the Cam Lock (U) with Cam Lock Cover (V).

NOTE : - Do not over tighten the Cam Lock (U).

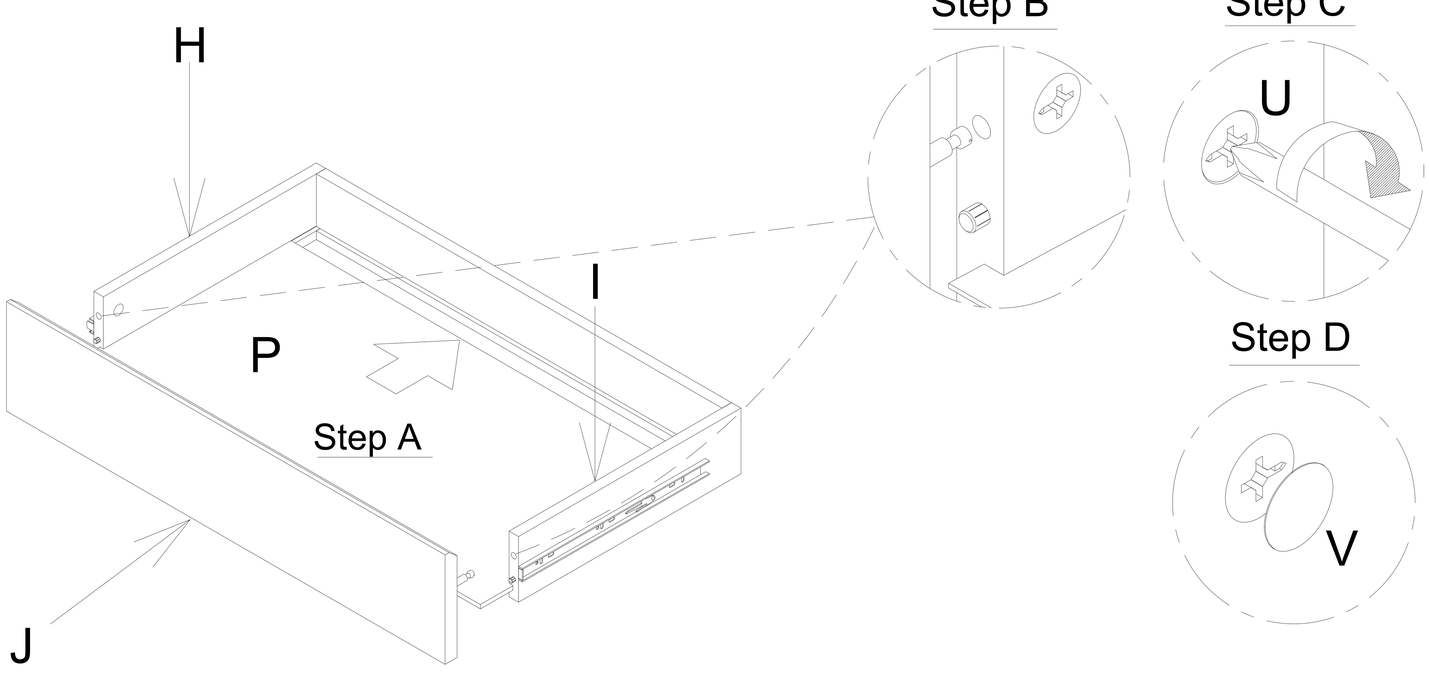

X 2

12 Attach Runner (Q) to the Left & Right Big Drawer Side (L & M) using Screw (W) with a screwdriver (not provided).

NOTE : - Do not over tighten the Screw (W).

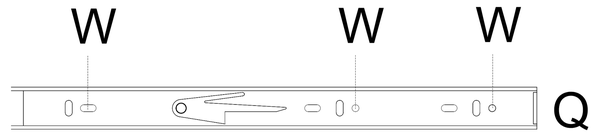

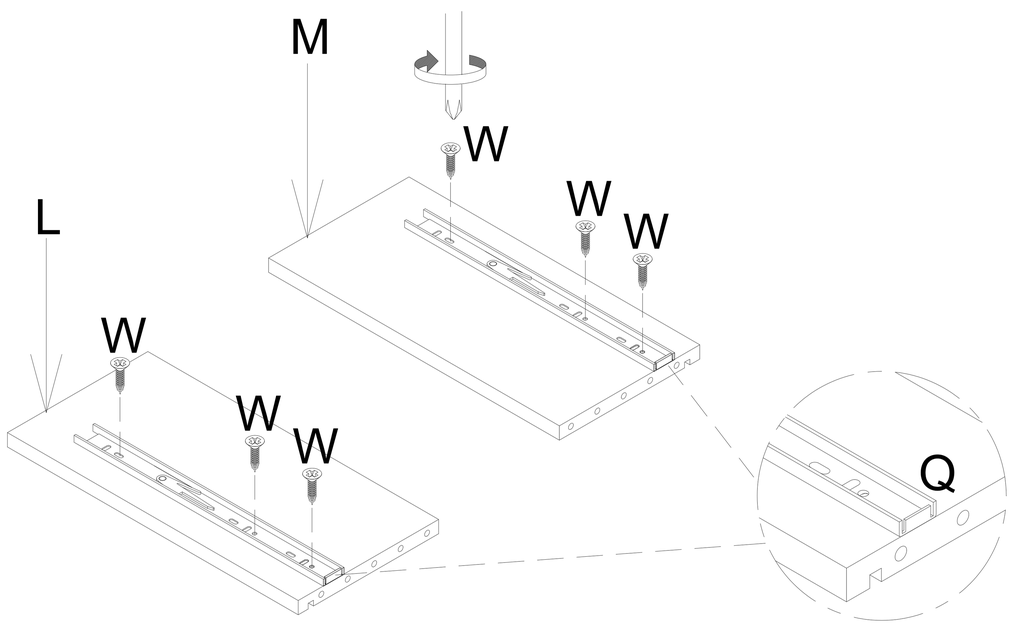

X 3

13 Attach Dowel (R) and Cam Lock (U) to the Left & Right Big Drawer Side (L & M) and the Big Drawer Back (O). Attach Cam Bolt (T) to the Left & Right Big Drawer Side (L & M) and the Big Drawer Front (N) with a screwdriver (not provided).

NOTE : - Ensure the arrows on each Cam Lock (U) point towards the nearest edge with holes.

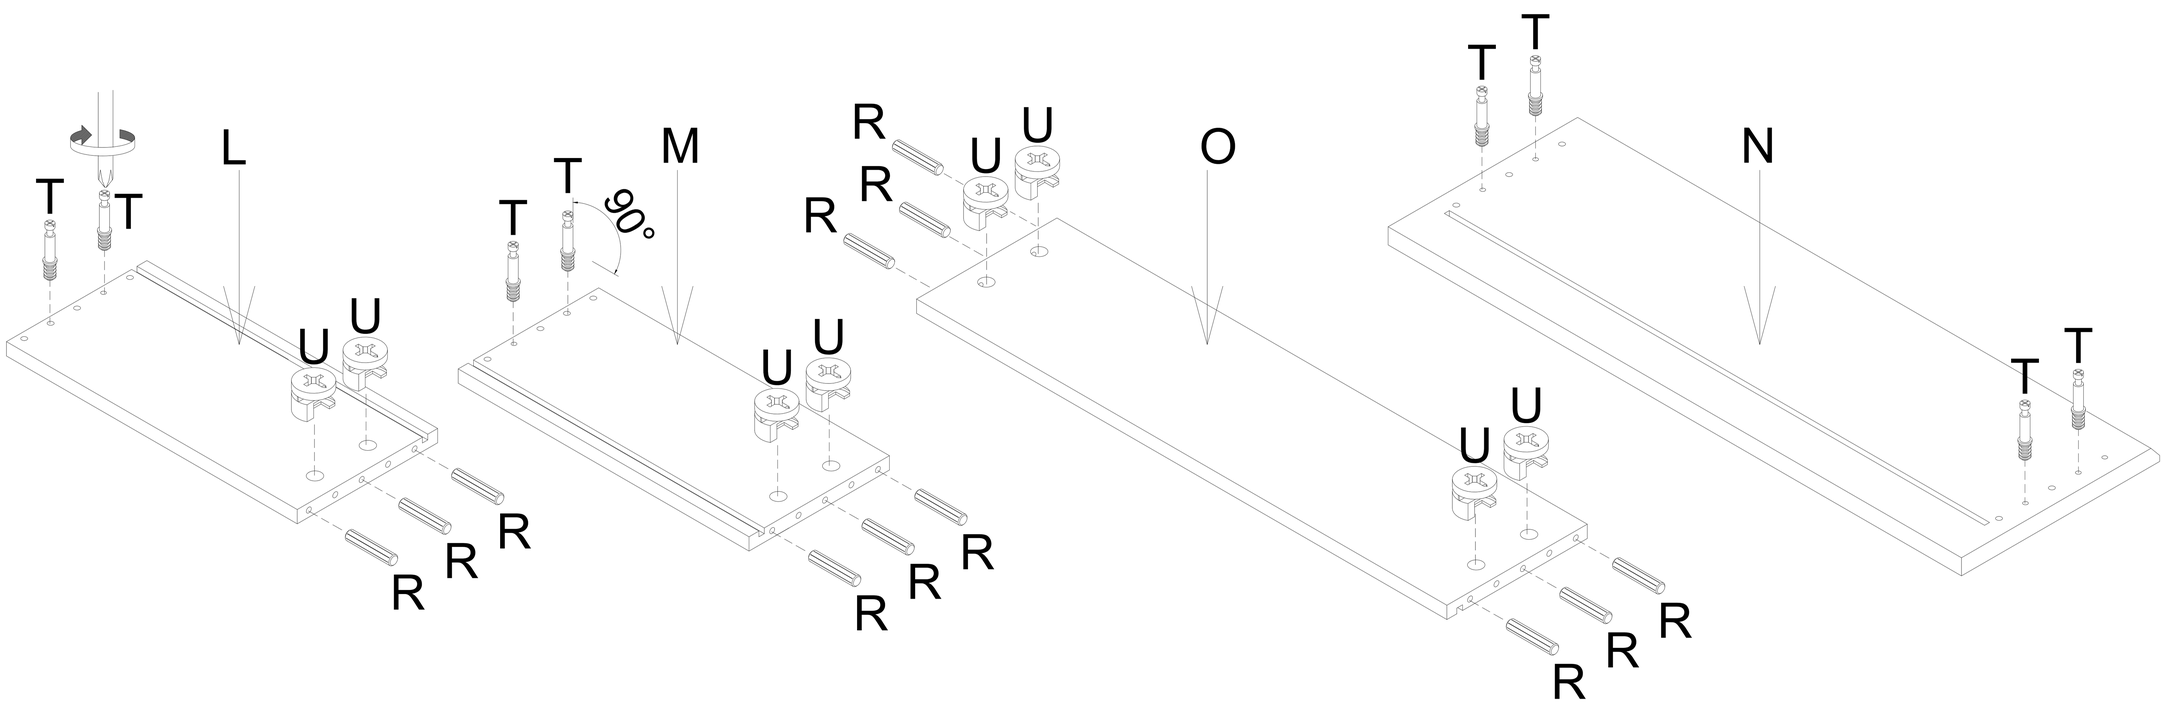

X 3

14 Attach the Left & Right Big Drawer Side (L & M) to the Big Drawer Back (O) and secure the Cam Lock (U) with a screwdriver (not provided). Cover the Cam Lock (U) with Cam Lock Cover (V).

NOTE : - Do not over tighten the Cam Lock (U).

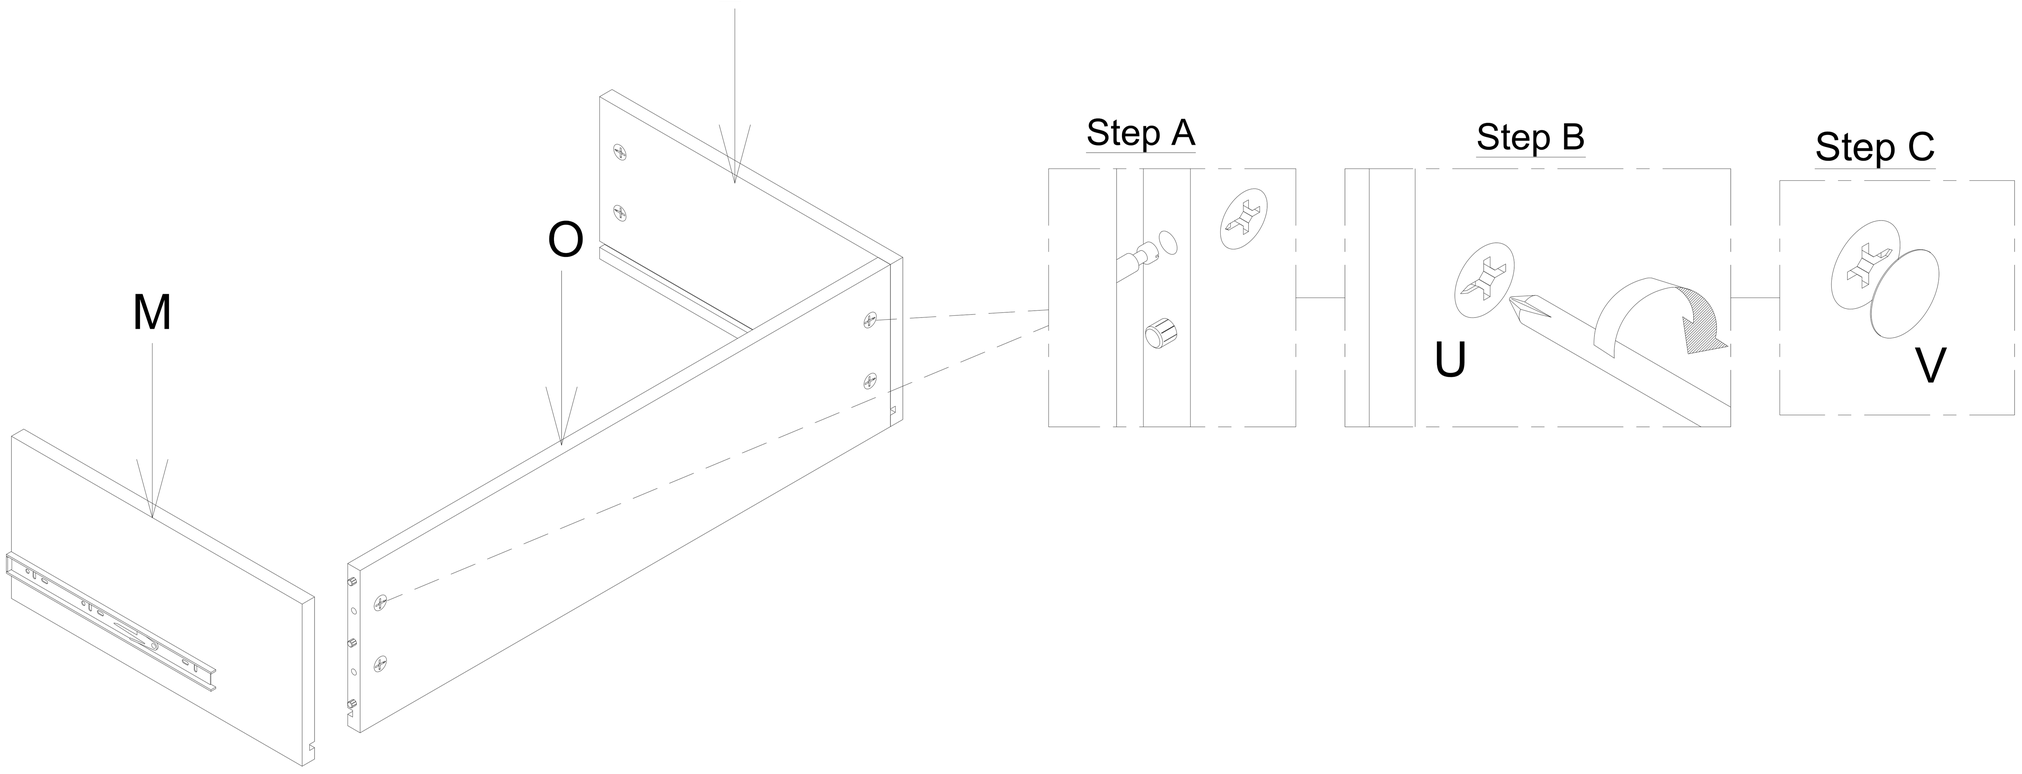

X 3

15 Slot the Drawer Base (P) into the grooves of the drawer box. Attach the Big Drawer Front (N) to the drawer box and secure the Cam Lock (U) with a screwdriver (not provided). Cover the Cam Lock (U) with Cam Lock Cover (V).

NOTE : - Do not over tighten the Cam Lock (V).

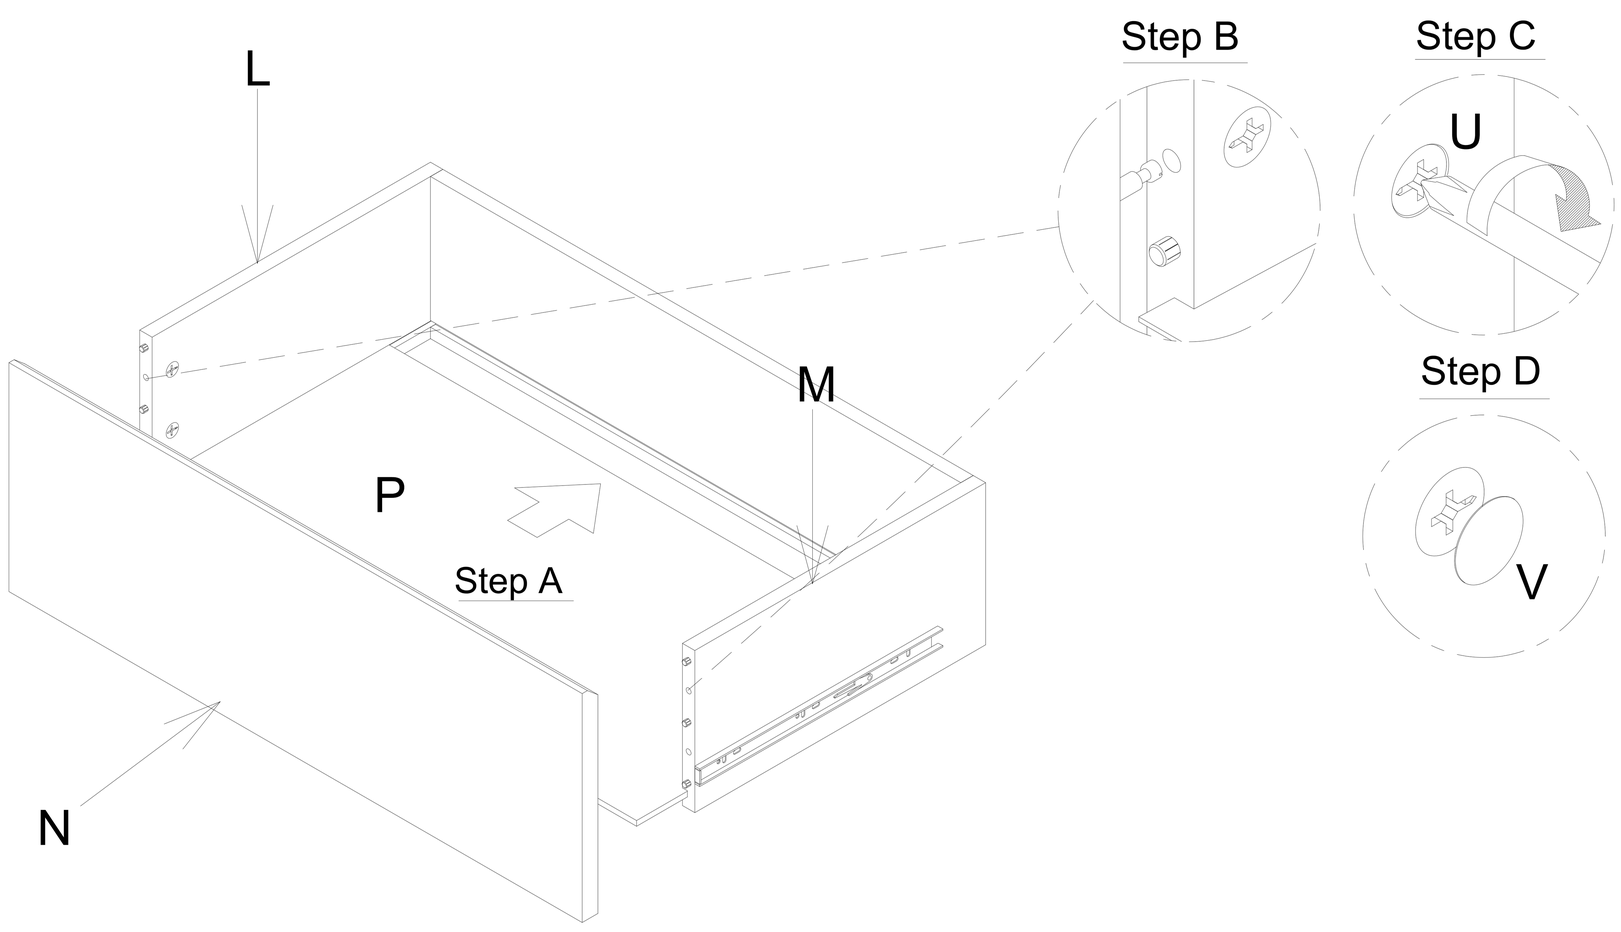

X 3

16 Pull out the metal chrome plates from both sides of the Runner (Q). Align the metal chrome plates with the slides on one drawer side, then repeat on the other side. If they are not aligned properly, remove and try again. Once both tracks are aligned correctly, slowly push the drawer all the way in.

LEFT SIDE

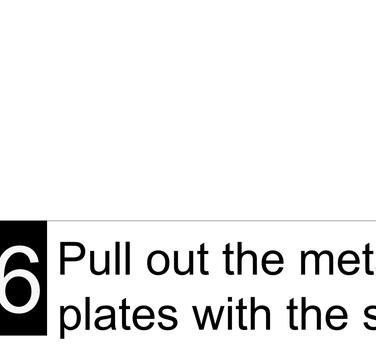

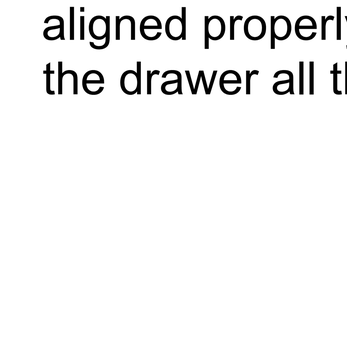

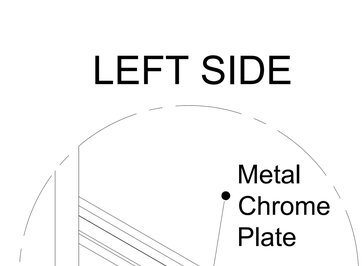

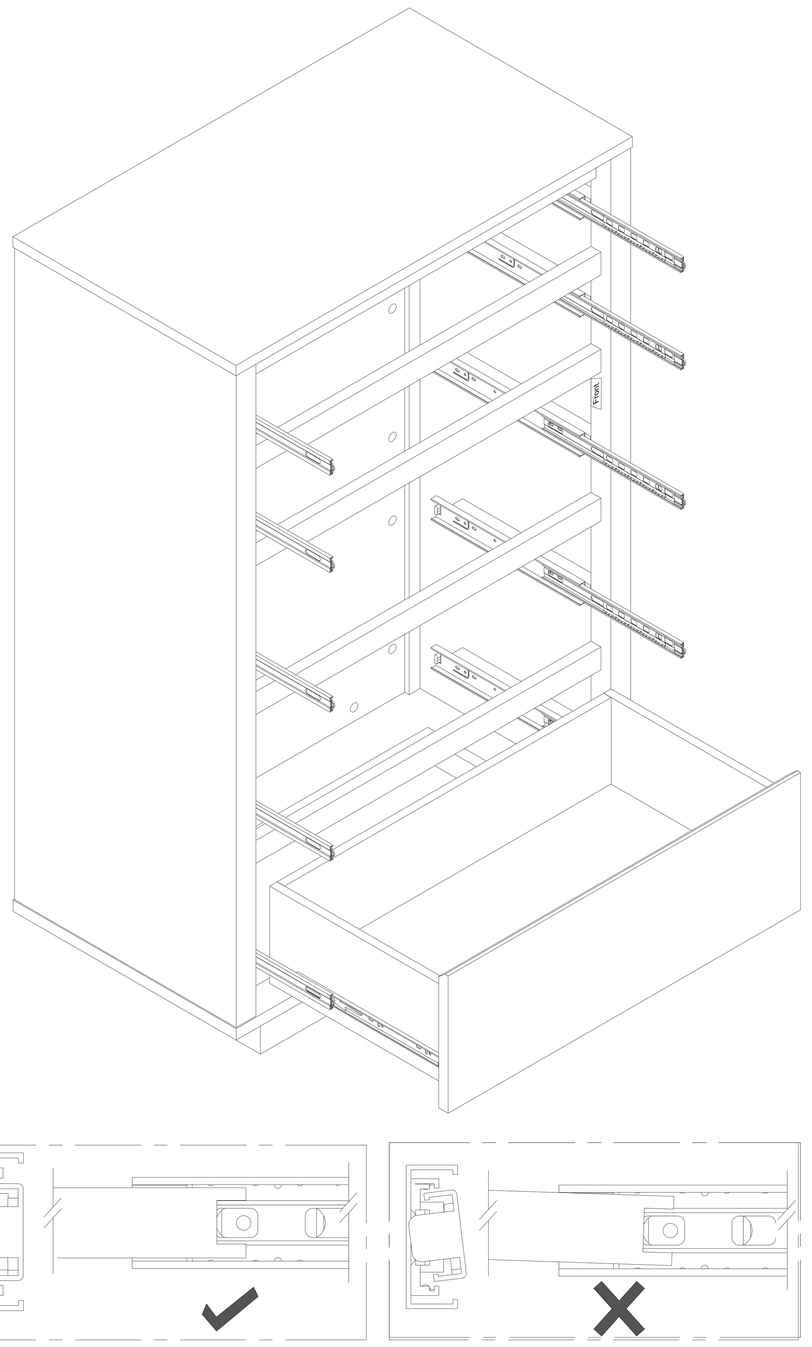

RIGHT SIDE

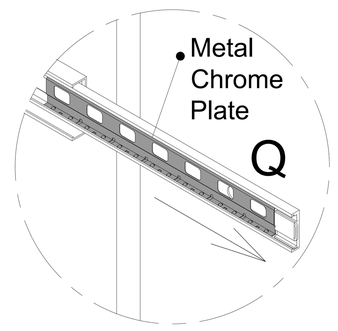

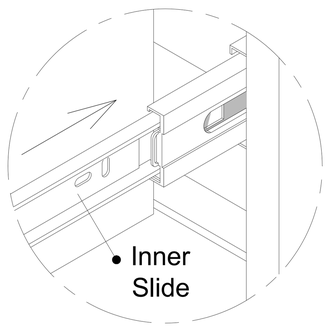

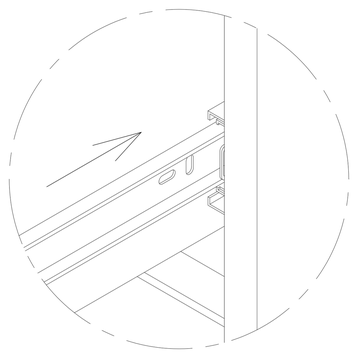

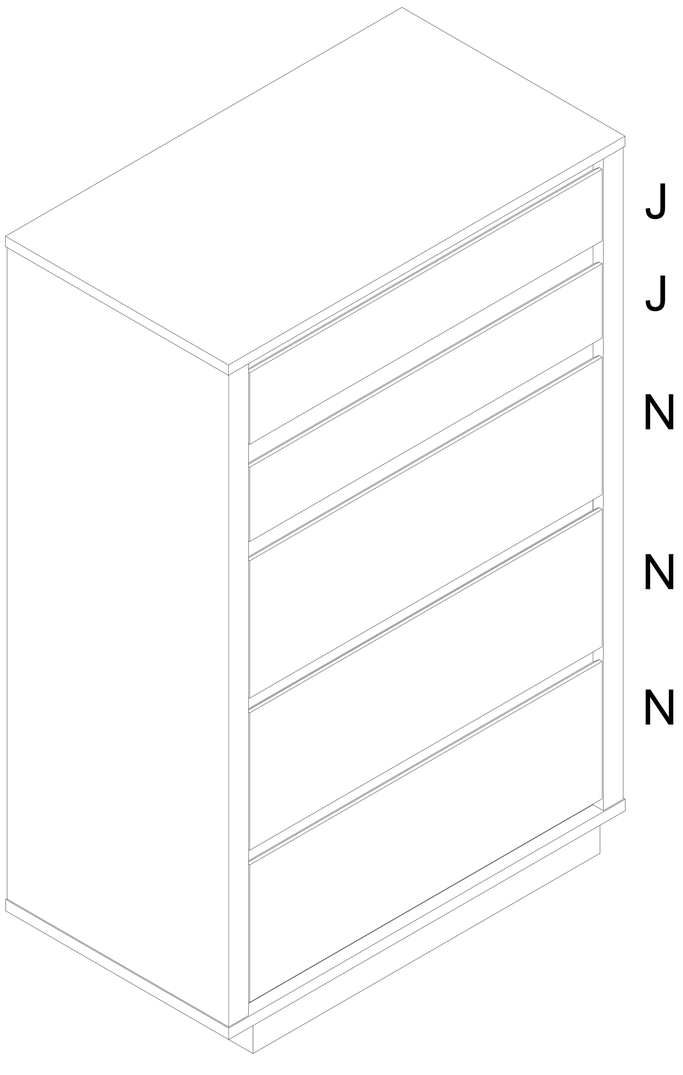

17 Attach the Anti-Tip Kit (Y) to the wall. Mount the bracket vertically to wall using the long screw. Then, secure the bracket vertically to the furniture back below the top using the short screw. Place the bracket as close to the center of the furniture back as possible, considering the wall stud and desired position in the room. Move furniture to its final position. Thread the bracket and pull it tight.

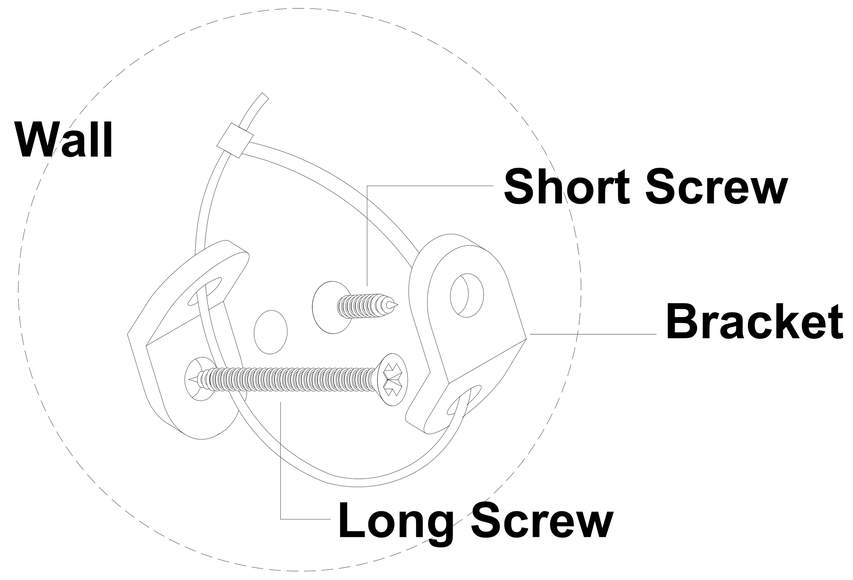

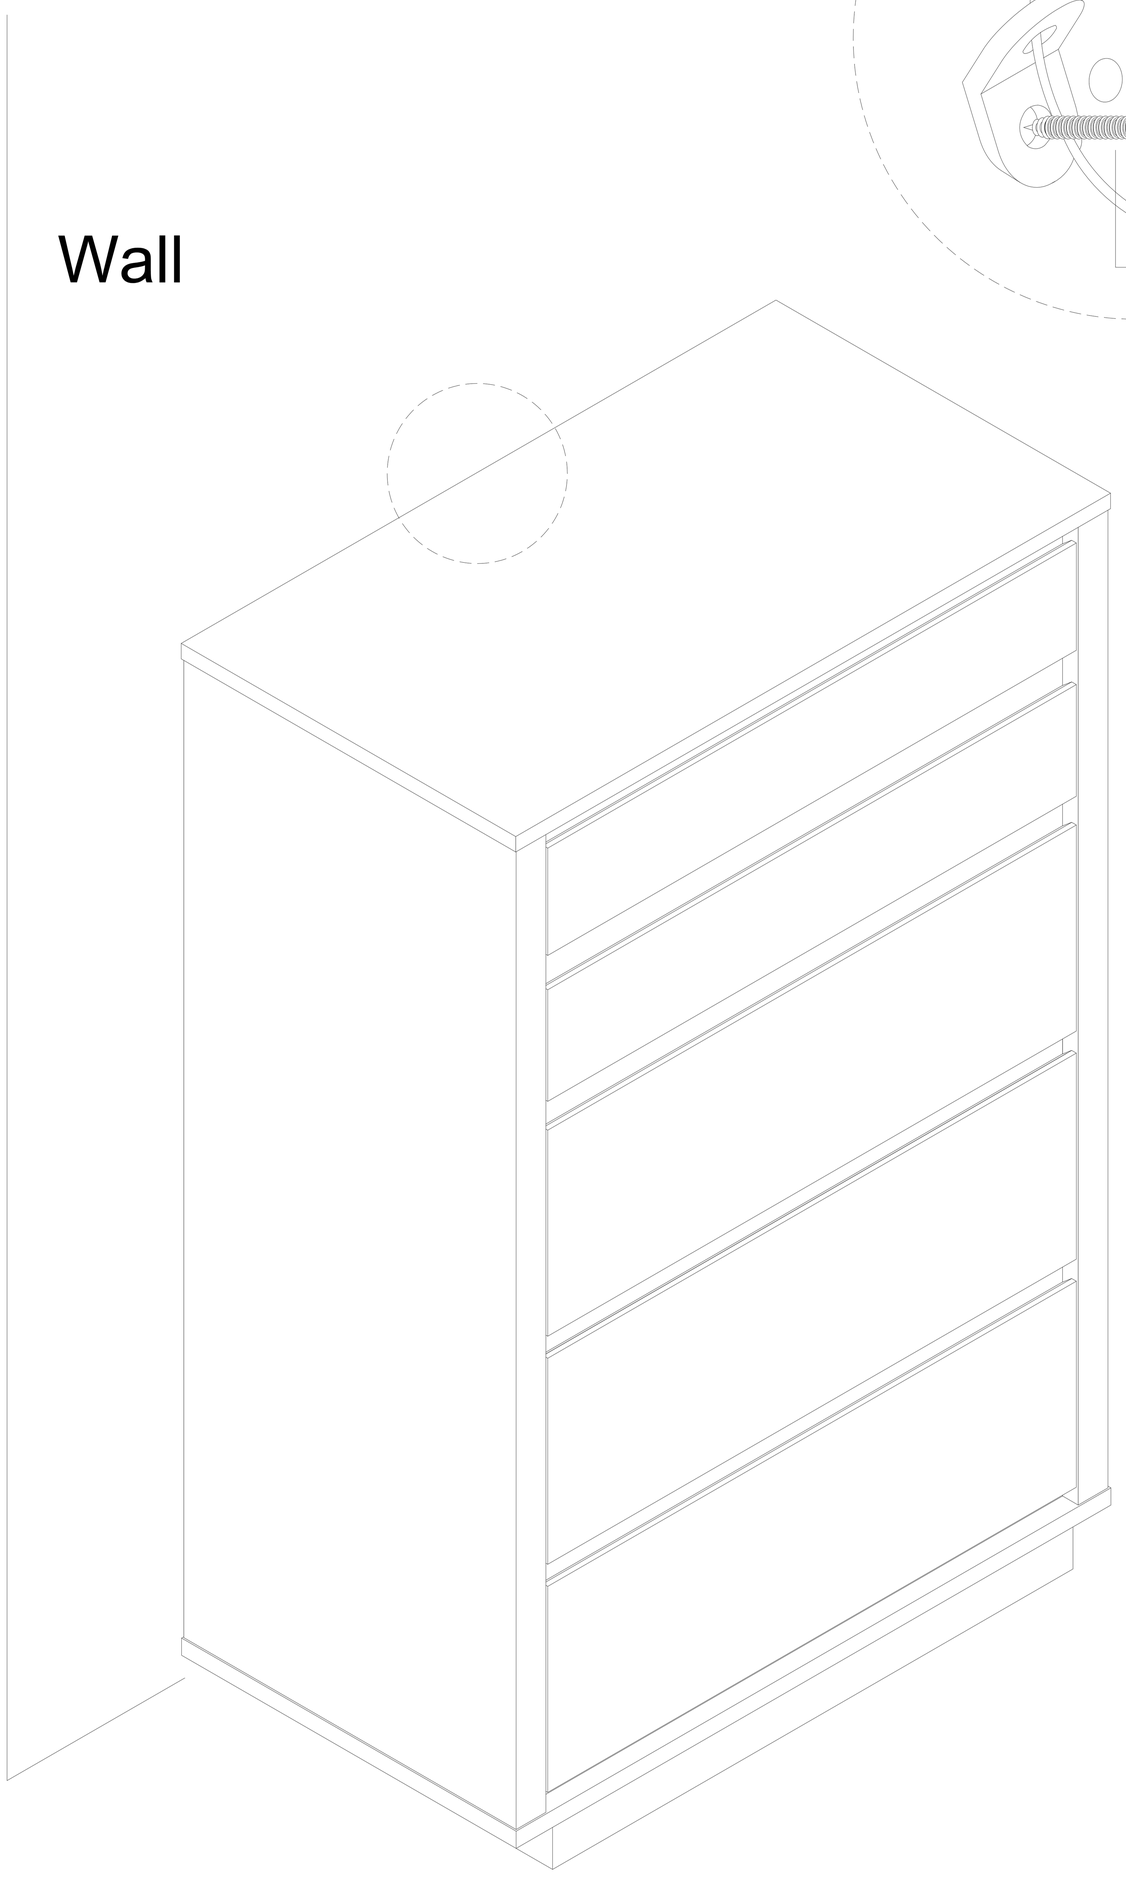

Cleaning & Care
Treat surfaces with care. Surfaces are resistant to scratches but are not scratch resistant. Clean surfaces with a dry or damp soft cloth. Do not use abrasive cleaners. Hardware may loosen over time. Periodically check that all connections are tight.