ASSEMBLY INSTRUCTIONS

6-DRAWER DRESSER

A Top Panel	**B** Side Panel (Left)	**C** Side Panel (Right)	**D** Bottom Frame
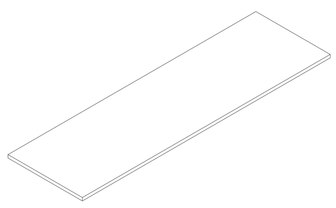	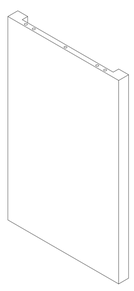	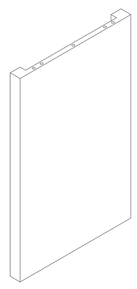	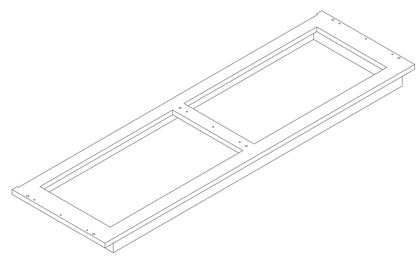
1pc	1pc	1pc	1pc
E Partition	**F** Back Support Panel	**G** Back Panel	**H** Center Bar
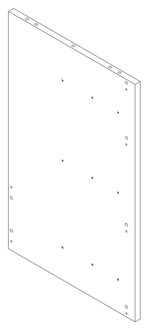	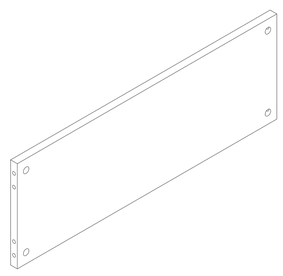	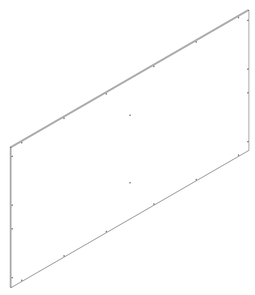	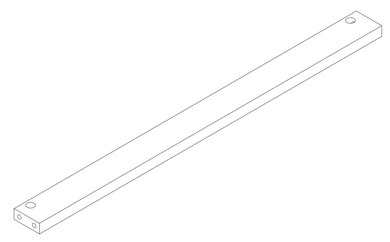
1pc	2pcs	1pc	8pcs
I Small Drawer Side (Left)	**J** Small Drawer Side (Right)	**K** Small Drawer Front	**L** Small Drawer Back
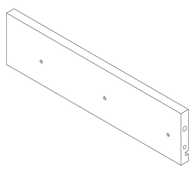	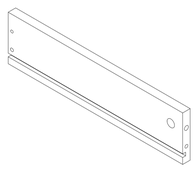	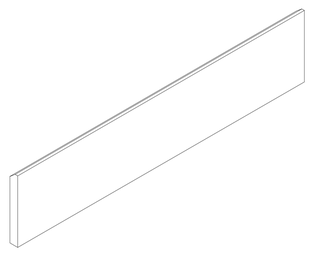	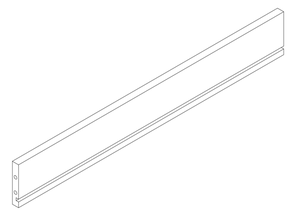
2pcs	2pcs	2pcs	2pcs
M Big Drawer Side (Left)	**N** Big Drawer Side (Right)	**O** Big Drawer Front	**P** Big Drawer Back
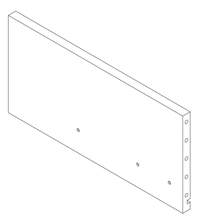	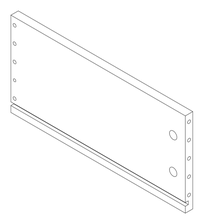	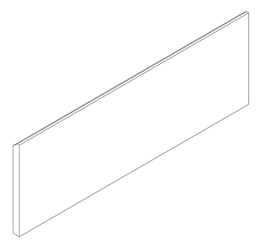	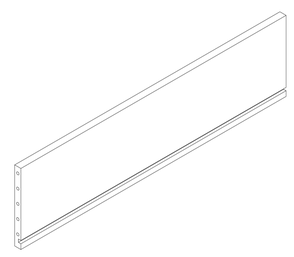
4pcs	4pcs	4pcs	4pcs
Q Drawer Base	**R** Runner 300mm	**S** Dowel M6 x 30mm	**T** Dowel M8 x 35mm
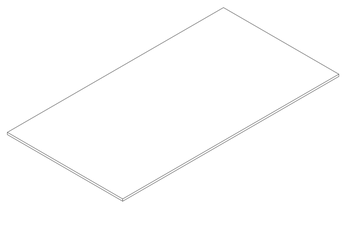	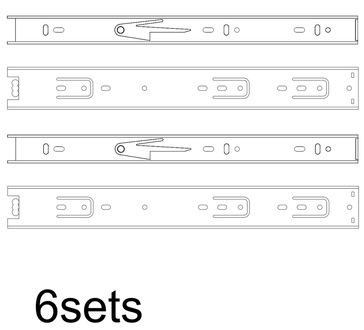	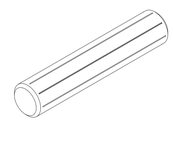	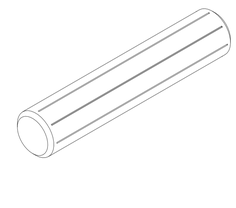
6pcs	6sets	56pcs	36pcs

U Cam Bolt
5 x 25mm

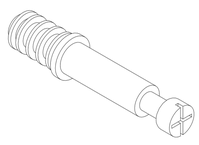

73pcs

V Cam Lock
15 x 12mm



73pcs

W Cam Lock Cover
17 x 5mm



73pcs

X Screw
M3 x 16mm

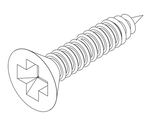

72pcs

Y Screw
M4 x 38mm

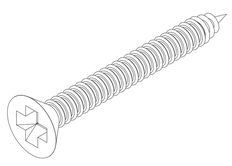

9pcs

Z Panhead Screw
(Black)
M4 x 16mm



22pcs

AA Anti-Tip Kit

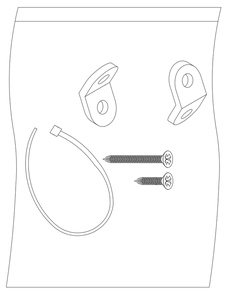

1set

These pages list all the contents included in the box. Please take the time to identify the hardware as well as the individual components to this product. As you unpack and prepare for assembly, place the contents on a carpeted or padded area to protect them from damage.

1 Insert Cam Bolt (U) into the Top Panel (A) with a screwdriver (not provided).

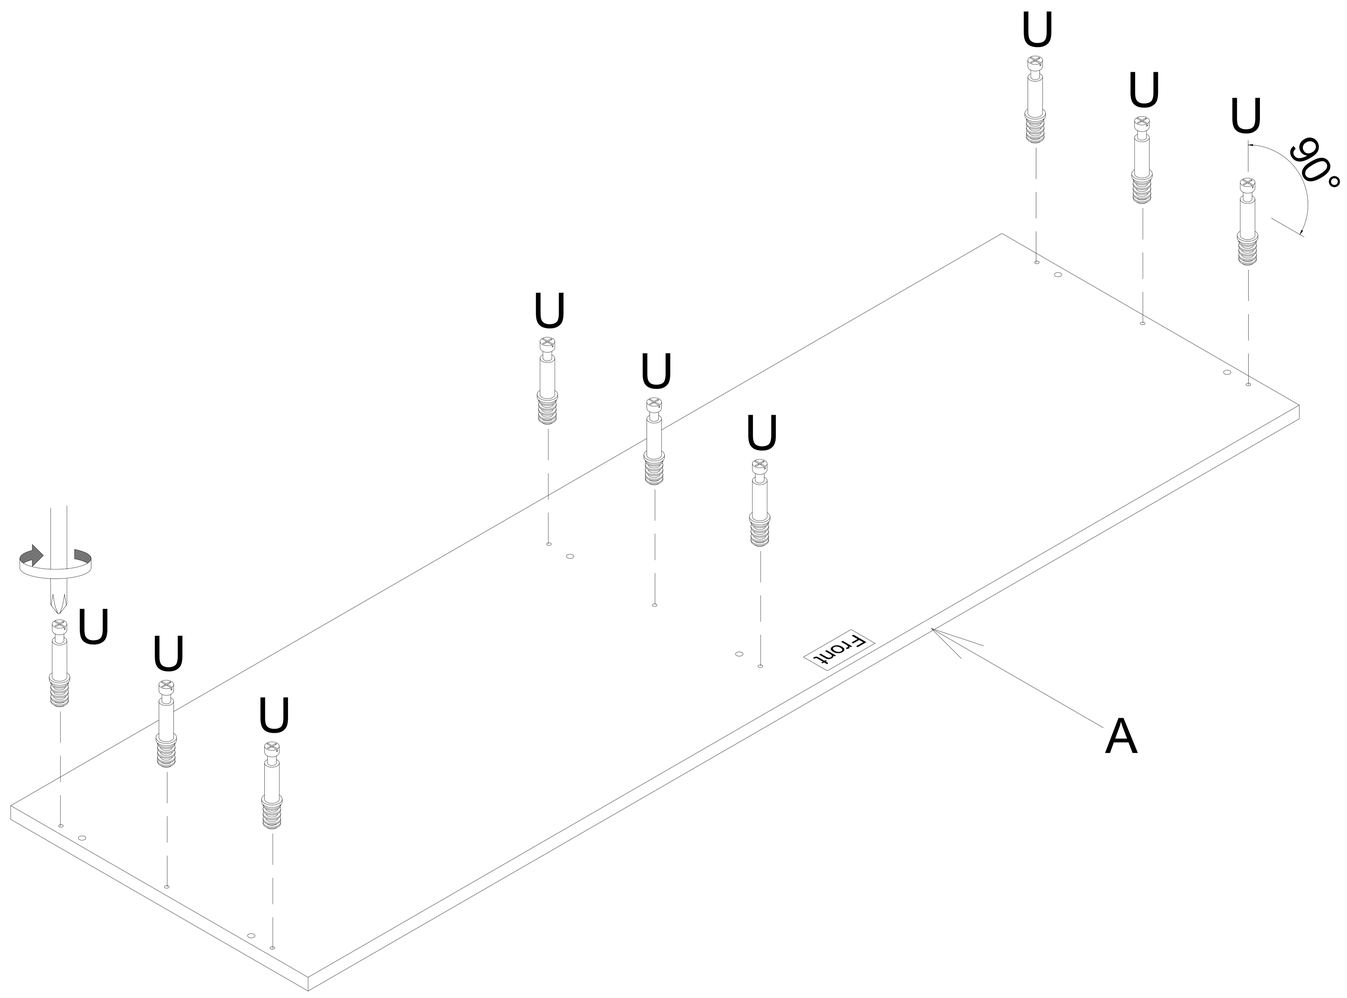

2 Insert Dowel (T), Cam Bolt (U) and Cam Lock (V) into the Left & Right Side Panel (B & C) with a screwdriver (not provided).

NOTE : - Ensure the arrows on each Cam Lock (V) point towards the nearest edge with holes.

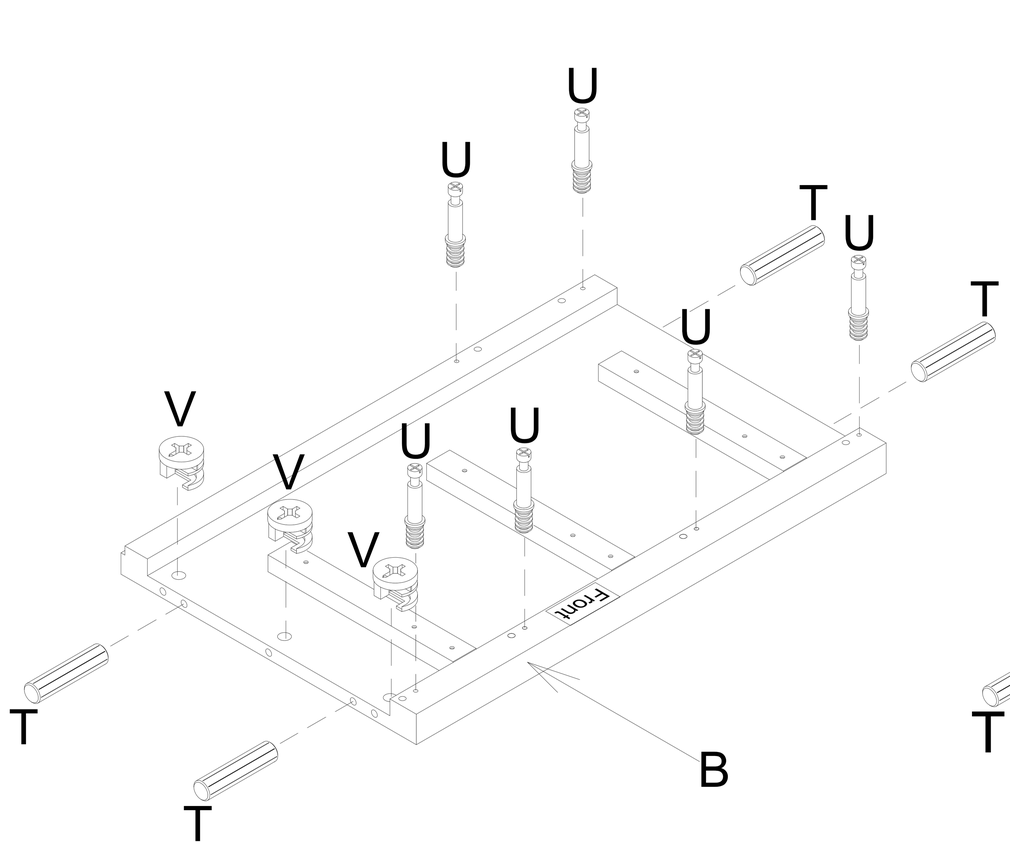

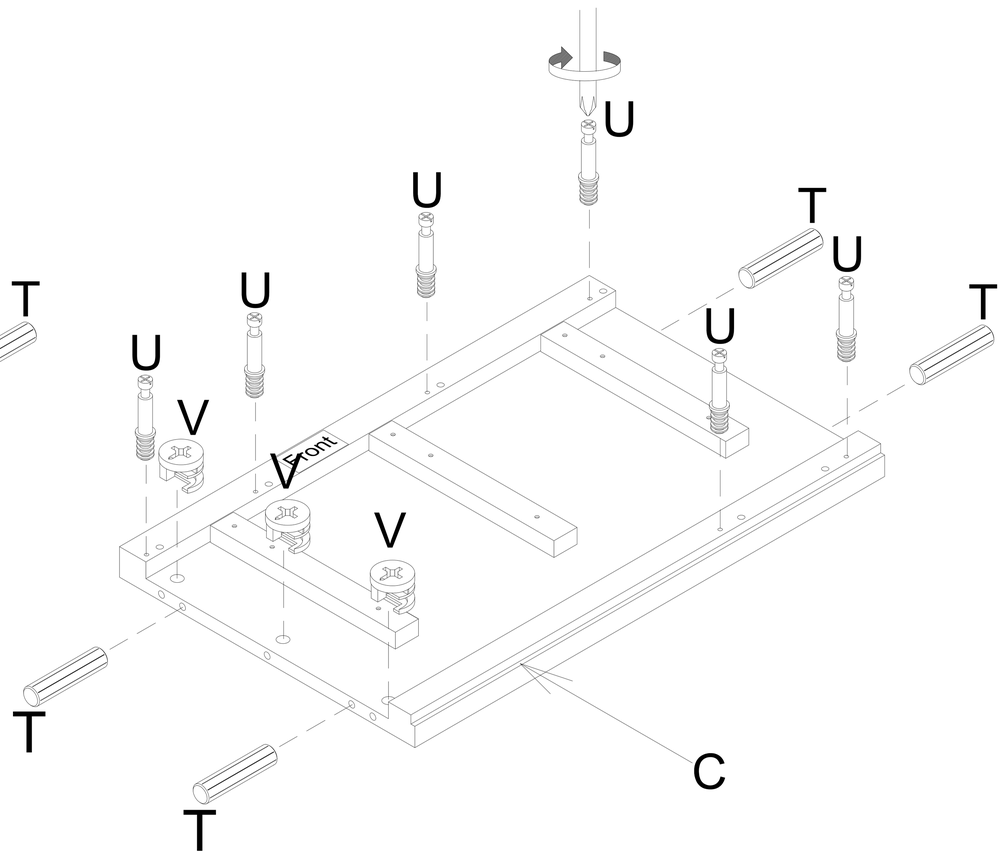

3 Disassemble Runner (R) into two parts. Attach the part with runner roller to the Left & Right Side Panel (B & C) using Screw (X) with a screwdriver (not provided). Attach the other part with slide to the Left & Right Small Drawer Side (I & J) and the Left & Right Big Drawer Side (M & N) (shown in Step 11 and Step 15).

NOTE : - Runner (R) should face the front of the panel.

- Assemble Screw (X) from the front of the runner, starting with X^1, X^2, then X^3.
- Ensure screws are installed vertically without tilting to fit properly into the holes.

EXTENSION RUNNER DISASSEMBLE STEPS:

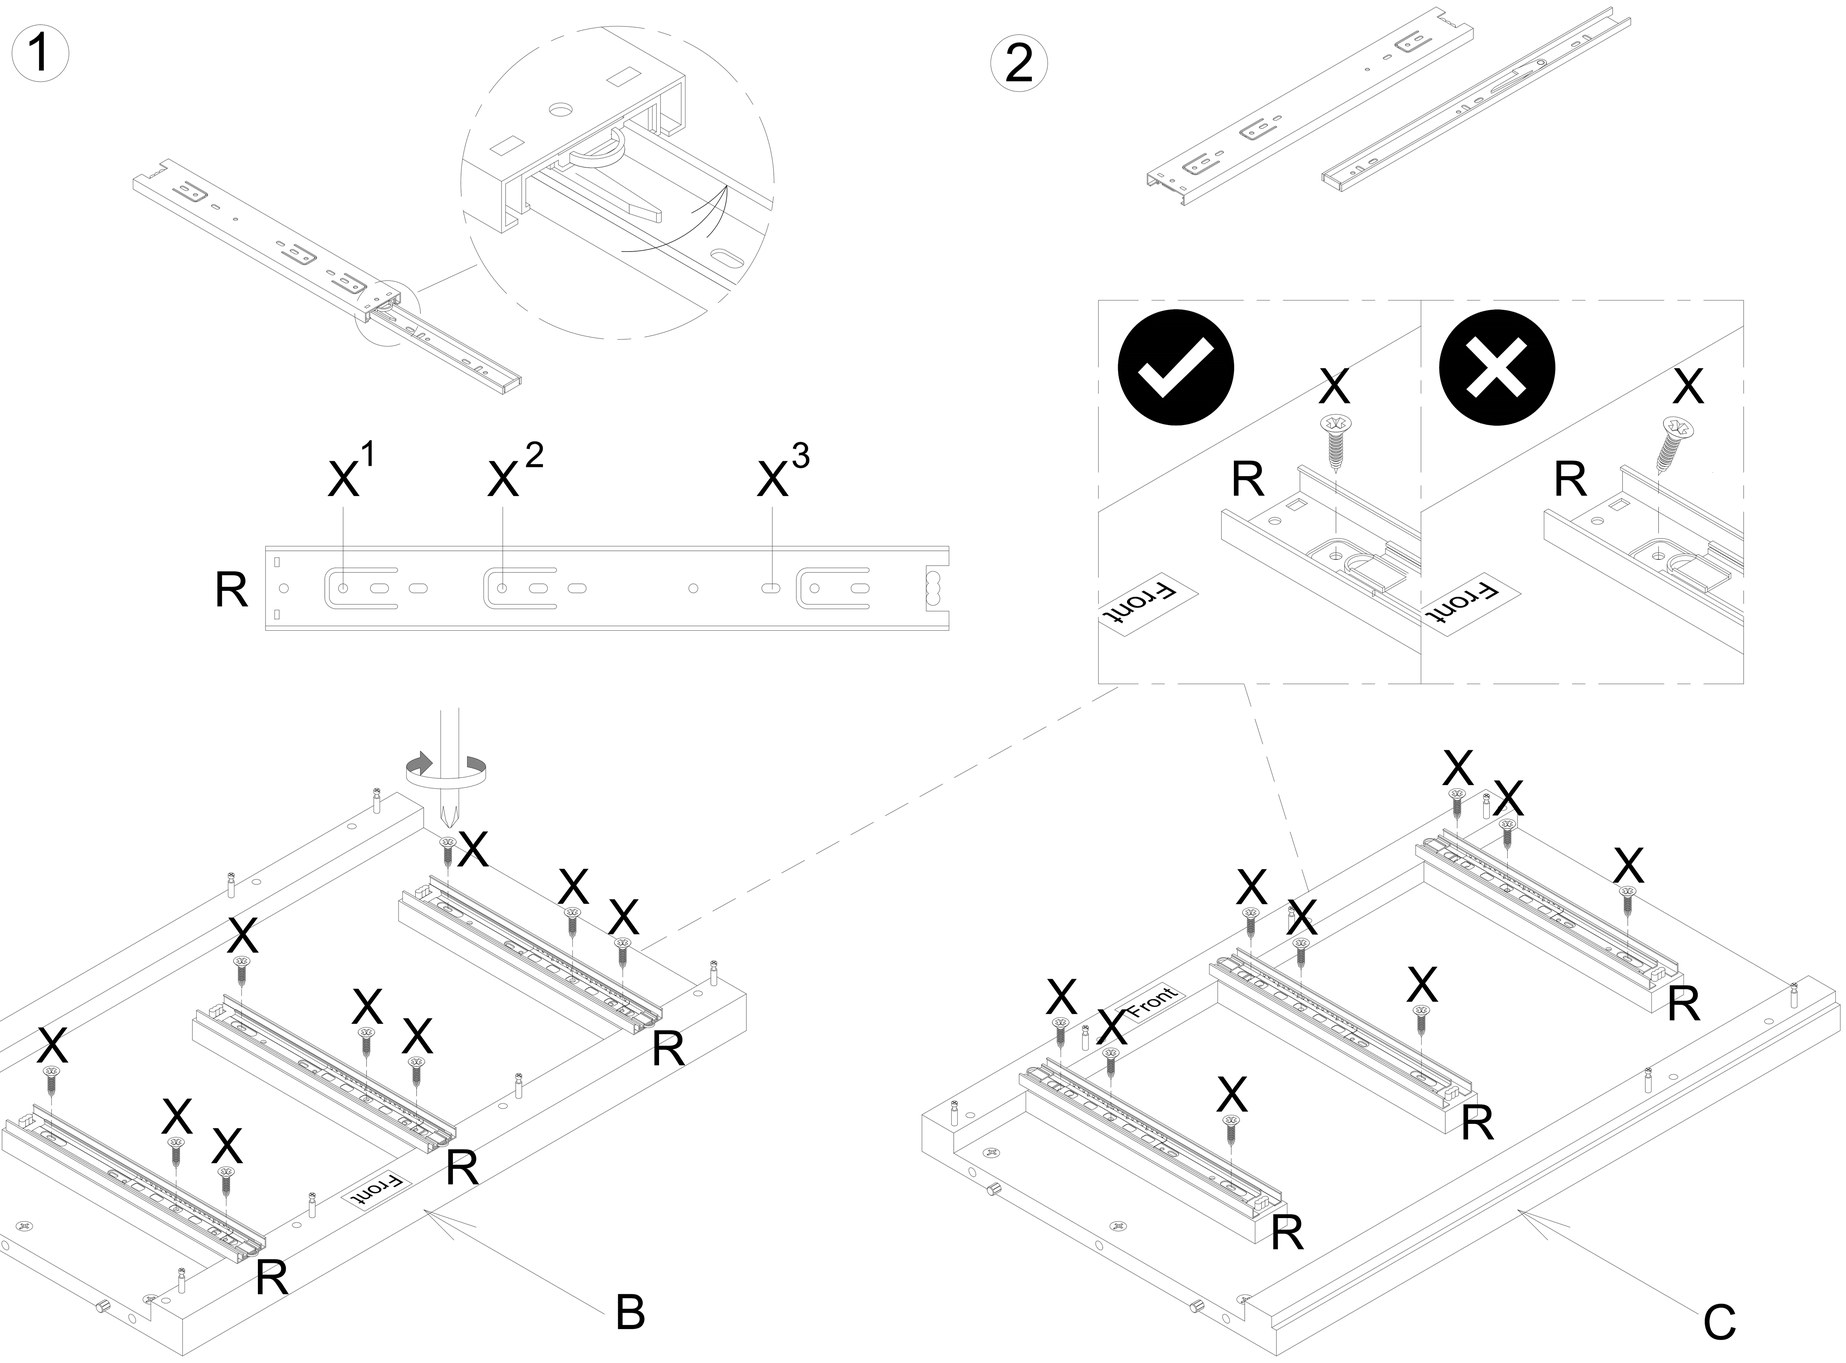

4 Insert Dowel (T), Cam Bolt (U) and Cam Lock (V) into the Partition (E).

NOTE : - Ensure the arrows on each Cam Lock (V) point towards the nearest edge with holes.

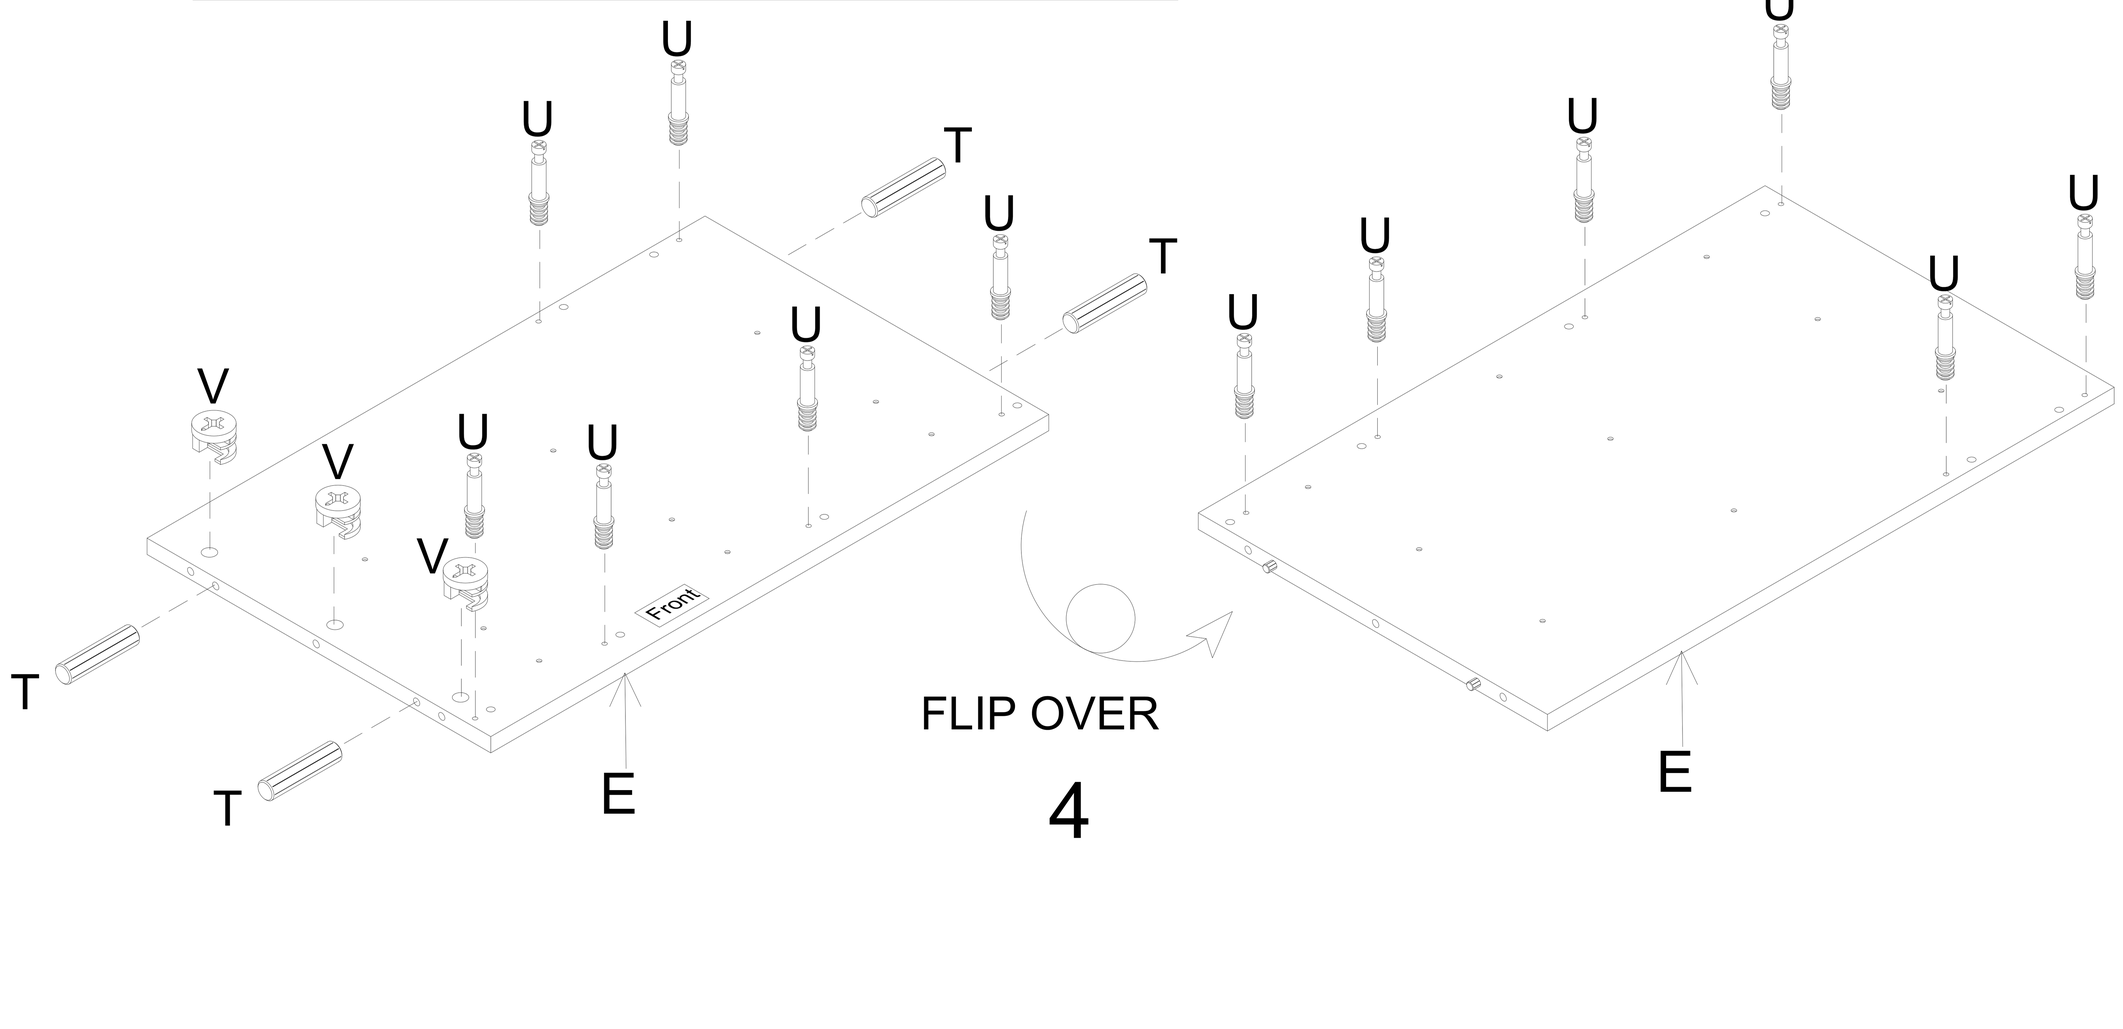

5 Disassemble Runner (R) into two parts. Attach the part with runner roller to the Partition (E) using Screw (X) with a screwdriver (not provided). Attach the other part with slide to the Left & Right Small Drawer Side (I & J) and the Left & Right Big Drawer Side (M & N) (shown in Step 11 and Step 15).

NOTE : - Runner (R) should face the front of the panel.
- Assemble Screw (X) from the front of the runner, starting with X^1, X^2, then X^3.
- Ensure screws are installed vertically without tilting to fit properly into the holes.

EXTENSION RUNNER DISASSEMBLE STEPS:

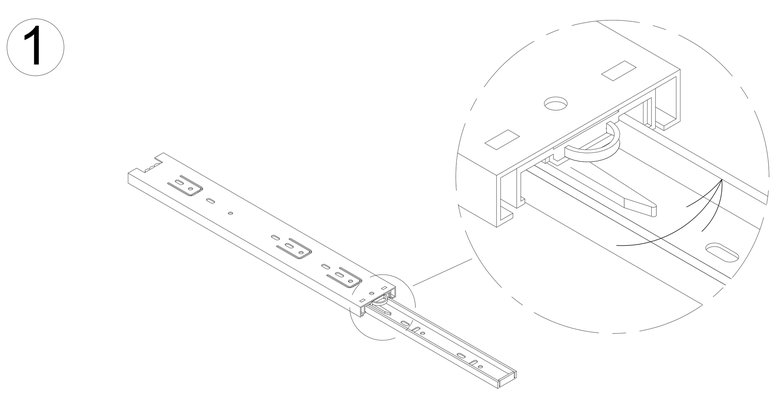

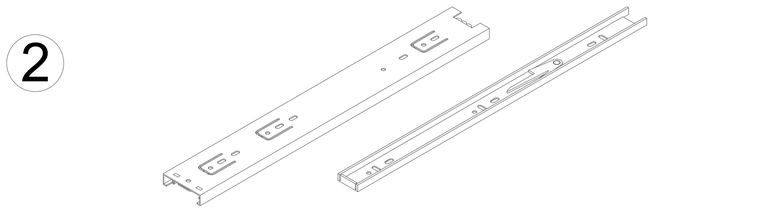

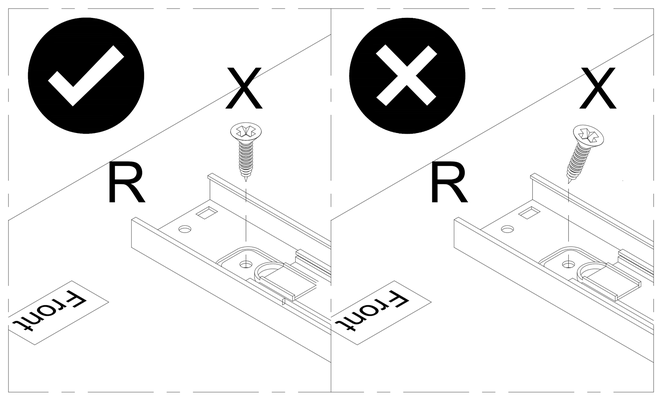

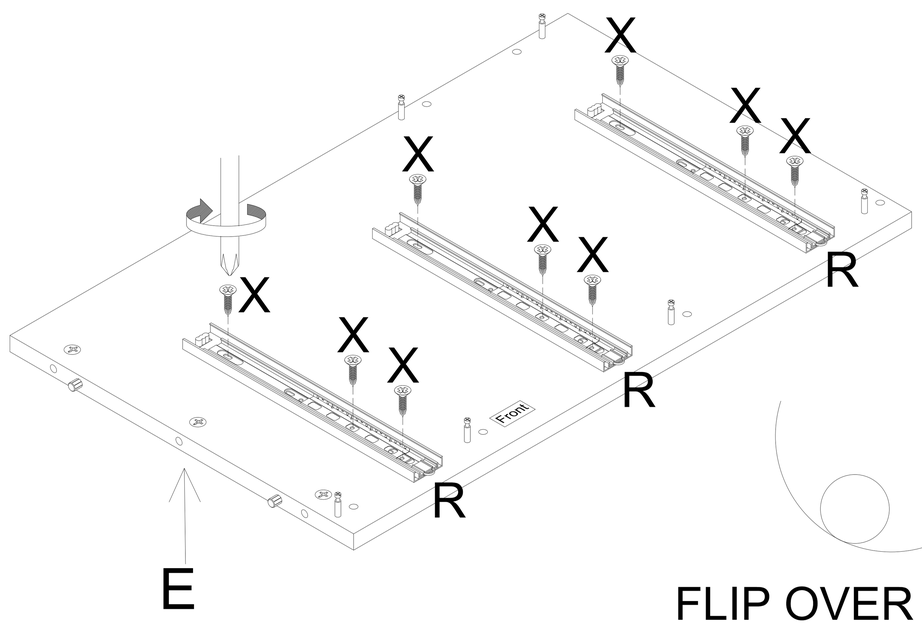

FLIP OVER

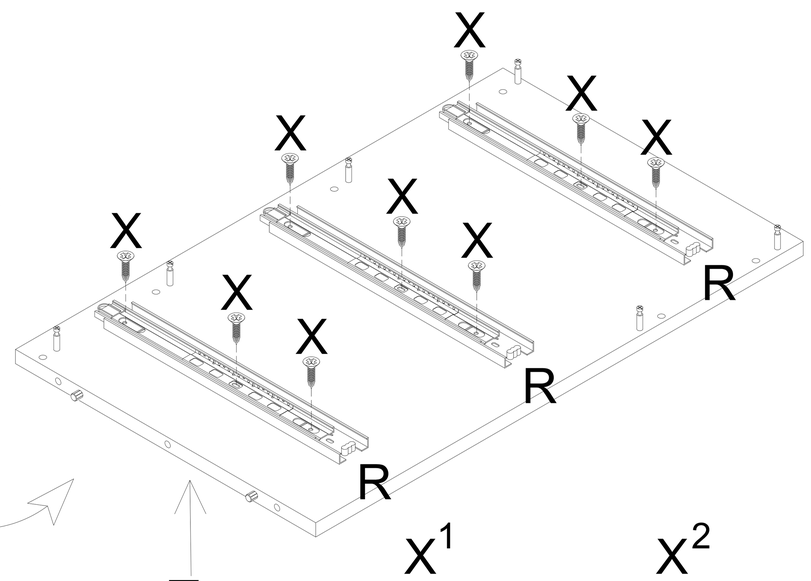

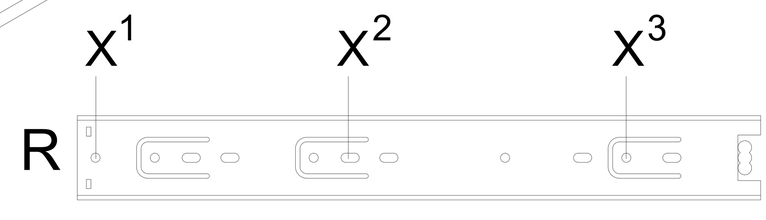

6 Insert Dowel (T) and Cam Lock (V) into the Back Support Panel (F) and the Center Bar (H).

NOTE : - Ensure the arrows on each Cam Lock (V) point towards the nearest edge with holes.

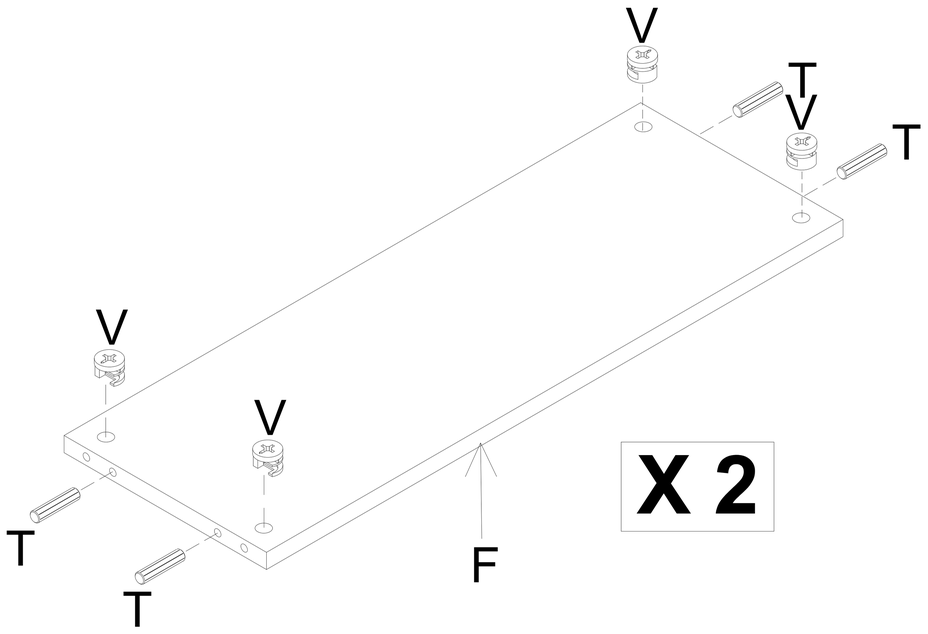

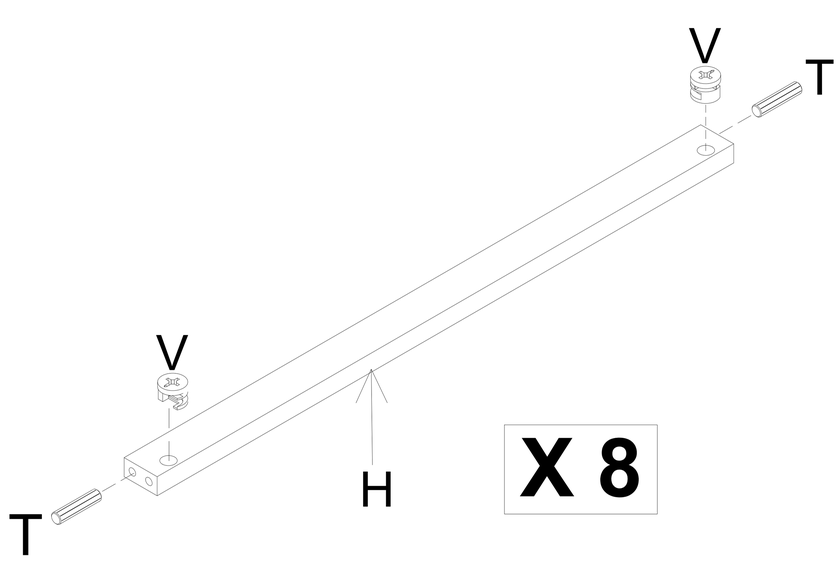

7 (i) Attach the Back Support Panel (F) and the Center Bar (H) to the Partition (E) and secure the Cam Lock (V) with a screwdriver (not provided).

(ii) Attach the Left & Right Side Panel (B & C) to the Back Support Panel (F) and the Center Bar (H) and secure the Cam Lock (V) with a screwdriver (not provided). Cover Cam Lock (V) with Cam Lock Cover (W).

NOTE : - Do not over tighten the Cam Lock (V).

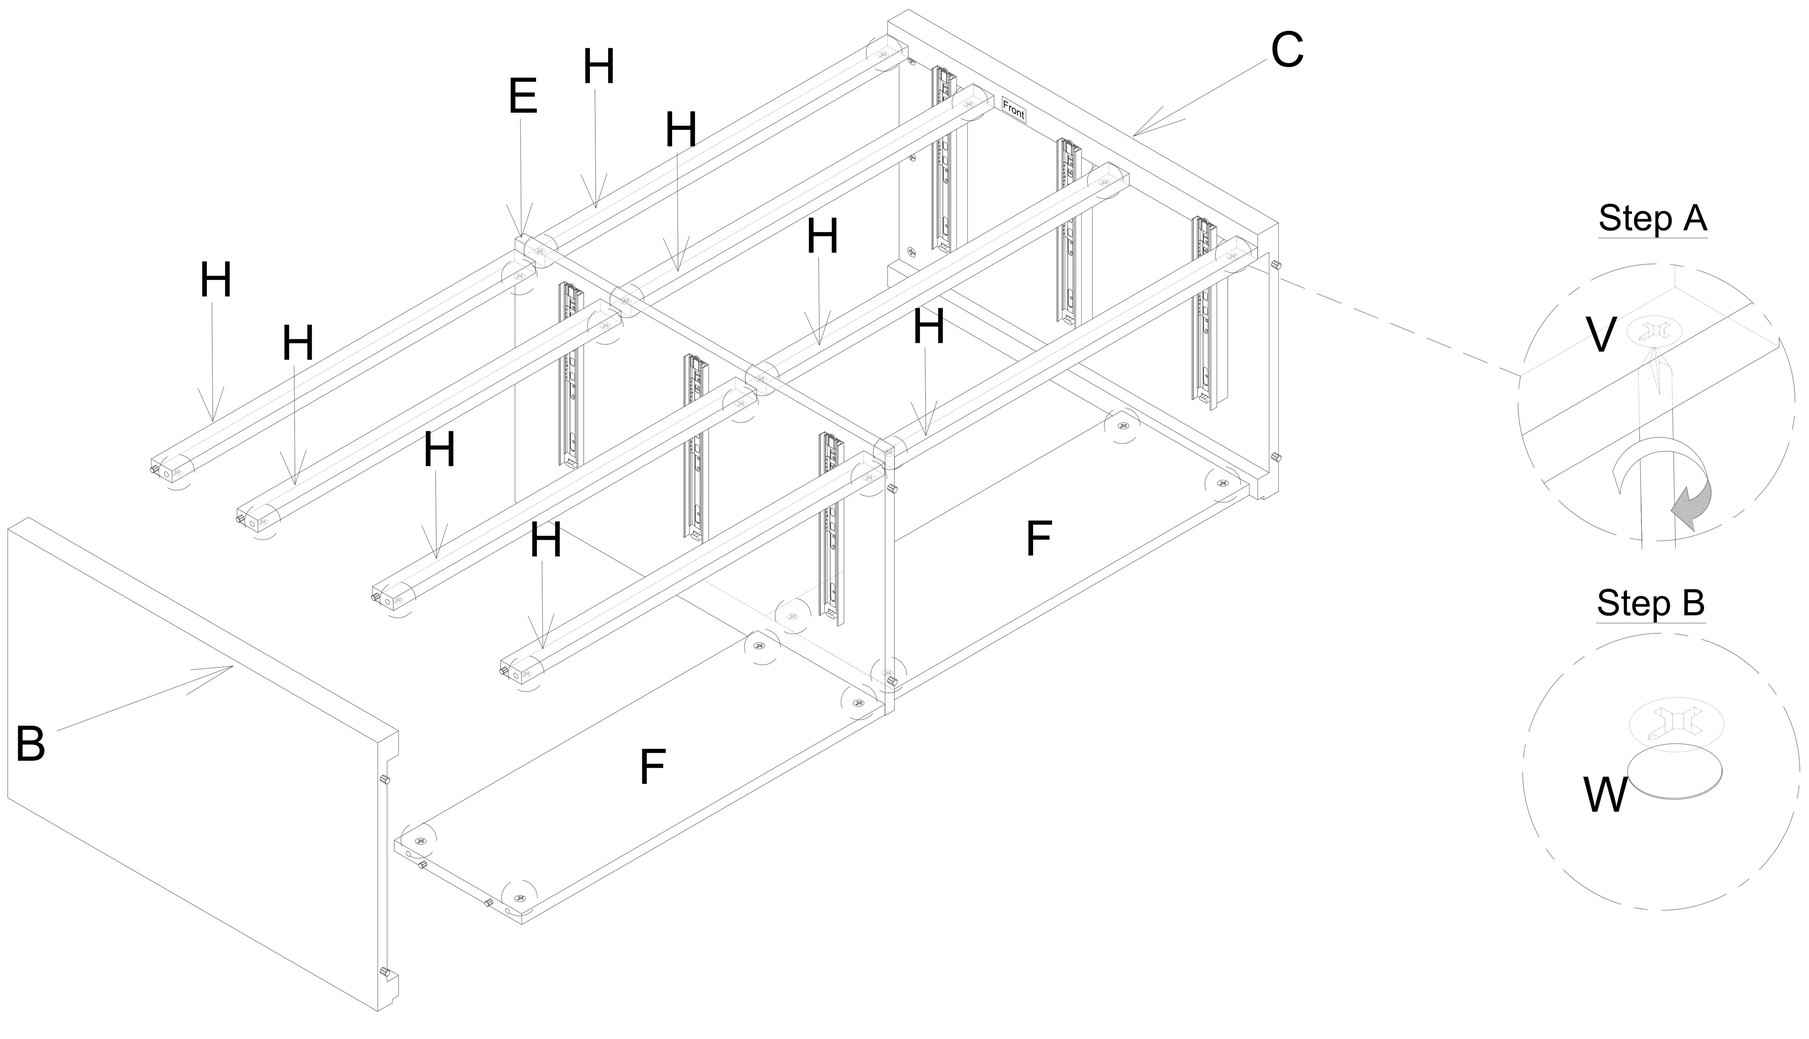

8 Attach the Bottom Frame (D) to the Left & Right Side Panel (B & C) and the Partition (E) using Screw (Y) with a screwdriver (not provided).

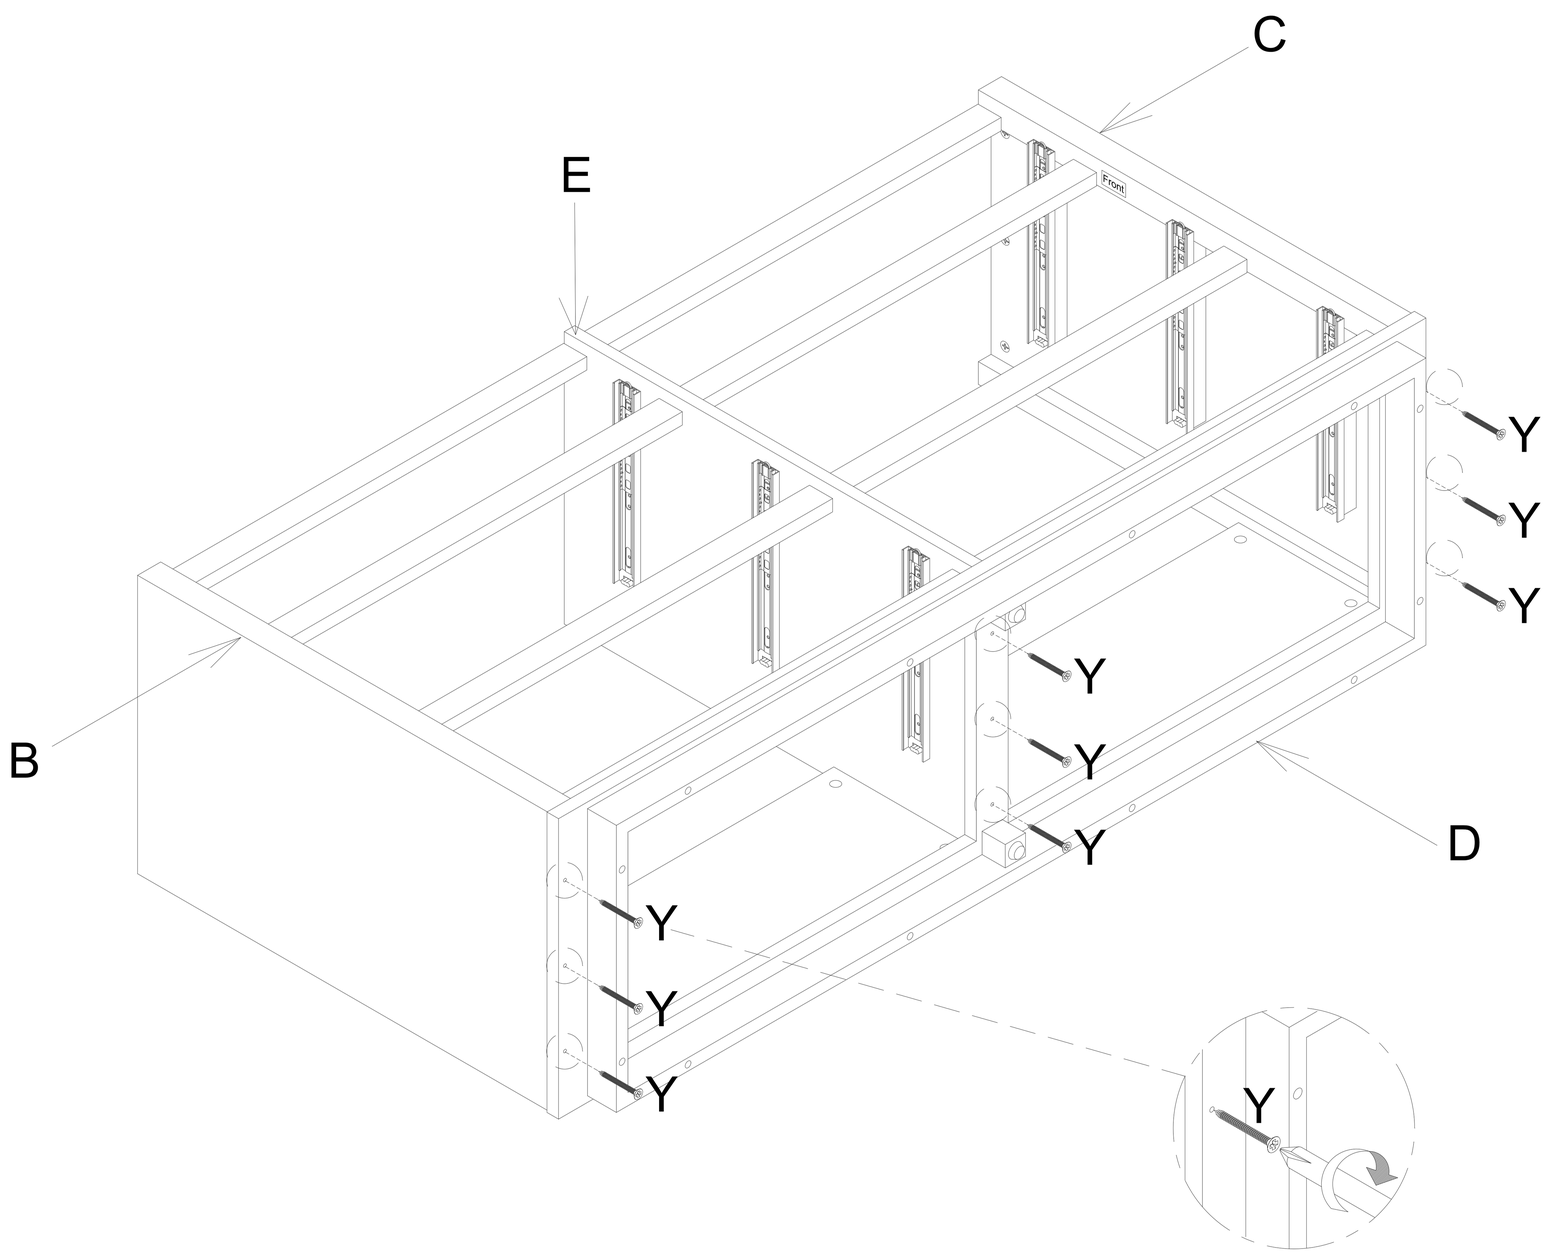

9 Stand the assembled unit upright and turn it to the back. Attach the Top Panel (A) to the Left & Right Side Panel (B & C) and the Partition (E) and secure the Cam Lock (V) with a screwdriver (not provided). Cover the Cam Lock (V) with Cam Lock Cover (W).

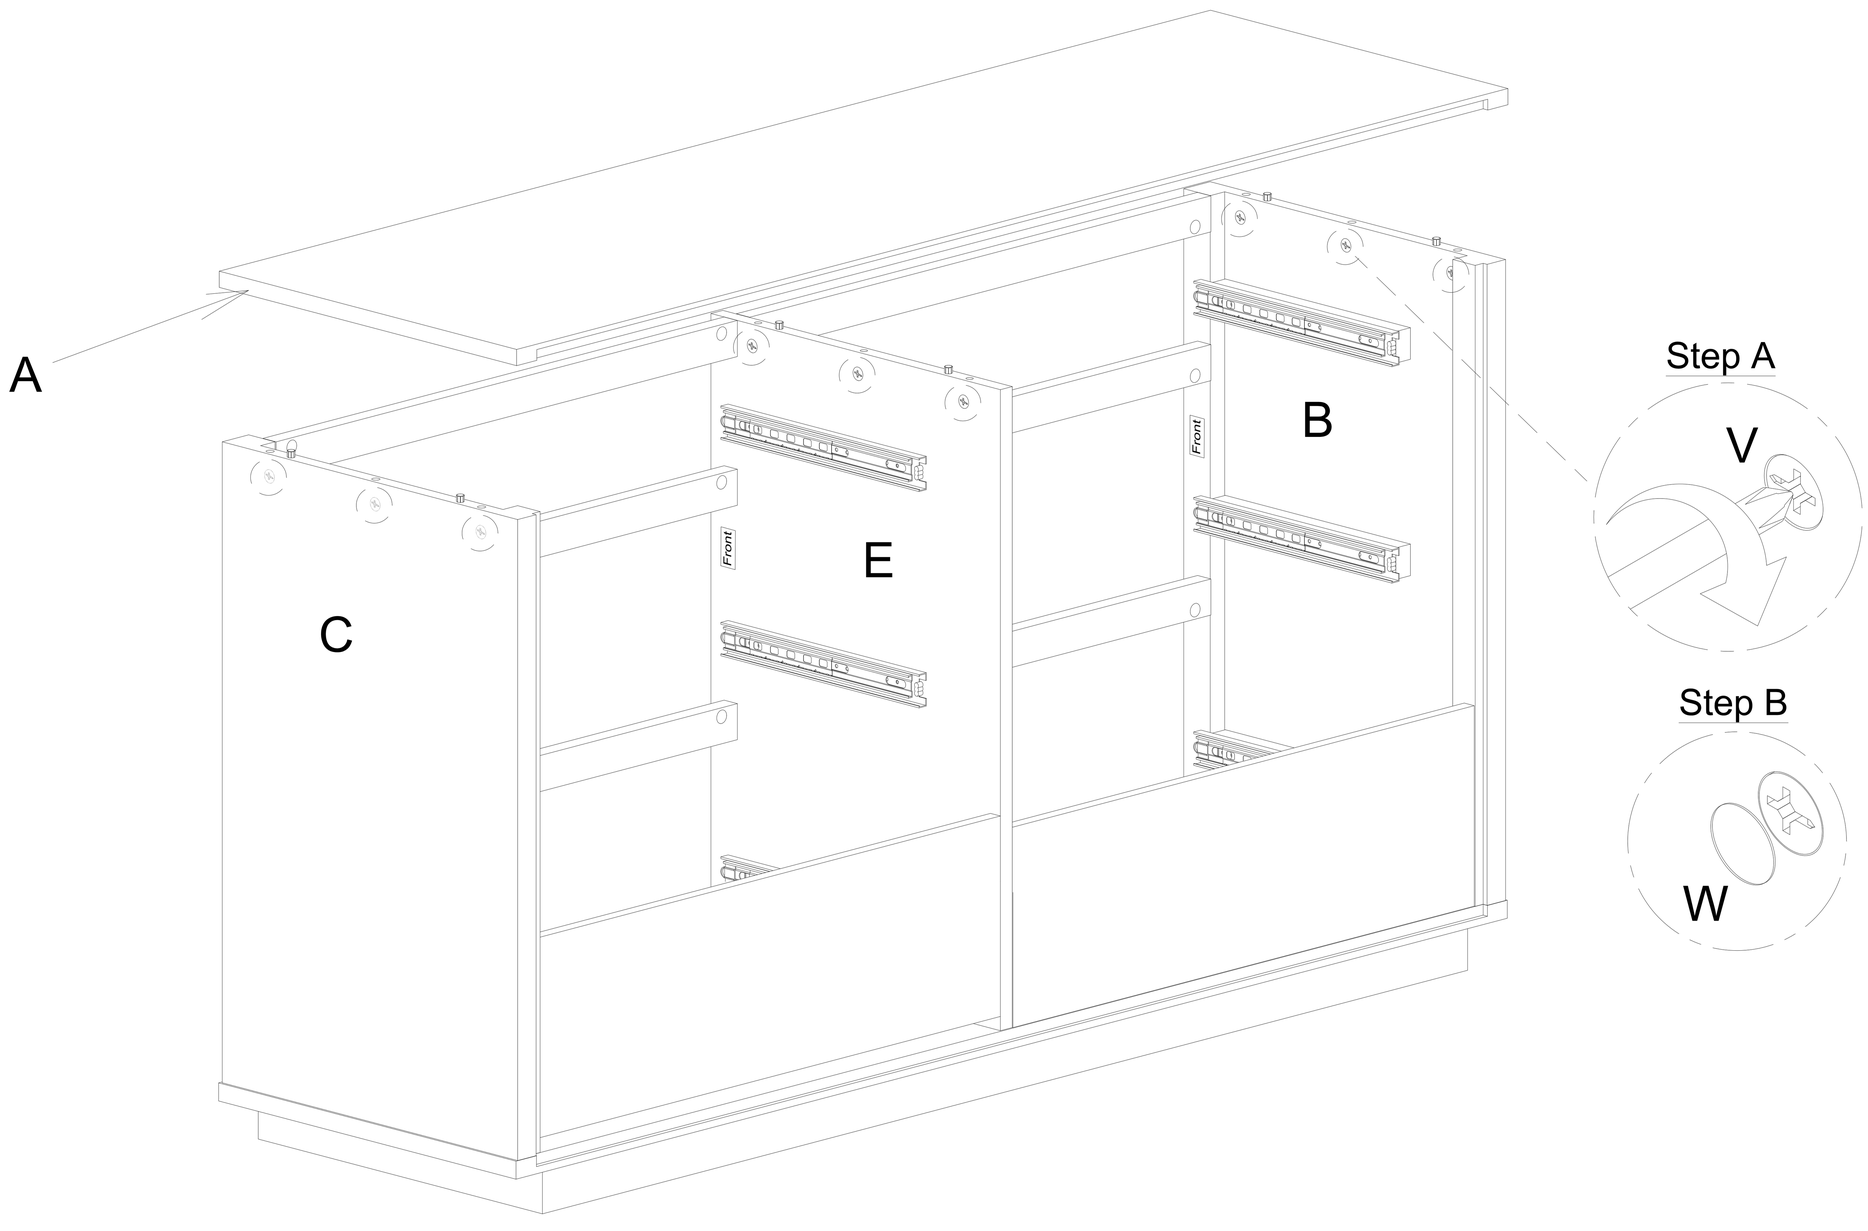

10 Attach the Back Panel (G) to the assembled unit using Panhead Screw (Z) with a screwdriver (not provided).

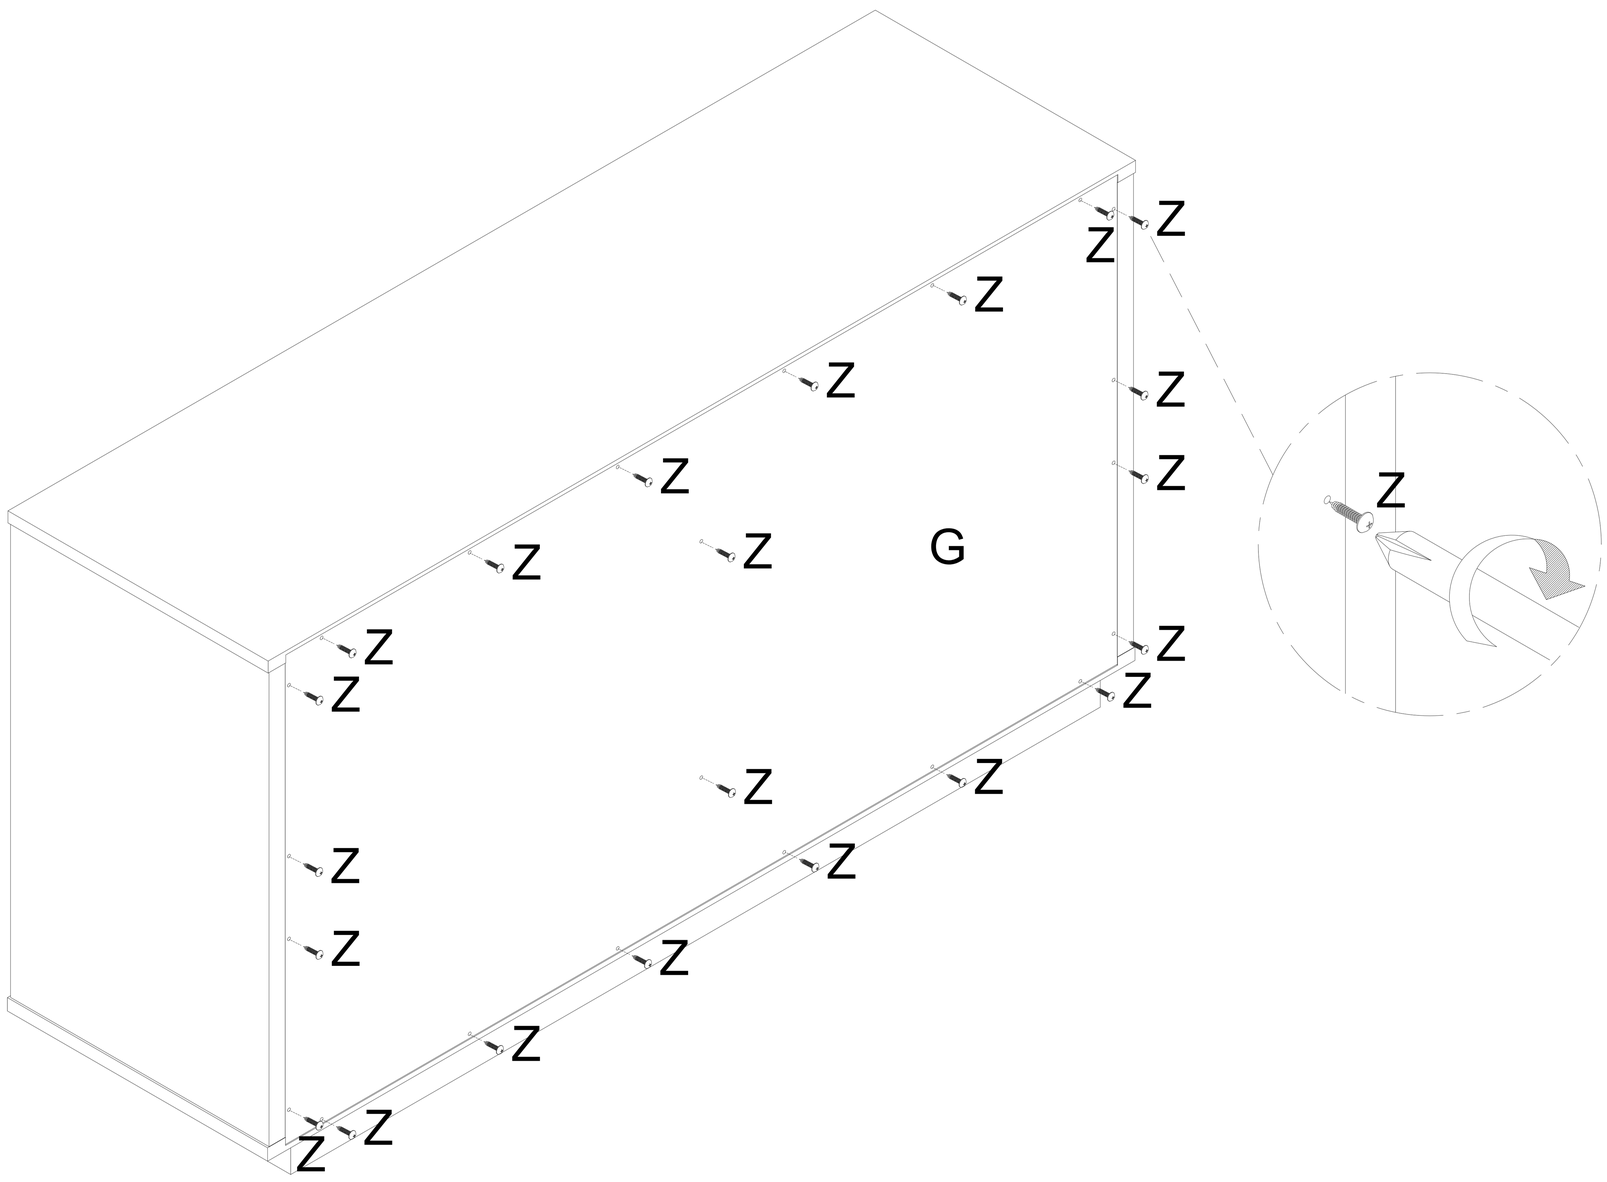

11 Attach Runner (R) to the Left & Right Small Drawer Side (I & J) using Screw (X) with a screwdriver (not provided).

NOTE : - Do not over tighten the Screw (X).

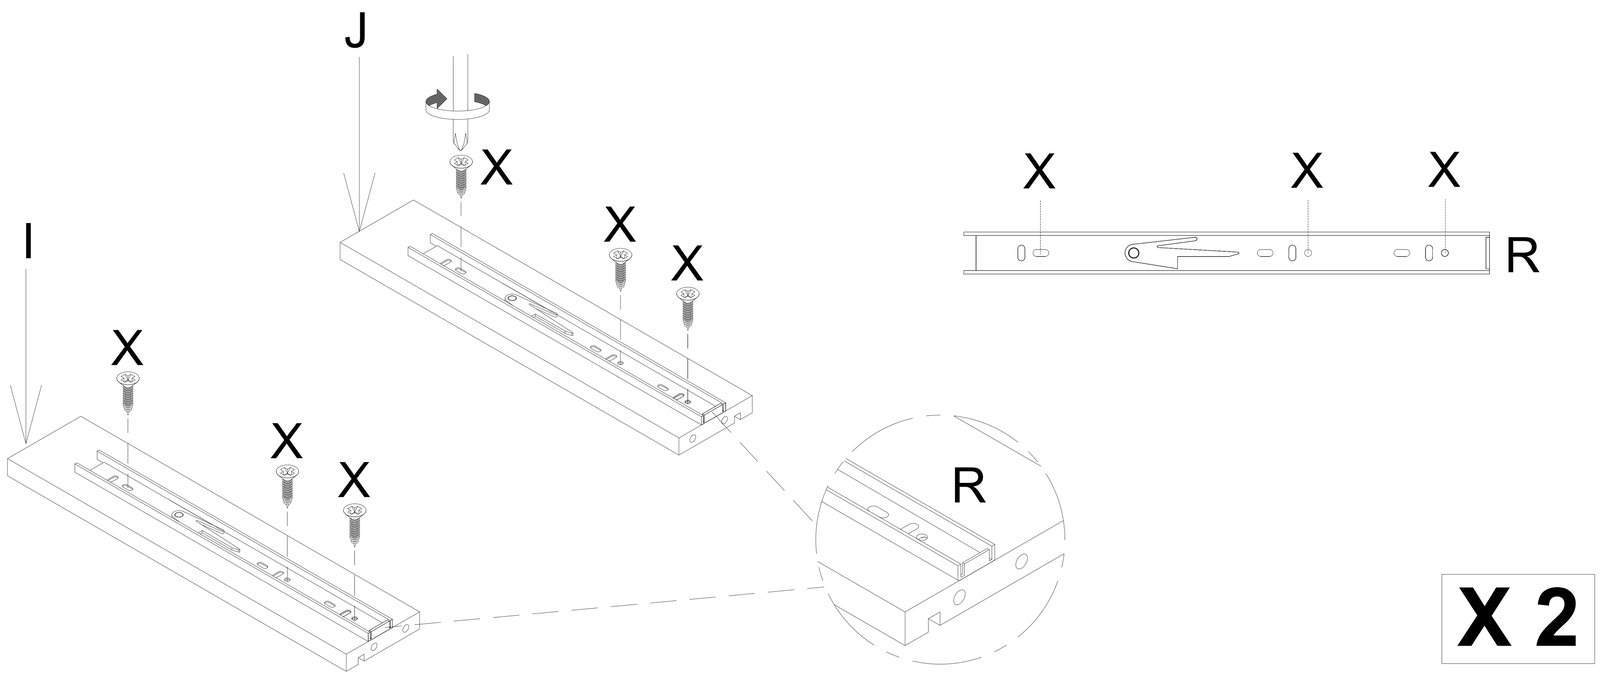

X 2

12 Attach Dowel (S) and Cam Lock (V) to the Left & Right Small Drawer Side (I & J) and the Small Drawer Back (L). Attach Cam Bolt (U) to the Left & Right Small Drawer Side (I & J) and the Small Drawer Front (K) with a screwdriver (not provided).

NOTE : - Ensure the arrows on each Cam Lock (V) point towards the nearest edge with holes.

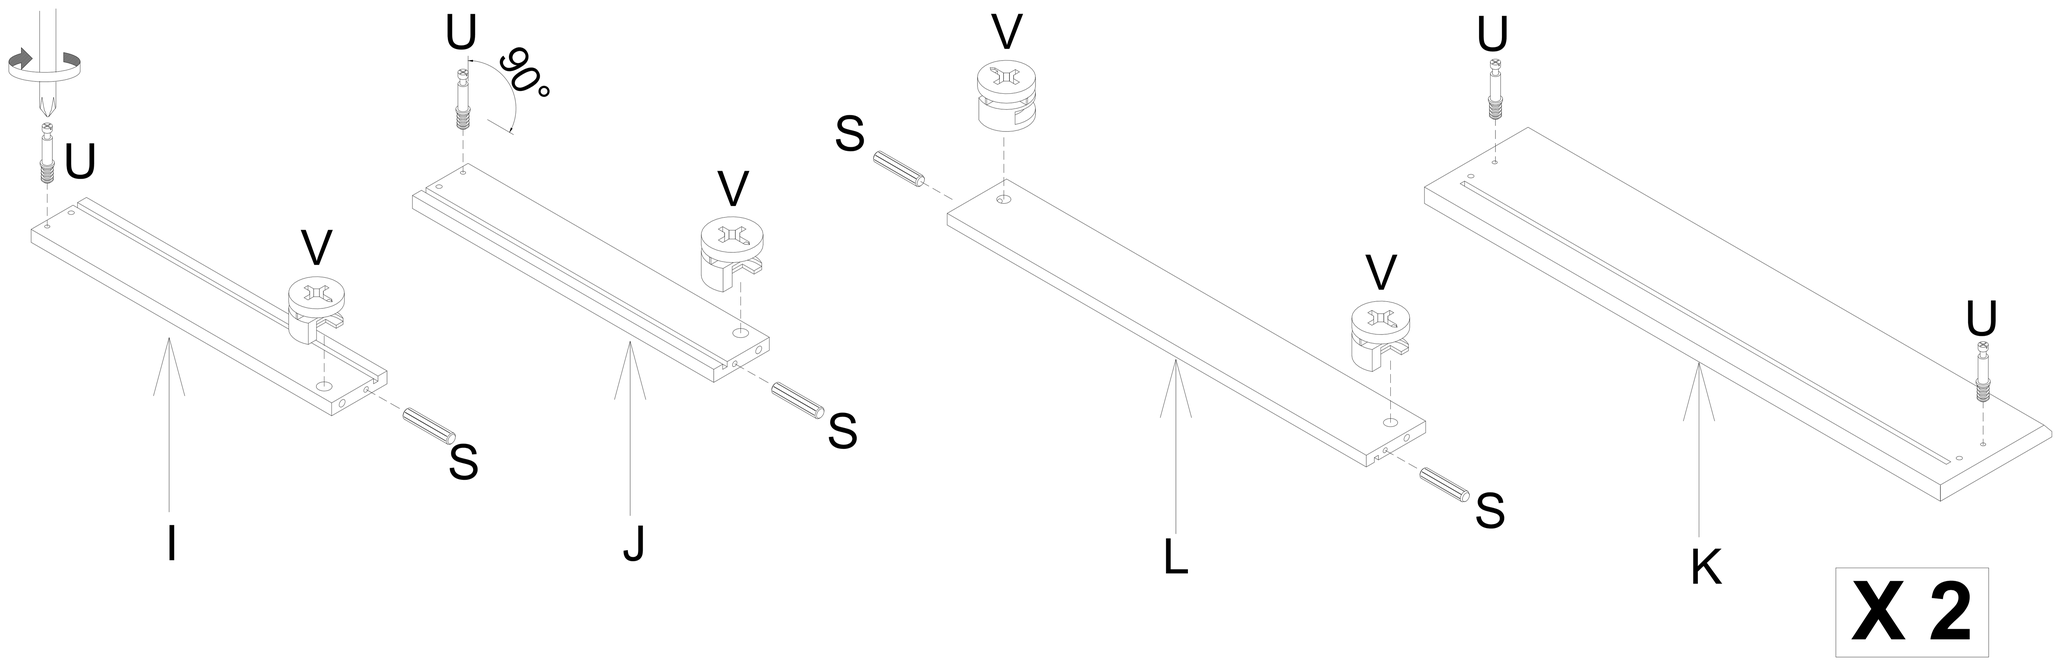

X 2

13 Attach the Left & Right Small Drawer Side (I & J) to the Small Drawer Back (L) and secure the Cam Lock (V) with a screwdriver (not provided). Cover the Cam Lock (V) with Cam Lock Cover (W).

NOTE : - Do not over tighten the Cam Lock (V).

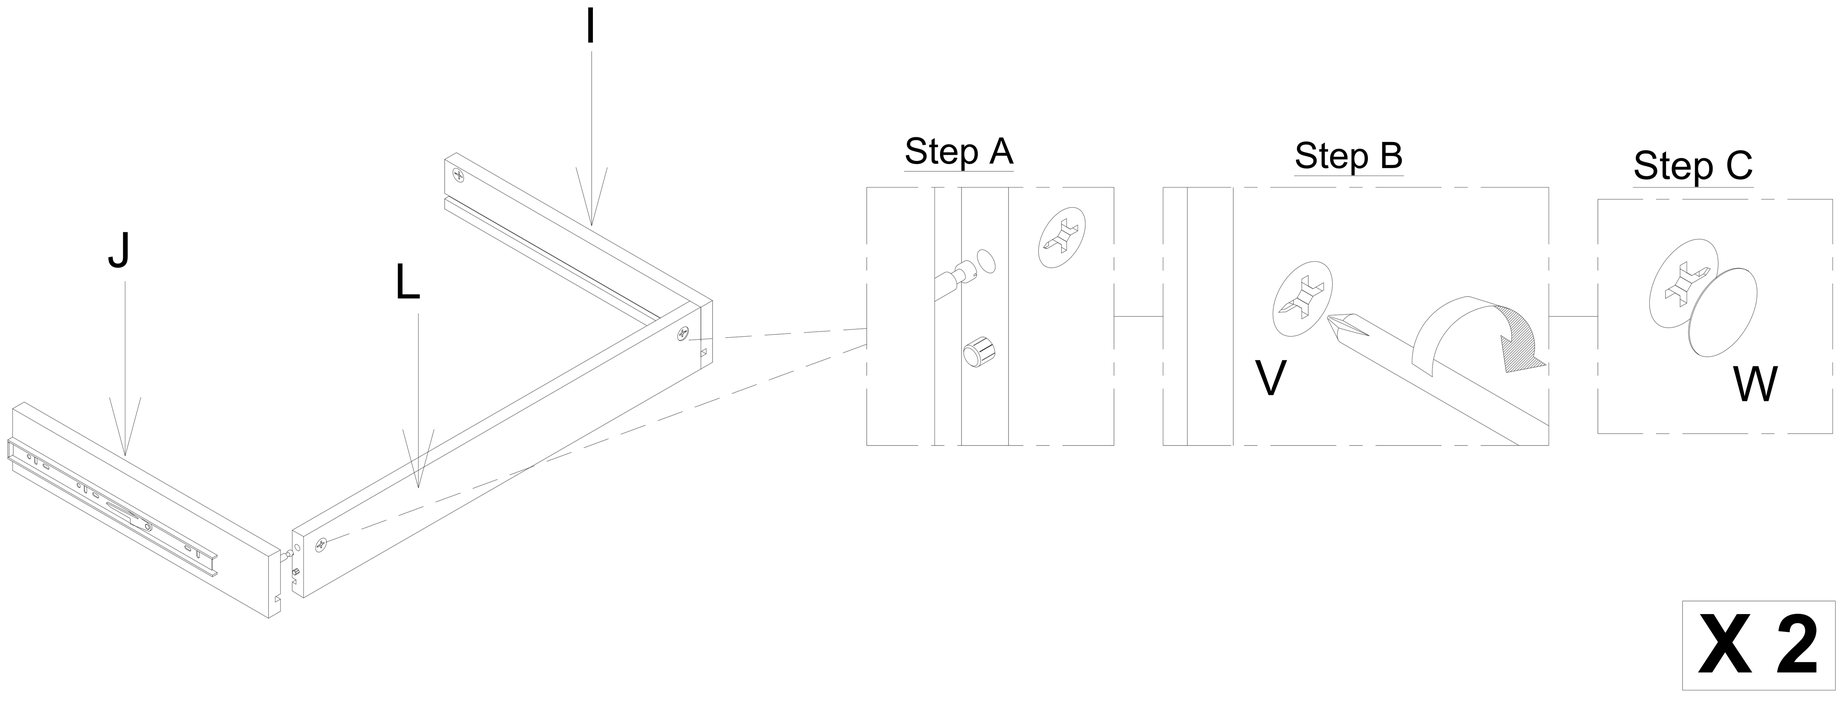

X 2

14 Slot the Drawer Base (Q) into the grooves of the drawer box. Attach the Small Drawer Front (K) to the drawer box and secure the Cam Lock (V) with a screwdriver (not provided). Cover the Cam Lock (V) with Cam Lock Cover (W).

NOTE : - Do not over tighten the Cam Lock (V).

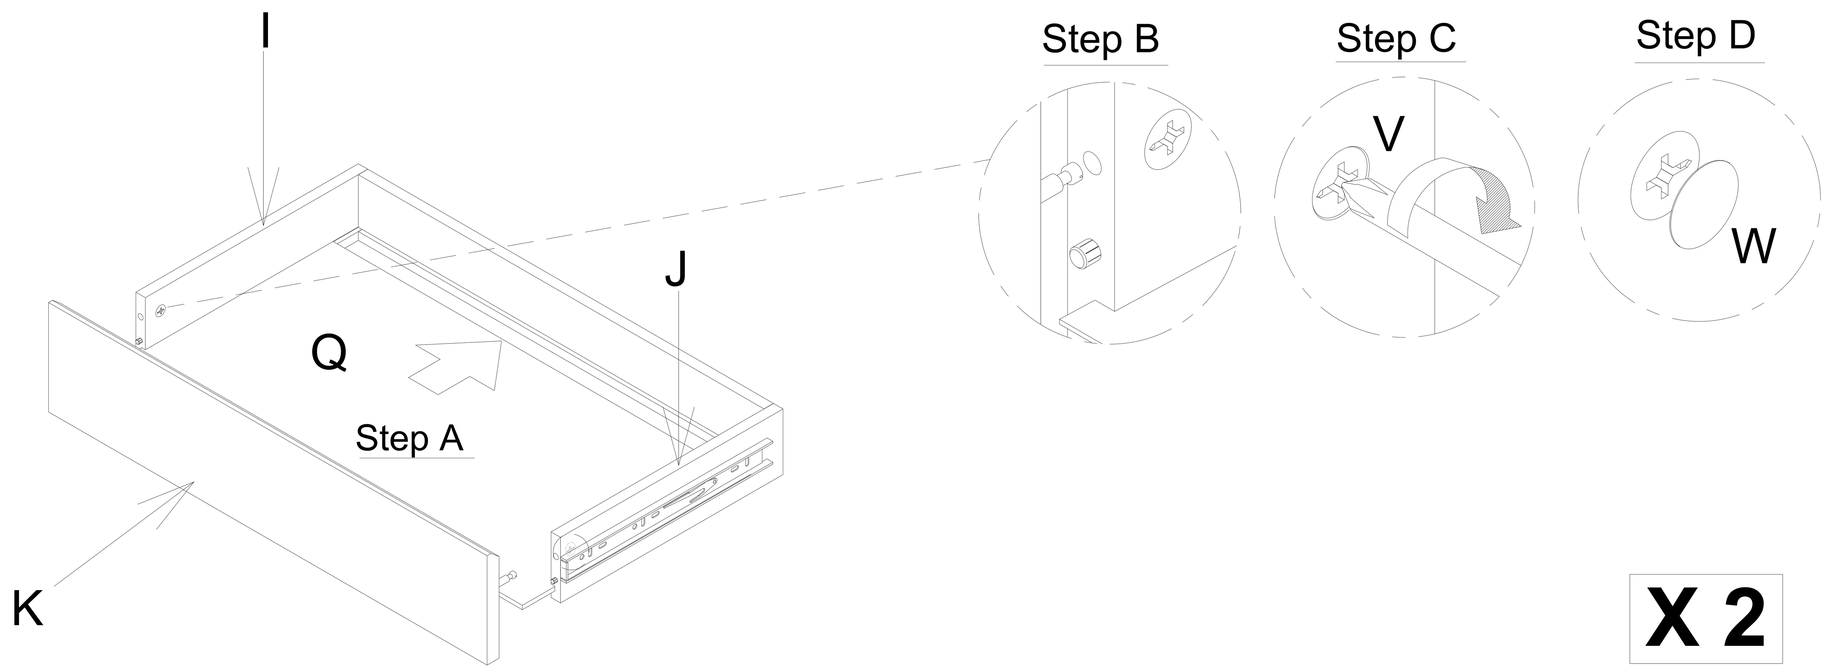

X 2

15 Attach Runner (R) to the Left & Right Big Drawer Side (M & N) using Screw (X) with a screwdriver (not provided).

NOTE : - Do not over tighten the Screw (X).

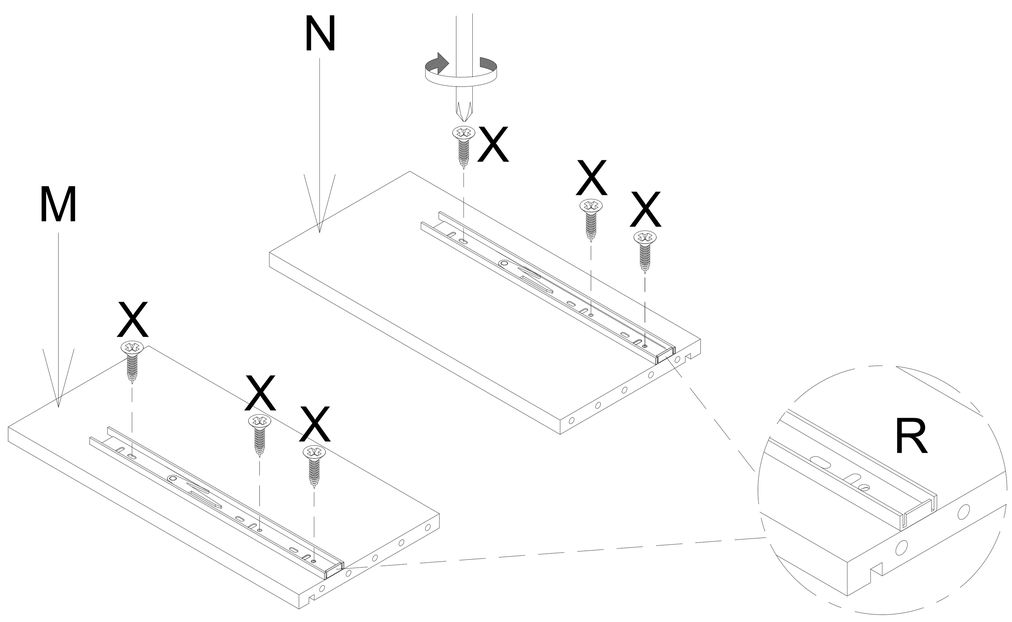

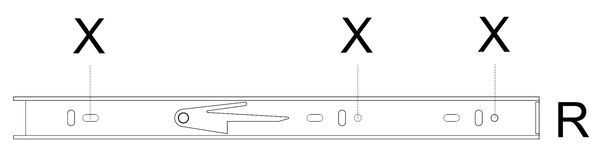

X 4

16 Attach Dowel (S) and Cam Lock (V) to the Left & Right Big Drawer Side (M & N) and the Big Drawer Back (P). Attach Cam Bolt (U) to the Left & Right Big Drawer Side (M & N) and the Big Drawer Front (O) with a screwdriver (not provided).

NOTE : - Ensure the arrows on each Cam Lock (V) point towards the nearest edge with holes.

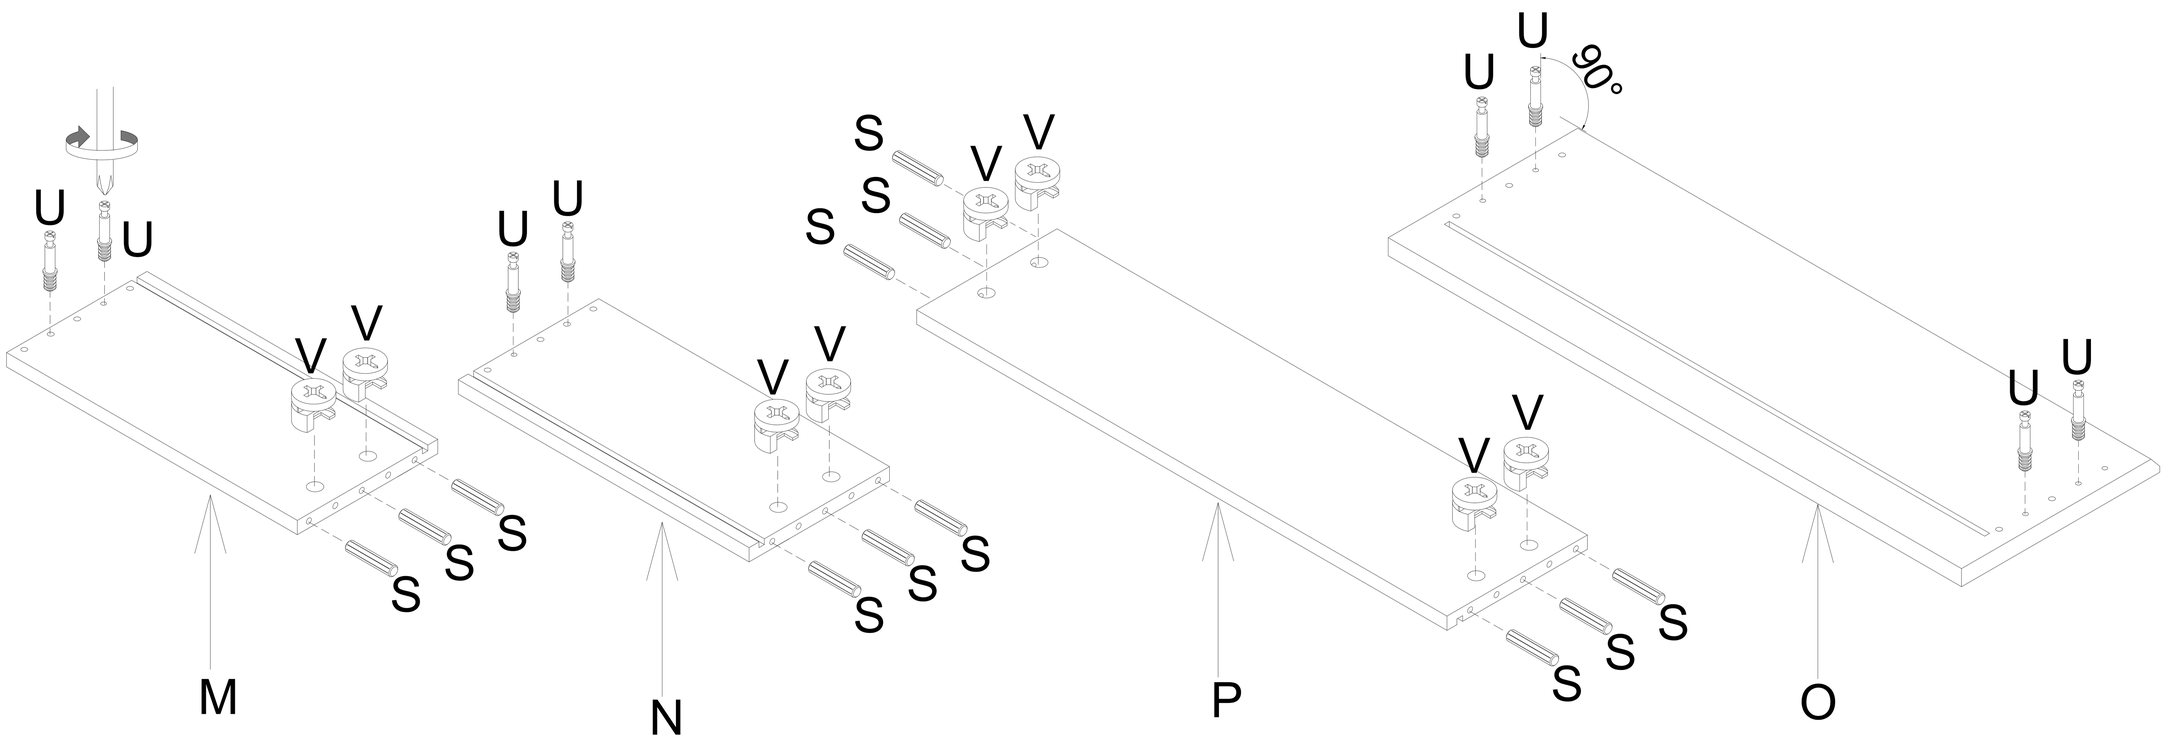

X 4

17 Attach the Left & Right Big Drawer Side (M & N) to the Big Drawer Back (P) and secure the Cam Lock (V) with a screwdriver (not provided). Cover the Cam Lock (V) with Cam Lock Cover (W).

NOTE : - Do not over tighten the Cam Lock (V).

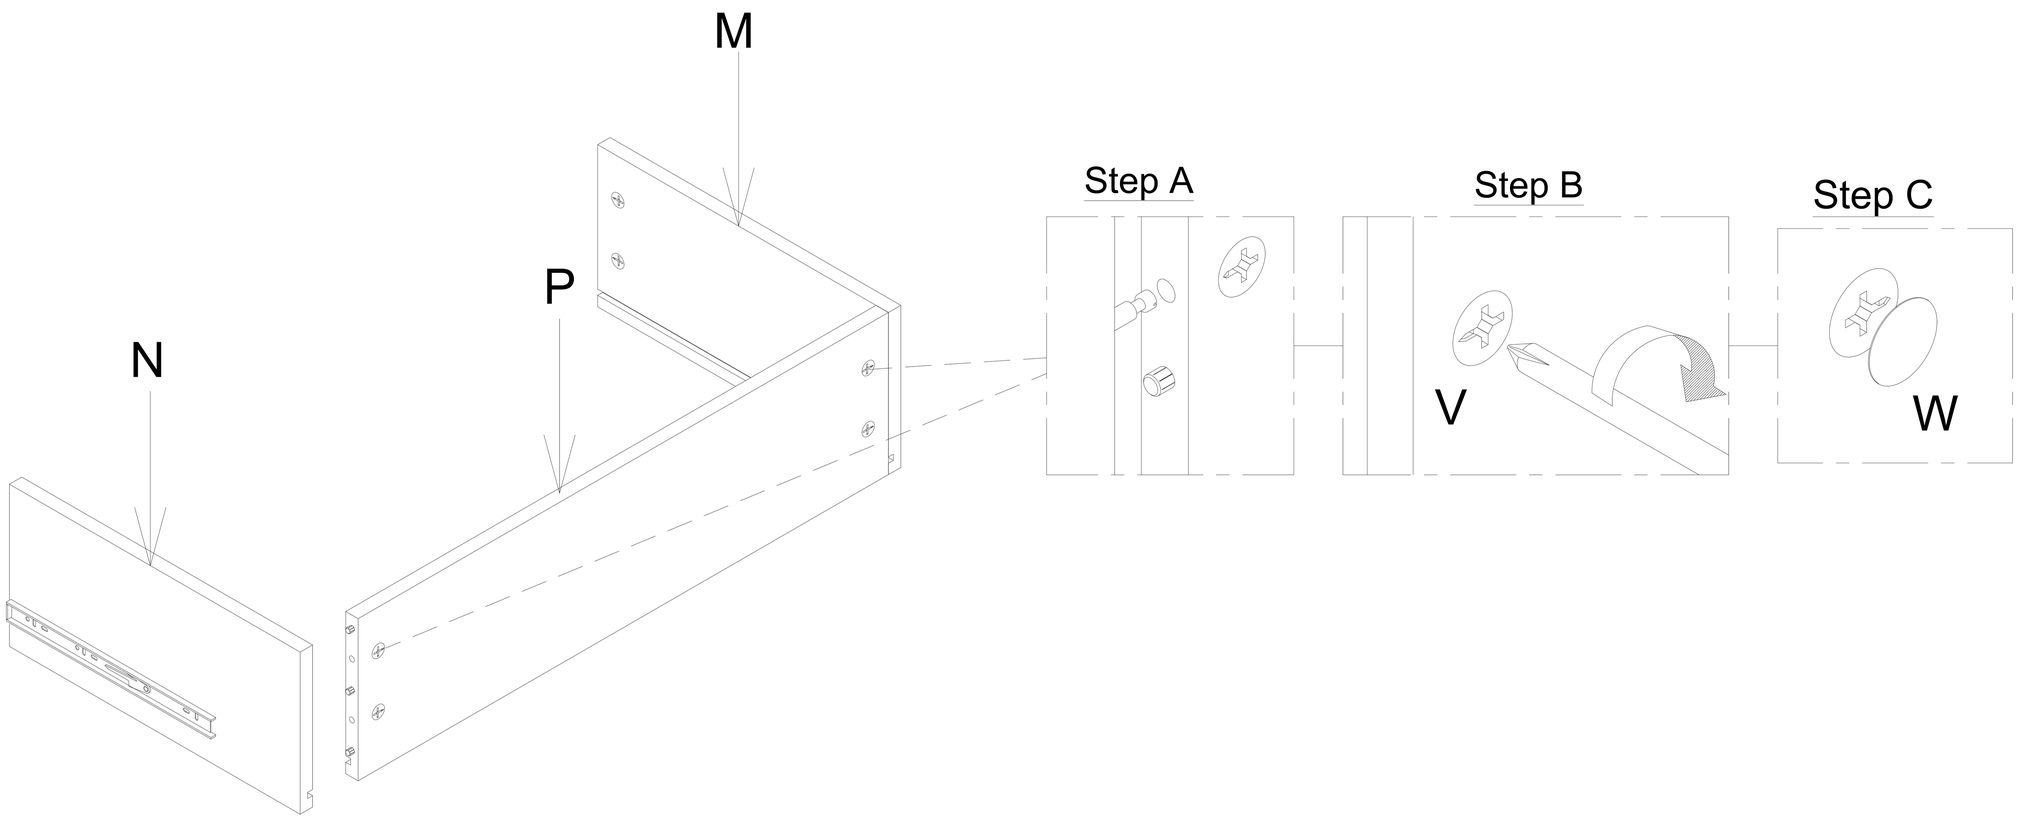

X 4

18 Slot the Drawer Base (Q) into the grooves of the drawer box. Attach the Big Drawer Front (O) to the drawer box and secure the Cam Lock (V) with a screwdriver (not provided). Cover the Cam Lock (V) with Cam Lock Cover (W).

NOTE : - Do not over tighten the Cam Lock (V).

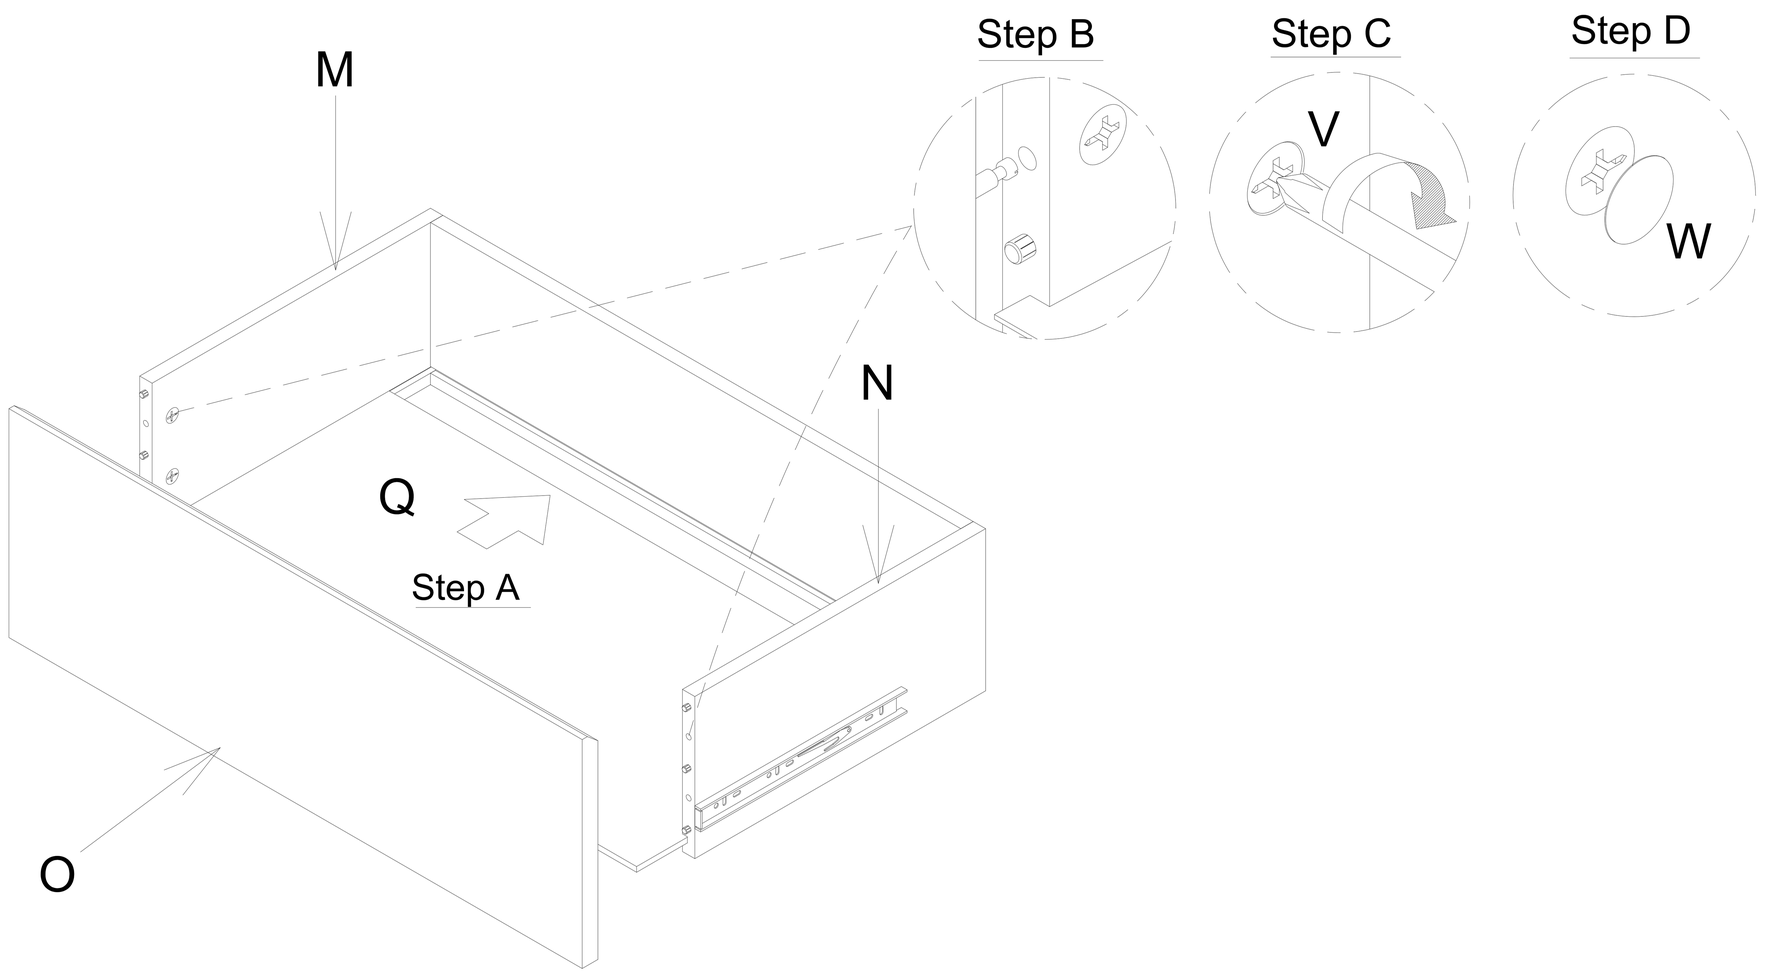

X 4

19 Pull out the metal chrome plates from both sides of the Runner (R). Align the metal chrome plates with the slides on one drawer side, then repeat on the other side. If they are not aligned properly, remove and try again. Once both tracks are aligned correctly, slowly push the drawer all the way in.

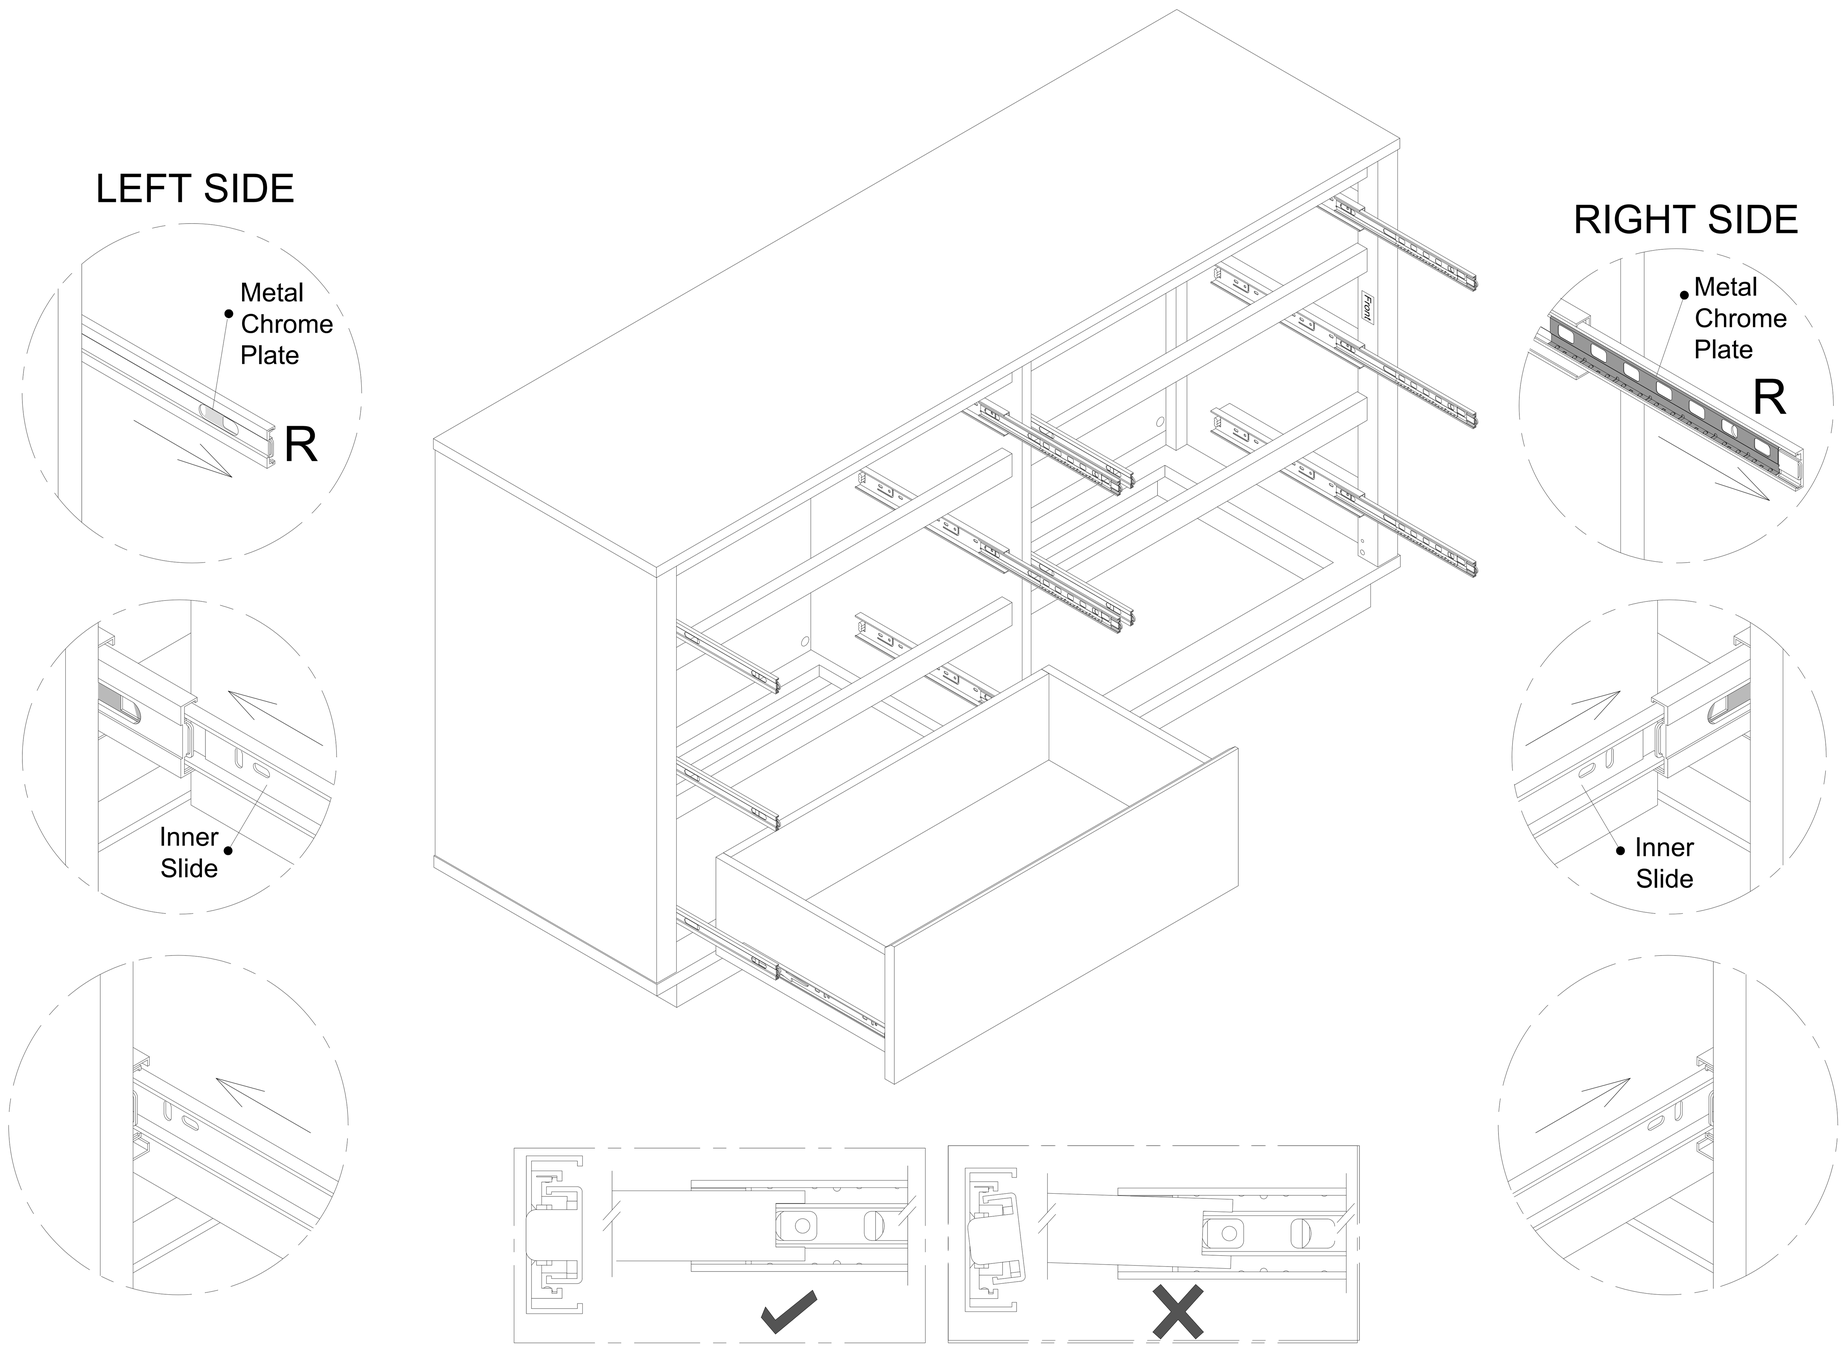

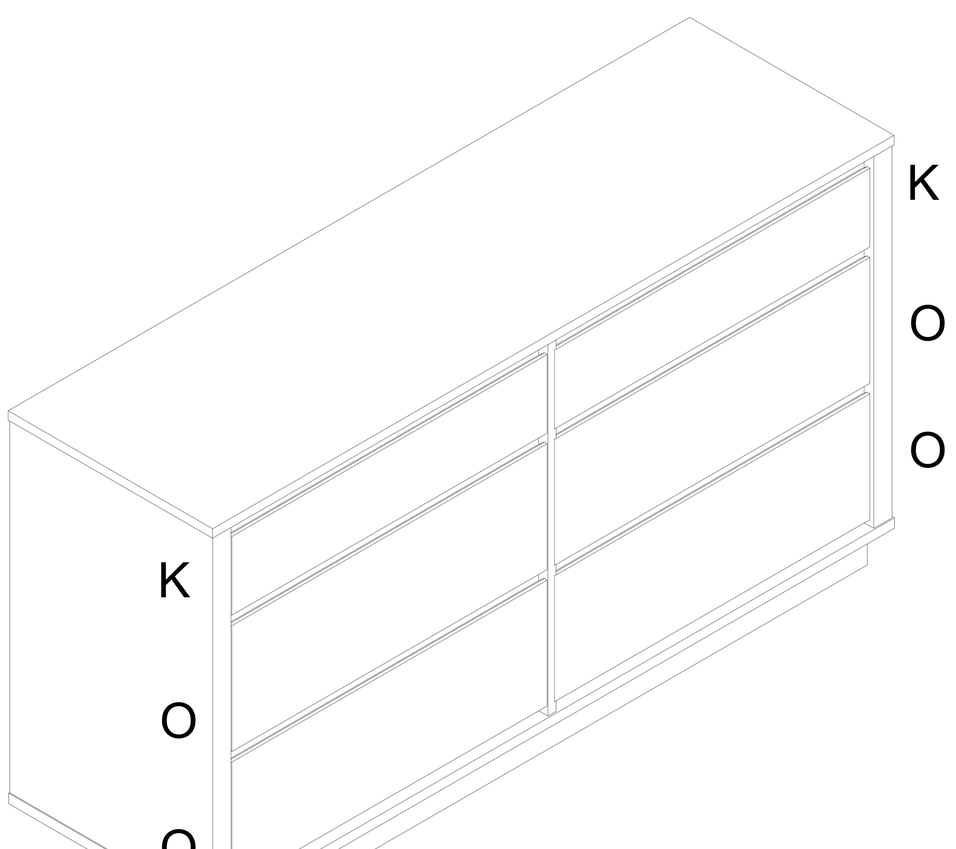

20 Attach the Anti-Tip Kit (AA) to the wall. Mount the bracket vertically to wall using the long screw. Then, secure the bracket vertically to the furniture back below the top using the short screw. Place the bracket as close to the center of the furniture back as possible, considering the wall stud and desired position in the room. Move furniture to its final position. Thread the bracket and pull it tight.

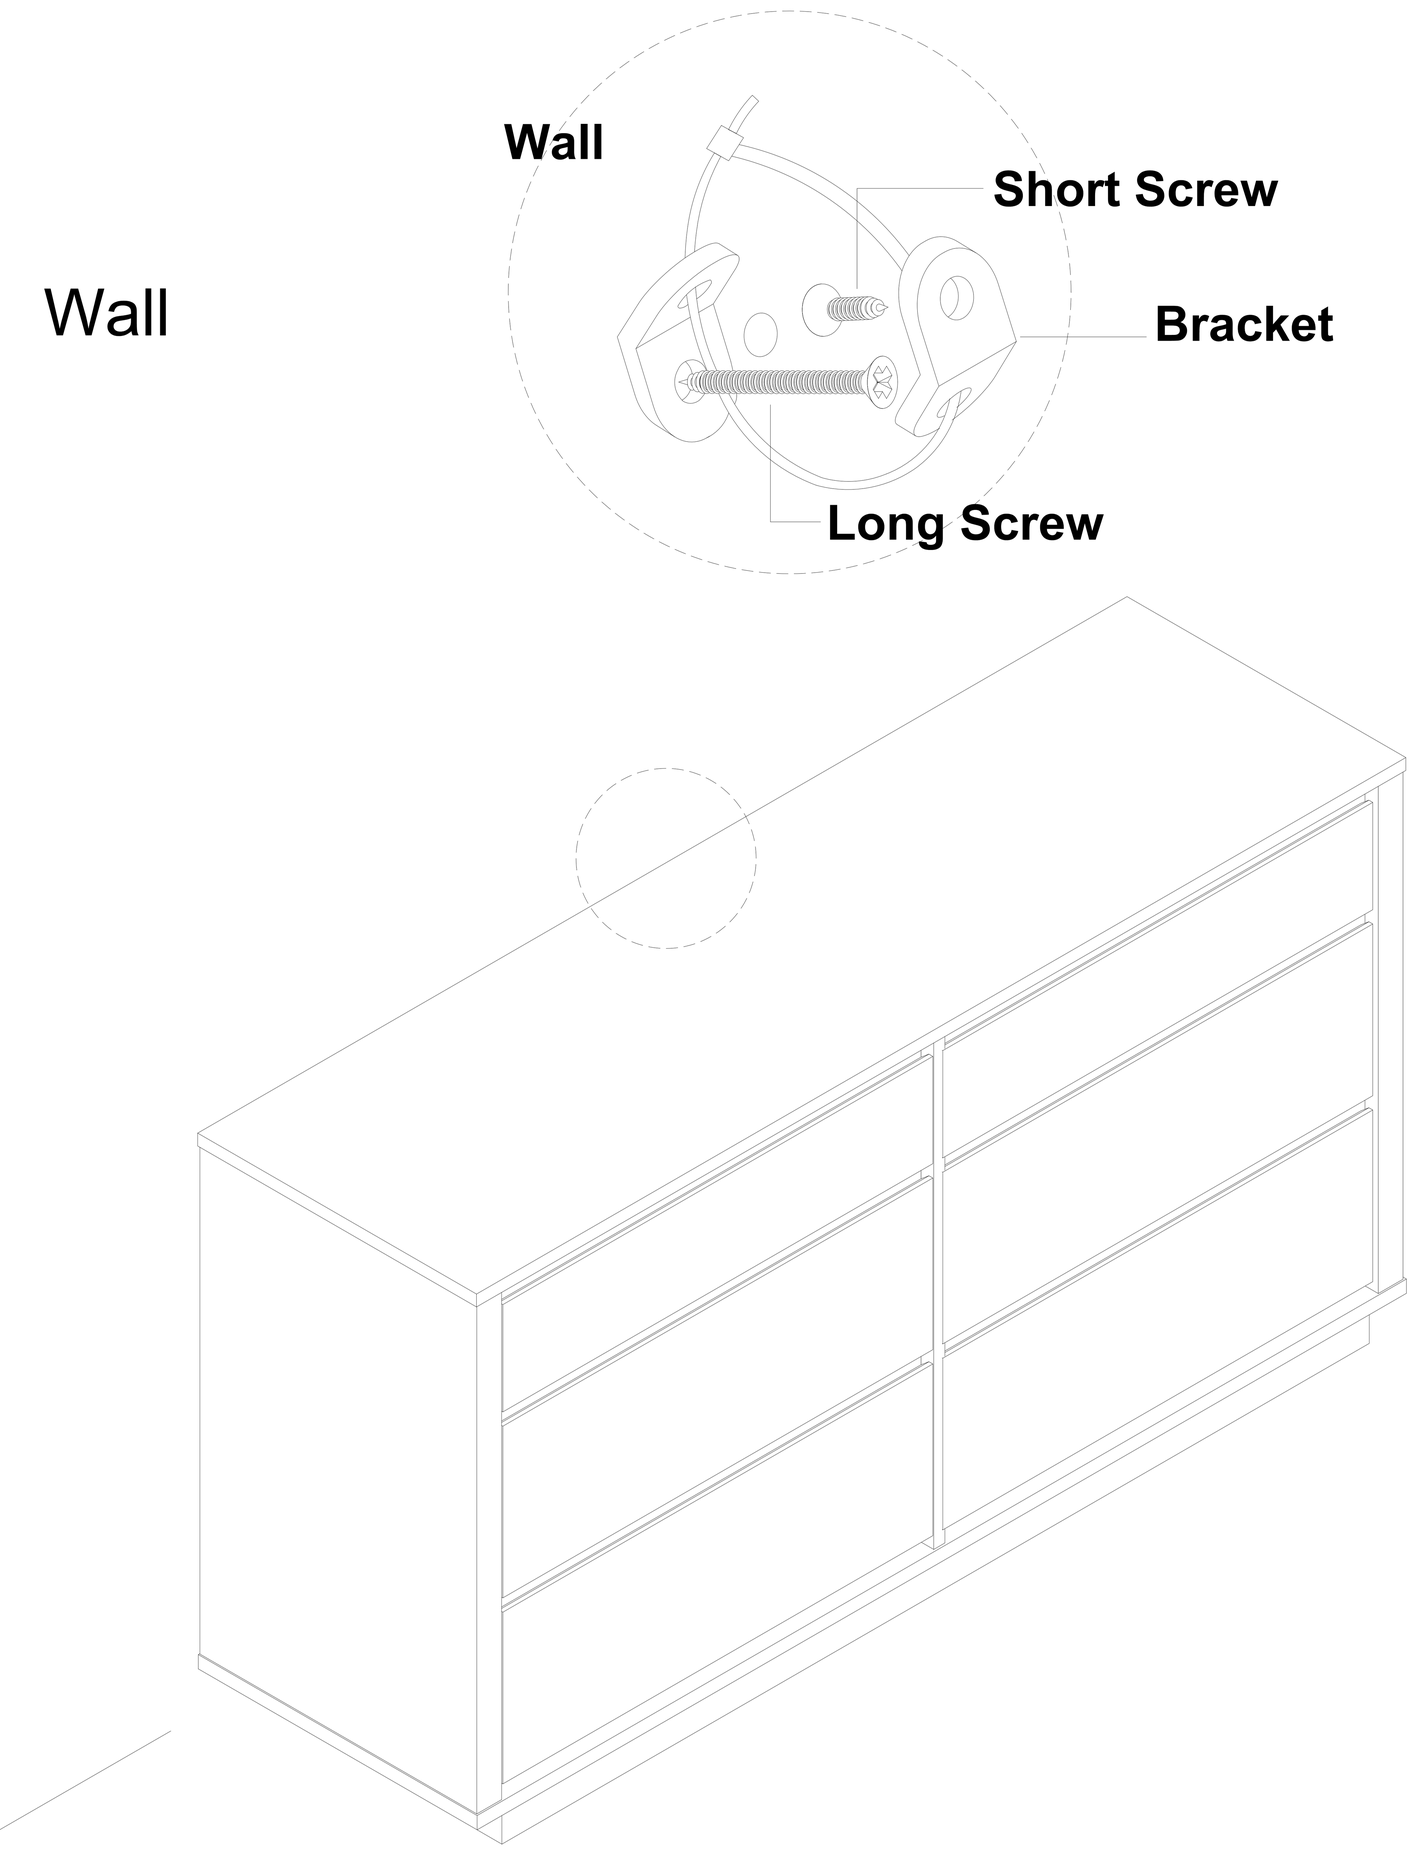

Cleaning & Care
Treat surfaces with care. Surfaces are resistant to scratches but are not scratch resistant. Clean surfaces with a dry or damp soft cloth. Do not use abrasive cleaners. Hardware may loosen over time. Periodically check that all connections are tight.