ASSEMBLY INSTRUCTIONS

5-DRAWER CHEST

A Top Panel

1pc

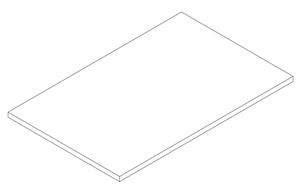

B Side Panel (Left)

1pc

C Side Panel (Right)

1pc

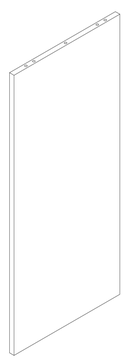

D Bottom Frame

1pc

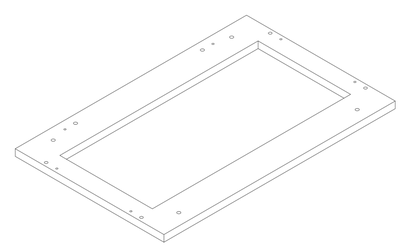

E Post

4pcs

F Back Panel (Edge)

2pcs

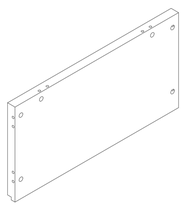

G Back Panel (Center)

1pc

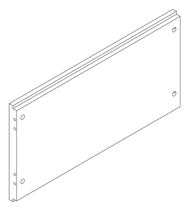

H Center Bar

1pc

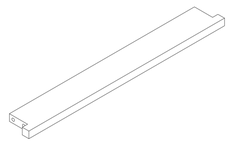

I Small Drawer Side (Left)

4pcs

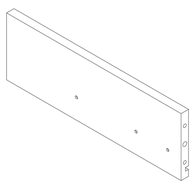

J Small Drawer Side (Right)

2pcs

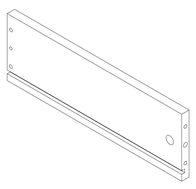

K Small Drawer Front

1pc

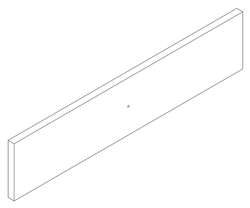

L Small Drawer Back

1pc

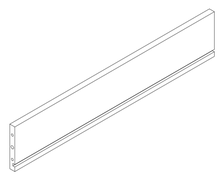

M Big Drawer Side (Left)

2pcs

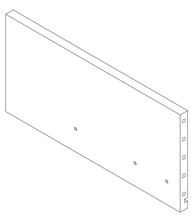

N Big Drawer Side (Right)

2pcs

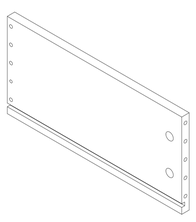

O Big Drawer Front

2pcs

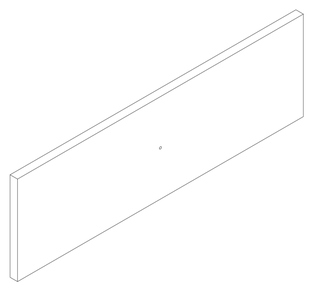

P Big Drawer Back

2pcs

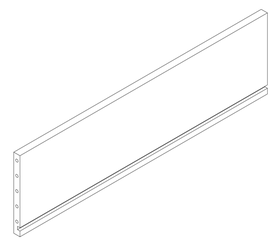

Q Drawer Base

3pcs

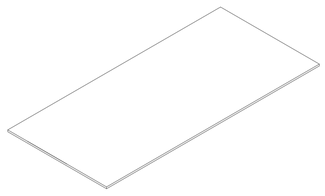

R Runner 300mm

3pcs

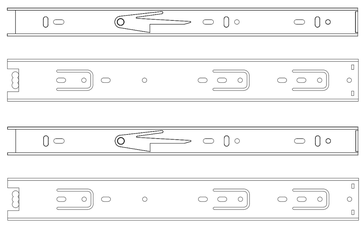

S Handle

3pcs

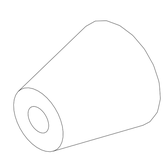

T Dowel M6 x 30mm

3pcs

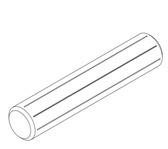

5pcs

5sets

5pcs

52pcs

U Dowel
M8 x 35mm

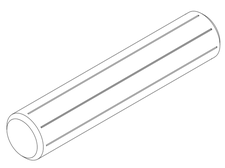

4pcs

V Cam Bolt
5 x 25mm

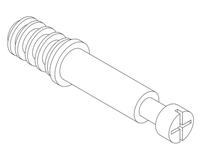

4pcs

W Cam Lock
15 x 12mm



4pcs

X Cam Lock Cover
17 x 5mm



4pcs

Y Screw
M3 x 16mm



30pcs

Z Screw
M4 x 38mm

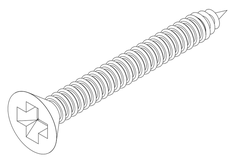

56pcs

AA Panhead Screw
M4 x 22mm



56pcs

AB Flat Washer
M8

56pcs

AC Spring Washer
M8

60pcs

AD Hex Nut
M8



4pcs

AE Spanner
M12.8

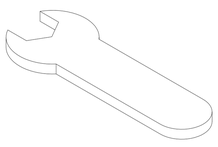

5pcs

AF Anti-Tip Kit

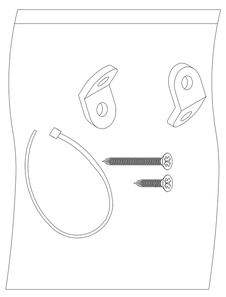

4pcs

These pages list all the contents included in the box. Please take the time to identify the hardware as well as the individual components to this product. As you unpack and prepare for assembly, place the contents on a carpeted or padded area to protect them from damage.

1 Insert Cam Bolt (V) into the Top Panel (A) and the Bottom Frame (D) with a screwdriver (not provided).

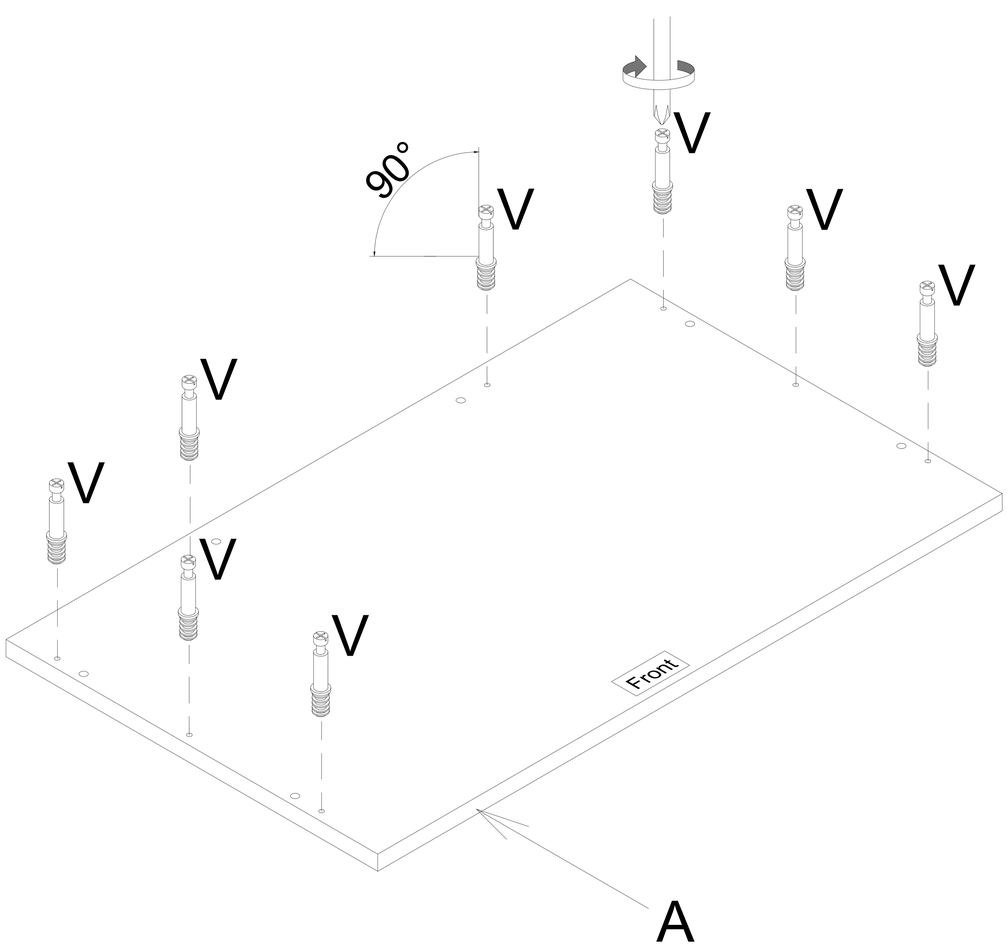

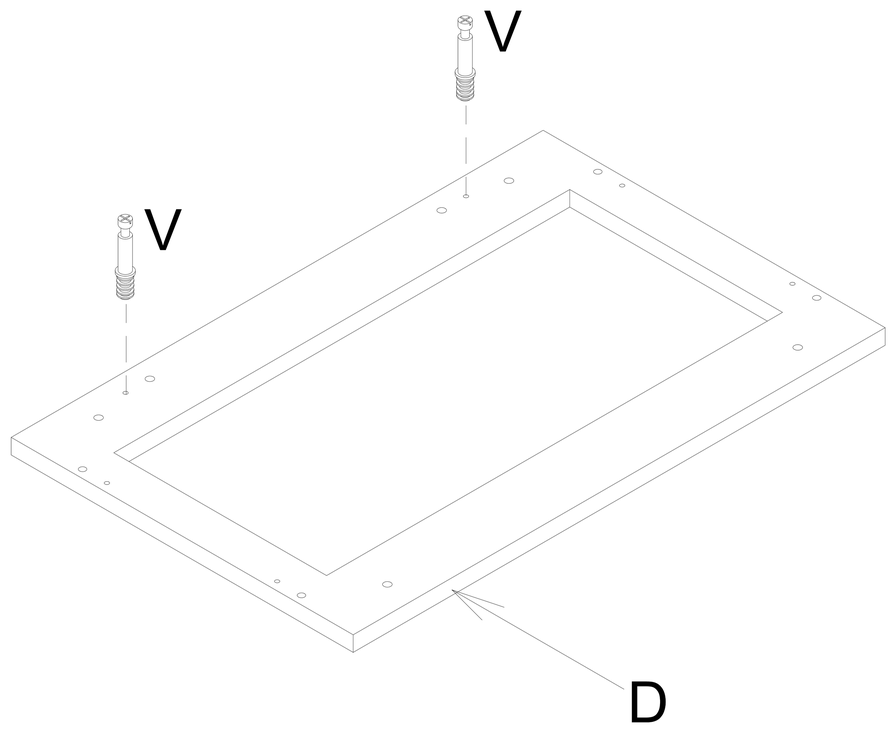

2 Insert Dowel (U), Cam Bolt (V) and Cam Lock (W) into the L/R Side Panel (B, C) with a screwdriver (not provided).

NOTE : - Ensure the arrows on each Cam Lock (V) point towards the nearest edge with holes.

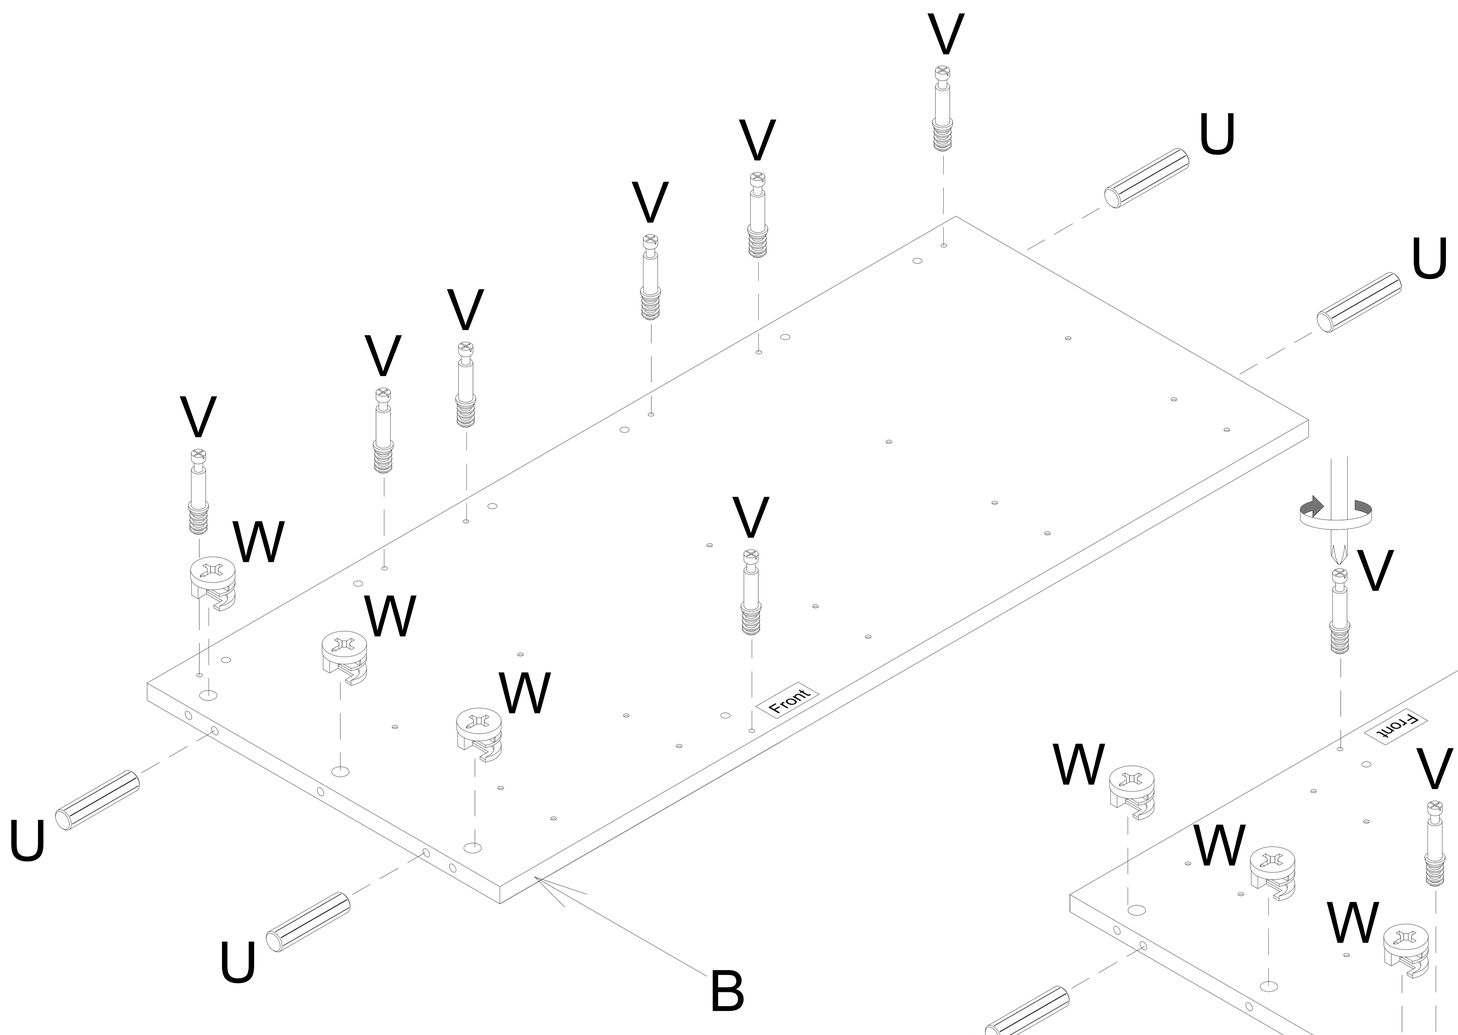

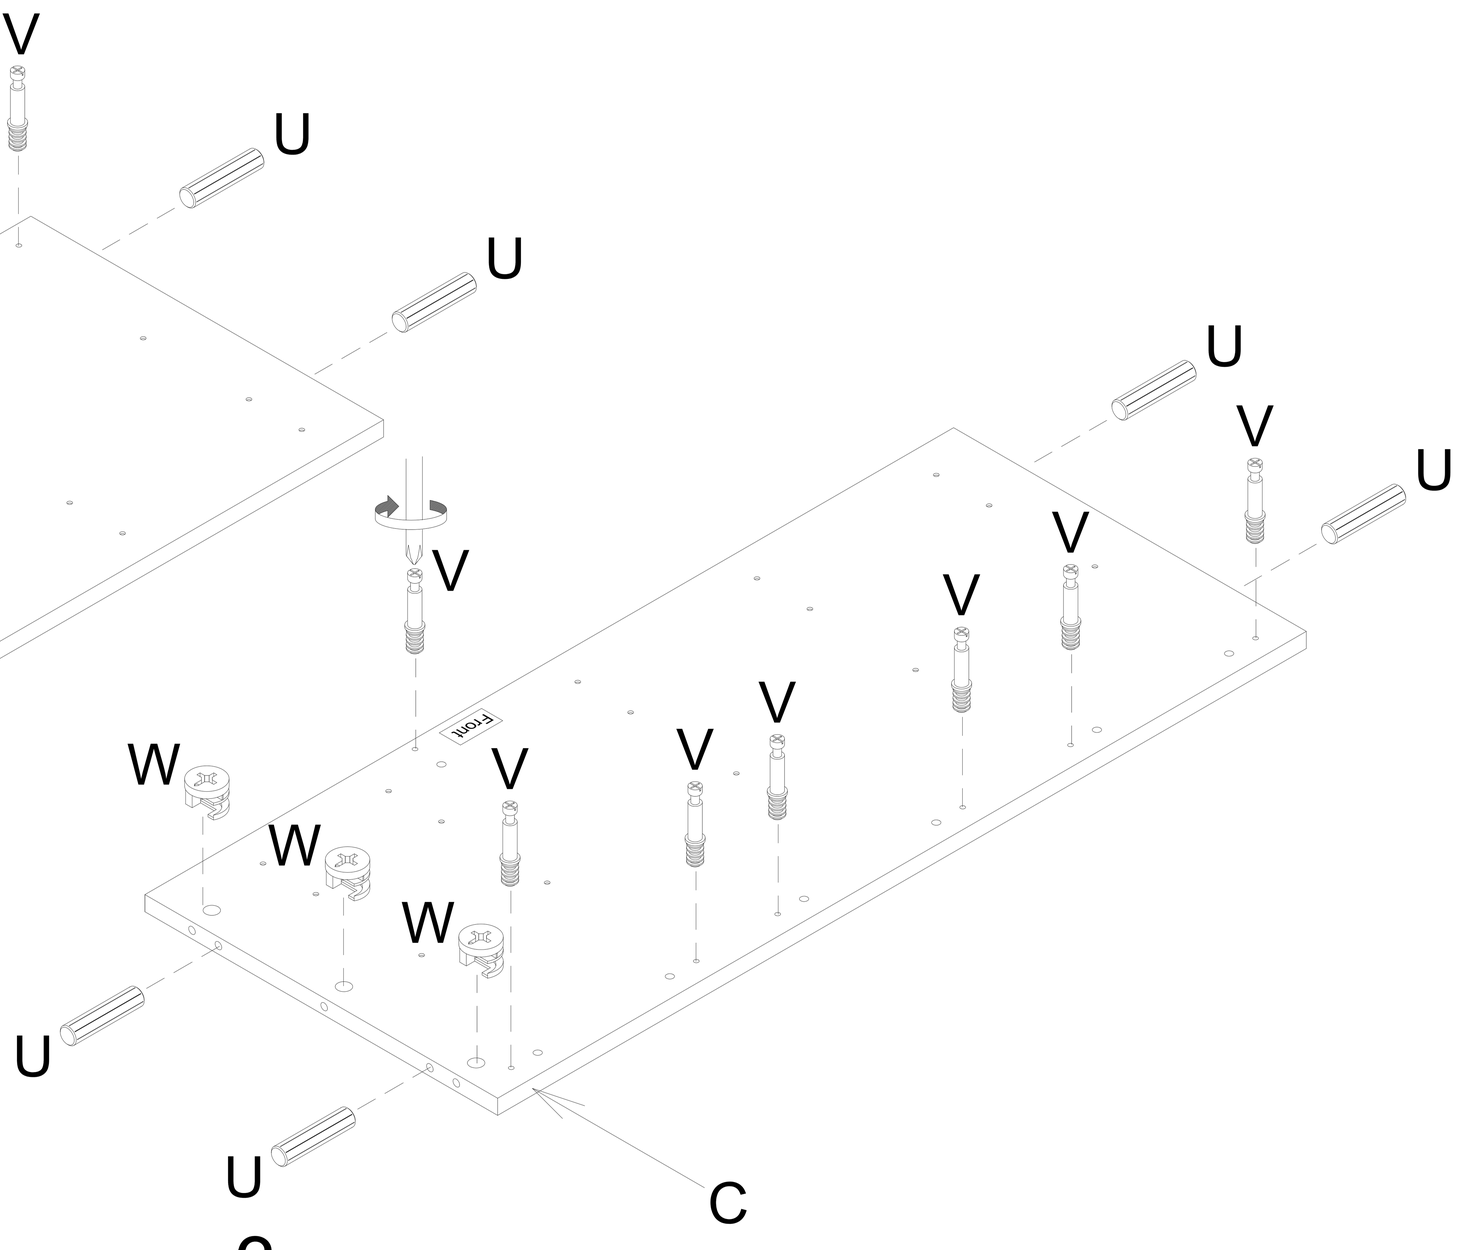

3 Disassemble Runner (R) into two parts. Attach the part with roller to the L/R Side Panel (B, C) using Screw (Y) with a screwdriver (not provided). Attach the other part with slide to the L/R Small & Big Drawer Side (I, J; M, N) (shown in Step 10).

NOTE : - Runner (R) should face the front of the panel.

- Assemble Screw (Y) from the front of the runner, starting with Y^1, Y^2, then Y^3.
- Ensure screws are installed vertically without tilting to fit properly into the holes.

EXTENSION RUNNER DISASSEMBLE STEPS:

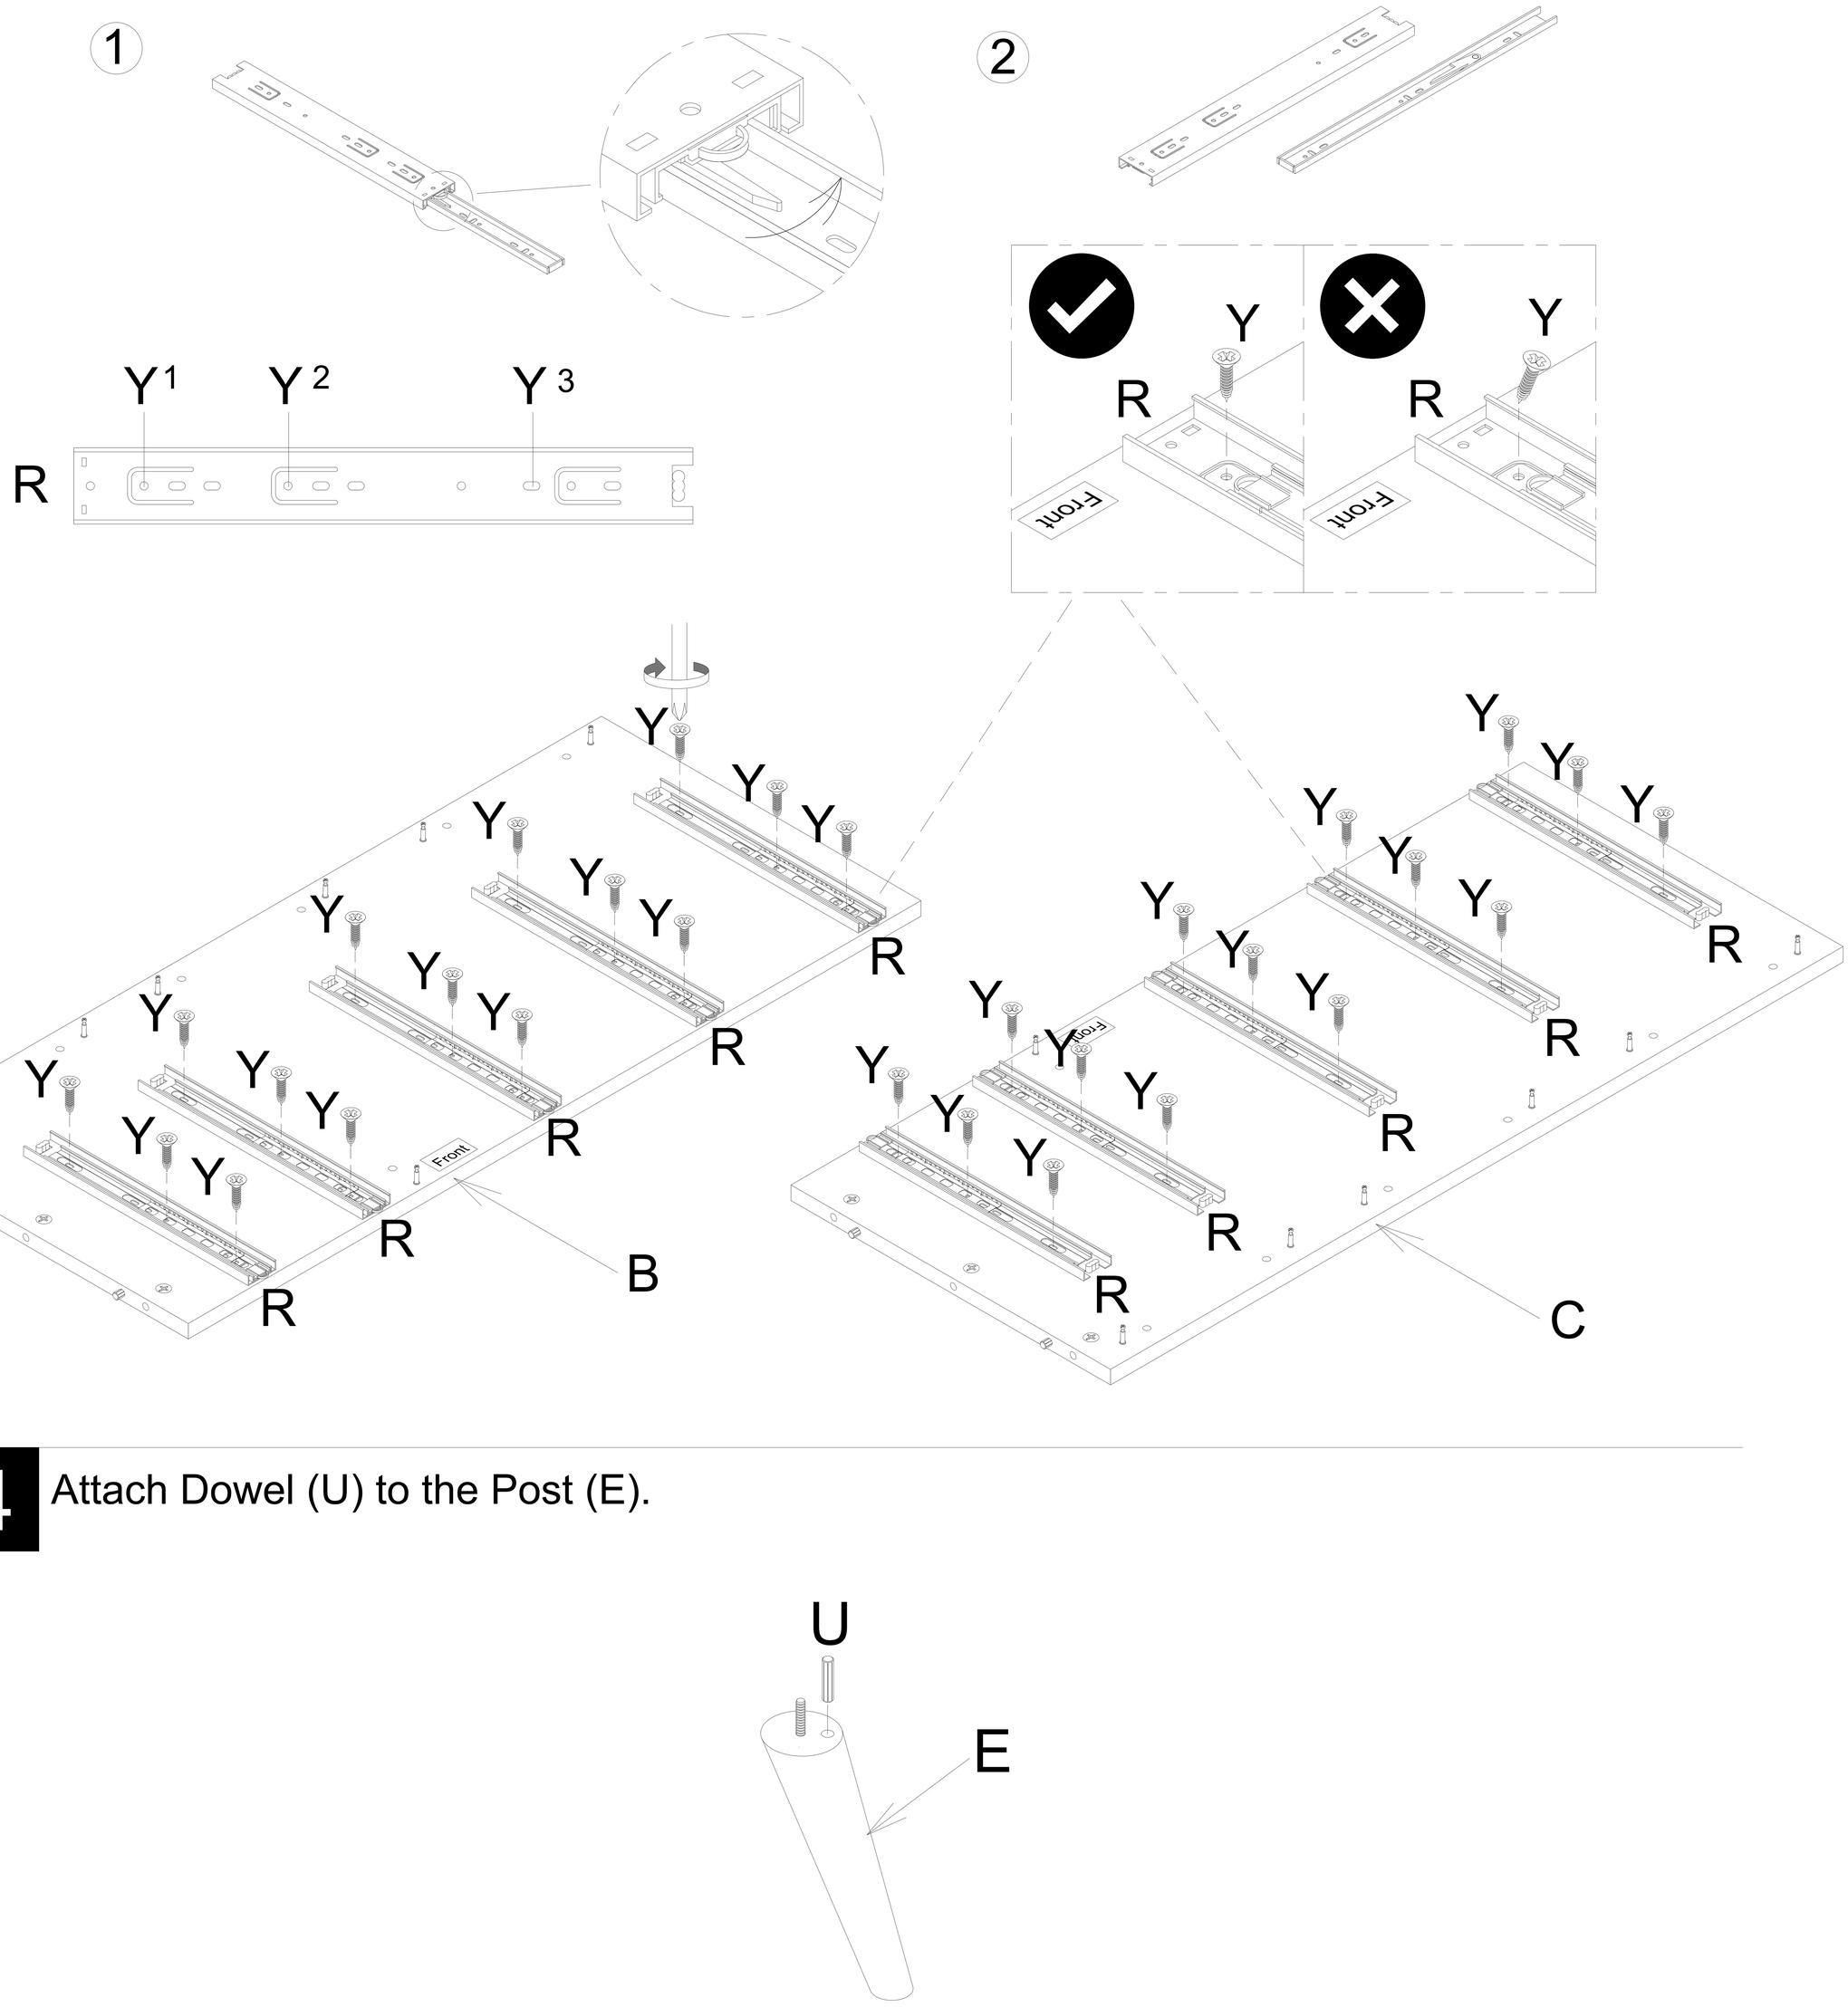

4 Attach Dowel (U) to the Post (E).

4

X 4

5 Insert Dowel (U) and Cam Lock (W) into the Edge & Center Back Panel (F, G) and Center Bar (H).

NOTE : - Ensure the arrows on each Cam Lock (W) point towards the nearest edge with holes.

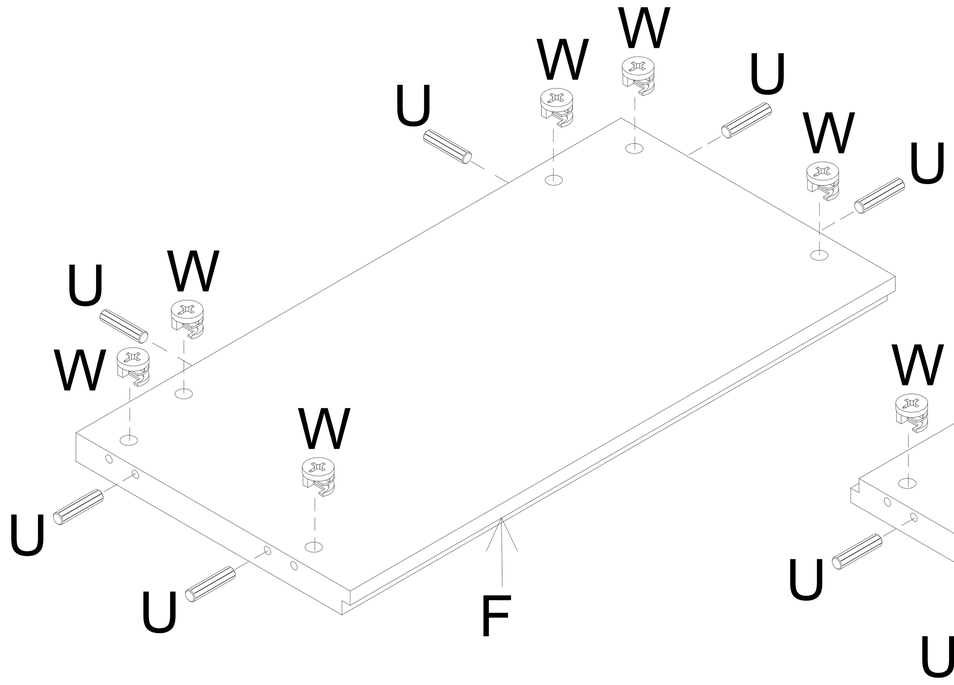

X 2

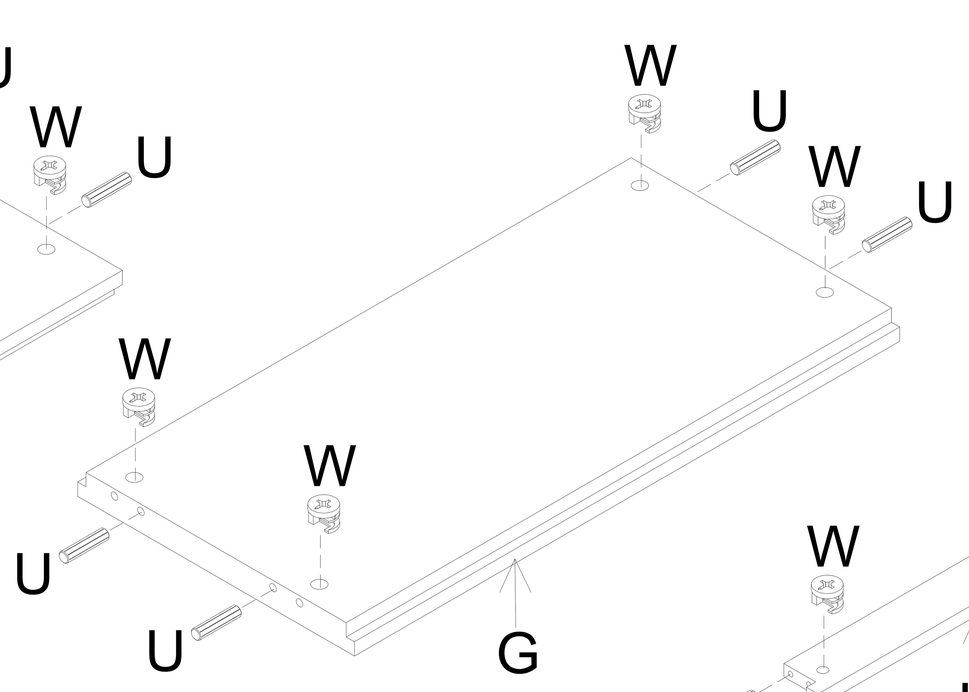

X 1

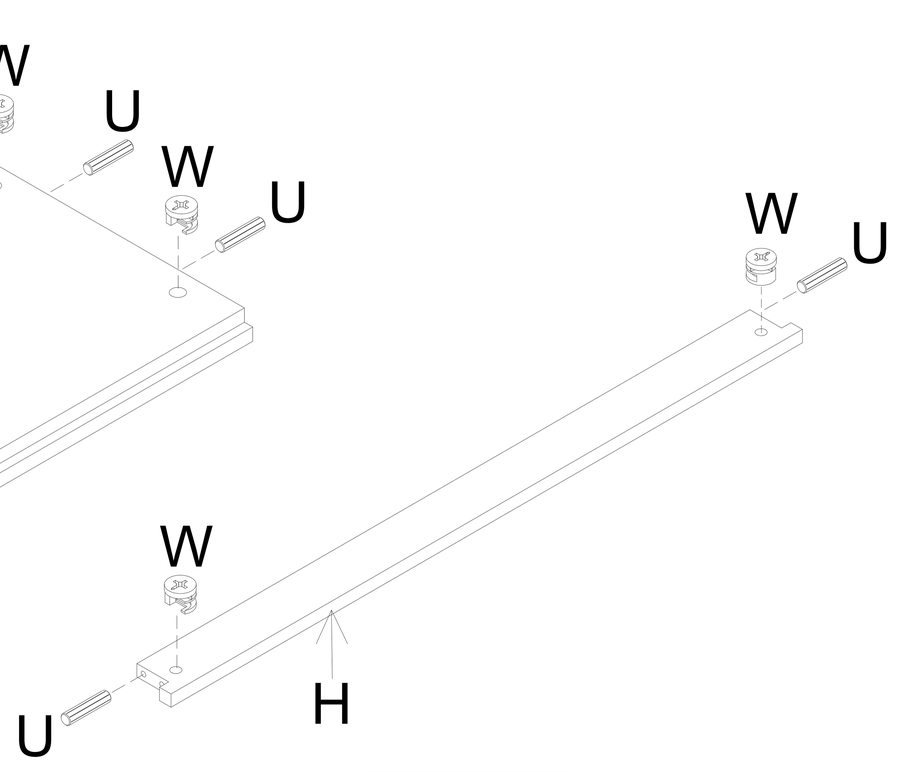

X 1

6 Attach the L/R Side Panel (B, C) to the Edge & Center Back Panel (F, G) and Center Bar (H) and secure the Cam Lock (W) with a screwdriver (not provided). Cover the Cam Lock (W) with Cam Lock Cover (X).

NOTE : - Do not over tighten the Cam Lock (W).

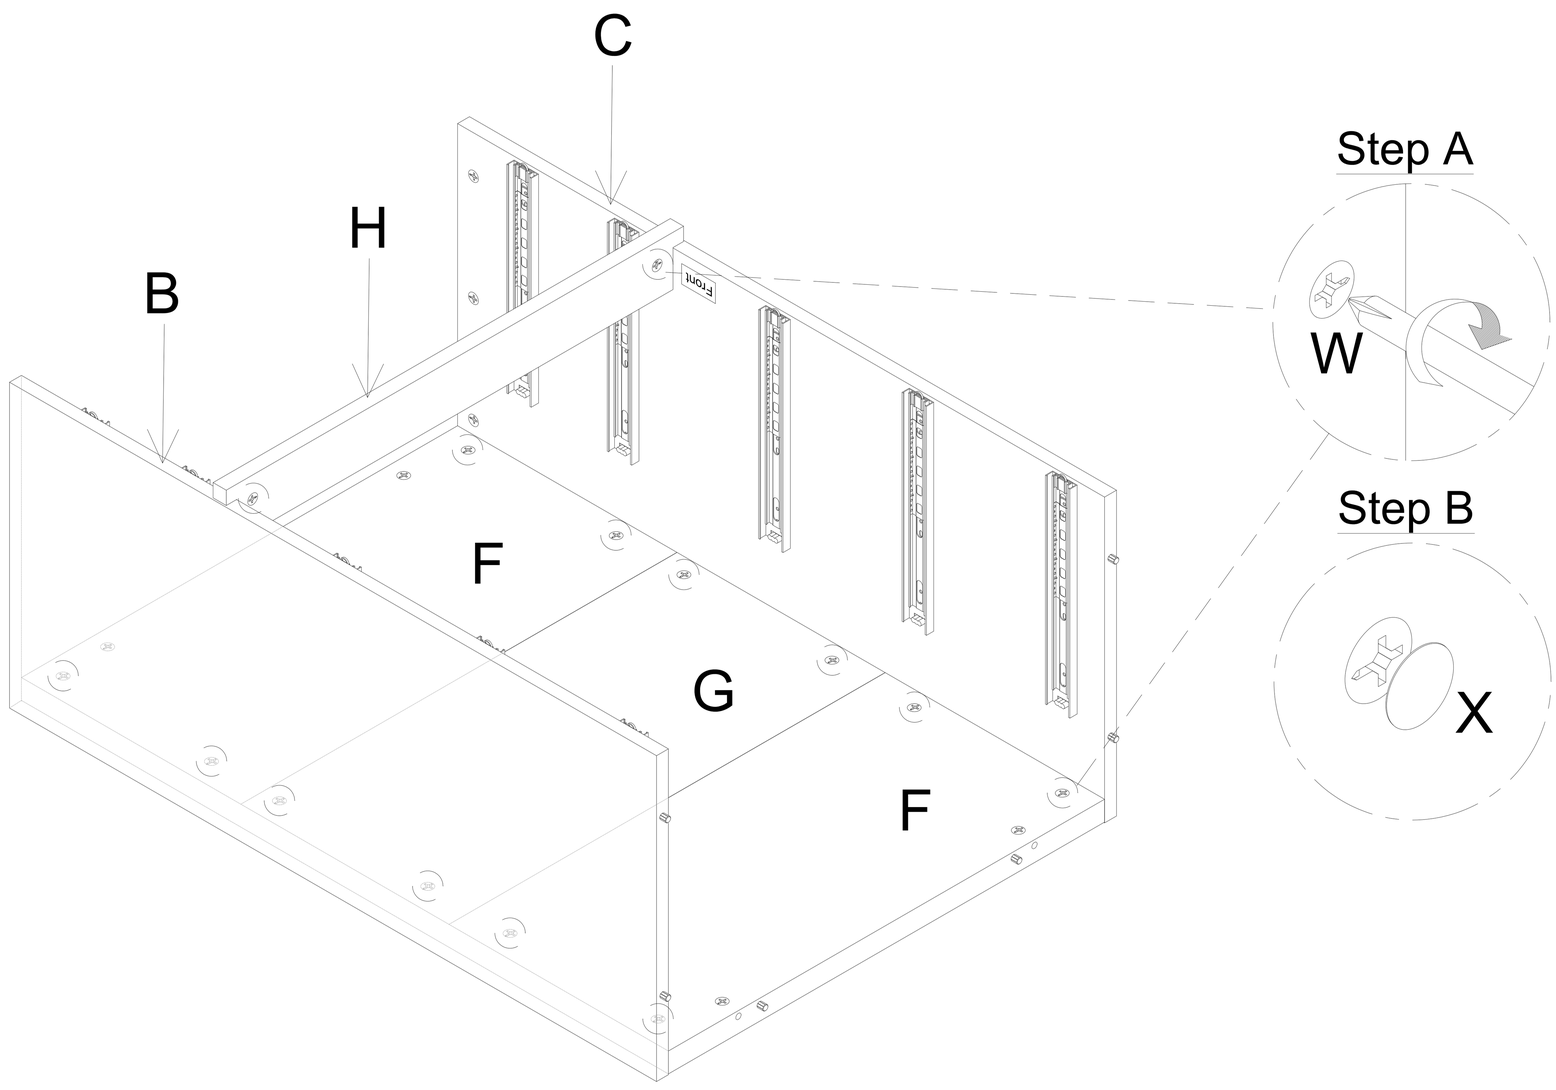

7 Attach the Bottom Frame (D) to the L/R Side Panel (B, C) and Back Panel (Edge) (F) and secure with Cam Lock (W) and Screw (Z) with a screwdriver (not provided). Cover the Cam Lock (W) with Cam Lock Cover (X).

NOTE : - Do not over tighten the Cam Lock (W) and Screw (Z).

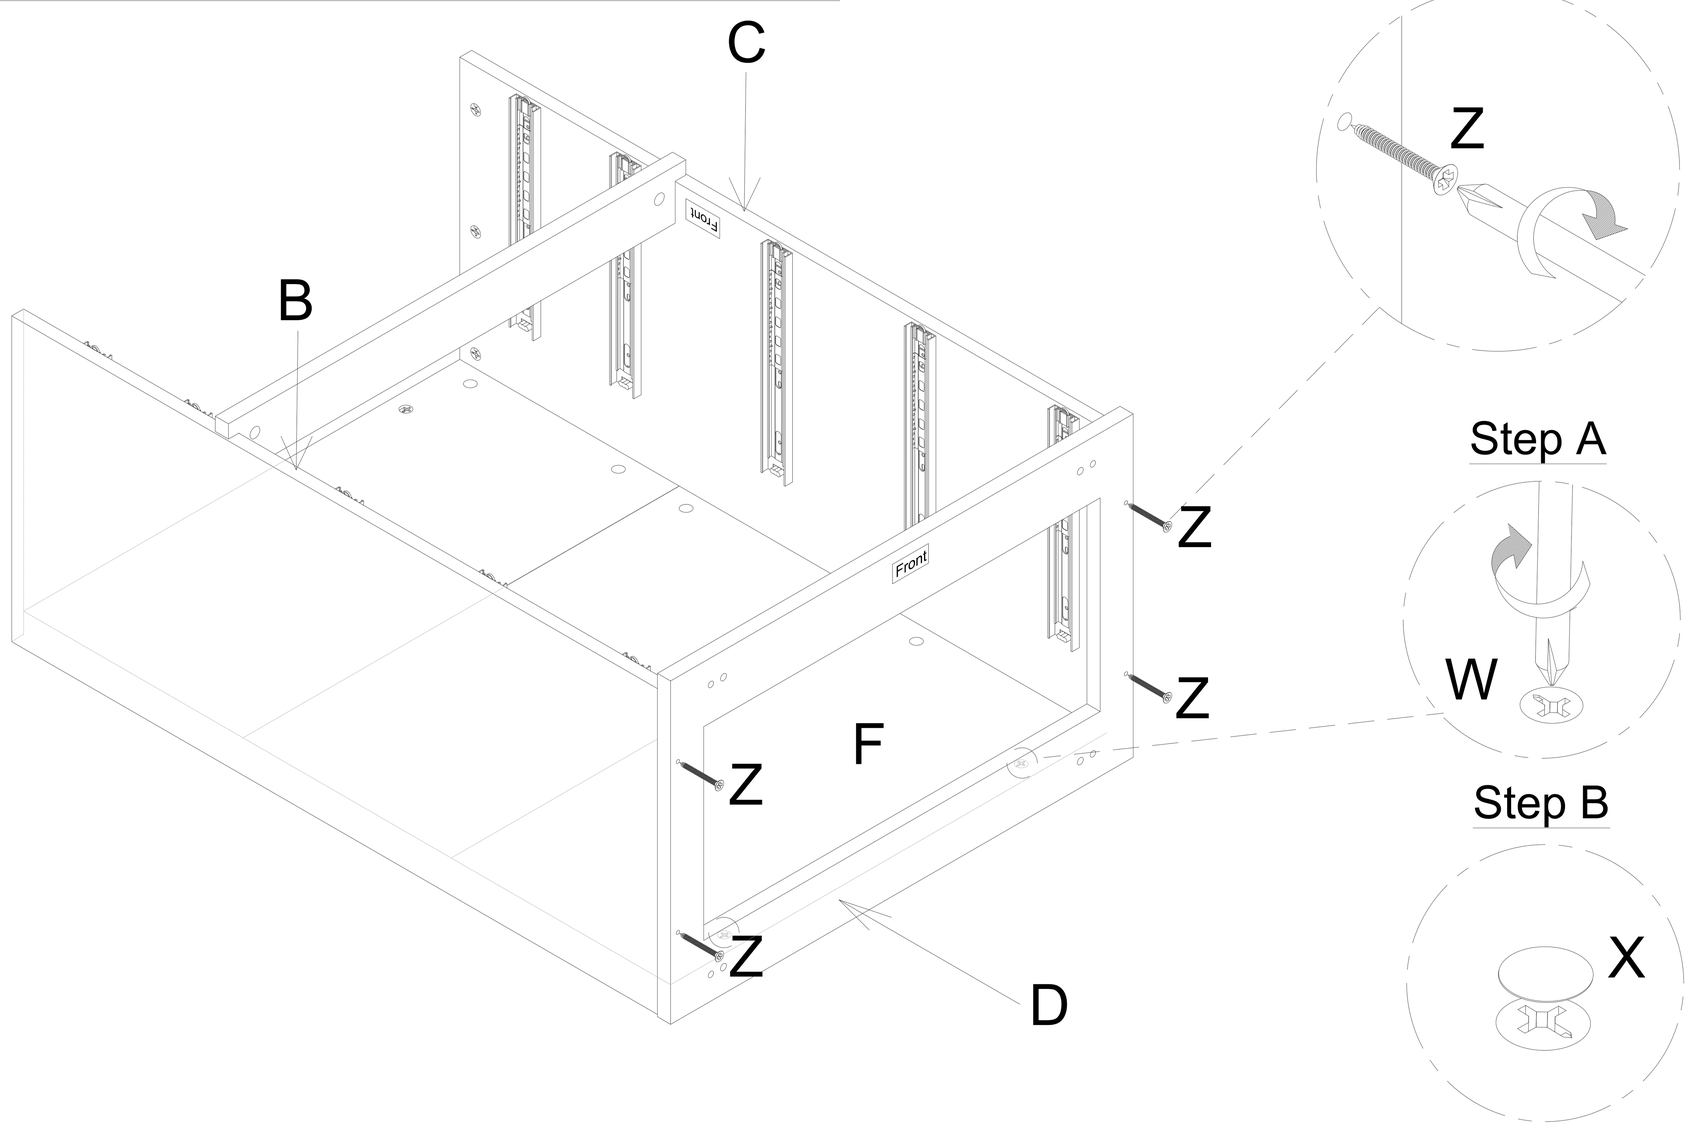

8 Attach the Top Panel (A) to the L/R Side Panel (B, C) and Back Panel (Edge) (F) and secure the Cam Lock (W) with a screwdriver (not provided). Cover the Cam Lock (W) with Cam Lock Cover (X).

NOTE : - Do not over tighten the Cam Lock (W).

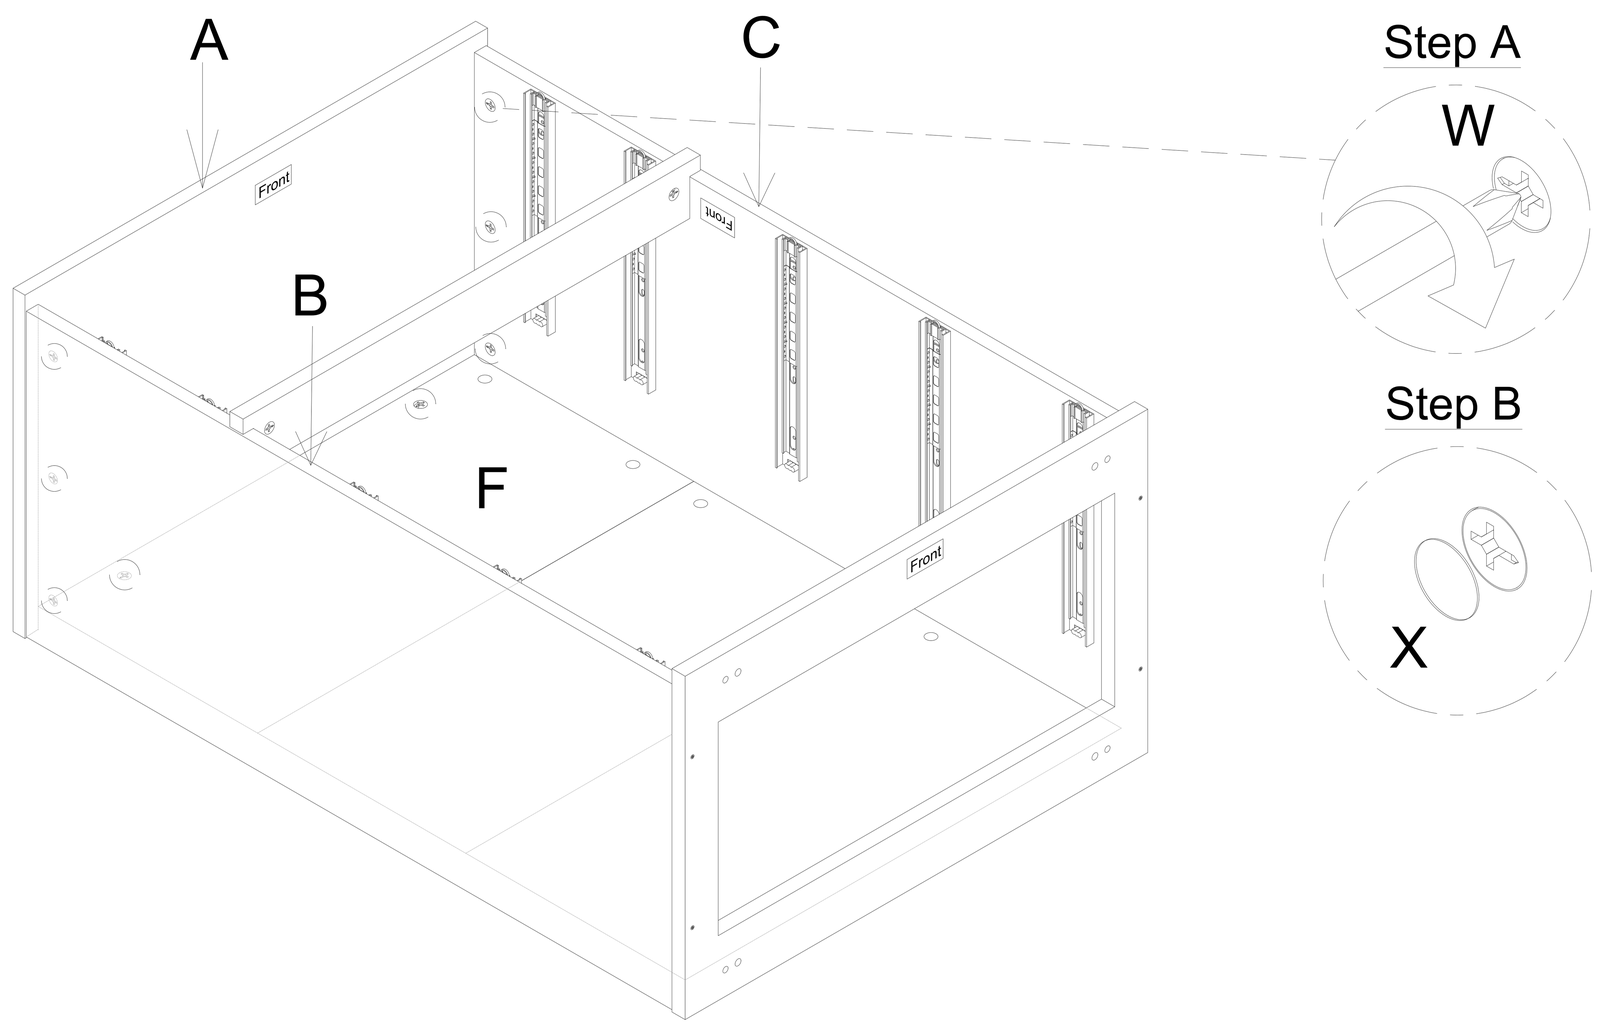

9 Attach the Post (E) to the Bottom Frame (D) using Flat Washer (AB), Spring Washer (AC), and Hex Nut (AD) with the Spanner (AE).

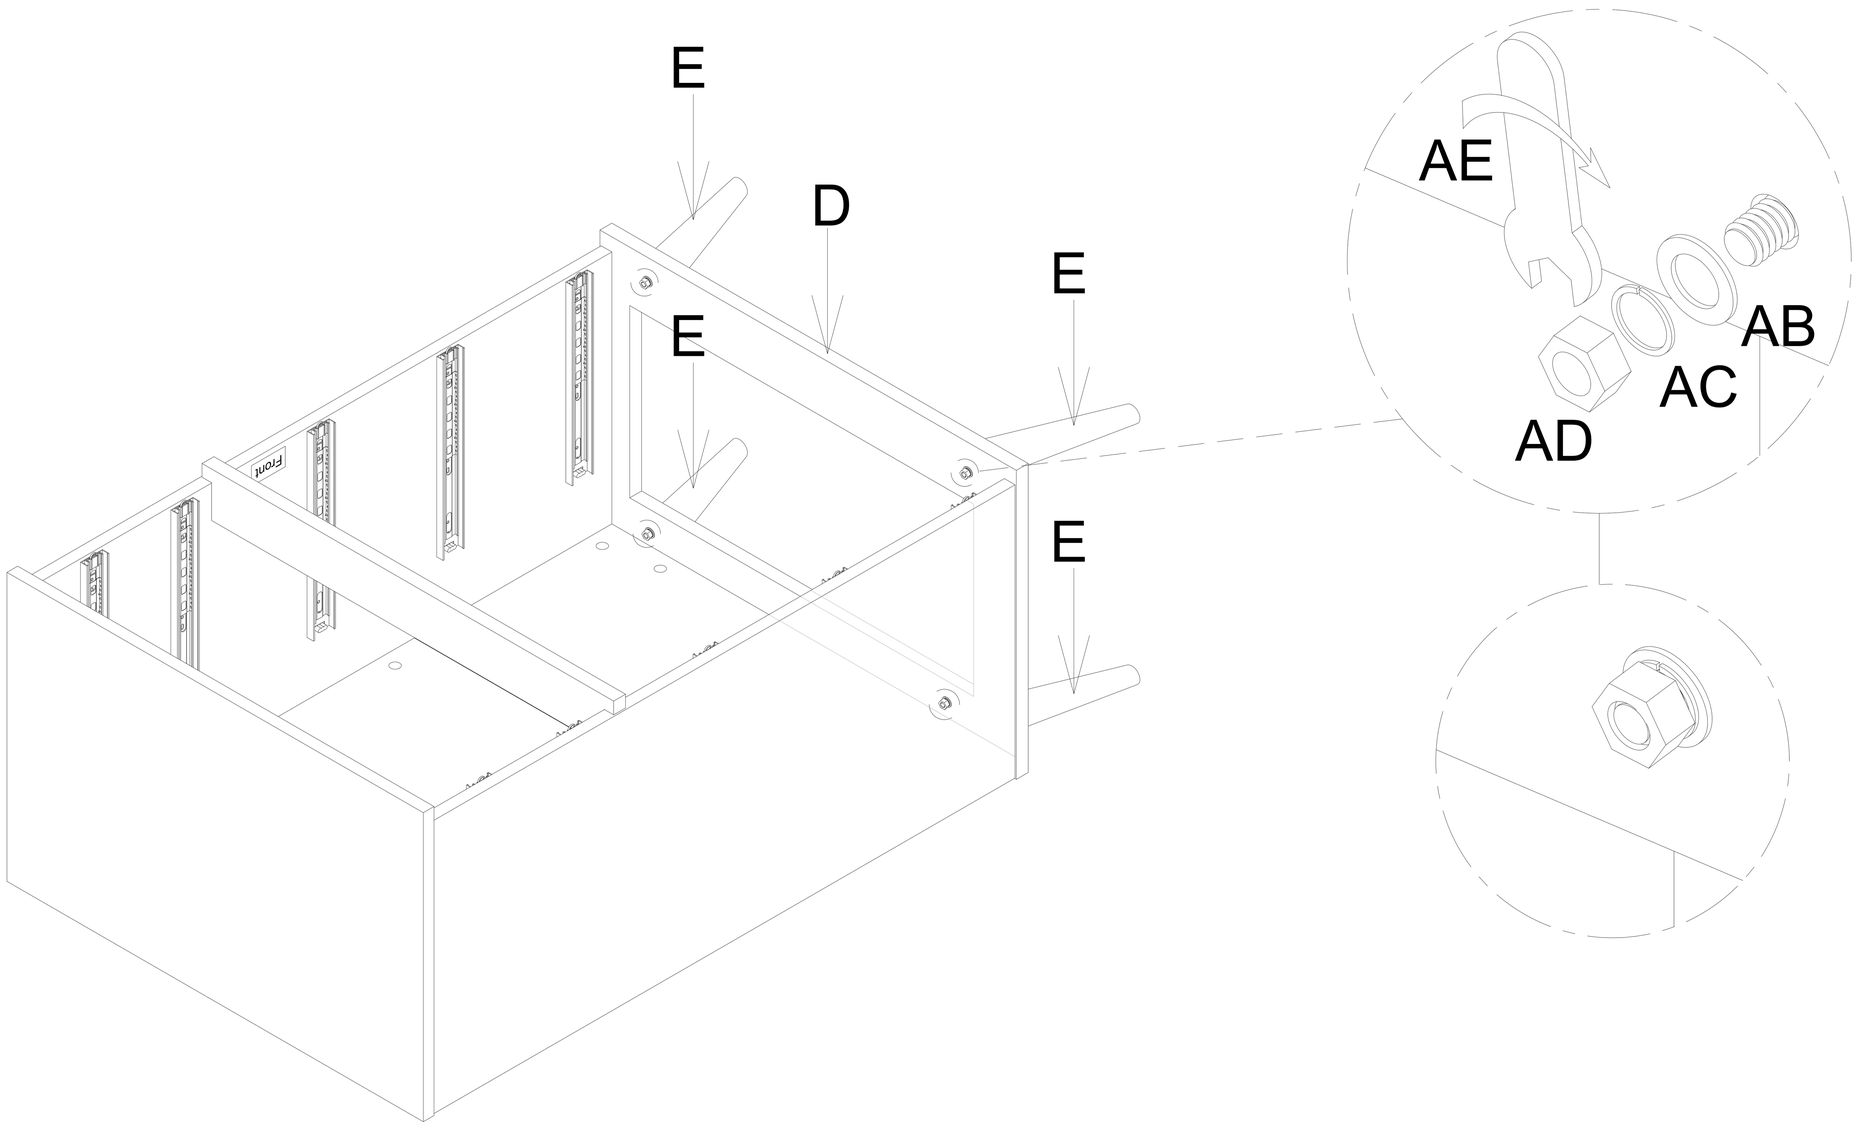

10 Attach Runner (R) to the L/R Small & Big Drawer Side (I, J; M, N) using Screw (Y) with a screwdriver (not provided).

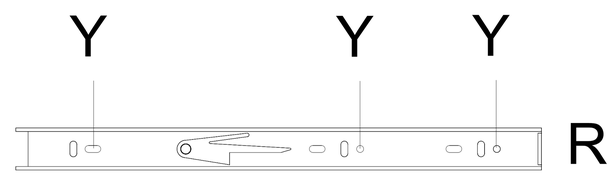

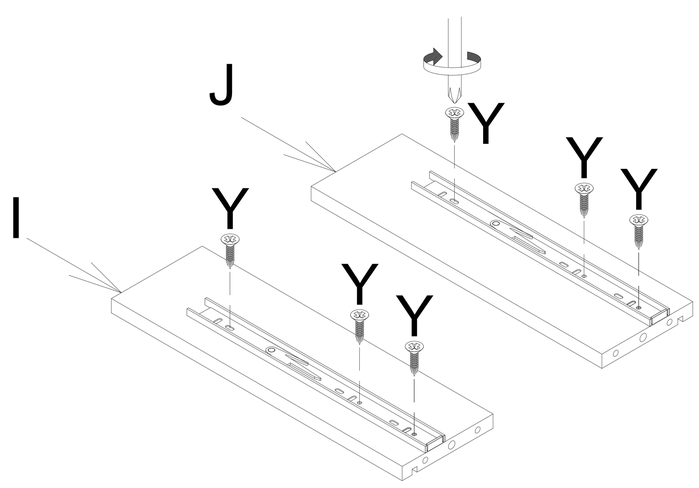

X 2

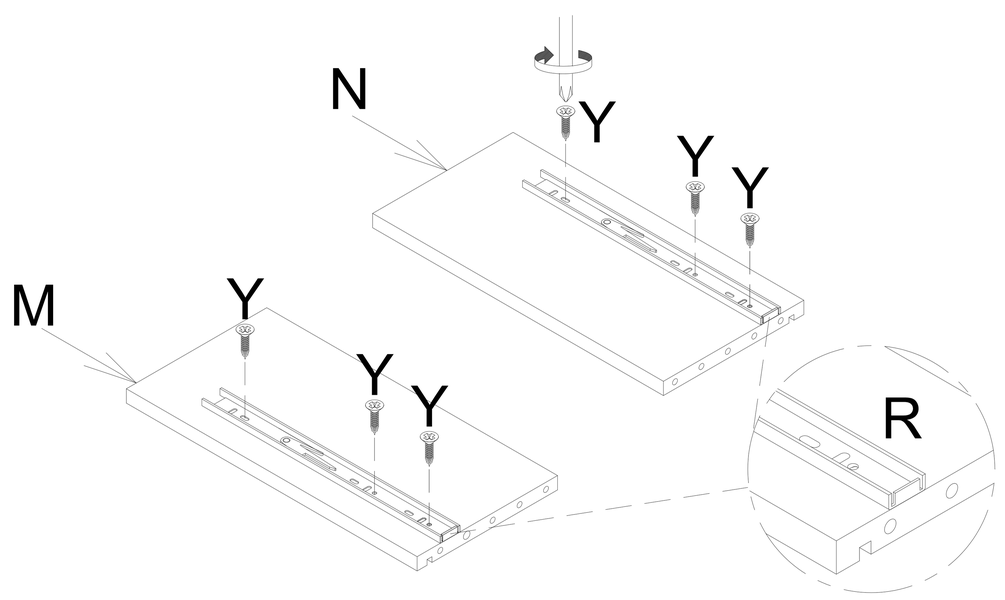

X 3

11 (i) Attach Dowel (T) and Cam Lock (W) to the L/R Small & Big Drawer Side (I, J; M, N) and Drawer Back (L, P).
(ii) Attach Cam Bolt (V) to the L/R Small & Big Drawer Side (I, J; M, N) and Drawer Front (K, O).

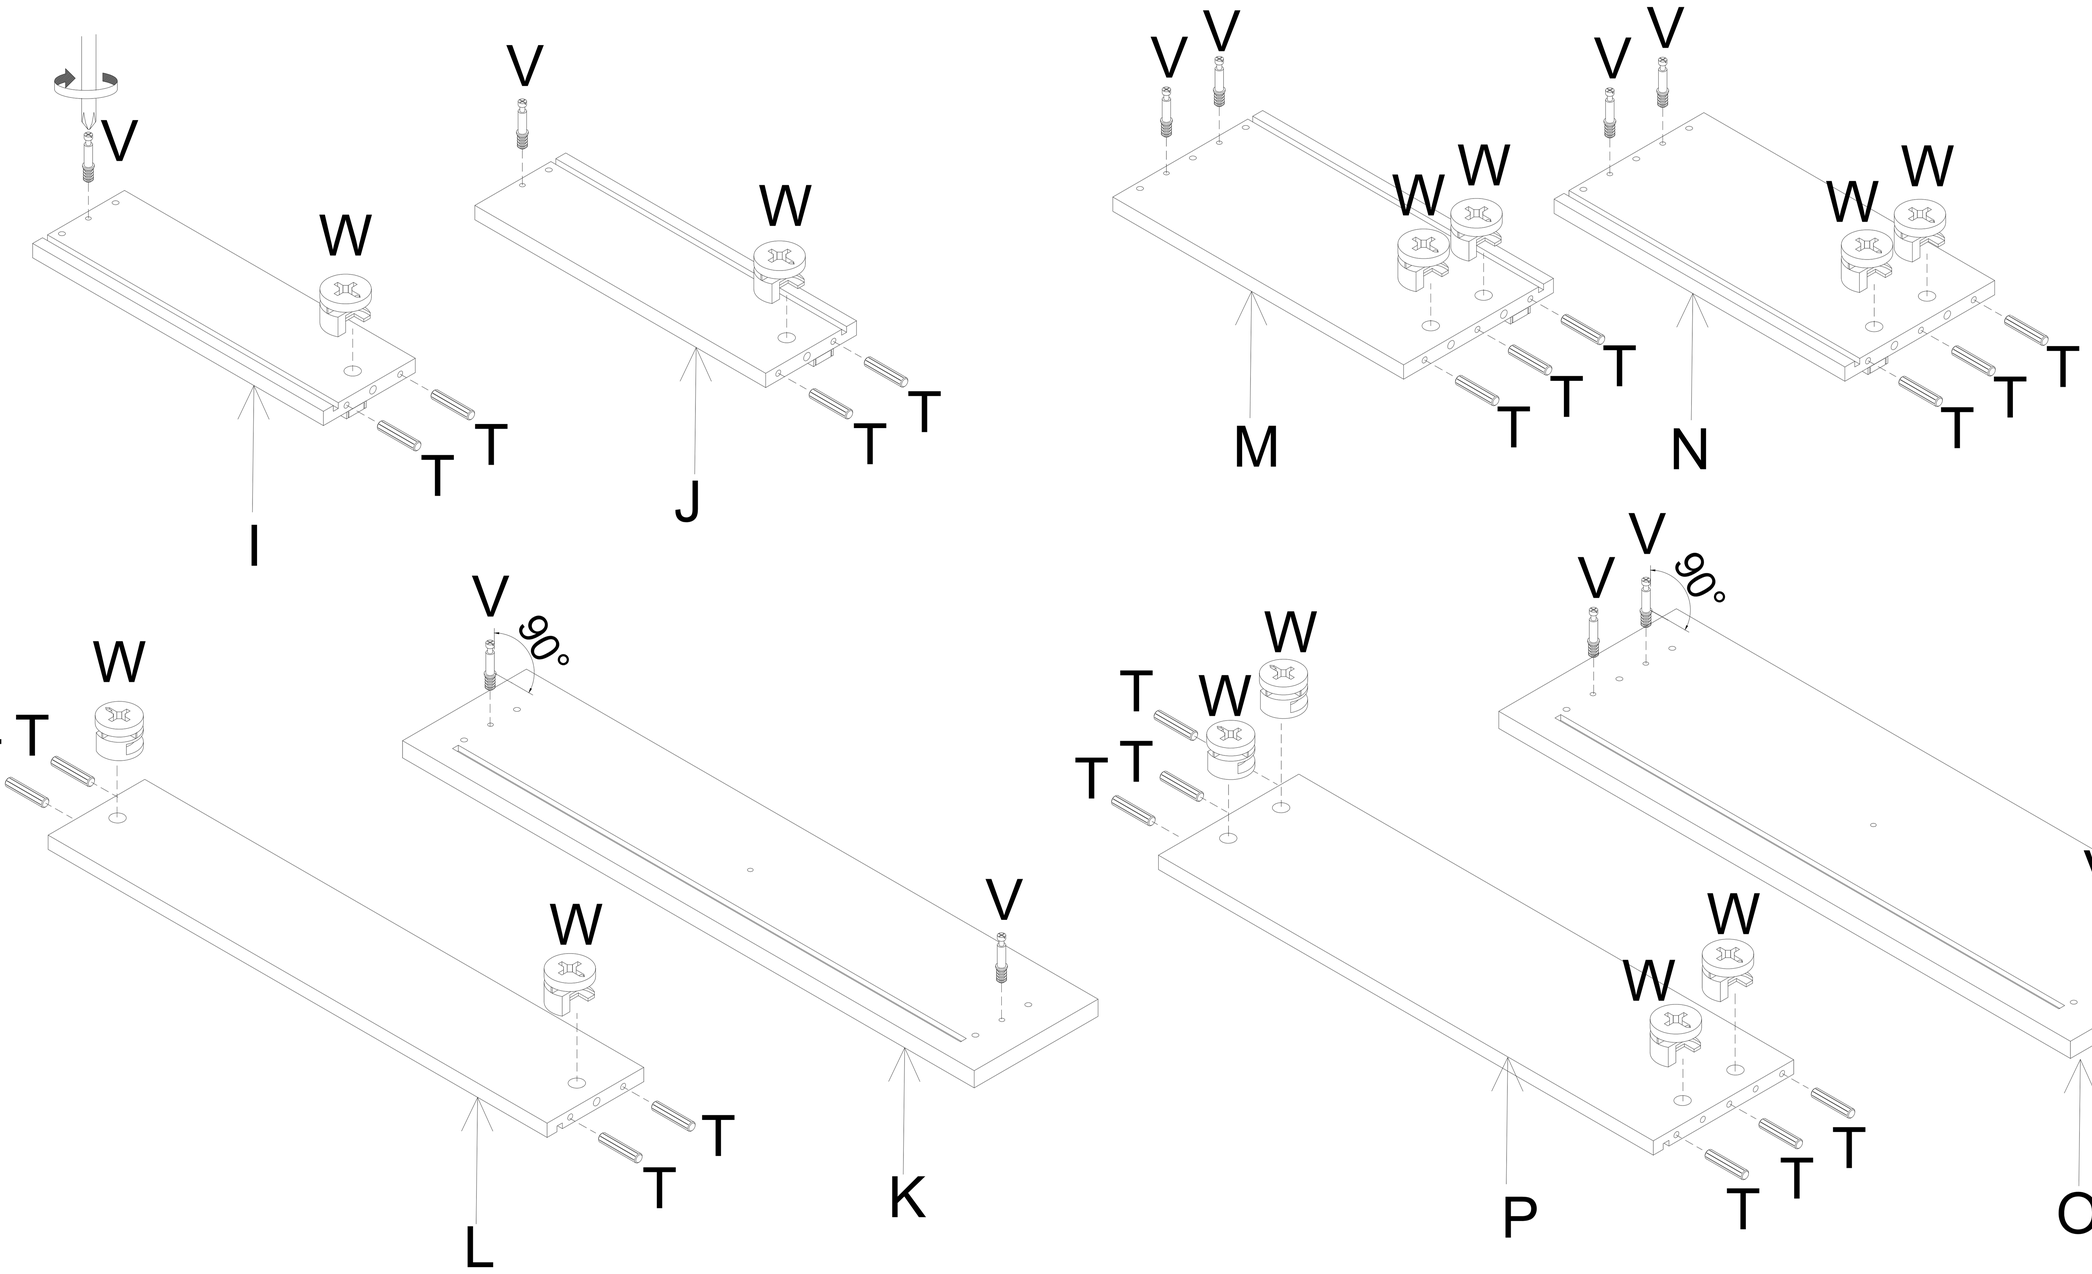

X 2

X 3

12 Attach the L/R Small & Big Drawer Side (I, J; M, N) to the Drawer Back (L, P) and secure the Cam Lock (W) with a screwdriver (not provided). Cover the Cam Lock (W) with Cam Lock Cover (X).

NOTE : - Do not over tighten the Cam Lock (W).

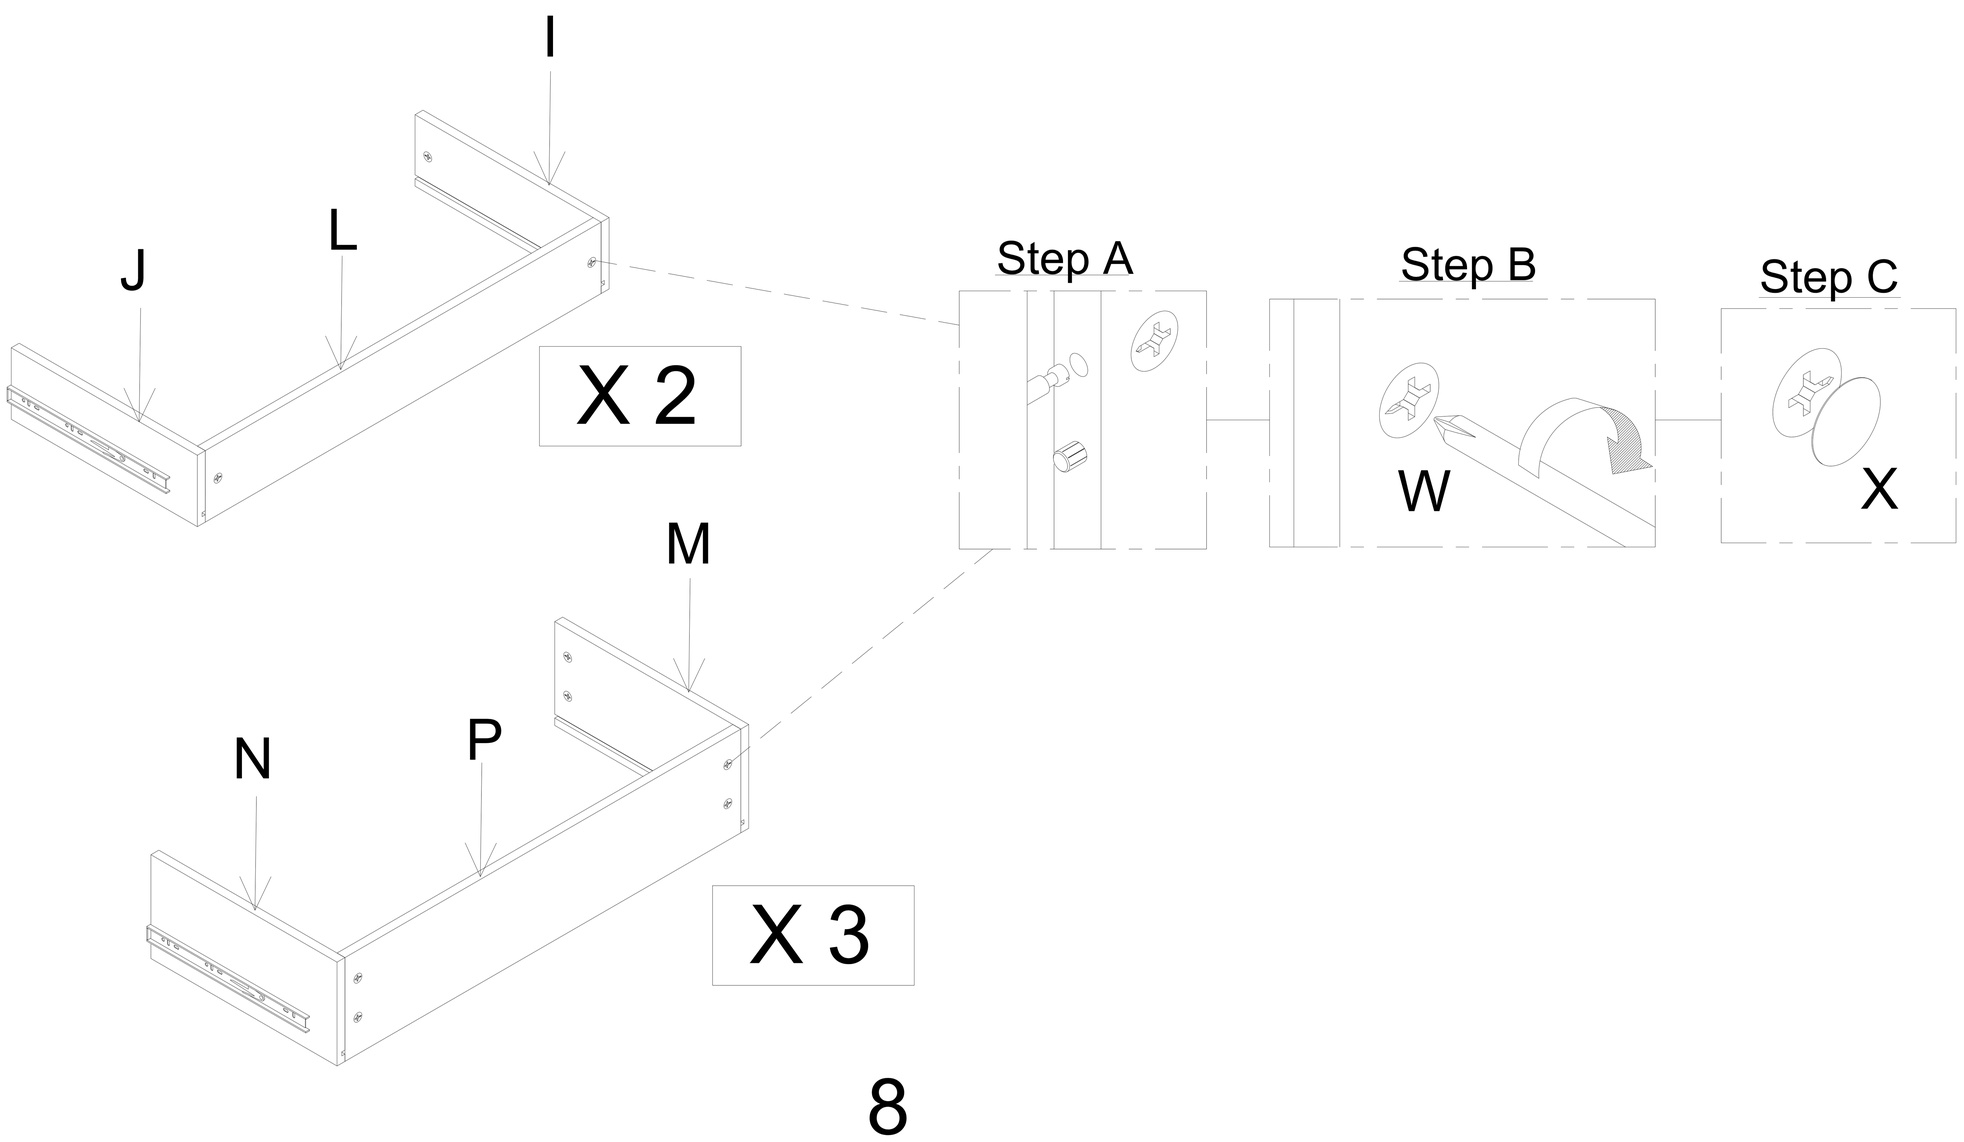

13 Slot the Drawer Base (Q) into the grooves of the drawer box. Attach the Small & Big Drawer Front (K, O) to the drawer box and secure the Cam Lock (W) with a screwdriver (not provided). Cover the Cam Lock (W) with Cam Lock Cover (X).

NOTE : - Do not over tighten the Cam Lock (W).

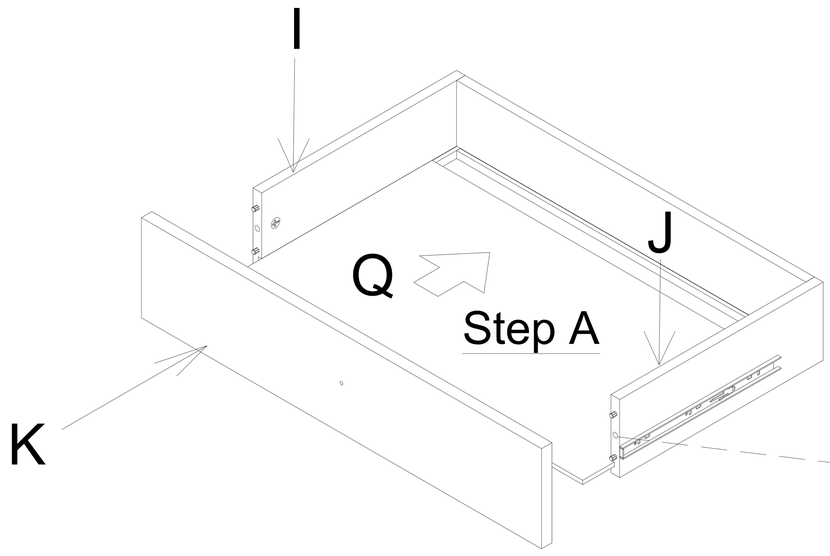

X 2

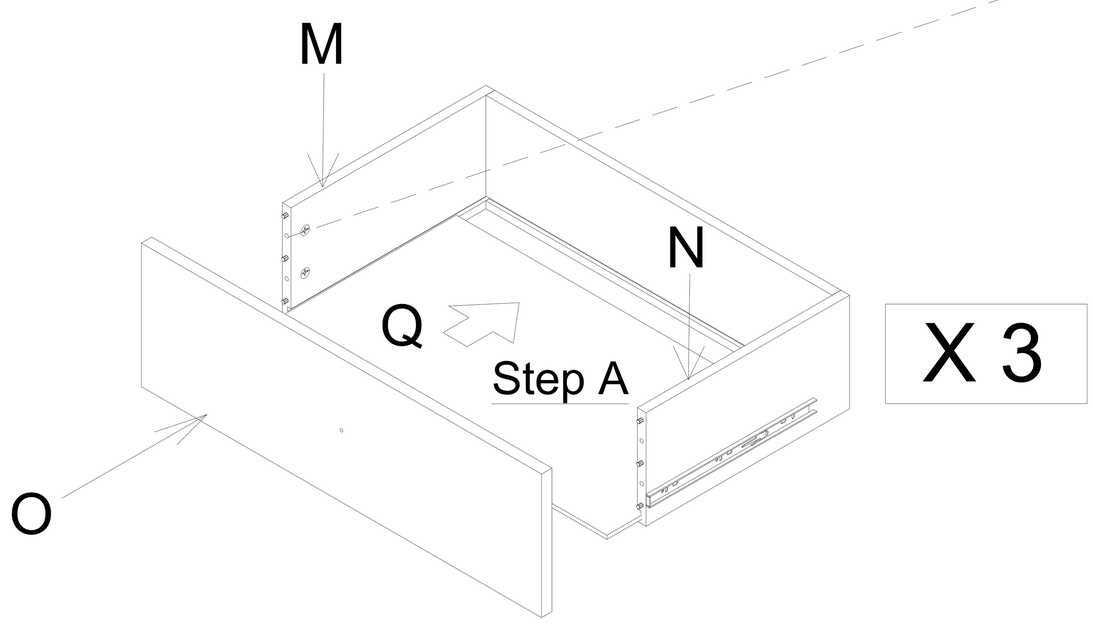

X 3

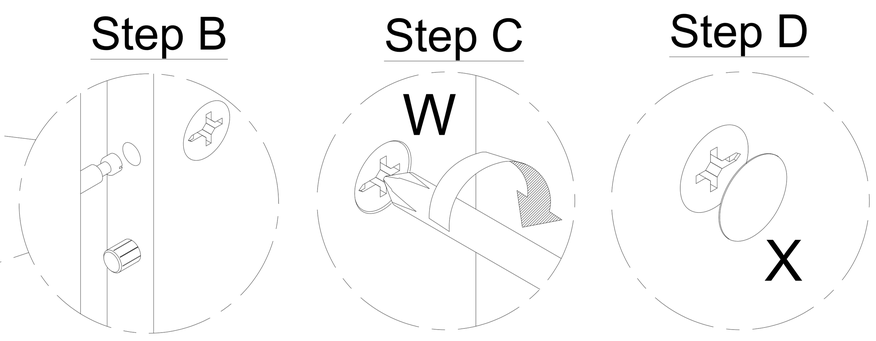

14 Attach the Handle (S) to the Small & Big Drawer Front (K, O) using Panhead Screw (AA) with a screwdriver (not provided).

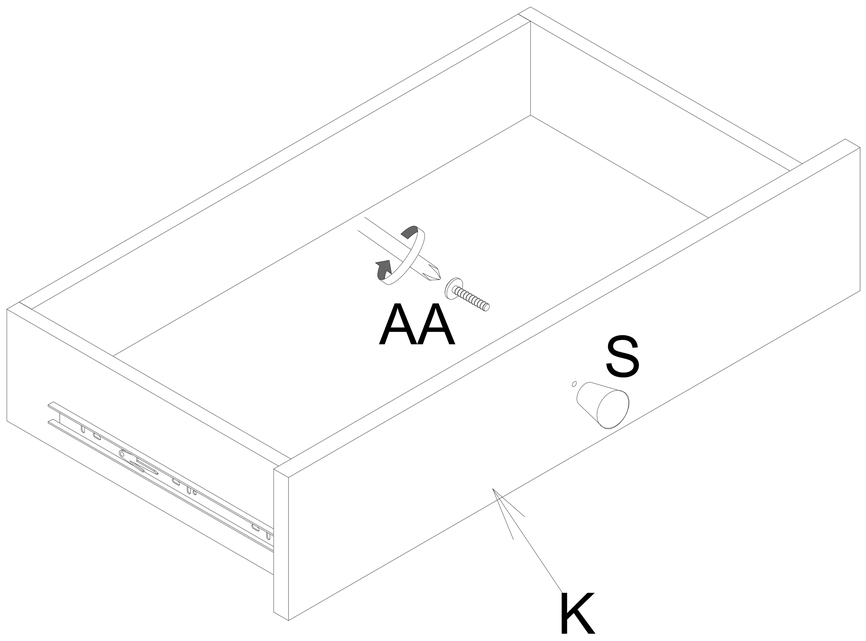

X 2

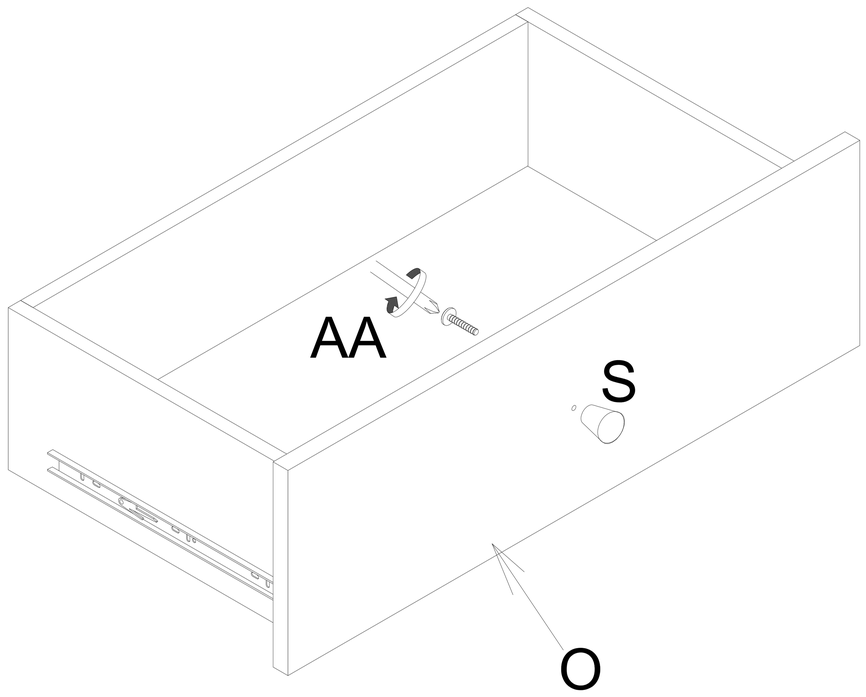

X 3

15 Pull out the metal chrome plates from both sides of the Runner (R). Align the metal chrome plates with the slides on one drawer side, then repeat on the other side. If they are not aligned properly, remove and try again. Once both tracks are aligned correctly, slowly push the drawer all the way in.

LEFT SIDE

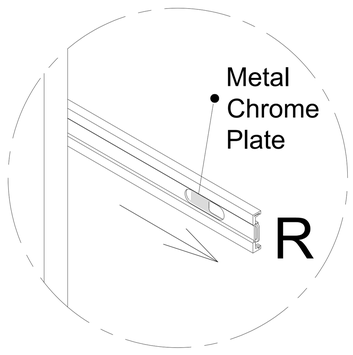

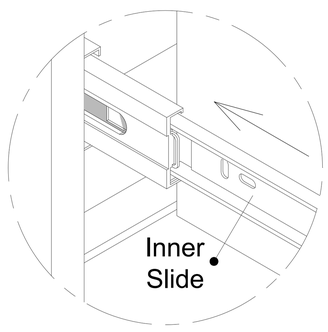

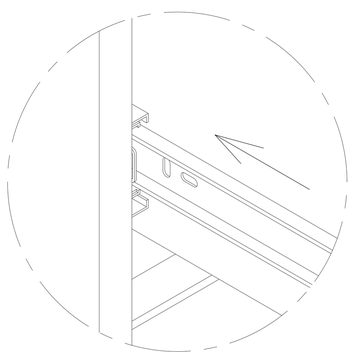

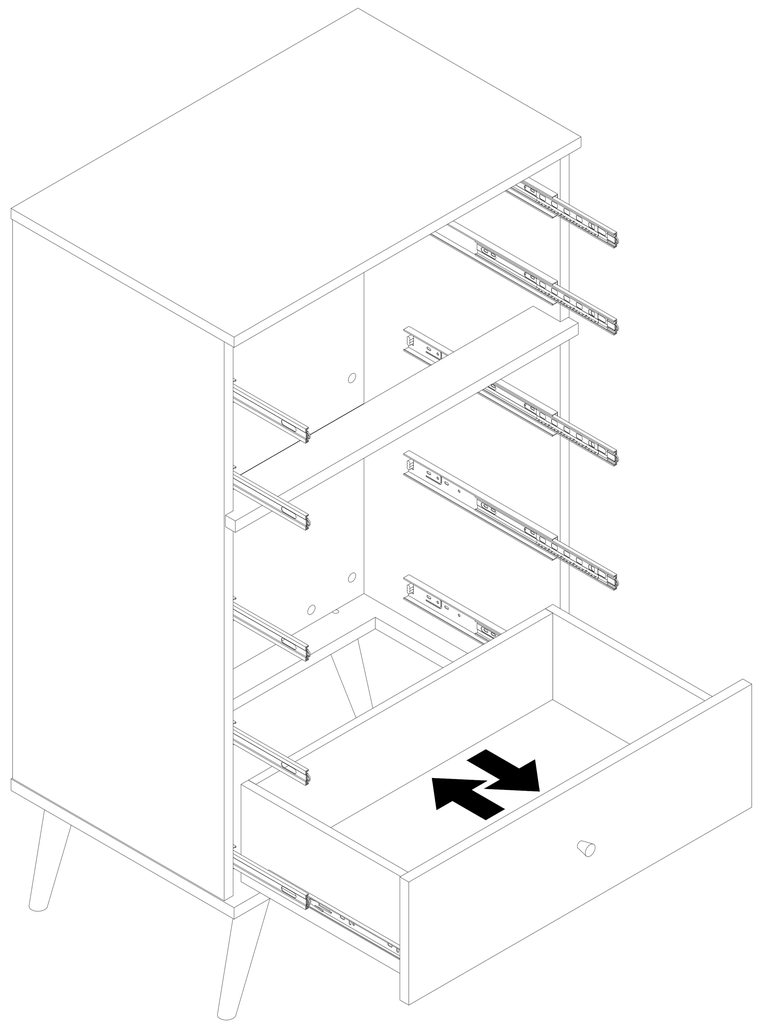

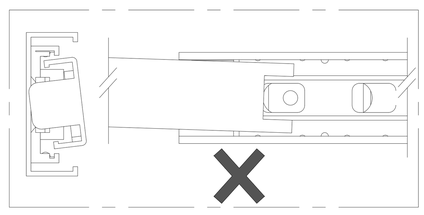

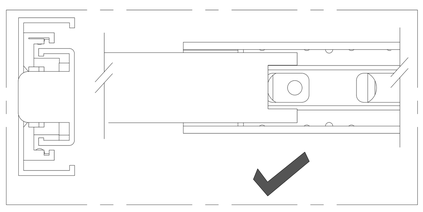

RIGHT SIDE

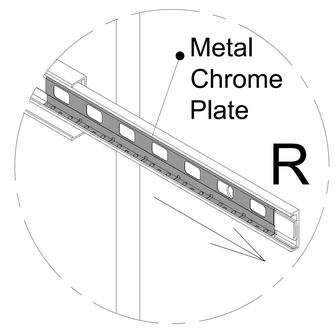

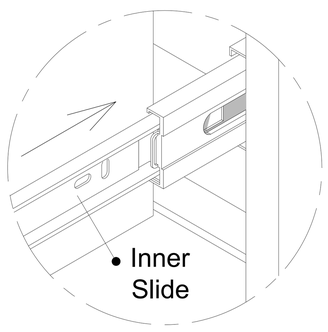

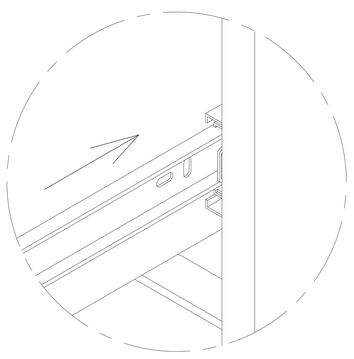

16 Attach the Anti-Tip Kit (AF) to the wall. Mount the bracket vertically to wall using the long screw. Then, secure the bracket vertically to the furniture back below the top using the short screw. Place the bracket as close to the center of the furniture back as possible, considering the wall stud and desired position in the room. Move furniture to its final position. Thread the bracket and pull it tight.

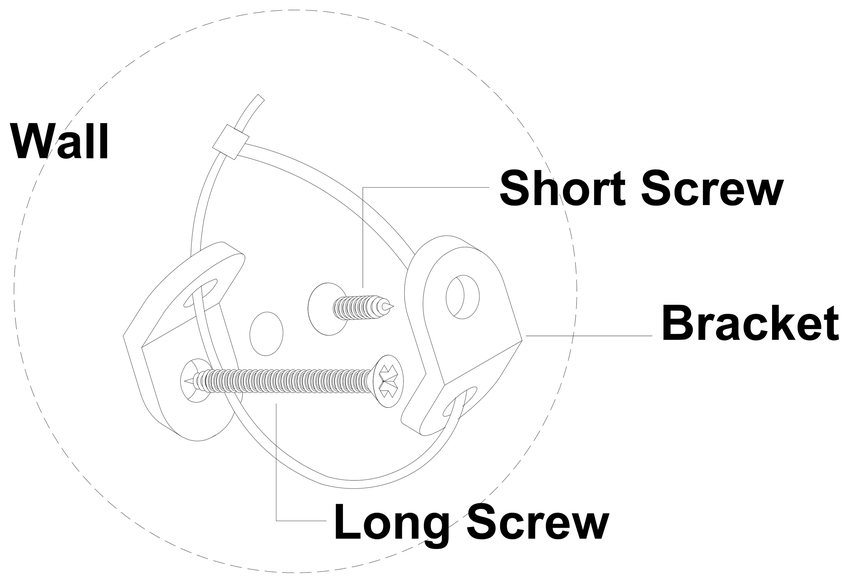

Cleaning & Care
Treat surfaces with care. Surfaces are resistant to scratches but are not scratch resistant. Clean surfaces with a dry or damp soft cloth. Do not use abrasive cleaners. Hardware may loosen over time. Periodically check that all connections are tight.