

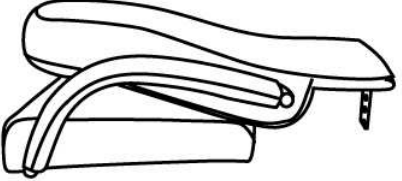



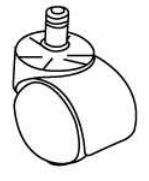



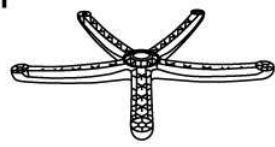

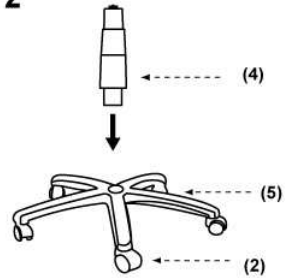
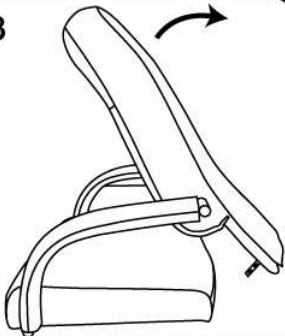
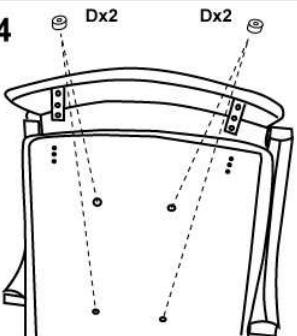
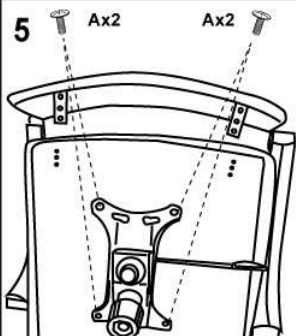
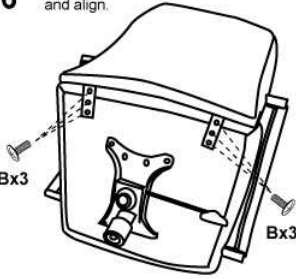
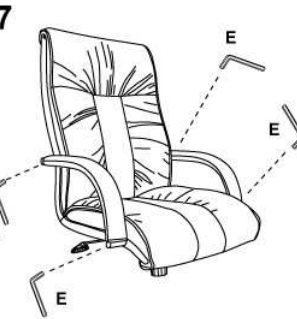
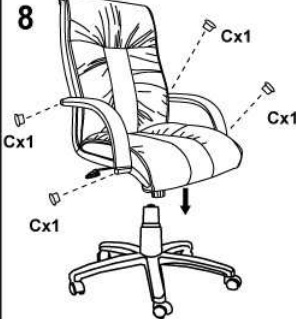


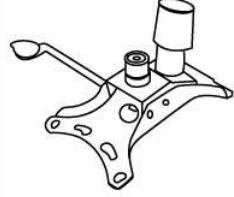

Please unscrew all hardware from cushion before assembly.
Por favor de destornillar todos los tornillos del cojín antes de ensamblar la silla.

MODEL: 9301

(1)x1		(2)x5	
			
Back & Seat W/ ARMS		Caster	
(3)x1	(4)x1	(5)x1	
			
Mechanism		Gas Lift W/ Cover	
<p>Customer Service Hotline: 1-800-593-1888 For further assembly instructions, please visit our website at www.bosschair.com</p>			
(A)*4PCS		M8*22 MECHANISM SCREW	
(B)*6PCS		M6*25 BACK BAR SCREWS	
(C)*4PCS		ARM CAP	
(D)*4PCS		MECHANISM WASHER	
(E)*1PC		ALLEN KEY	

<p>1</p>  <p>PUSH IN *You may use a mallet if necessary.</p> 	<p>2</p>  <p>(4)</p> <p>(5)</p> <p>(2)</p>	<p>3</p> 
<p>4</p>  <p>Dx2 Dx2</p>	<p>5</p>  <p>Ax2 Ax2</p>	<p>6</p> <p>May need to loosen arm to level and align.</p>  <p>Bx3 Bx3</p>
<p>7</p>  <p>E E E E</p>	<p>8</p>  <p>Cx1 Cx1 Cx1</p>	<p>Note: Please tighten all arm screws using allen key before step 8</p> <p>Insert and loosely tighten all screws. When assembly is completed, fully tighten all screws before using. This chair is only intended for sitting. Any other use will void the warranty.</p>
		 <p>>250LB</p>