

ASSEMBLY INSTRUCTIONS - BM186136


LARGE BAR

CABINET

Assembly Instructions


STEP 1

UNSCREW HANDLE

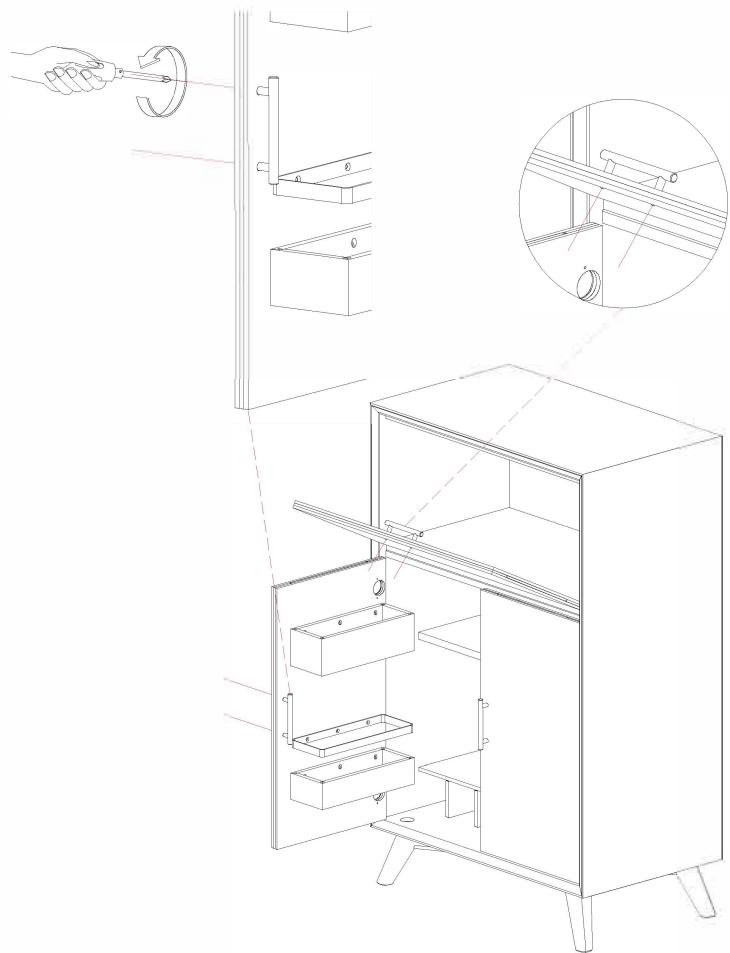

STEP 2

RE-SCREW ON REVERSE SIDE

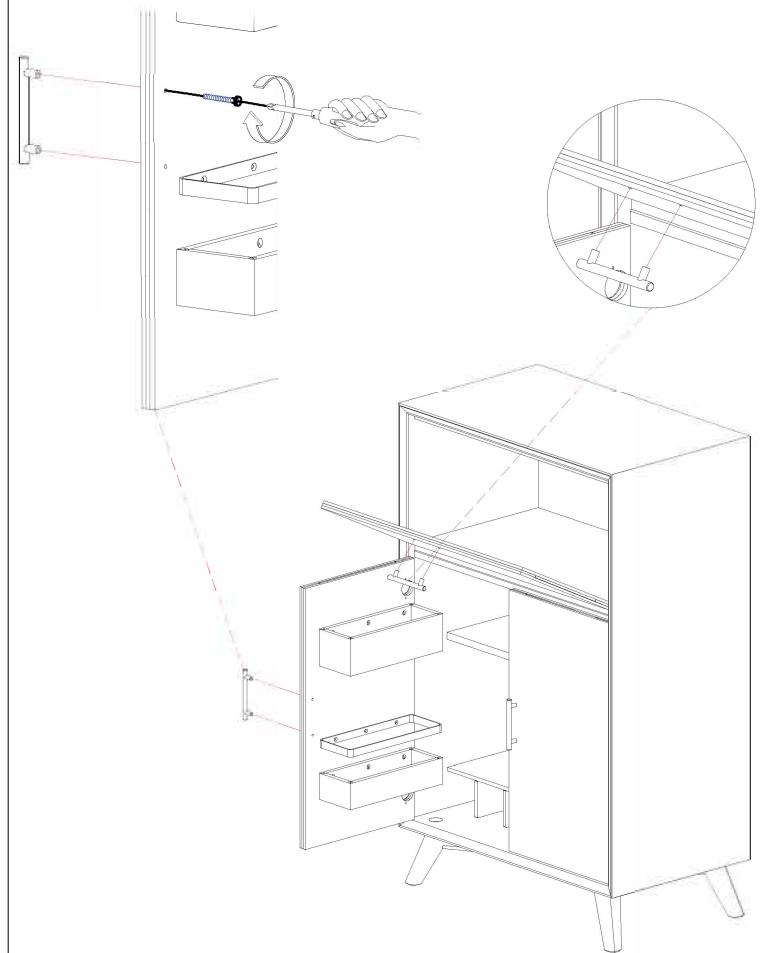

FINISH

