

CARE AND MAINTENANCE

Wipe clean with a soft, dry cloth. Test the cleaning method on a hidden area before using them over the entire area.

NOTICE

- * Please make sure that you have all parts indicated before you begin assembly of this item.
- * This item should be assembled on a soft surface to prevent scratching the finished product during assembly.
- * This item may require periodic tightening.
- * Do not tighten bolts until completely assembled.


Part List and Hardware List

PIECE	DESCRIPTION	PICTURE	QUANTITY
A	HEADBOARD		1X
B	L-POST		1X
C	R-POST		1X
D	FOOTBOARD		1X
E	SUPPORT LEGS OF SLATS		8X
F	SUPPORT LEGS OF RAILS		2X
G	SLAT		4X
H	L-RAIL		2X
I	R-RAIL		2X
J	WOOD LEG		2X
K	WOOD BAR		2X
H1	BOLT 5/16"*2-1/2"		10X
H2	BOLT 5/16"*2"		10X
H3	ALLEN KEY 5mm		1X
H4	SCREW ø8*30mm		8X
H5	SCREW ø8*15mm		8X
H6	BOLT 5/16"*3"		2X
H7	BOLT 5/16"*1-1/2"		8X
H8	METAL PLATE 50*33*3mm		2X

SAFAVIEH FURNITURE

Model# BED6302-F

Product Dimensions: 81.5"W*58.5"Dx53.5"H

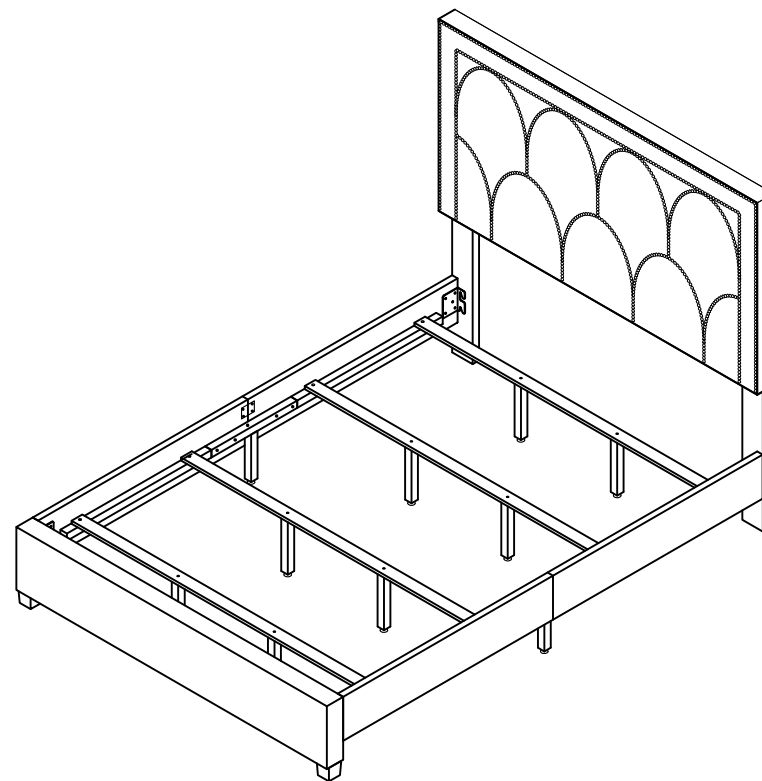


Weight capacity : 550 lbs
WARNING : DO NOT STAND ON THE BED

PREPARATION

Before beginning assembly of product, make sure all parts are present. Compare parts with package contents list and hardware contents list. If any part is missing or damaged, do not attempt to assemble the product.

Estimated Assembly Time: 30 minutes.

Tools Required for Assembly (included): Allen Key (included) and Philips head screwdriver (not included)

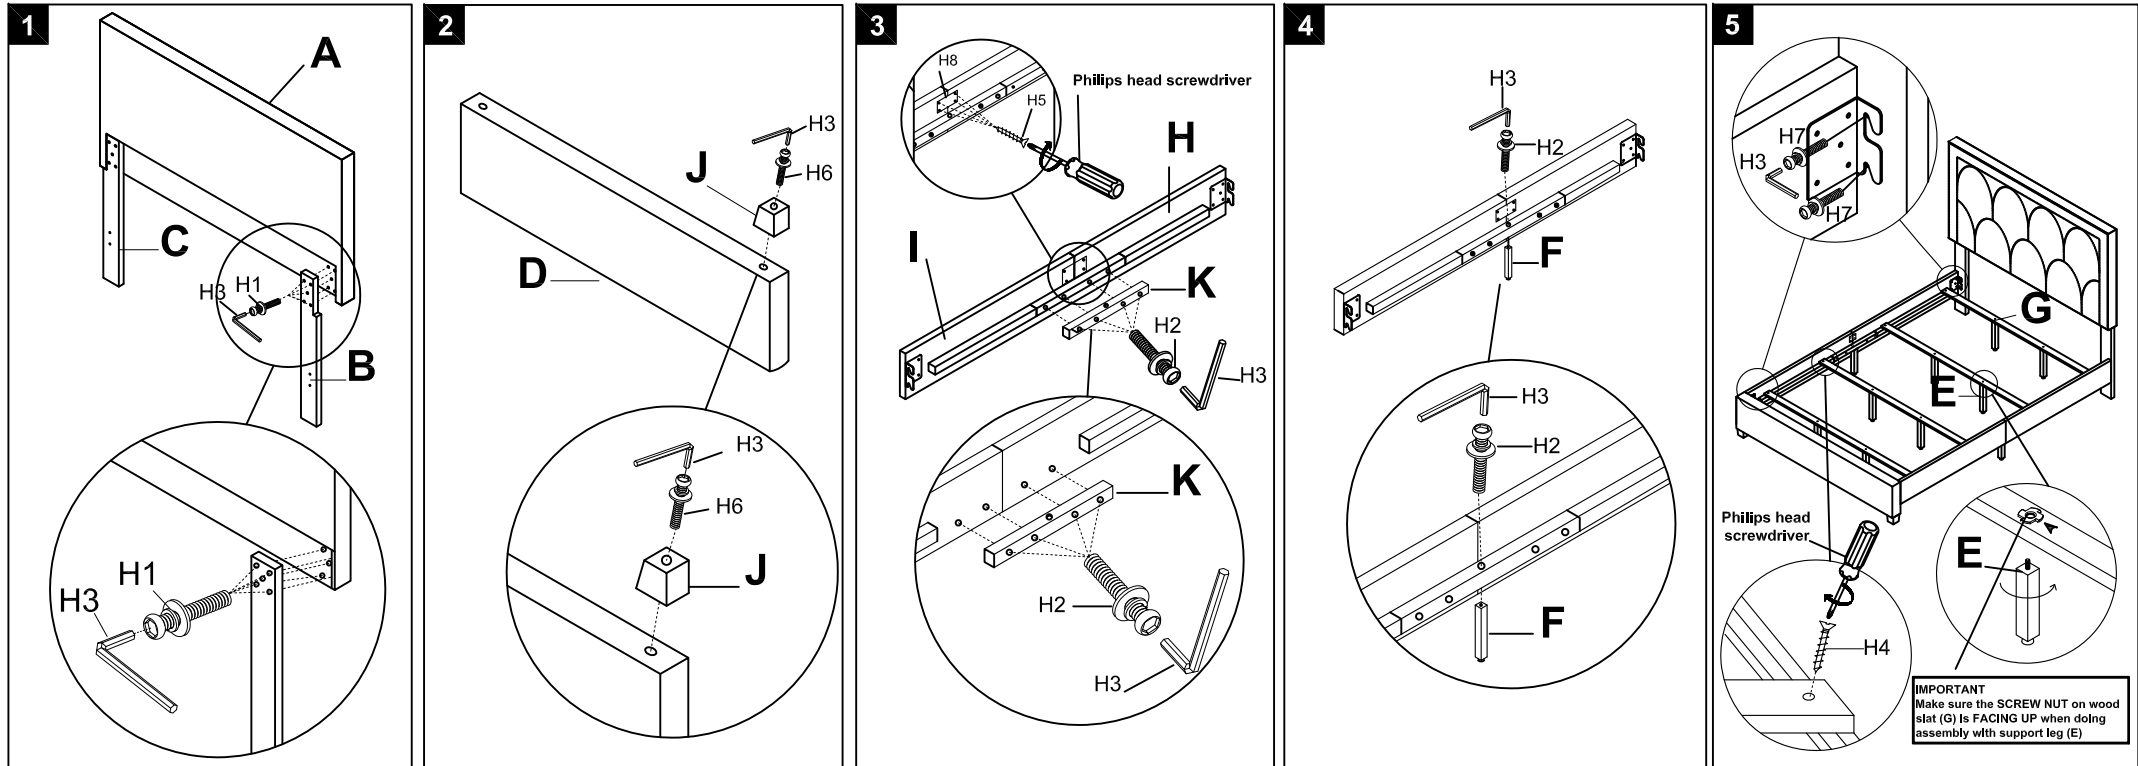

Step 1

Attach L/R posts (B&C) to the back side of headboard (A) by using Allen key (H3) to lock with 10*Allen bolts (H1), As picture.

Step 2

Attach 2*wood legs (J) to the bottom of footboard (D), Using Allen Key (H3) to lock with 2*Allen bolts (H6), As picture.

Step 3

Attach wood bar (K) to the 2*rails (H & I), Using Allen Key (H3) to lock with 4*Allen bolts (H2), As picture. Lock the both side rails (H & I) (front & rear of rail) tight and alignment with a metal plate (H8) and use the Philips head screwdriver (not included) to lock with 4*screws (H5), As picture. (Repeat afore-mentioned to assemble another set of side rail)

Step 4

Attach support leg (F) to under the assembled wood bar (K), Using Allen Key (H3) to lock with 1*Allen bolts (H2), As picture. (Repeat afore-mentioned to assemble another set of side rail)

Step 5

Attach the end of assembled 2*side rails to L/R post (B/C) & footboard (D), Using Allen Key (H3) to lock with 8*Allen bolts (H7), As picture. Attach 2*support legs (E) to each slat (G). Lock the 4*slats (G) tight with wood bar (both inside of rails) by using the Philips head screwdriver (not included) to lock with 8*screws (H4), As picture. Assembly is completed.