

ASSEMBLY INSTRUCTION

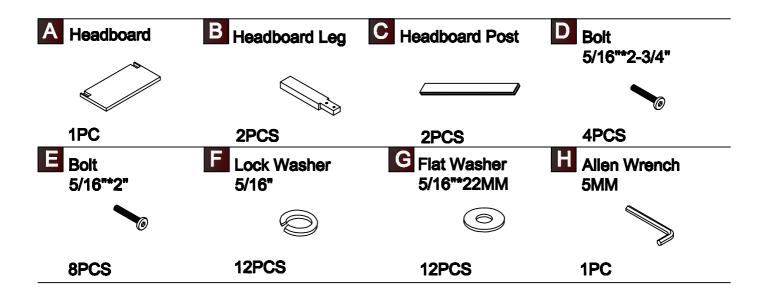


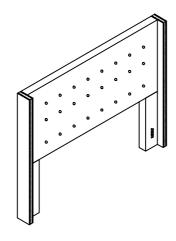


Please take the time to identify the hardware as well as the individual components to this product. As you unpack and prepare for assembly, place the contents on a carpeted or padded area to protect them from damage.

Hardware package with white sticker is for customers using a bolt-on metal bed frame.


Attached open Non-woven cloth and take out the Headboard Leg(B) and Headboard Post(C).

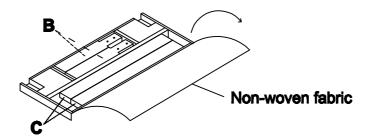

Attached Headboard(A), Headboard Leg(B), Flat Washer(G), Lock Washer(F), Bolt(D) by Allen Wrench(H).

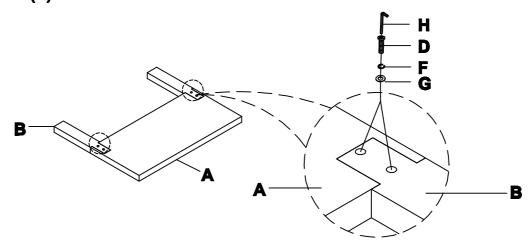


Attached Headboard Post(C) to Headboard(A), Headboard Leg(B), Flat Washer(G), Lock Washer (F), Bolt(E) by Allen Wrench(H).

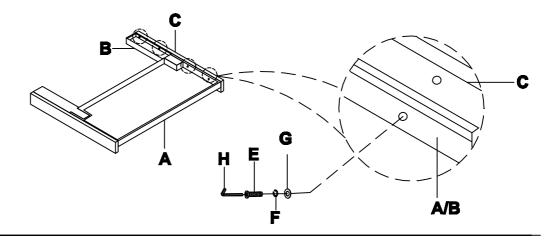


Cleaning & Care

Treat surface with care. Surface is resistant to scratches but is not scratch resistant. Clean surfaces with a dry or damp soft cloth. Do not use abrasive cleaners. Hardware may loosen over time. Periodically check that all connections are tight.


ASSEMBLY INSTRUCTION

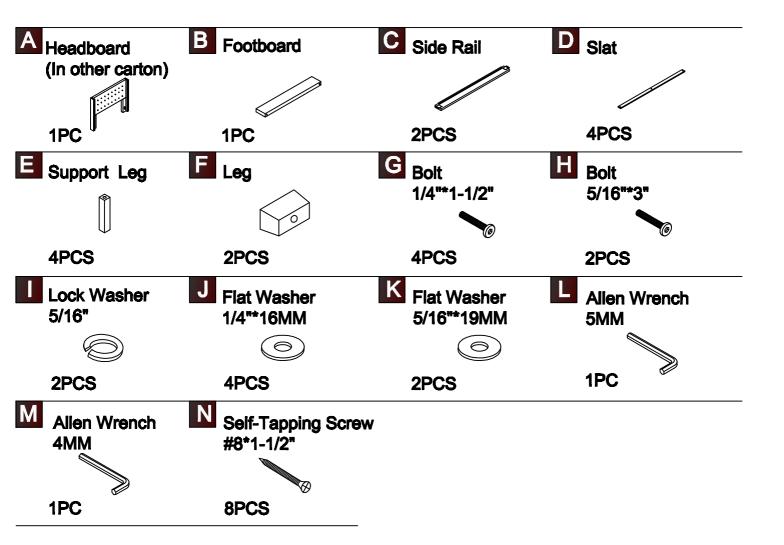

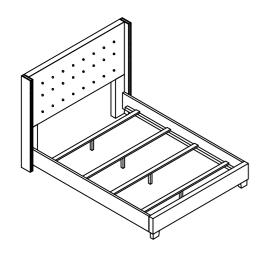


Please take the time to identify the hardware as well as the individual components to this product. As you unpack and prepare for assembly, place the contents on a carpeted or padded area to protect them from damage.


Attached Footboard(B), Leg(F), Flat Washer(K), Lock Washer (I), Bolt(H) by Allen Wrench(L).

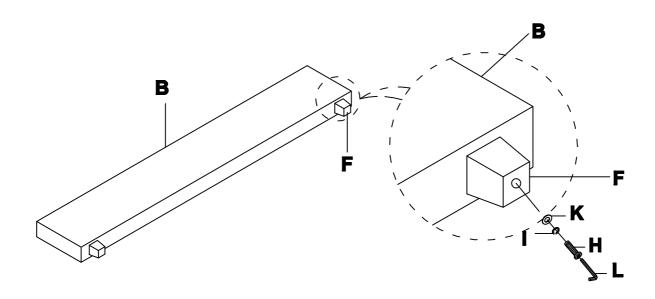


2 Attached Side Rail(C) to the Headboard(A) and Footboard(B).

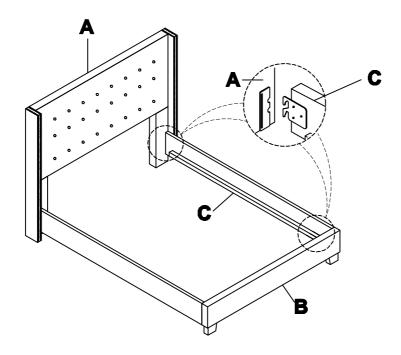

Attached Slat(D), Support Leg(E), Flat Washer(J), Bolt(G) by Allen Wrench(M).

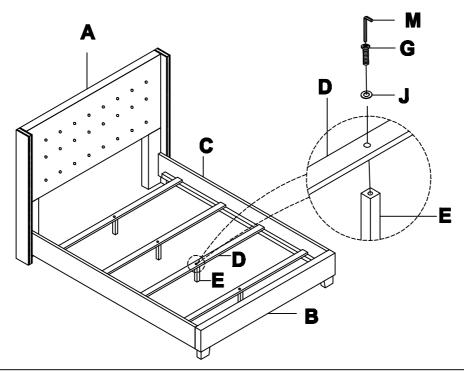

4 Attached Self-Tapping Screw(N) to Side Rail(C).

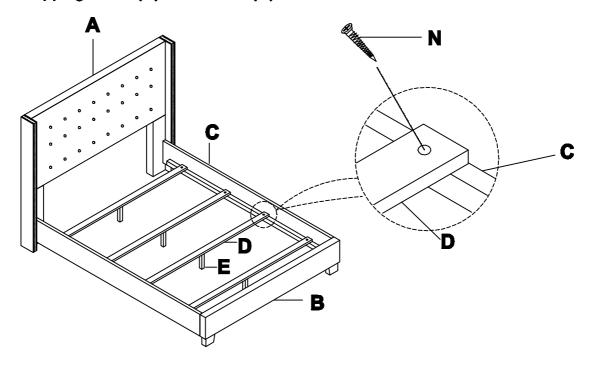

Cleaning & Care

Treat surface with care. Surface is resistant to scratches but is not scratch resistant. Clean surfaces with a dry or damp soft cloth. Do not use abrasive cleaners. Hardware may loosen over time. Periodically check that all connections are tight.