



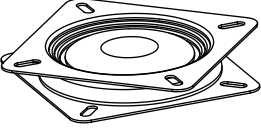





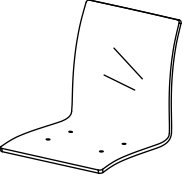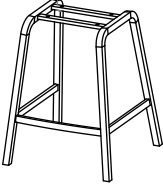







ASSEMBLY INSTRUCTION

FOR SWIVEL ACRYLIC BARSTOOL

TRANSPARENT ACRYLIC SWIVEL CHAIR

A	Acrylic Seat	B	Metal Base	C	Large Metal Plate	D	Small Metal Plate
							
	1pc		1pc		1pc		1pc
E	Swivel	F	Bolt 1/4"X 1-5/8"	G	Bolt 1/4"X 1-3/8"	H	Bolt 1/4"X 3/4"
							
	1pc		2pcs		2pcs		4pcs
I	Flat Washer	J	Large Lock Washer	K	Small Lock Washer	L	Nut
							
	4pcs		4pcs		4pcs		4pcs
M	Shaft Sleeves	N	Allen Wrench	O	Open Wrench		
							
	4pcs		2pcs		1pc		

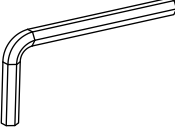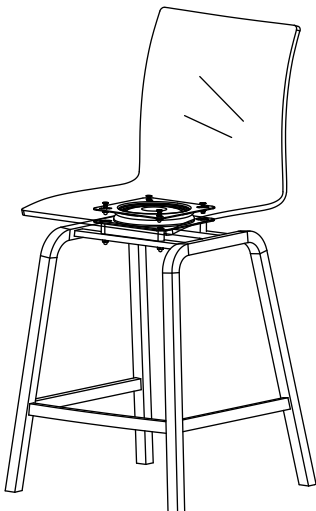


Thank you for purchasing the swivel / stationary convertible acrylic barstool. The enclosed assembly instruction will include both the step-by-step guide for using this as a swivel barstool as well as a stationary barstool. Please keep the assembly instruction and all hardware if you decide to convert the barstool in the future.

This page lists all the contents included in the box. Please take the time to identify the hardware as well as the individual components to this product. As you unpack and prepare for assembly, place the contents on a carpeted or padded area to protect them from damage.

1 Insert bolt (G) into swivel (E), small metal plate (D), metal base (B), large lock washer (J) and shaft sleeves (M), then use allen wrench (N) to fasten bolt (G) and shaft sleeves (M) as shown and tighten it.

Insert bolt (F) into swivel (E), large metal plate (C), metal base (B), large lock washer (J) and shaft sleeves (M), then use allen wrench (N) to fasten bolt (F) and shaft sleeves (M) as shown and tighten it.


**** NOTICE: Small Metal Plate (D) must to be attached to the front hole of metal base (B) ****

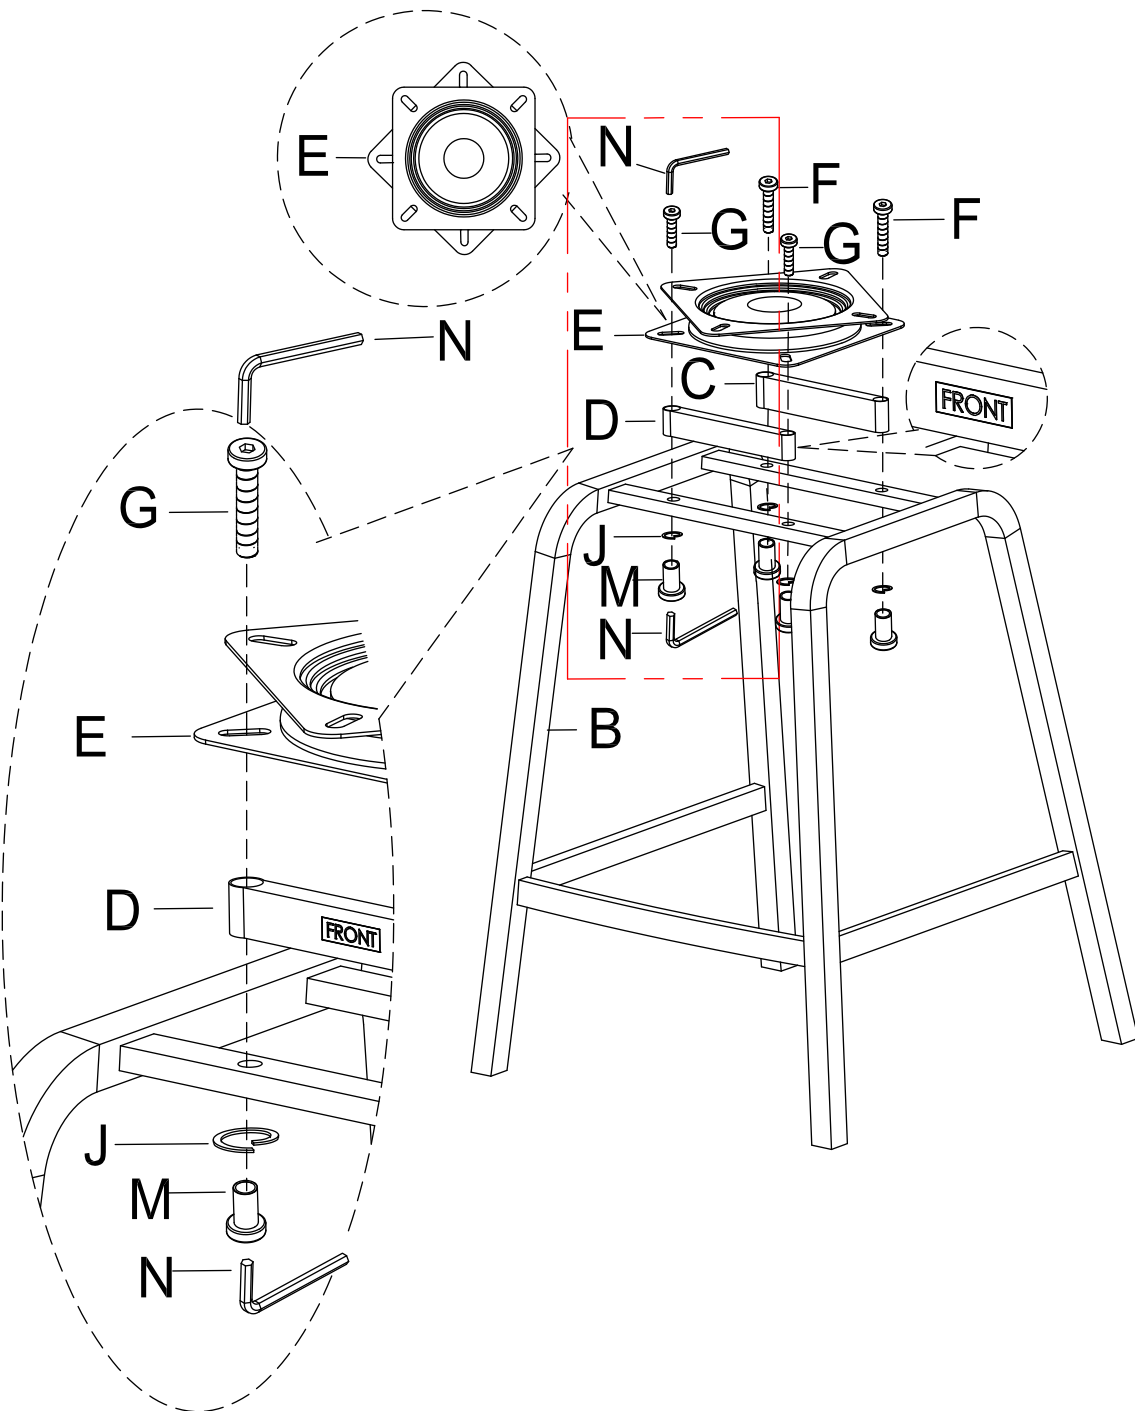

2

This step needs to fix metal base (B) to 45 degree angle by using something or someone to hold it.

Insert bolt (H) into acrylic seat (A), swivel (E), flat washer (I), small lock washer (K) and nut (L), then use open wrench (O) to fasten nut (L) as shown and tighten it.

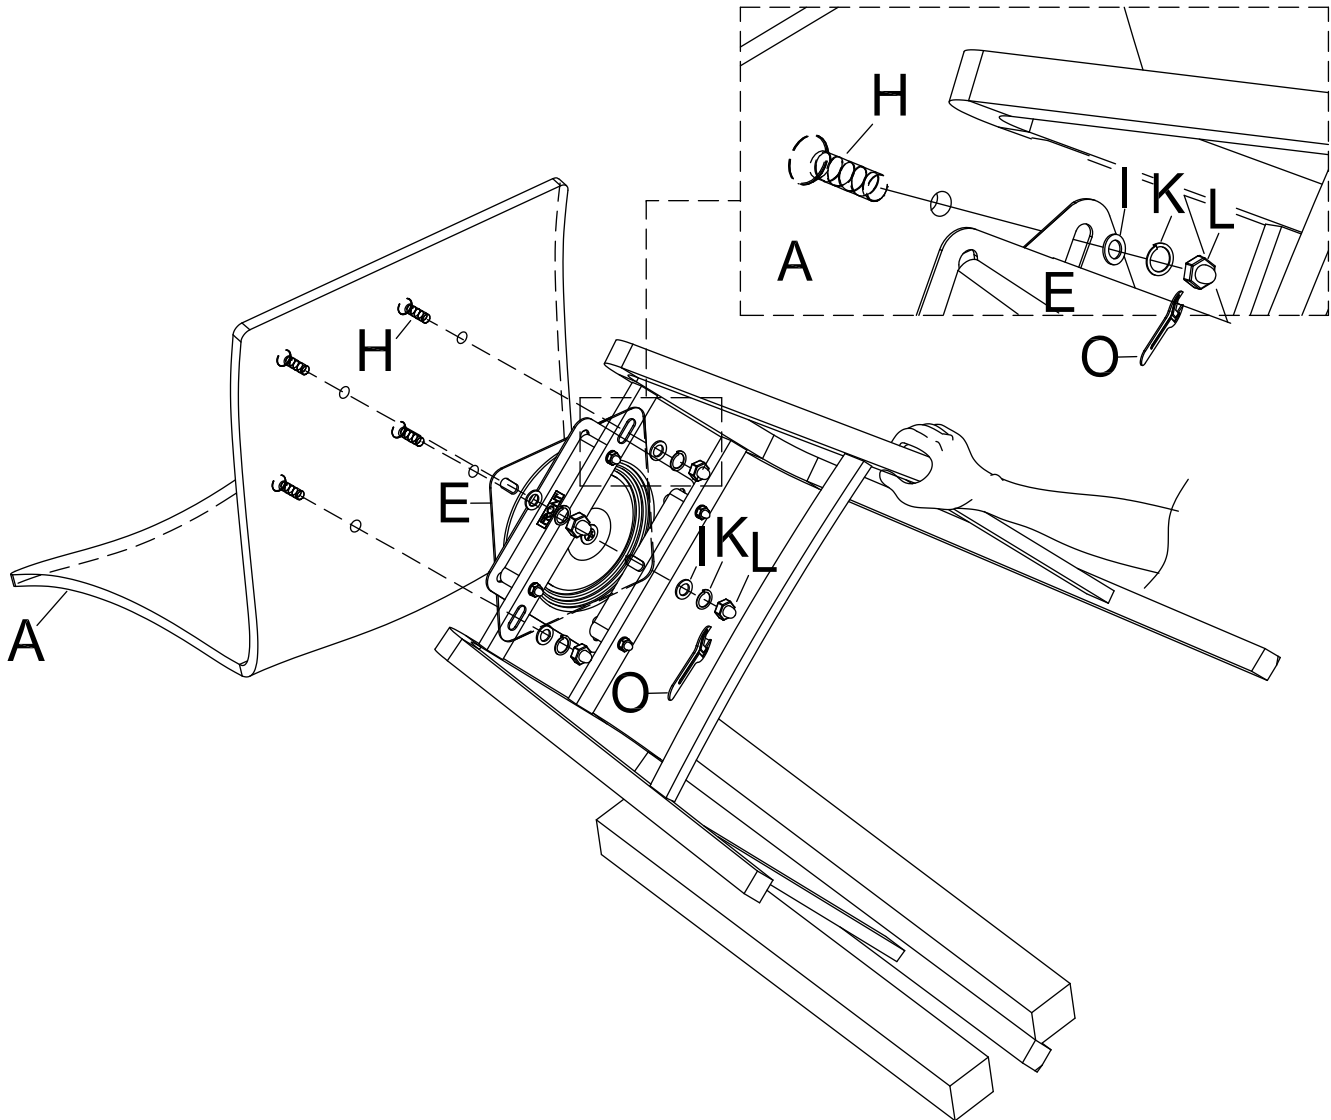










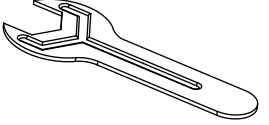



Cleaning & Care

Treat surface with care. Surface is resistant to scratches but is not scratch resistant. Clean surfaces with a dry or damp soft cloth. Do not use abrasive cleaners. Hardware may loosen over time. Periodically check that all connections are tight.

ASSEMBLY INSTRUCTION

CHOP COUNTER HEIGHT TABLE

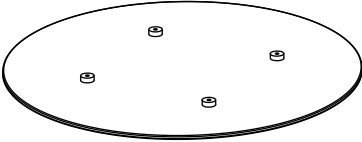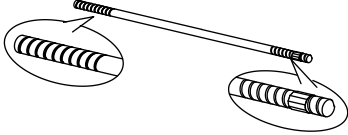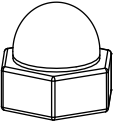A	Stretcher	B	Stretcher	C	Stretcher	D	Stretcher
							
2pcs		6pcs		6pcs		2pcs	
E	Glass Top (In other carton)	F	Long Bolt W/Stopper	G	Bolt 3/16" X 3/8"	H	Nut
							
1pc		4pcs		16pcs		4pcs	
I	Flat Washer	J	Leveler	K	Allen Wrench	L	Open Wrench
							
4pcs		4pcs		1pc		1pc	

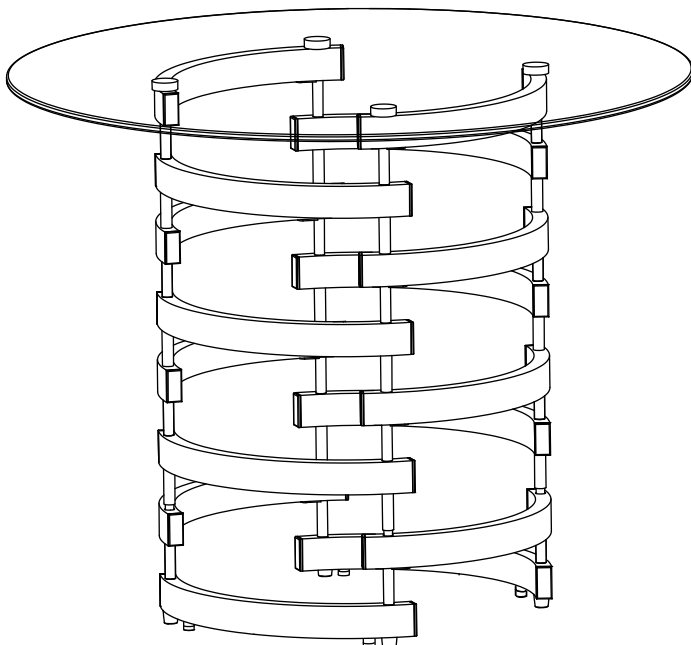


This page lists all the contents included in the box. Please take the time to identify the hardware as well as the individual components to this product. As you unpack and prepare for assembly, place the contents on a carpeted or padded area to protect them from damage.

***** Do not tighten screws & bolts until the entire unit is completely assembled.**


1

Screw long bolts (F) into corresponding holes on the glass top (E) as shown and tighten it.

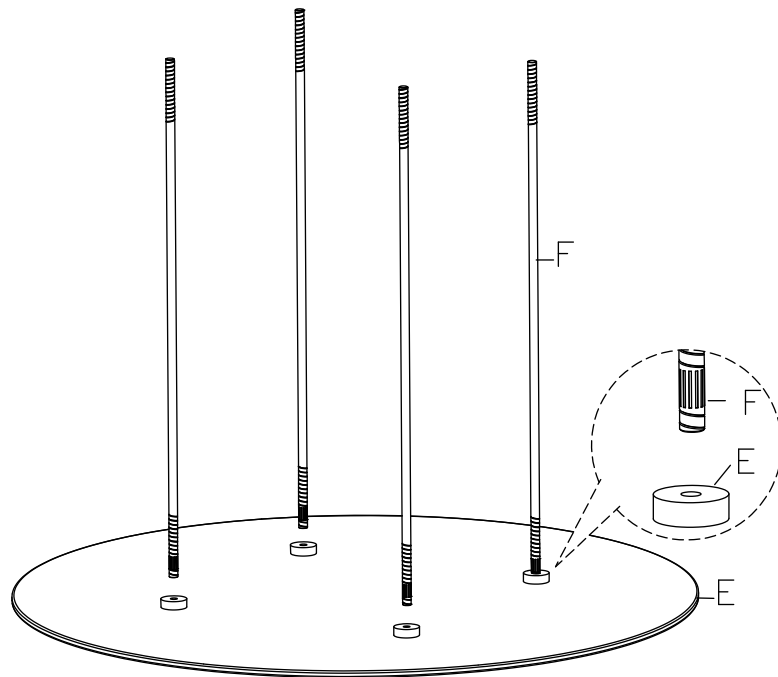


2


Insert attached long bolts (F) through the corresponding holes on stretchers (A) as shown below.

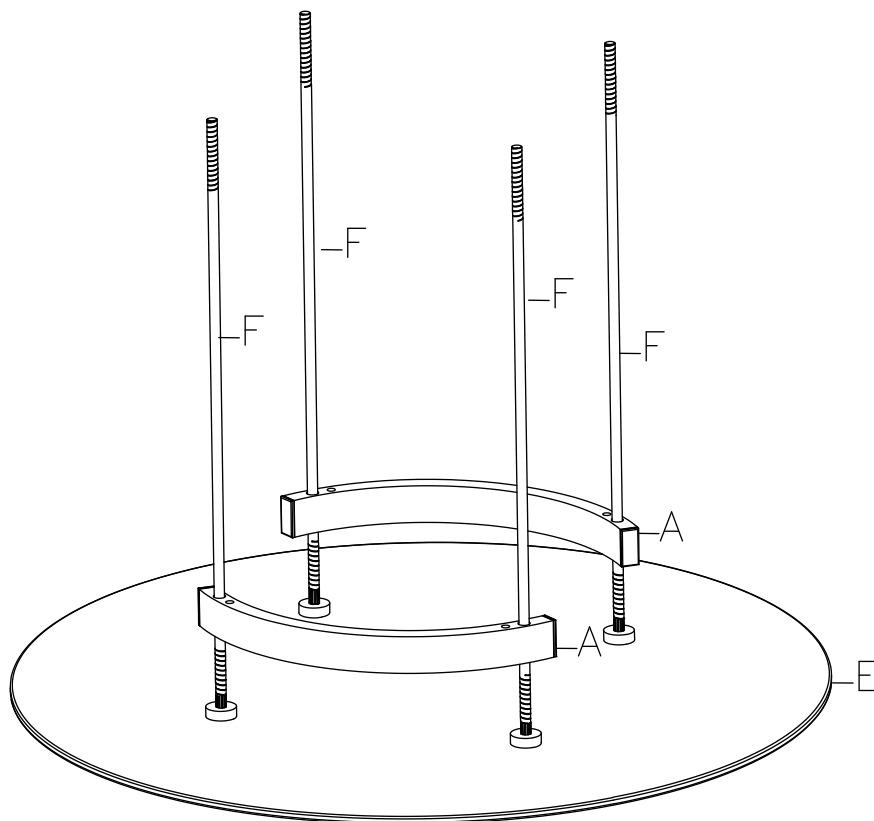

- 3** Insert attached long bolts (F) through the corresponding holes on stretchers (B) and fix stretchers (B) to stretchers (A) using bolts (G) and allen wrench (K). Then, Insert attached long bolts (F) through the corresponding holes on stretchers (C).

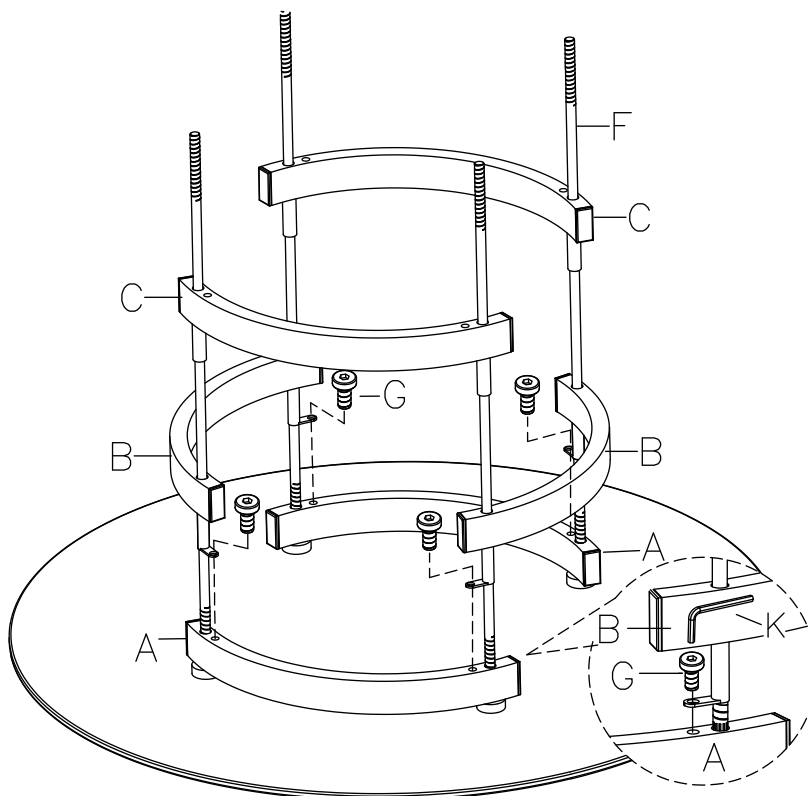


- 4** Insert attached long bolts (F) through the corresponding holes on stretchers (B) and fix stretchers (B) to stretchers (C) using bolts (G) and allen wrench (K). Then, Insert attached long bolts (F) through the corresponding holes on stretchers (C).

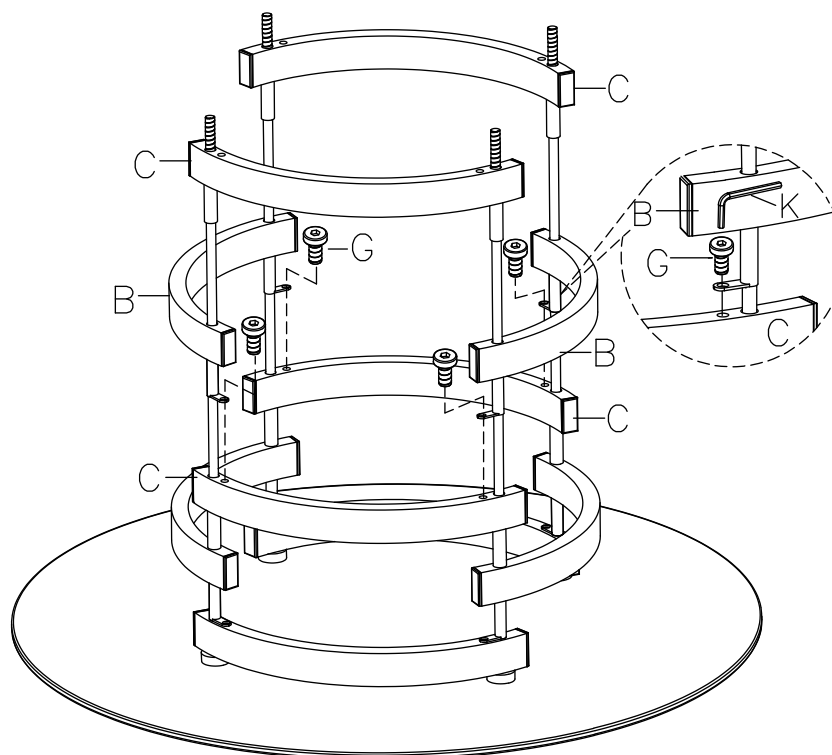


5

Insert attached long bolts (F) through the corresponding holes on stretchers (B) and fix stretchers (B) to stretchers (C) using bolts (G) and allen wrench (K). Then, Insert attached long bolts (F) through the corresponding holes on stretchers (C).

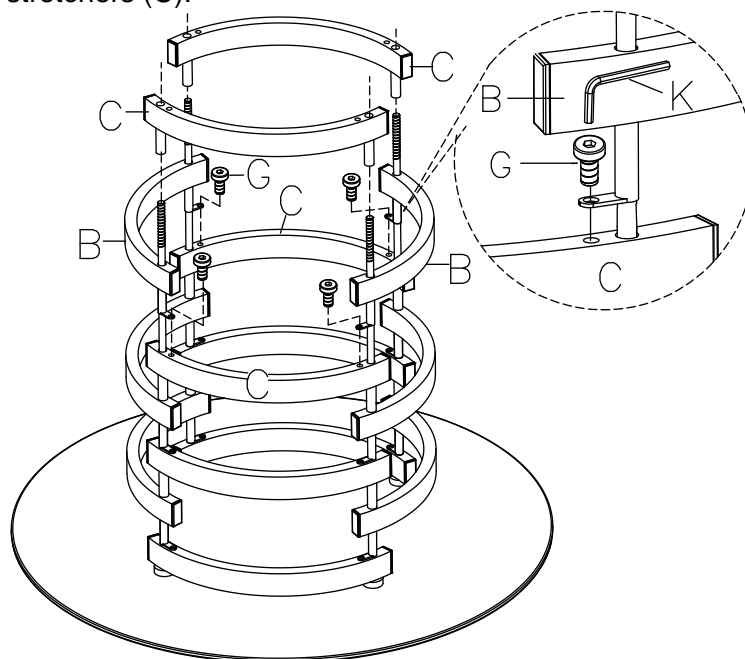**6**

Insert attached long bolts (F) through the corresponding holes on stretchers (D) and fix stretchers (D) to stretchers (C) using bolts (G) and allen wrench (K). Fix the frame firmly using flat washers (I) and nuts (H) with open wrench (L). Then, attach leveler (J) to the bottom of stretchers (D) as shown and tighten bolts firmly. Carefully, turn the assembled unit upright. The chop counter height table is now complete.

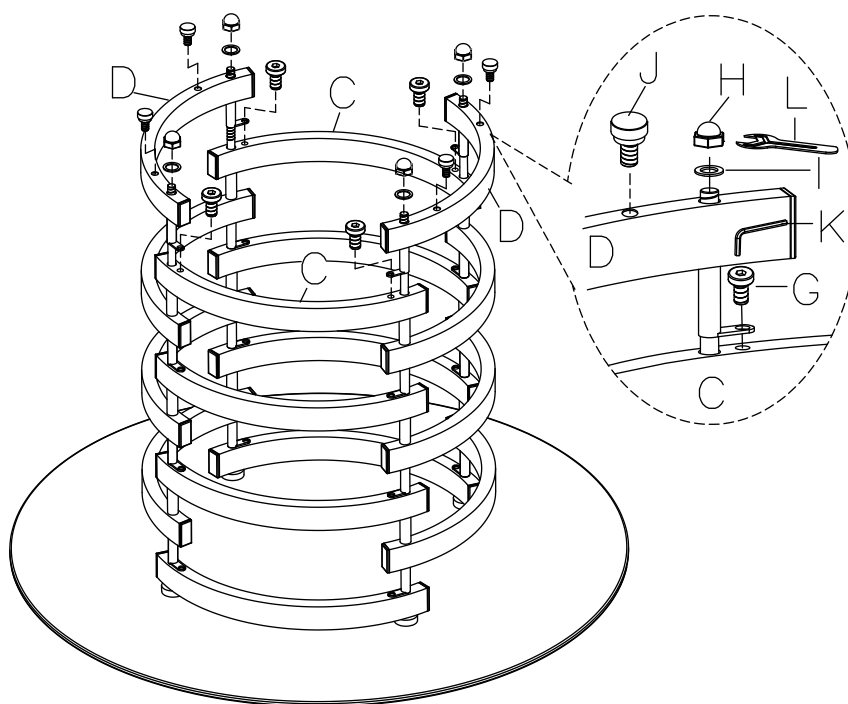

Cleaning & Care

Treat surface with care. Surface is resistant to scratches but is not scratch resistant. Clean surfaces with a dry or damp soft cloth. Do not use abrasive cleaners. Hardware may loosen over time. Periodically check that all connections are tight.