

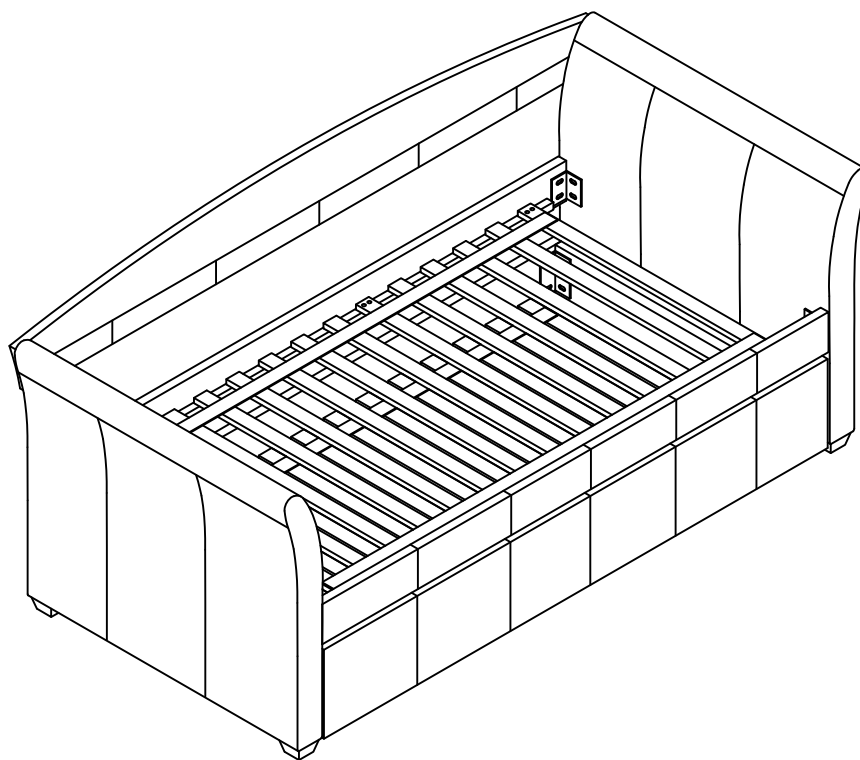
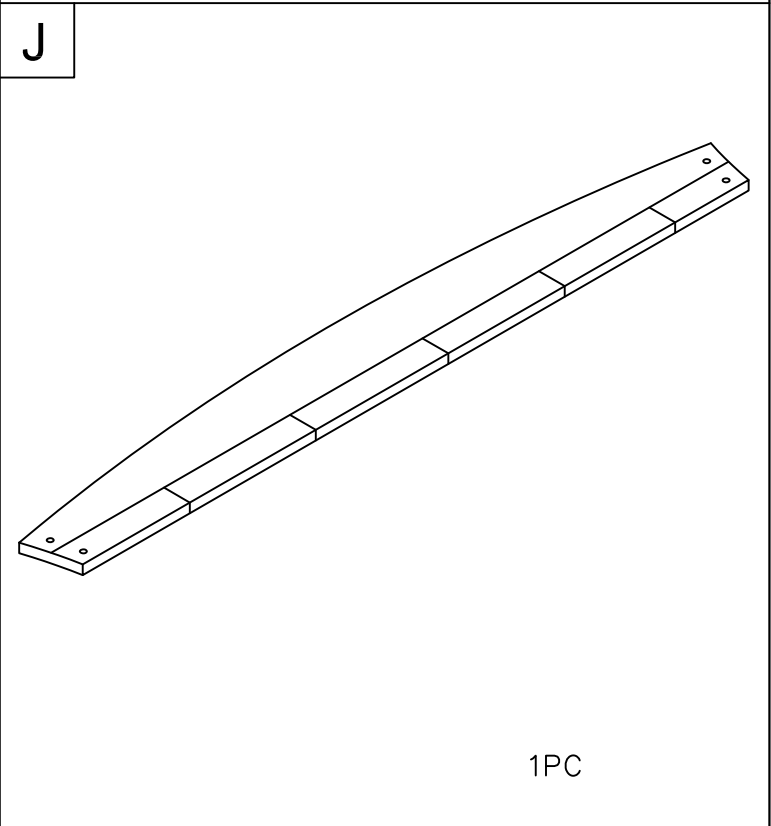
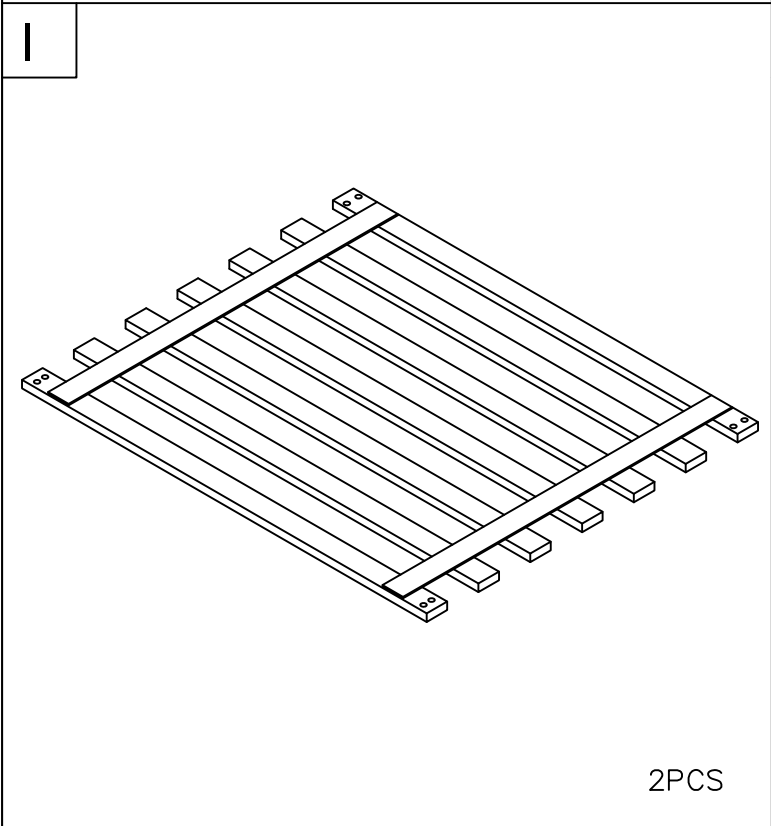


Assembly Instruction


TRUNDLE,UPHOLSTERY
BROWN PU DAYBED

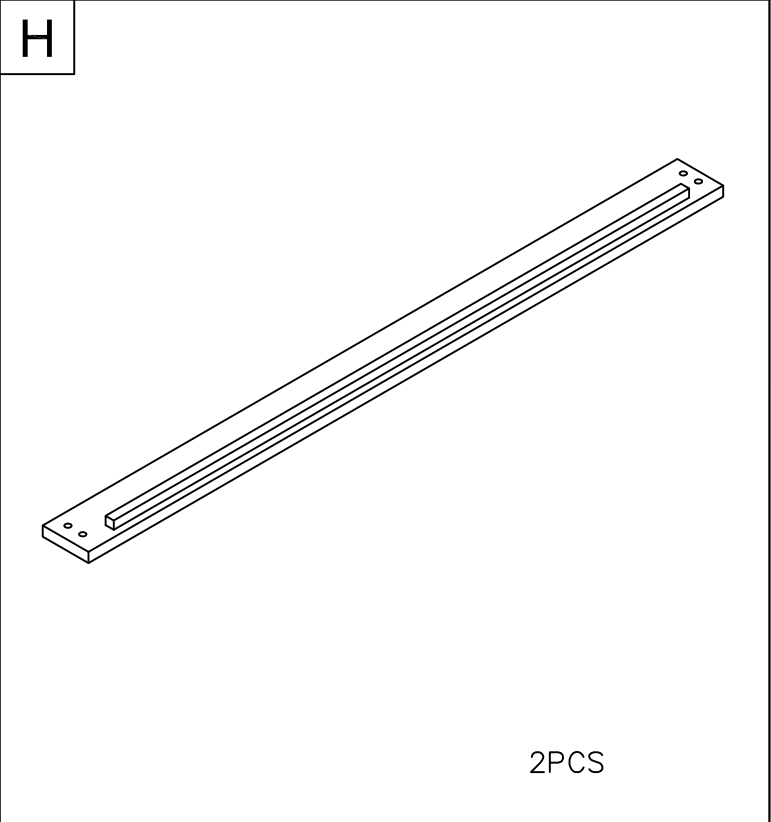


HARDWARE LIST							
A		ø5/16"X2"L	12PCS	D		ø5/16"	1PC
B		ø5/16"X3/4"L	8PCS	E		#8X1-1/4"L	16PCS
C		ø5/16"Xø3/4"	20PCS	F		60X90mm	4PCS

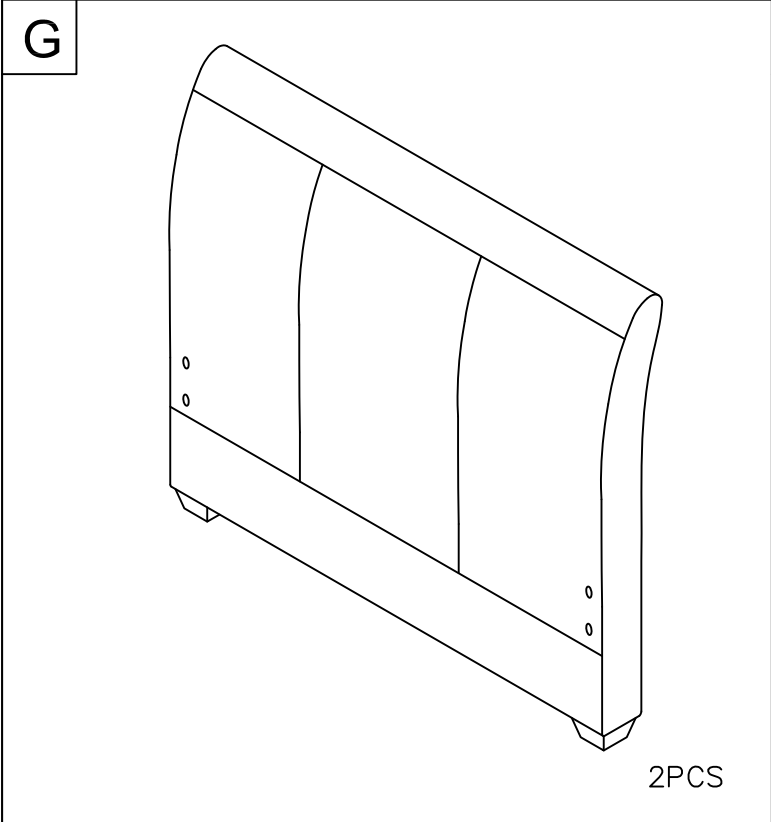



step 1

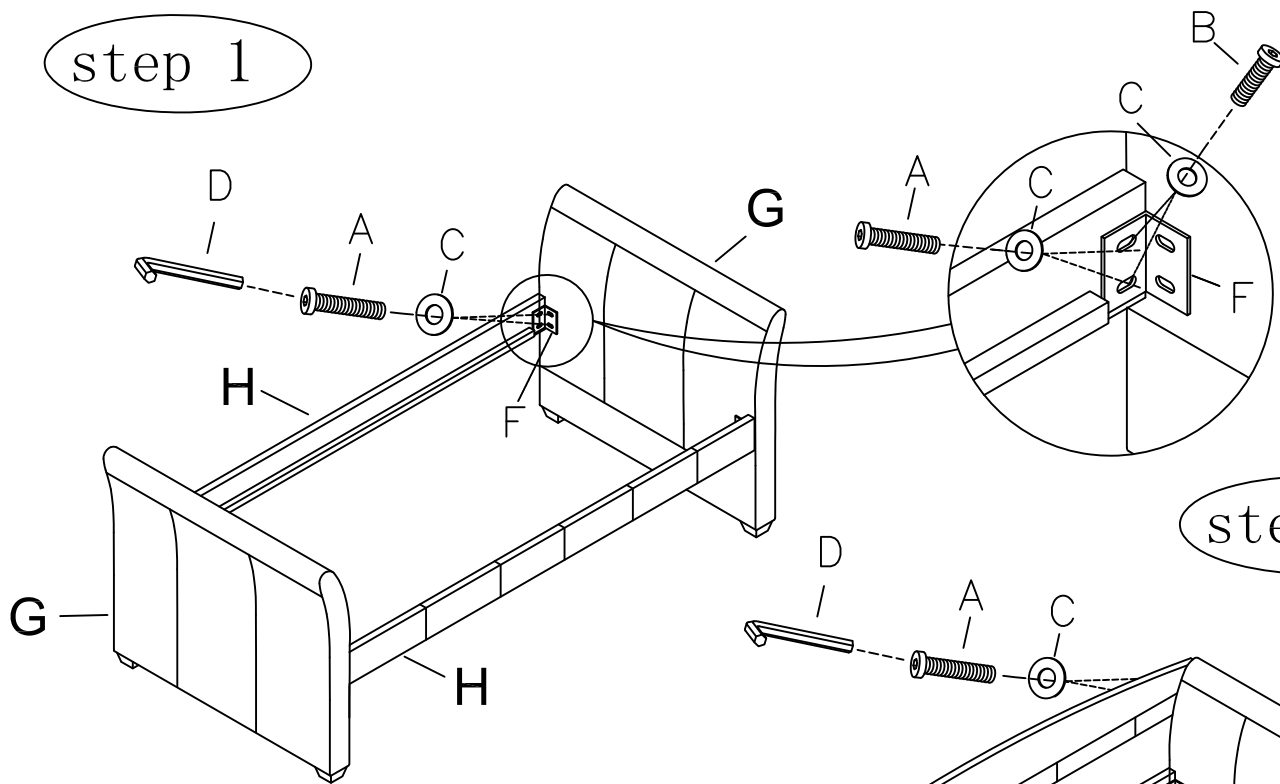

step 2

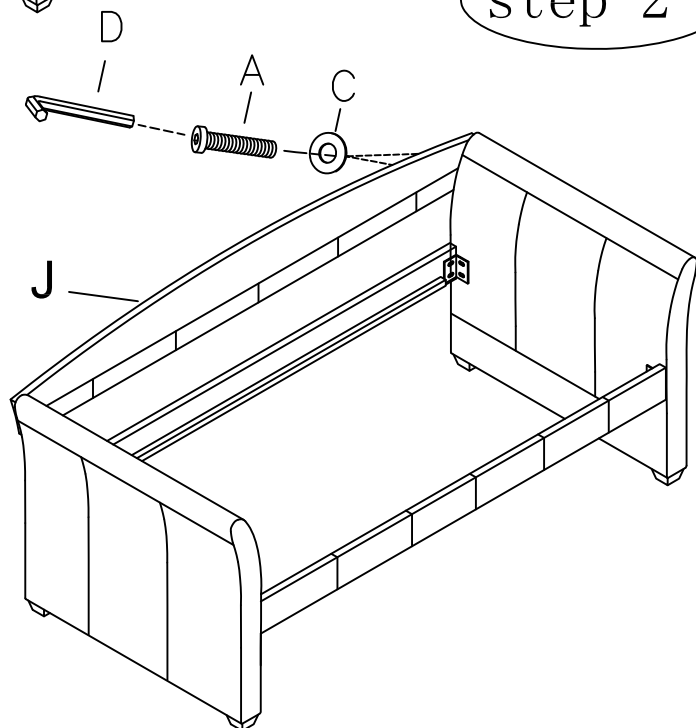


step 3

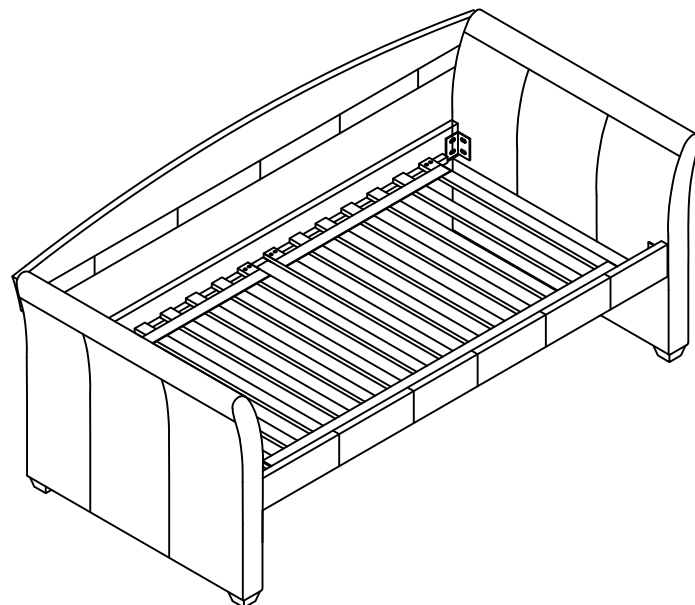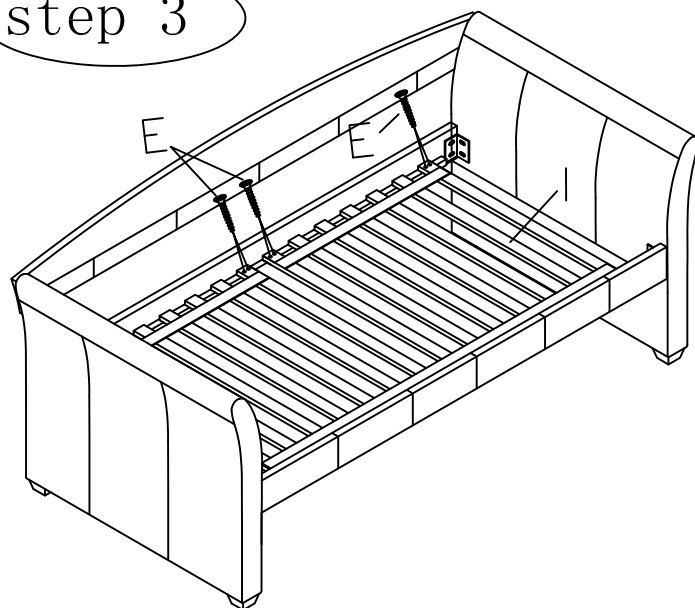


HARDWARE LIST							
A		ø5/16"X3/4"L	16PCS	D		#8X1-1/4"L	16PCS
B		ø5/16"Xø3/4"	16PCS	E		60X130mm	4PCS
C		ø5/16"	1PC				

F

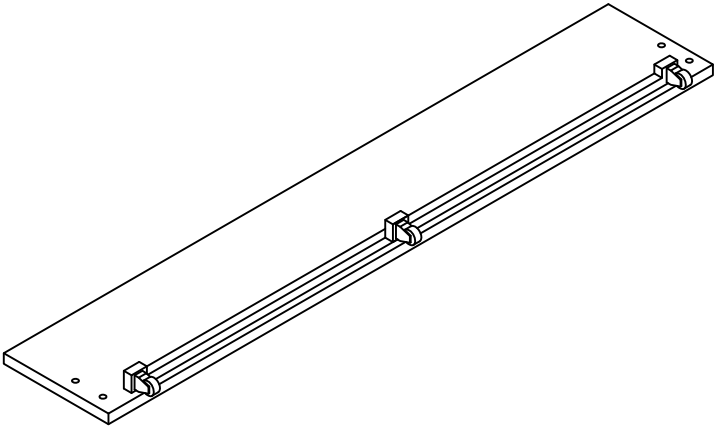


1PC

G

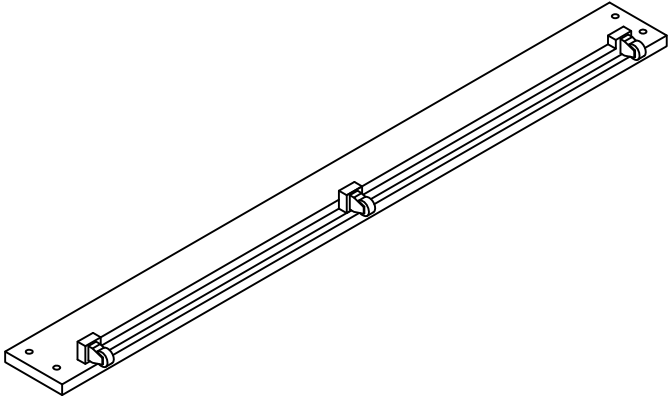


1PC

H

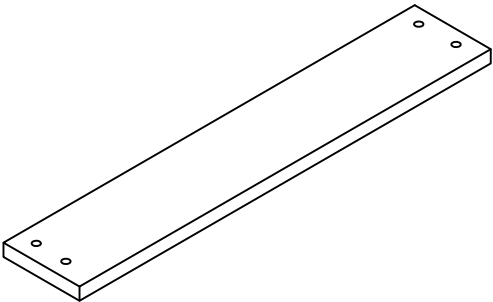


2PCS


I

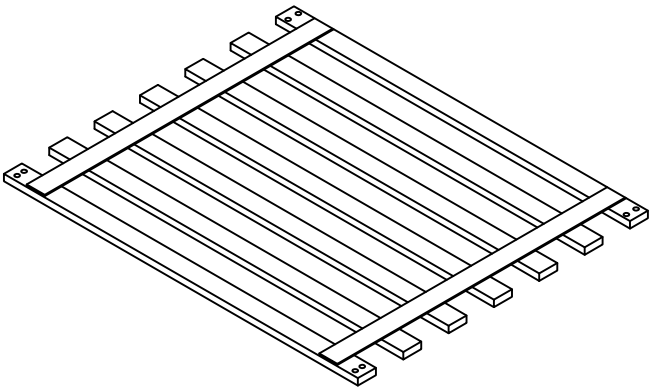

2PCS

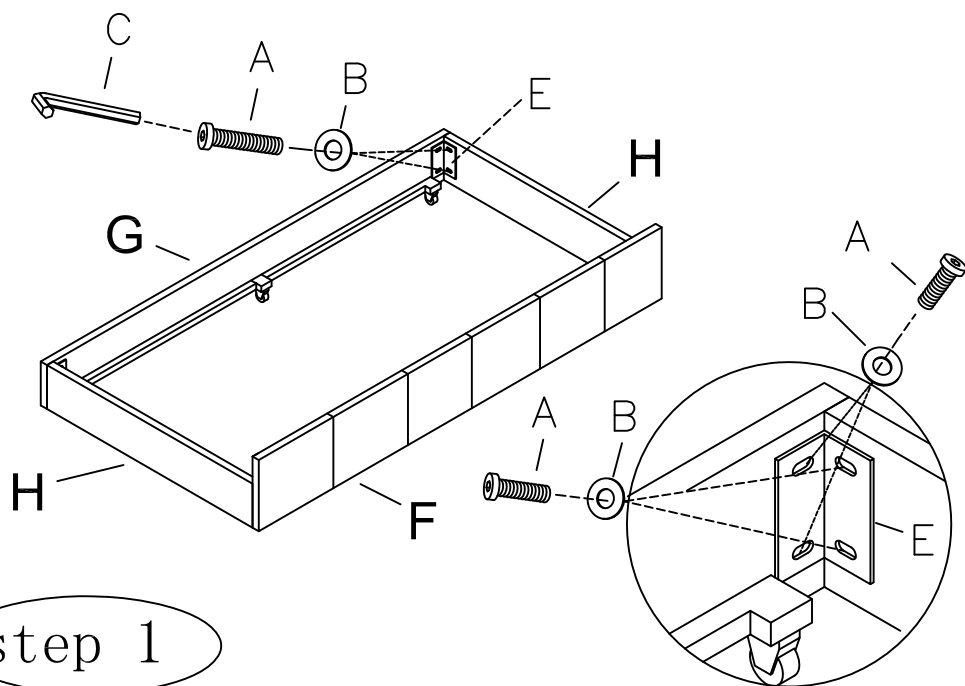

step 1

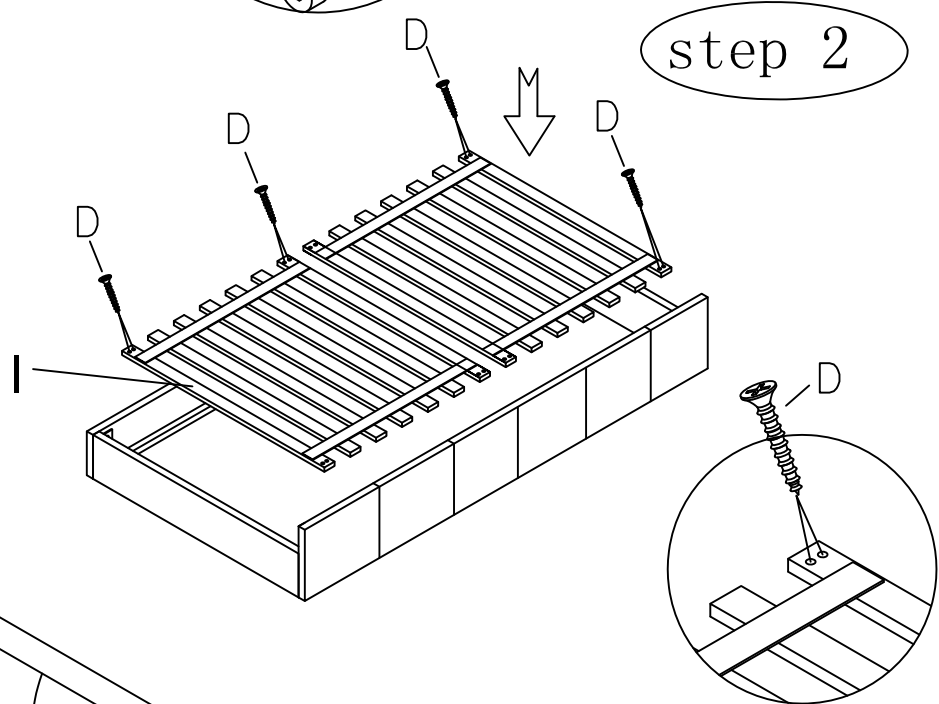

step 2

