


ASSEMBLY INSTRUCTIONS

SADDLEBACK STOOL

SADDLEBACK COUNTER HEIGHT STOOL


SADDLEBACK BAR HEIGHT STOOL

A Seat




1pc

B Leg Frame

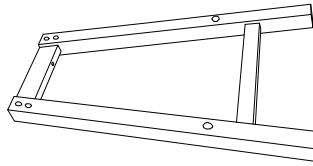


2pcs

C Stretcher



2pcs

D JCBC/W
M7 x 50mm



8pcs

E Allen Key
M4 x 110mm




1pc

F Wooden Button




8pcs

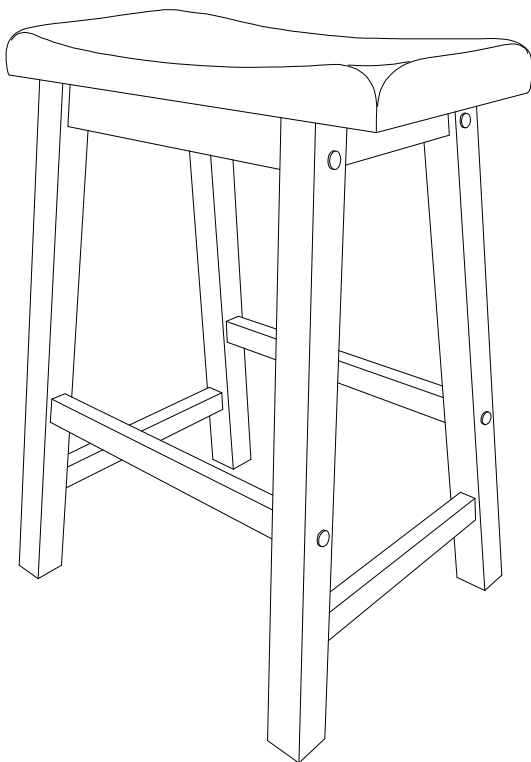


This page lists all the contents included in the box. Please take the time to identify the hardware as well as the individual components to this product. As you unpack and prepare for assembly, place the contents on a carpeted or padded area to protect them from damage.


- 1 Place Seat (A) upside down on a smooth carpeted surface. Attach Leg Frame (B) to the bottom of Seat (A), aligning the holes, and secure it with JCBC/W (D) using Allen Key (E).

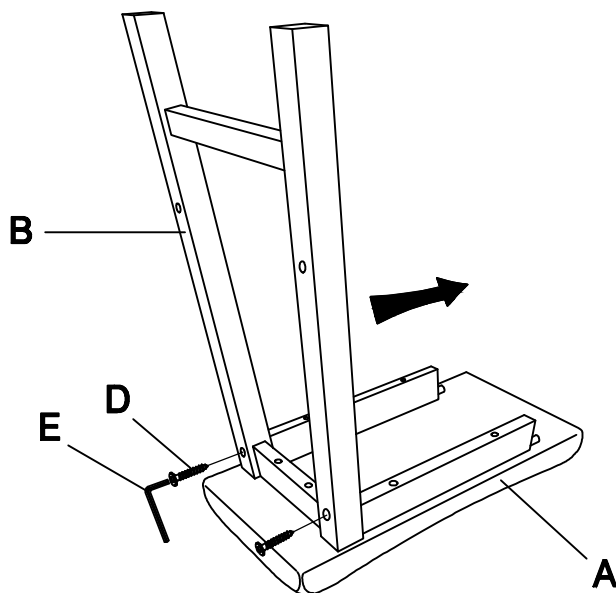


- 2 Insert Stretcher (C) into Leg Frame (B) and secure with JCBC/W (D) using Allen Key (E).

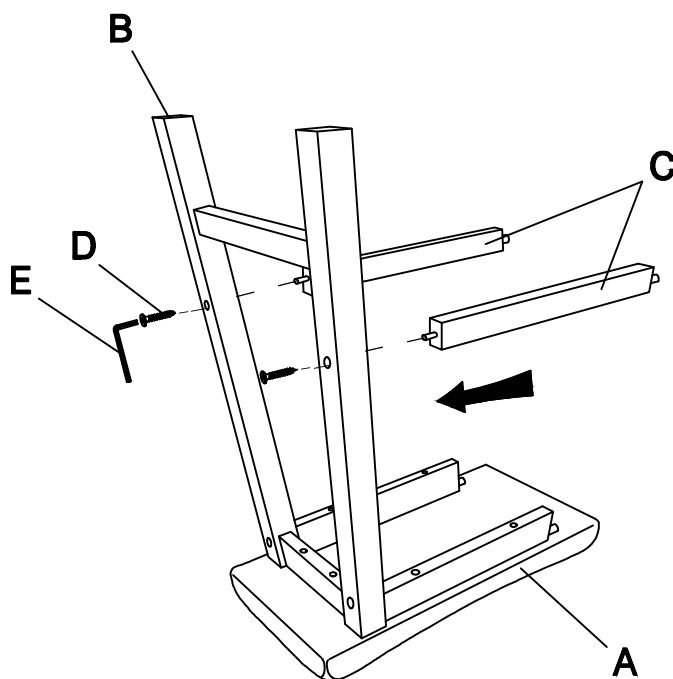

- 3** Attach the other Leg Frame (B) to Seat (A) with JCBC/W (D) using Allen Key (E). Do not fully tighten the JCBC/W (D). Insert Stretcher (C) and ensure all holes are aligned. Then, tighten all JCBC/W (D) securely.

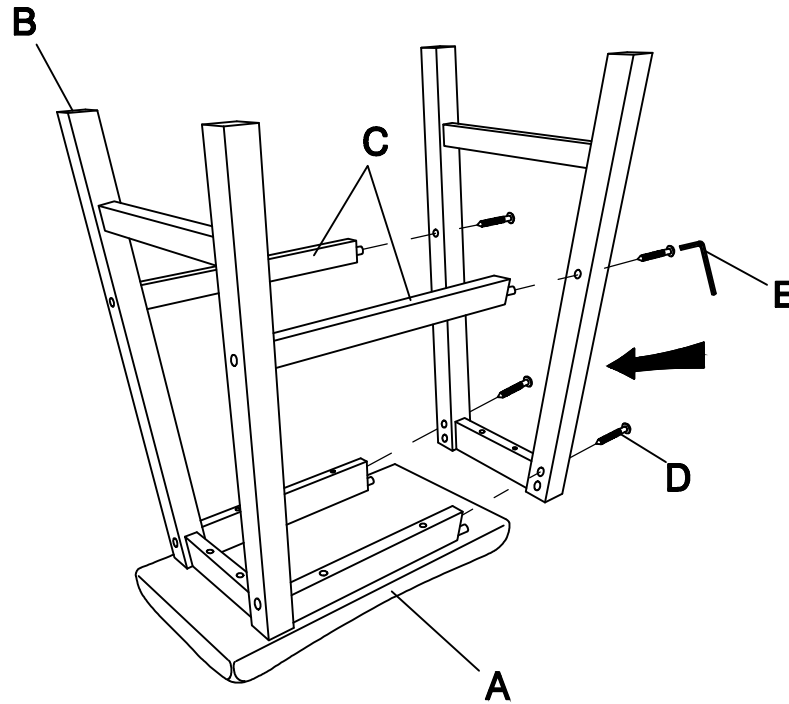

- 4** Insert Wooden Button (F) into the holes of Leg Frame (B).

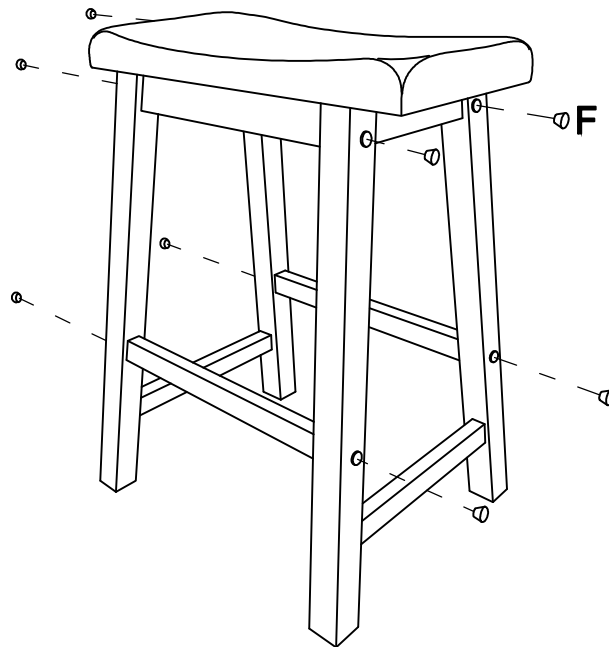

Cleaning & Care

Treat surfaces with care. Surfaces are resistant to scratches but are not scratch resistant. Clean surfaces with a dry or damp soft cloth. Do not use abrasive cleaners. Hardware may loosen over time. Periodically check that all connections are tight.