
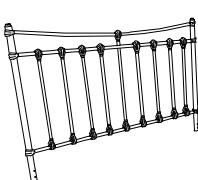
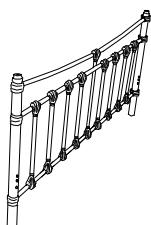





# ASSEMBLY INSTRUCTION


## METAL EASTERN KING BED

A	Headboard	B	Footboard	C	Side rail	D	Slats
							
1PC		1PC		2PCS		3PCS	
E	Extension leg	F	Support leg	G	Bolt with ball	H	Adjustable bolt M6*25mm
							
2PCS		6PCS		4PCS		6PCS	
I	Bolt M8*50mm	J	Bolt M6*15mm	K	Nut M8	L	Flat washer
							
12PCS		24PCS		8PCS		12PCS	
M	Allen wrench 4*4mm	N	Wrench				
							
1PC		1PC					

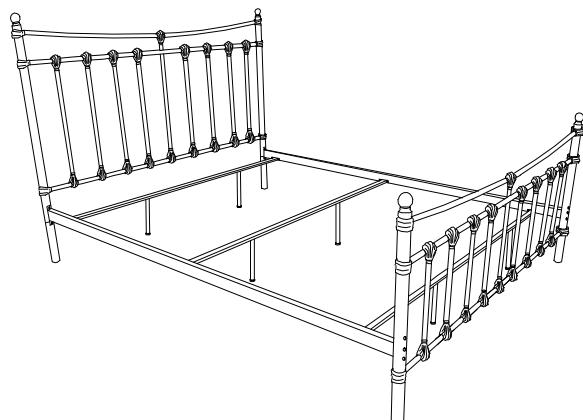


This page lists all the contents included in the box. Please take the time to identify the hardware as well as the individual components to this product. As you unpack and prepare for assembly, place the contents on a carpeted or padded area to protect them from damage.


- 
- 1** Insert the Extension leg (E) into the Headboard (A).

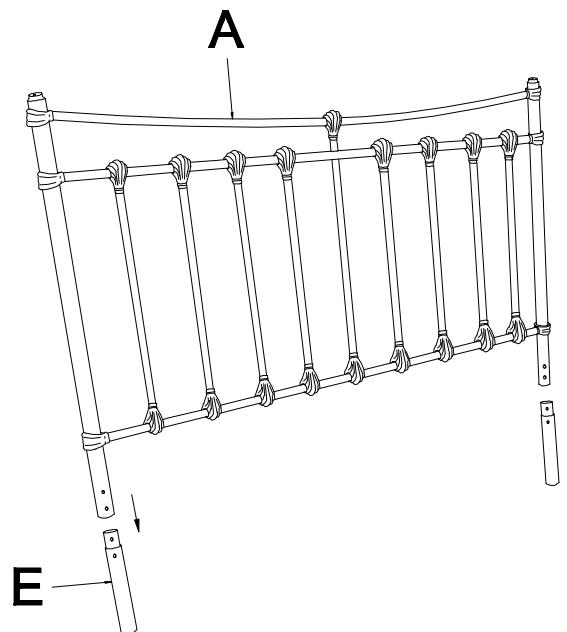


- 
- 2** Assemble 4 pcs Bolt with ball (G) to the Headboard (A) and Footboard (B). Assemble the Side rail (C) to the Headboard (A) and Footboard (B) with 12 pcs Bolt (I), 8 pcs Nut (K) and 8 pcs Flat washer (L) by Allen wrench (M) and Wrench (N).

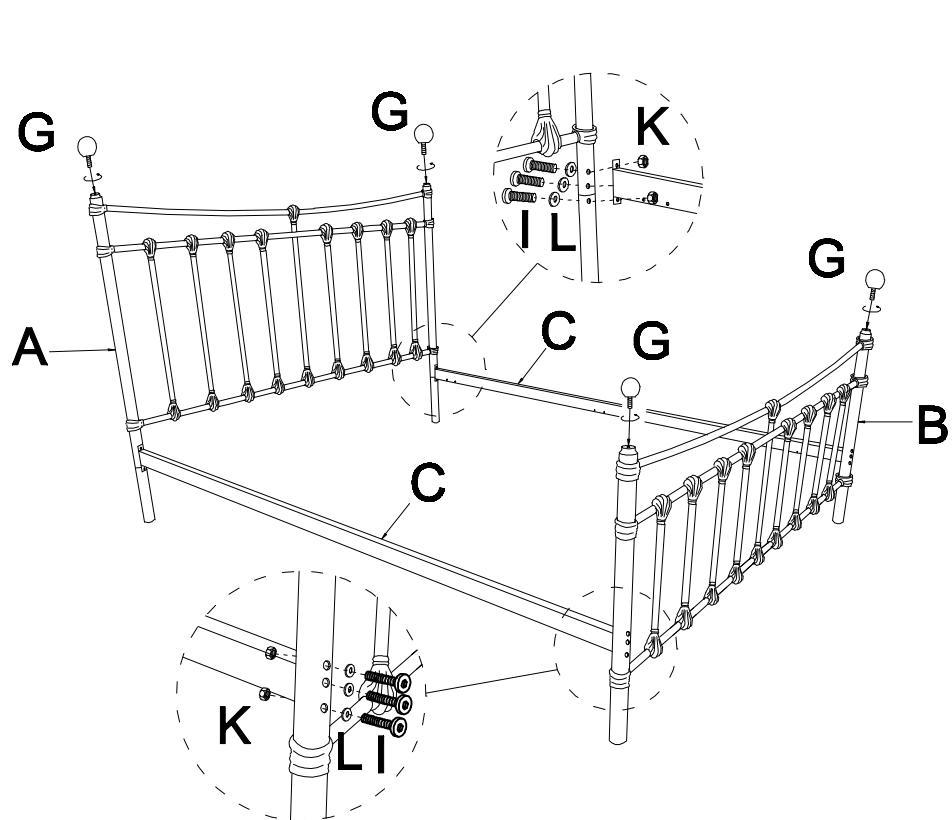

- 3** Assemble 6 pcs Support leg (F) to the Slats (D) with 12 pcs Bolt (J) and 6 pcs Adjustable bolt (H) by Allen wrench (M).

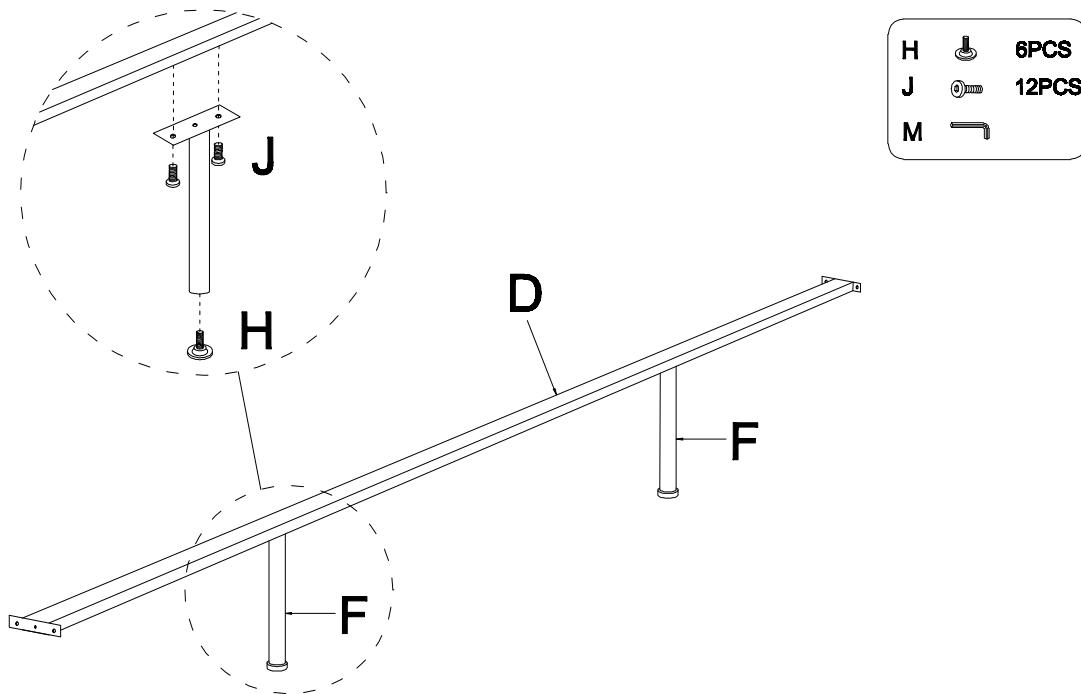

- 4** Assemble the Slats (D) with 12 pcs Bolt (J) to the Side rail (C) by Allen wrench (M).




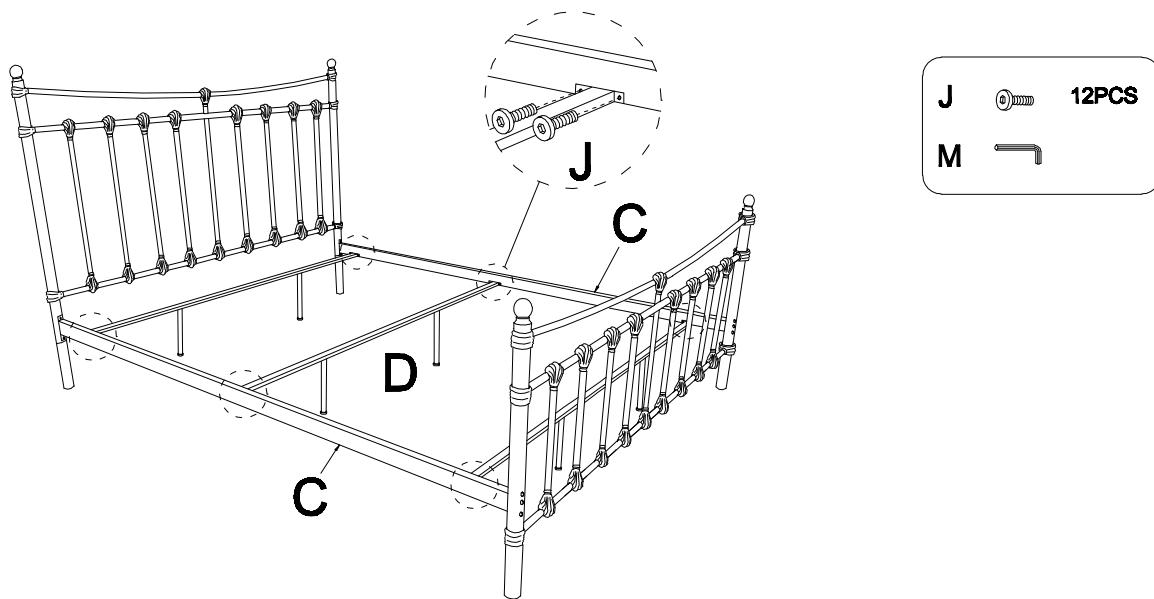


#### Cleaning & Care


Treat surface with care. Surface is resistant to scratches but is not scratch resistant. Clean surfaces with a dry or damp soft cloth. Do not use abrasive cleaners. Hardware may loosen over time. Periodically check that all connections are tight.

# ASSEMBLY INSTRUCTION


## METAL FULL BED

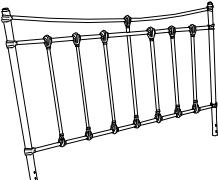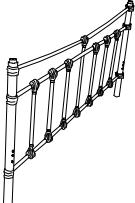A	Headboard	B	Footboard	C	Side rail	D	Slats
	1PC		1PC		2PCS		3PCS
	2PCS		3PCS		4PCS		3PCS
	12PCS		18PCS		8PCS		12PCS
	1PC		1PC				


This page lists all the contents included in the box. Please take the time to identify the hardware as well as the individual components to this product. As you unpack and prepare for assembly, place the contents on a carpeted or padded area to protect them from damage.

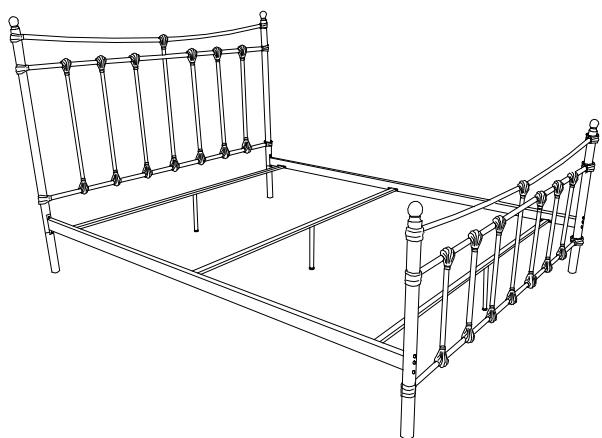


- 
- 1** Insert the Extension leg (E) into the Headboard (A).

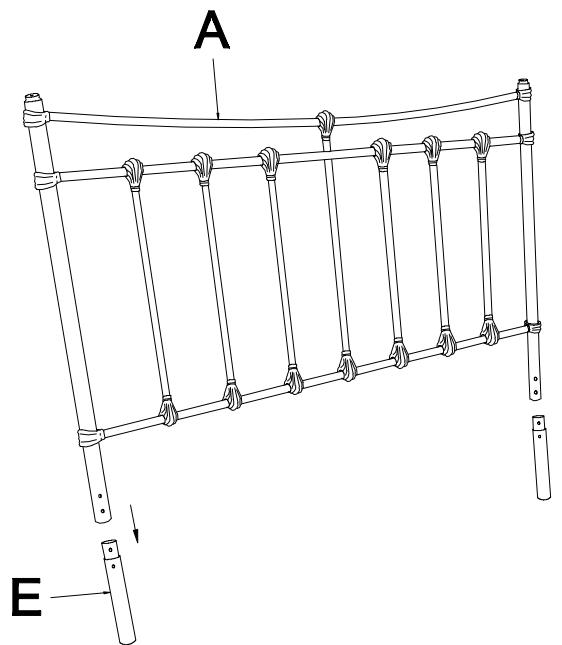


- 
- 2** Assemble 4 pcs Bolt with ball (G) to the Headboard (A) and Footboard (B). Assemble the Side rail (C) to the Headboard (A) and Footboard (B) with 12 pcs Bolt (I), 8 pcs Nut (K) and 8 pcs Flat washer (L) by Allen wrench (M) and Wrench (N).

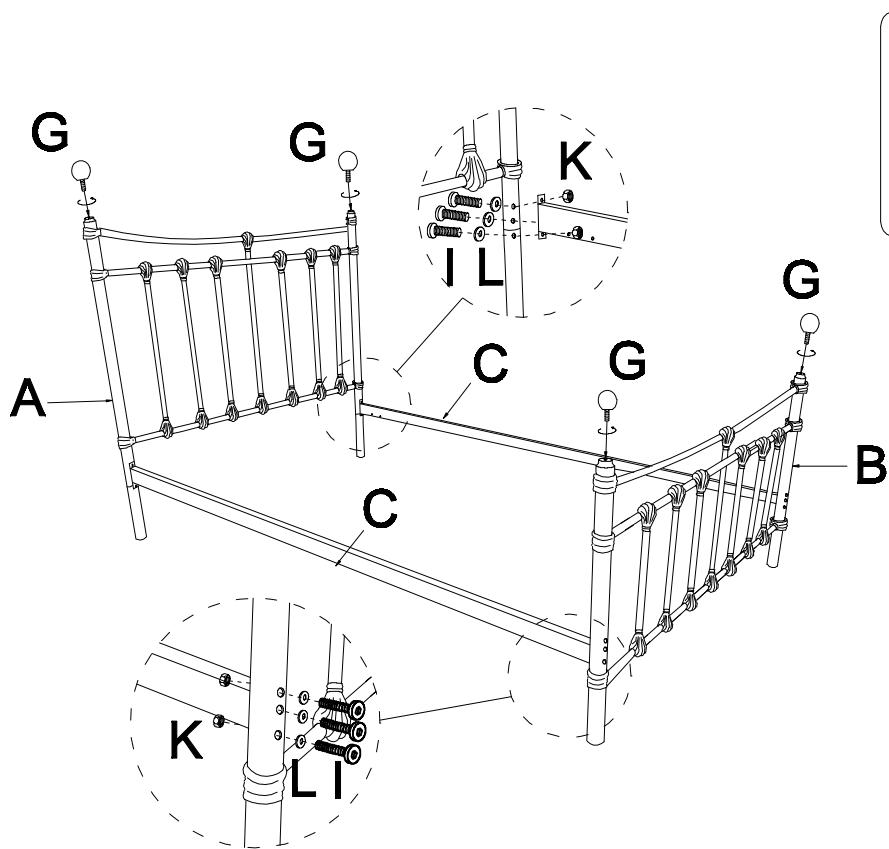

- 3** Assemble 3 pcs Support leg (F) to the Slats (D) with 6 pcs Bolt (J) and 3 pcs Adjustable bolt (H) by Allen wrench (M).

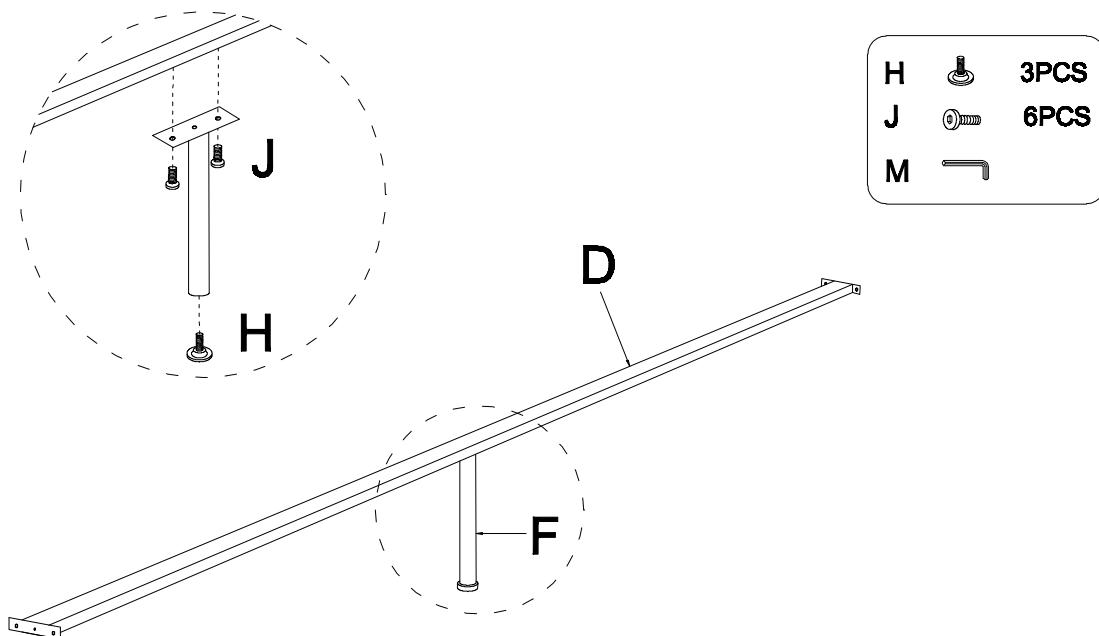

- 4** Assemble the Slats (D) with 12 pcs Bolt (J) to the Side rail (C) by Allen wrench (M).

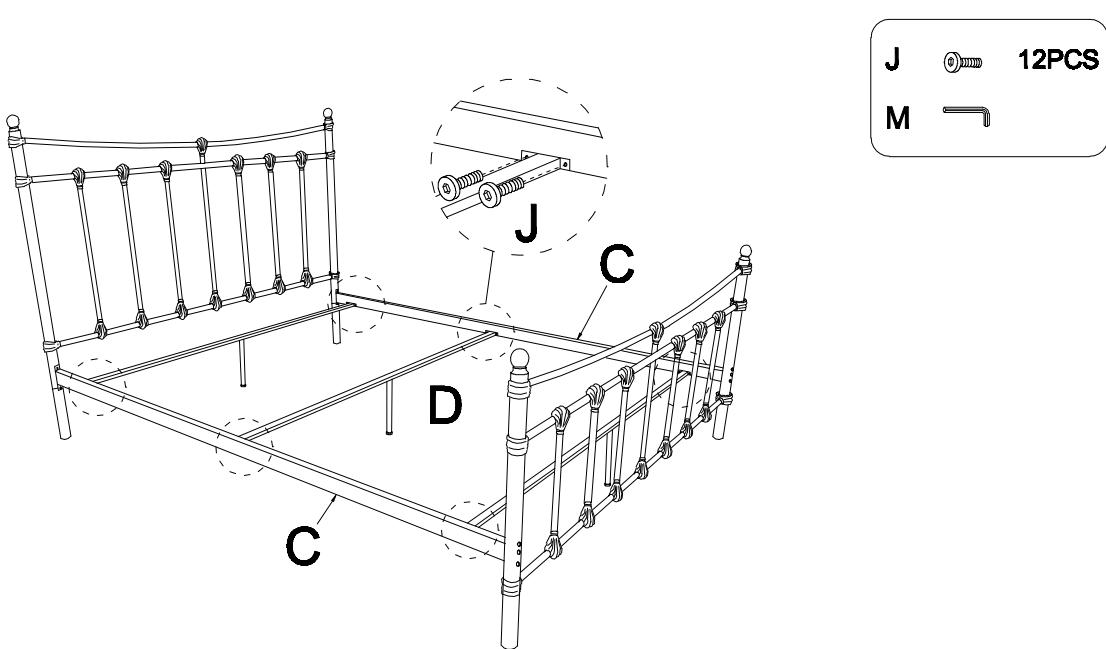


#### Cleaning & Care

Treat surface with care. Surface is resistant to scratches but is not scratch resistant. Clean surfaces with a dry or damp soft cloth. Do not use abrasive cleaners. Hardware may loosen over time. Periodically check that all connections are tight.

# ASSEMBLY INSTRUCTION


## METAL QUEEN BED

**A** Headboard

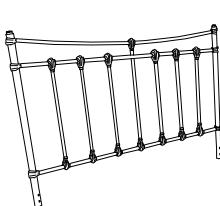

1PC

**B** Footboard

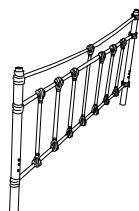


1PC

**C** Side rail




2PCS

**D** Slats




3PCS

**E** Extension leg



2PCS

**F** Support leg



3PCS

**G** Bolt with ball




4PCS

**H** Adjustable bolt  
M6\*25mm




3PCS

**I** Bolt  
M8\*50mm



12PCS

**J** Bolt  
M6\*15mm



18PCS

**K** Nut  
M8



8PCS

**L** Flat washer




12PCS

**M** Allen wrench  
4\*4mm




1PC

**N** Wrench




1PC


This page lists all the contents included in the box. Please take the time to identify the hardware as well as the individual components to this product. As you unpack and prepare for assembly, place the contents on a carpeted or padded area to protect them from damage.

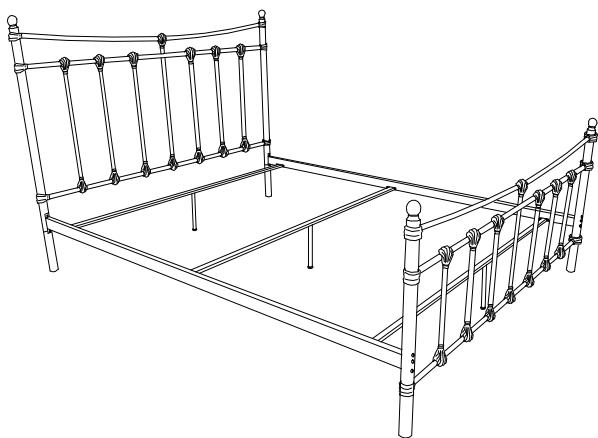

- 
- 1** Insert the Extension leg (E) into the Headboard (A).


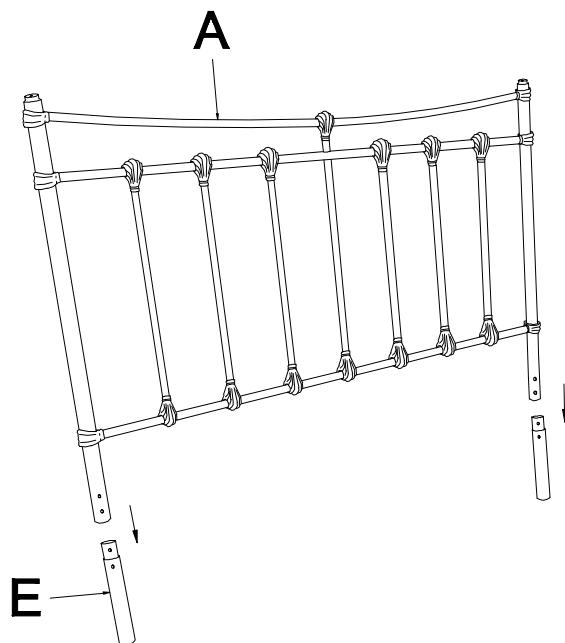


- 
- 2** Assemble 4 pcs Bolt with ball (G) to the Headboard (A) and Footboard (B). Assemble the Side rail (C) to the Headboard (A) and Footboard (B) with 12 pcs Bolt (I), 8 pcs Nut (K) and 8 pcs Flat washer (L) by Allen wrench (M) and Wrench (N).

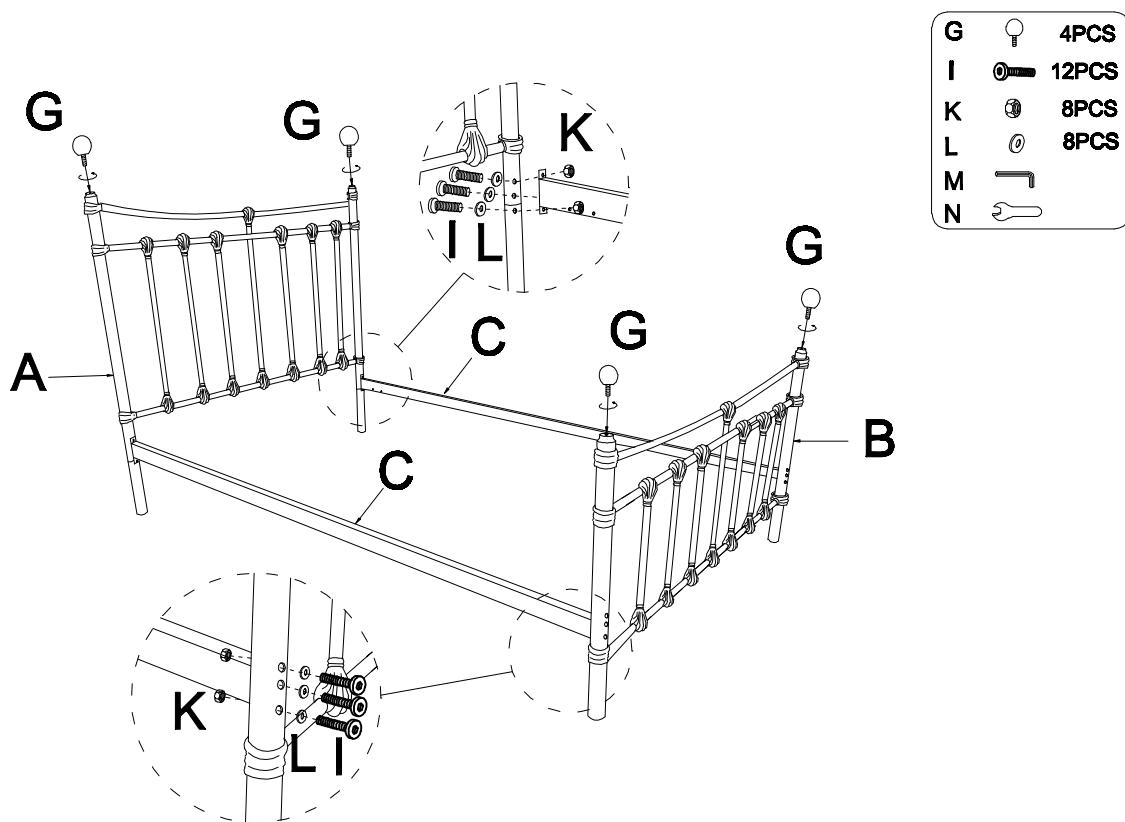

**3**

Assemble 3 pcs Support leg (F) to the Slats (D) with 6 pcs Bolt (J) and 3 pcs Adjustable bolt (H) by Allen wrench (M).

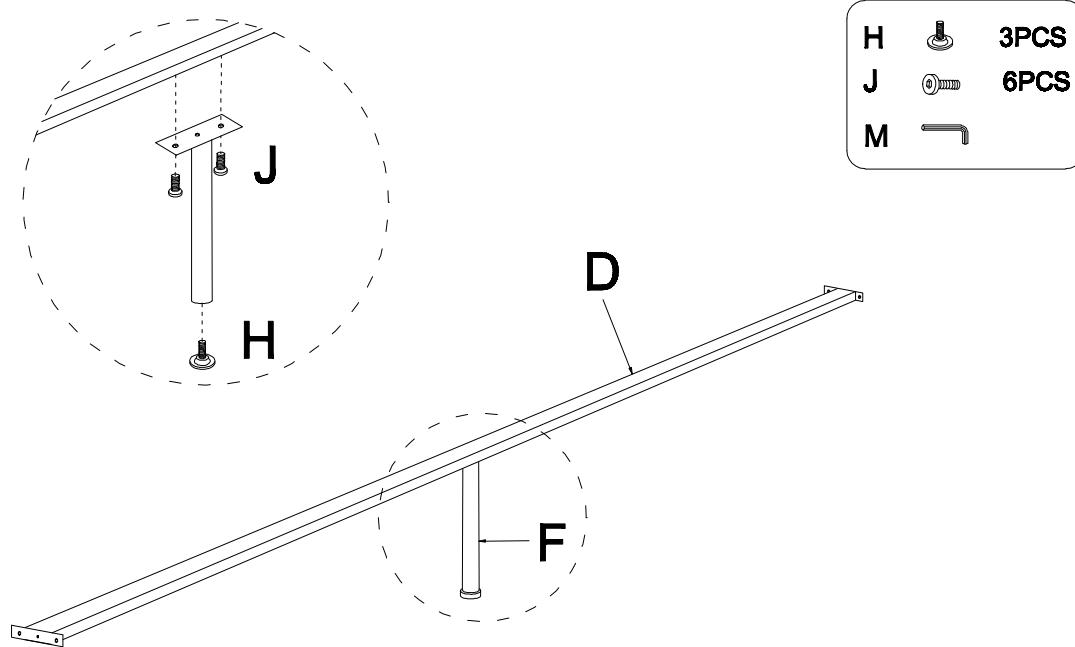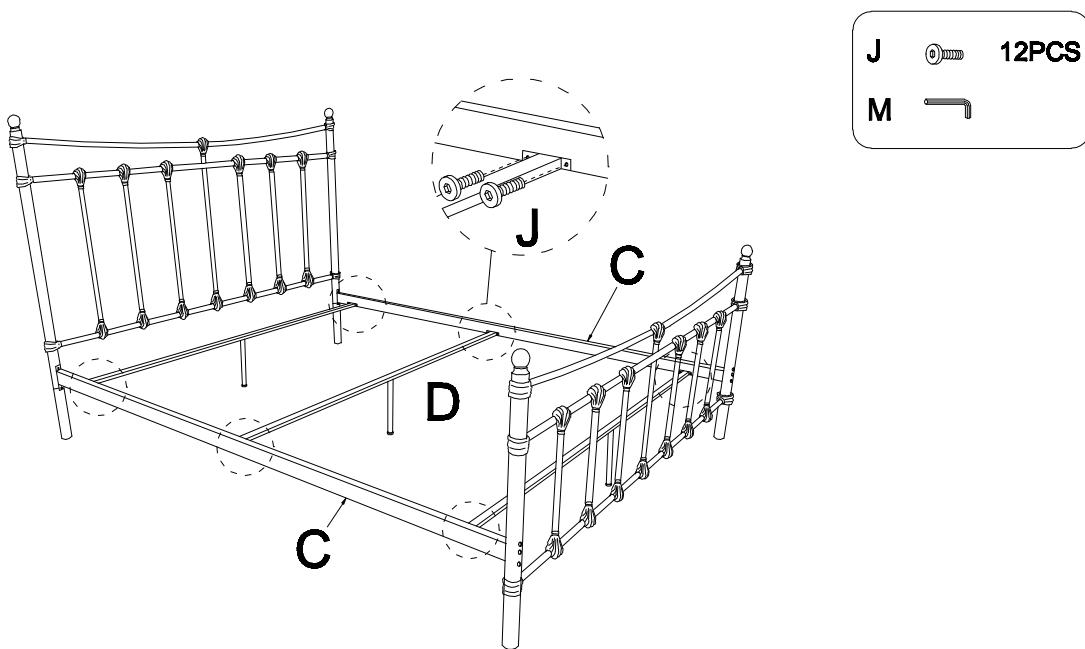**4** Assemble the Slats (D) with 12 pcs Bolt (J) to the Side rail (C) by Allen wrench (M).

#### Cleaning & Care

Treat surface with care. Surface is resistant to scratches but is not scratch resistant. Clean surfaces with a dry or damp soft cloth. Do not use abrasive cleaners. Hardware may loosen over time. Periodically check that all connections are tight.