


## ASSEMBLY INSTRUCTIONS


T162


	HARDWARE LIST			
A	<b>©</b>	WASHER	Ø 5/16″ <b>*22</b>	16PCS
В	0	LOCK WASHER	Ø <b>5/16</b> "	16PCS
С		BOLT	Ø 5/16"*3/4"	16PCS
D		WRENCH	5mm	1PC

STEP 1

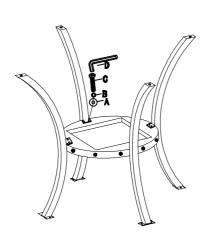

STEP 2

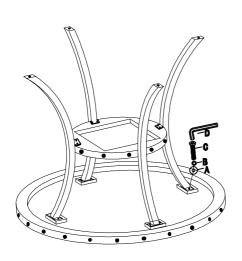

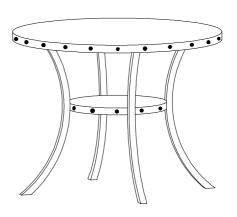

Do not tighten screws until completely assembled