



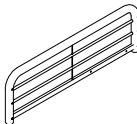
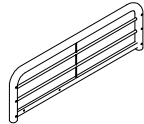


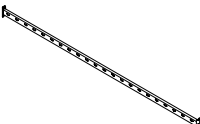


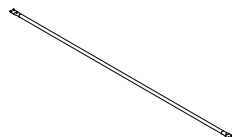














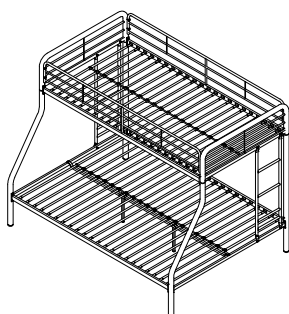


ASSEMBLY INSTRUCTION

TWIN FULL BUNK BED

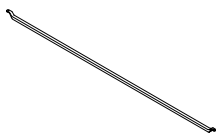
A Left Front Post	B Left Rear Post	C Right Rear Post	D Right Front Post
			
E 1PC Left Guardrail	F 1PC Right Guardrail	G 1PC Support Bar	H 1PC Upper Rail
			
I 1PC Lower Rail	J 1PC Front / Rear Guardrail	K 2PCS Upper Slat	L 2PCS Lower Slat
			
M 2PCS Slat Connector	N 2PCS Ladder	O 22PCS Support Leg	P 22PCS Slat Spacer
			
Q 88PCS Center Support Rail	R 2PCS Bolt with Flat Washer 1/4" x 35mm, 1/4"	S 2PCS Bolt 1/4" x 27mm	T 42PCS Bolt 1/4" x 16mm
			
U 1PC Bolt with Lock Washer and Flat Washer 5/16" x 22mm, 5/16", 5/16"	V 8PCS Bolt 1/4" x 60mm	W 8PCS Screw M4 x 14mm	X 12PCS Nut 1/4"
			
Y 16PCS Wrench 1/4" x 5/16"	Z 2PCS L-Allen Key 4mm		
			
1PC	1PC		




This page lists all the contents included in the box. Please take the time to identify the hardware as well as the individual components to this product. As you unpack and prepare for assembly, place the contents on a carpeted or padded area to protect them from damage.

1


Attach Support Bar (G) to Left Front Post (A) and Left Rear Post (B) using Bolt (T) with L-Allen Key (Z).

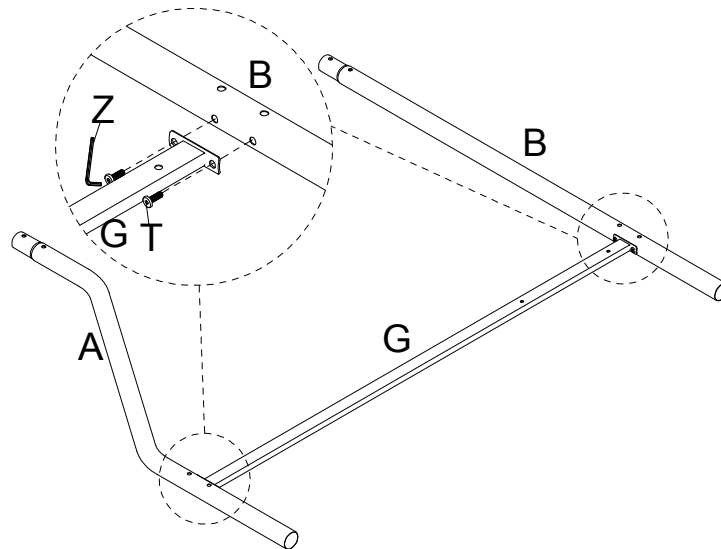**2**

Insert Left Guardrail (E) to Left Front Post (A) and Left Rear Post (B).

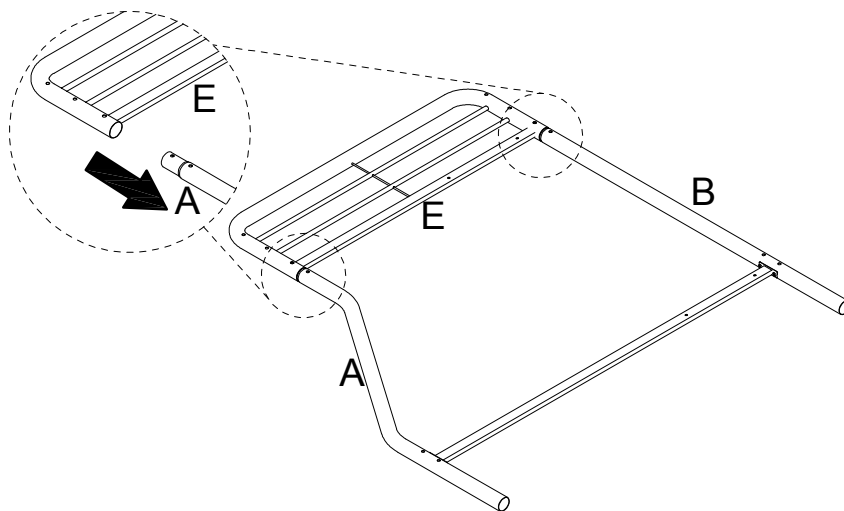
**3**

Attach Support Bar (G) to Right Rear Post (C) and Right Front Post (D) using Bolt (T) with L-Allen Key (Z).

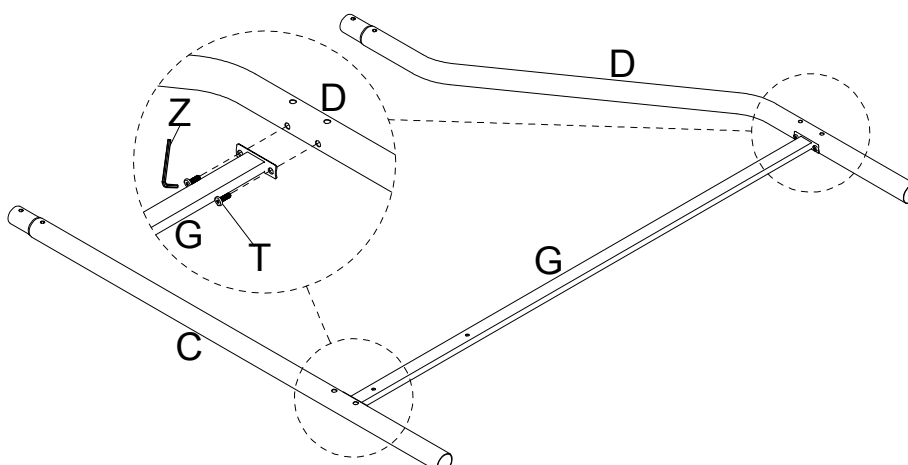


4

Insert Right Guardrail (F) to Right Rear Post (C) and Right Front Post (D).

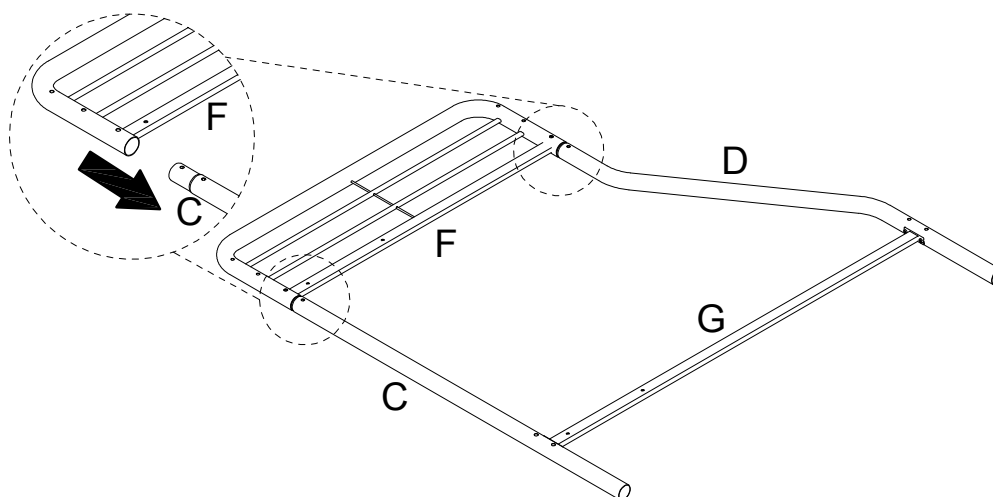


5

Attach Upper Rail (H) and Lower Rail (I) to Left Front Post (A), Left Rear Post (B), Right Rear Post (C), Right Front Post (D), Left Guardrail (E) and Right Guardrail (F) using Bolt with Lock Washer and Flat Washer (U) with L-Allen Key (Z).

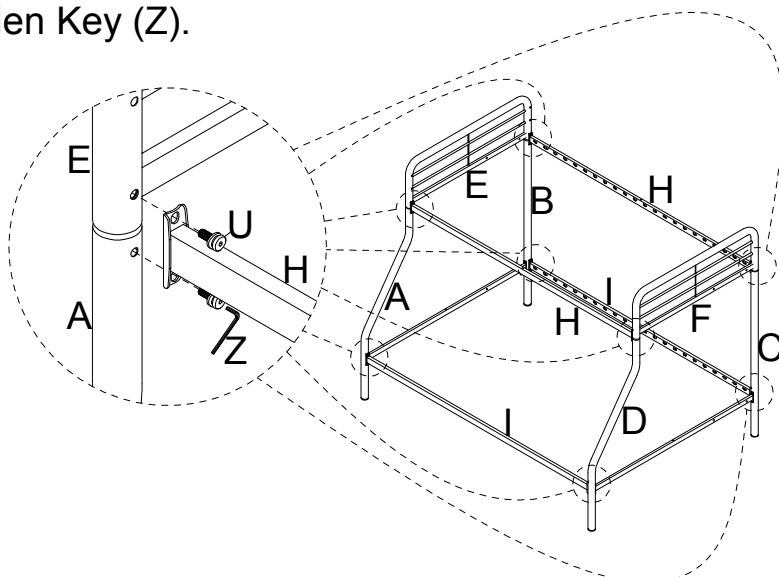


6

Attach Front / Rear Guardrail (J) to Left Guardrail (E) and Right Guardrail (F) using Bolt with Flat Washer (R) with L-Allen Key (Z).

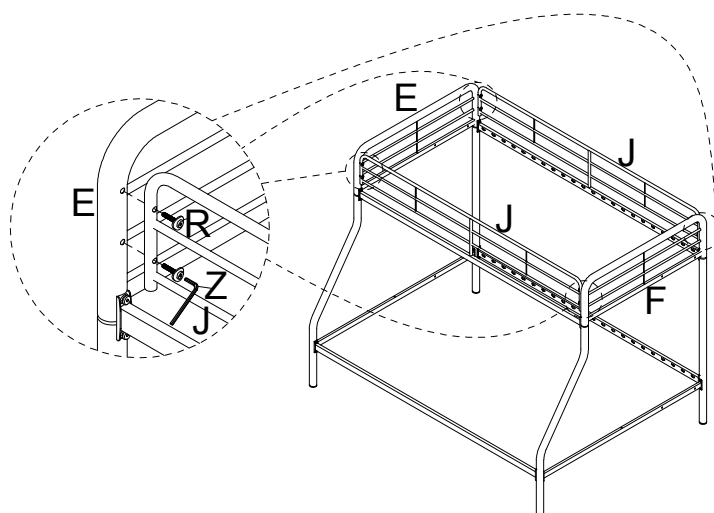


7

Attach Front / Rear Guardrail (J) to Upper Rail (H) using Bolt (V) with L-Allen Key (Z).

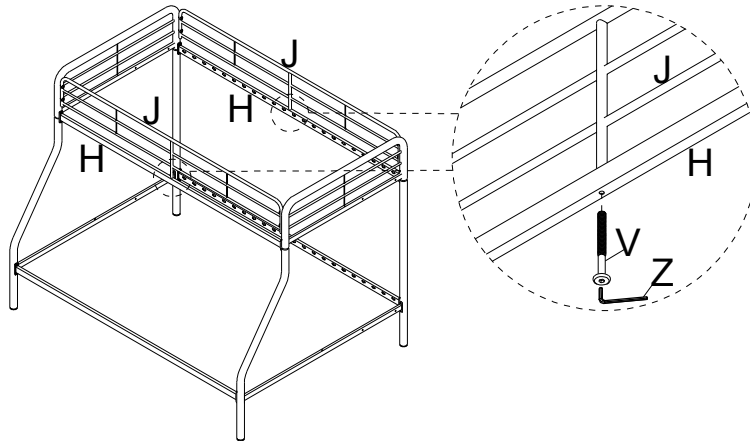


8

Attach Support Leg (O) to Center Support Rail (Q) using Bolt (T) with L-Allen Key (Z).

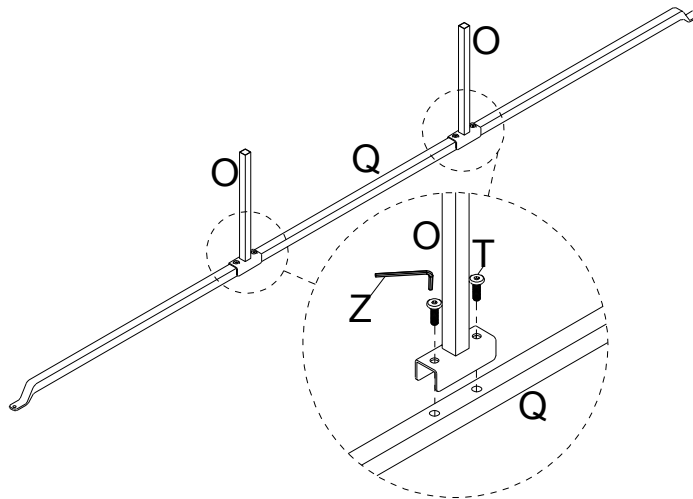


9

Attach Center Support Rail (Q) to Support Bar (G) using Screw (W) with Screwdriver (Not Provided).

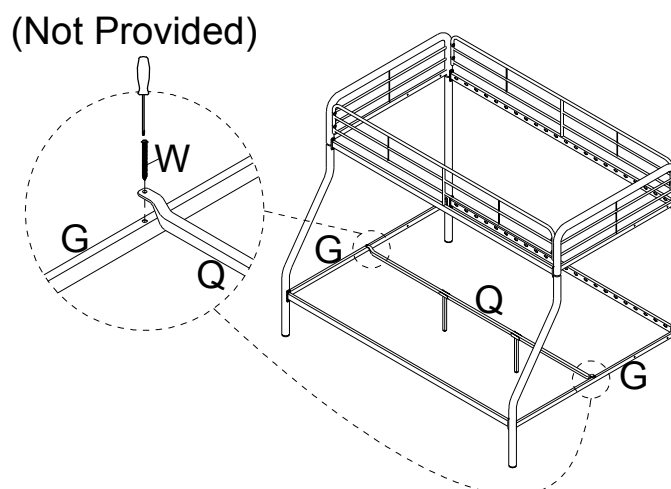


10


Attach Ladder (N) to Support Bar (G), Left Guardrail (E) and Right Guardrail (F) using Bolt (S) and Nut (X) with L-Allen Key (Z) and Wrench (Y).

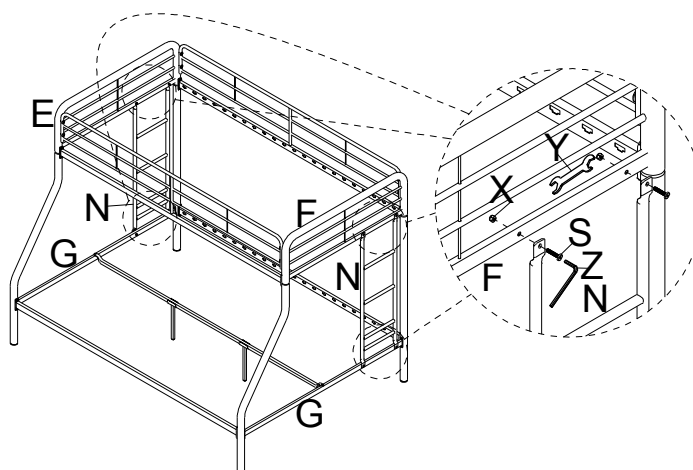**11**

Insert Upper Slat (K) into Upper Rail (H) and insert Lower Slat (L) into Lower Rail (I) as shown. Then lock Slat Connector (M) to fix Upper Slat (K) and Lower Slat (L).

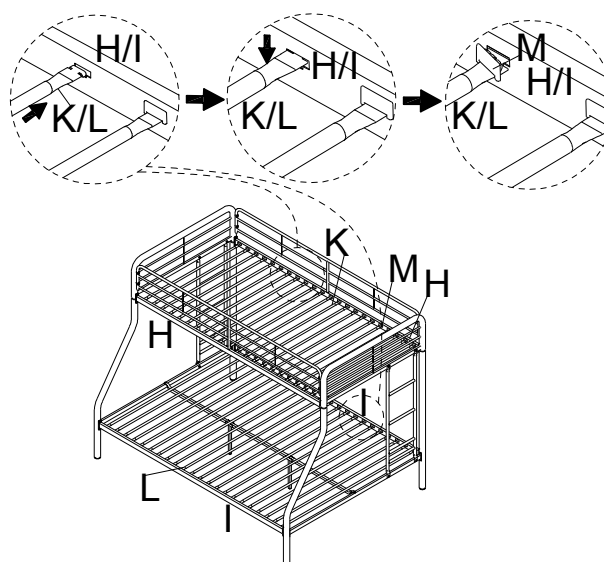**12**

Connect Upper Slat (K) together and Lower Slat (L) together using Slat Spacer (P) as shown.

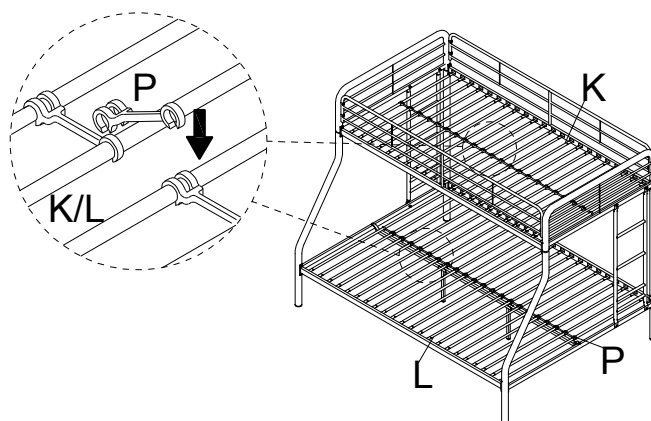

Cleaning & Care

Treat surfaces with care. Surfaces are resistant to scratches but are not scratch resistant. Clean surfaces with a dry or damp soft cloth. Do not use abrasive cleaners. Hardware may loosen over time. Periodically check that all connections are tight.

IMPORTANT NOTICE

FOR TWIN/FULL BUNK BED:

- Use only mattress which is 74" long and 38" wide on upper bunk.
- Use only mattress which is 74" long and 53" wide on lower bunk.
- Ensure thickness of mattress does not exceed 6" and mattress surface is at least 5" below upper edge of guardrails.

FOR TWIN/TWIN BUNK BED:

- Use only mattress which is 74" long and 38" wide on upper bunk.
- Use only mattress which is 74" long and 38" wide on lower bunk.
- Ensure thickness of mattress does not exceed 6" and mattress surface is at least 5" below upper edge of guardrails.

SAFETY WARNING

- Follow the warnings on the upper bunk and carton. Do not remove warning label from bed.
- Always use the recommended size mattress or mattress support, or both, to help prevent the likelihood of entrapment or falls.
- Surface of mattress must be at least 5" (127mm) below the upper edge of guardrails.
- Do not allow children under 6 years of age to use the upper bunk.
- Periodically check and ensure that the guardrail, ladder, and other components are in their proper position, free from damage, and that all connectors are tight.
- Do not allow horseplay on or under the bed and prohibit jumping on the bed.
- Prohibit more than one person on the upper bunk.
- Always use the ladder for entering and leaving the upper bunk.
- Do not use substitute parts – Contact the manufacturer or dealer for replacement parts.
- Replacement parts, including additional guardrails, may be obtained from any of our (Top-Line Furniture Corporation) dealers.
- Use of a night light may provide added safety precaution for a child using the upper bunk.
- Always use guardrails on both long sides of the upper bunk. If the bunk bed will be placed next to the wall, the guardrail that runs the full length of the bed should be placed against the wall to prevent entrapment between the bed and the wall.
- The use of water or sleep flotation mattress is prohibited.
- **STRANGULATION HAZARD** – Never attach or hang items to any parts of the bunk bed that are not designed for use with the bed; for example, but not limited to hooks, belts and jump ropes.
- Keep these instructions for future reference.