
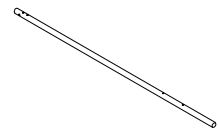
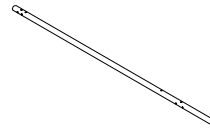
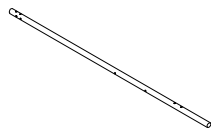


ASSEMBLY INSTRUCTION

QUEEN METAL CANOPY BED WITH UPHOLSTERED HB/FB

A LSF Headboard Post **B** RSF Headboard Post **C** LSF Footboard Post **D** RSF Footboard Post




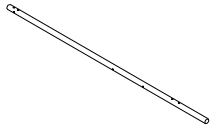


E 1PC Short Stretcher

F 1PC Headboard

G 1PC Long Stretcher

H 1PC Footboard


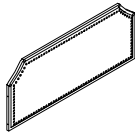



I 2PCS Front Rail Section

J 1PC Rear Rail Section

K 2PCS Rail Support Leg

L 1PC Front / Rear Support Bar


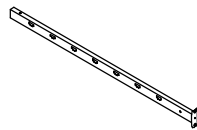
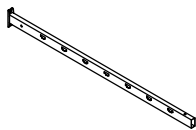


M 2PCS Center Support Bar

N 2PCS Center Rail

O 2PCS Center Support Leg

P 2PCS Front / Rear Support Leg




Q 1PC Slat

R 2PCS Slat Connector

S 1PC Finial

T 2PCS Bolt 1/4" x 16mm

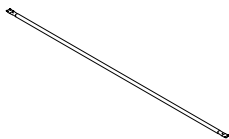

U 14PCS Bolt 5/16" x 19mm

V 28PCS Bolt 1/4" x 55mm

W 4PCS Bolt 5/16" x 55mm

X 8PCS Bolt 5/16" x 48mm



Y 8PCS Bolt 1/4" x 35mm

Z 8PCS Bolt 5/16" x 34mm

AA 10PCS L-Allen Key 4mm


5PCS



6PCS

2PCS


1PC

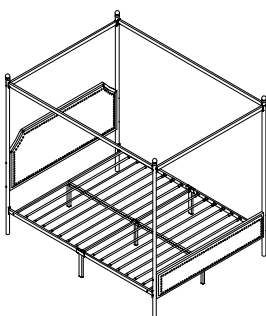

This page lists all the contents included in the box. Please take the time to identify the hardware as well as the individual components to this product. As you unpack and prepare for assembly, place the contents on a carpeted or padded area to protect them from damage.


1

Attach Finial (S) to Posts (A, B, C & D) by turning clockwise.

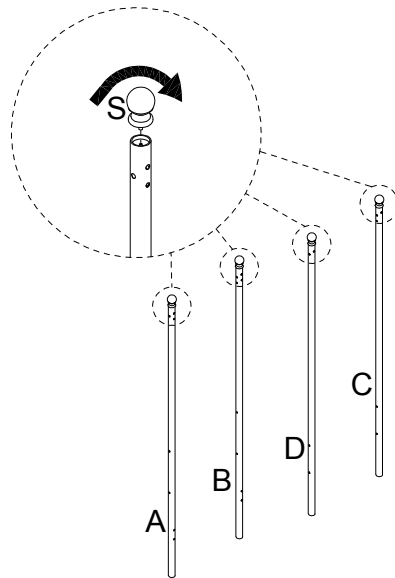


2

Attach Headboard (F) to LSF & RSF Headboard Post (A & B) and Footboard (H) to LSF & RSF Footboard Post (C & D) using Bolt (V) with L-Allen Key (AA). Then attach Short Stretcher (E) to Posts (A, B, C & D) using Bolt (W & T) with L-Allen Key (AA).

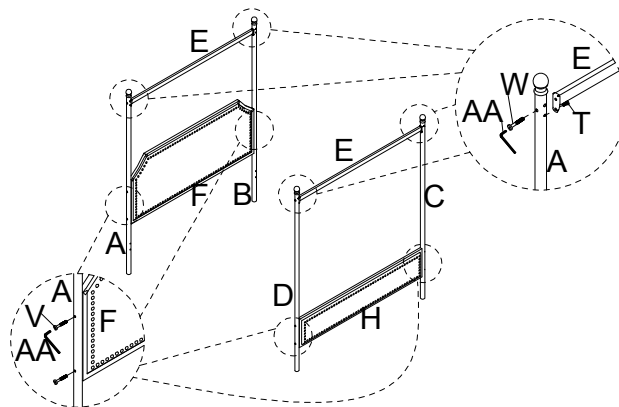


3

Attach Rail Support Leg (K) to Front & Rear Rail Section (I & J) using Bolt (X) with L-Allen Key (AA).

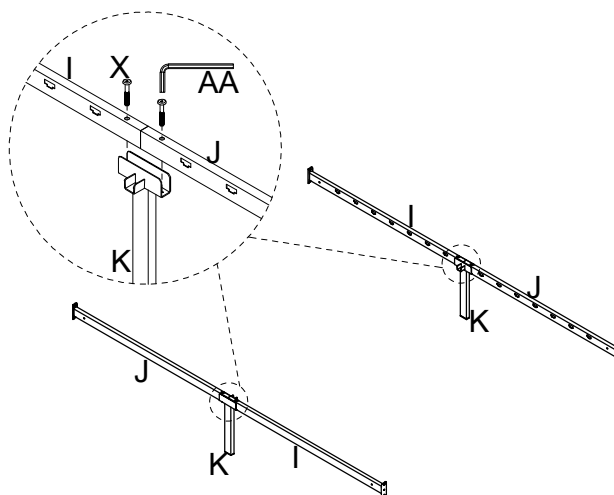


4

Attach Front & Rear Rail Section (I & J) to Posts (A, B, C & D) using Bolt (U) with L-Allen Key (AA). Then attach Long Stretcher (G) to Posts (A, B, C & D) using Bolt (W & T) with L-Allen Key (AA).

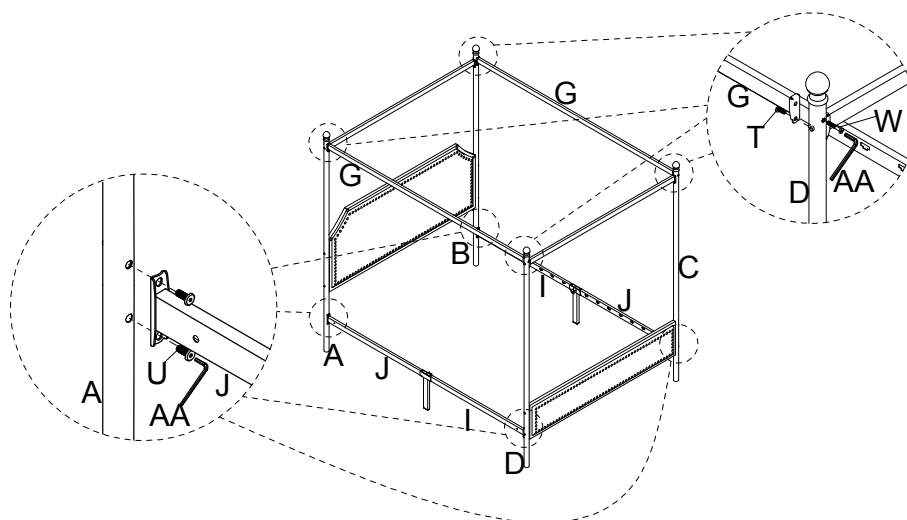


5

Attach Front / Rear Support Bar (L) to Front & Rear Rail Section (I & J) using Bolt (Y) with L-Allen Key (AA). Then attach Center Support Bar (M) to Rail Support Leg (K) using Bolt (Y) with L-Allen Key (AA).

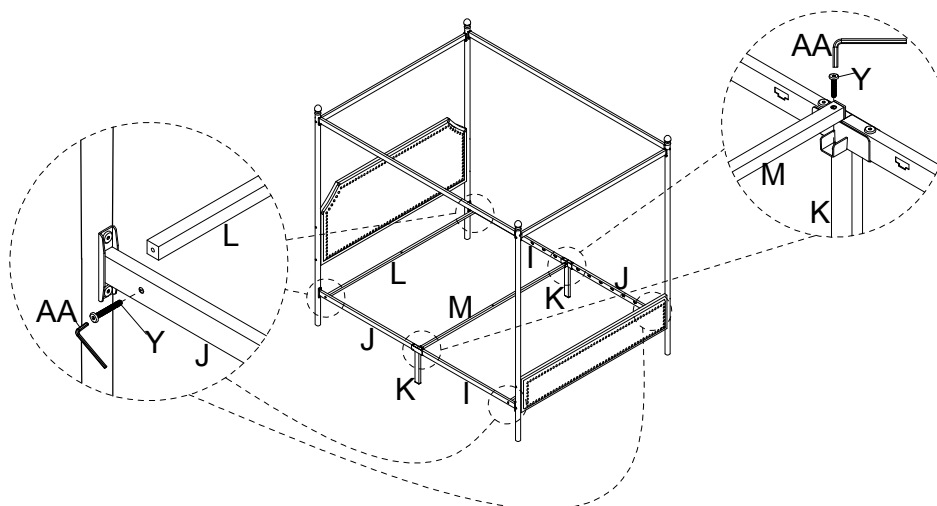


6

Attach Center Rail (N) and Front / Rear Support Leg (P) to Front / Rear Support Bar (L) using Bolt (W) with L-Allen Key (AA). Then attach Center Support Leg (O) to Center Rail (N) and Center Support Bar (M) using Bolt (Z & X) with L-Allen Key (AA).

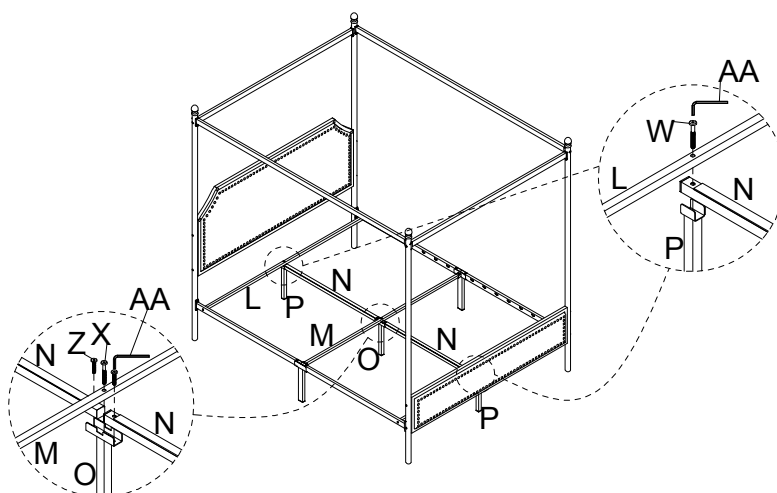

7

Insert Slat (Q) into Front & Rear Rail Section (I & J) as shown. Then lock Slat Connector (R) to fix Slat (Q).

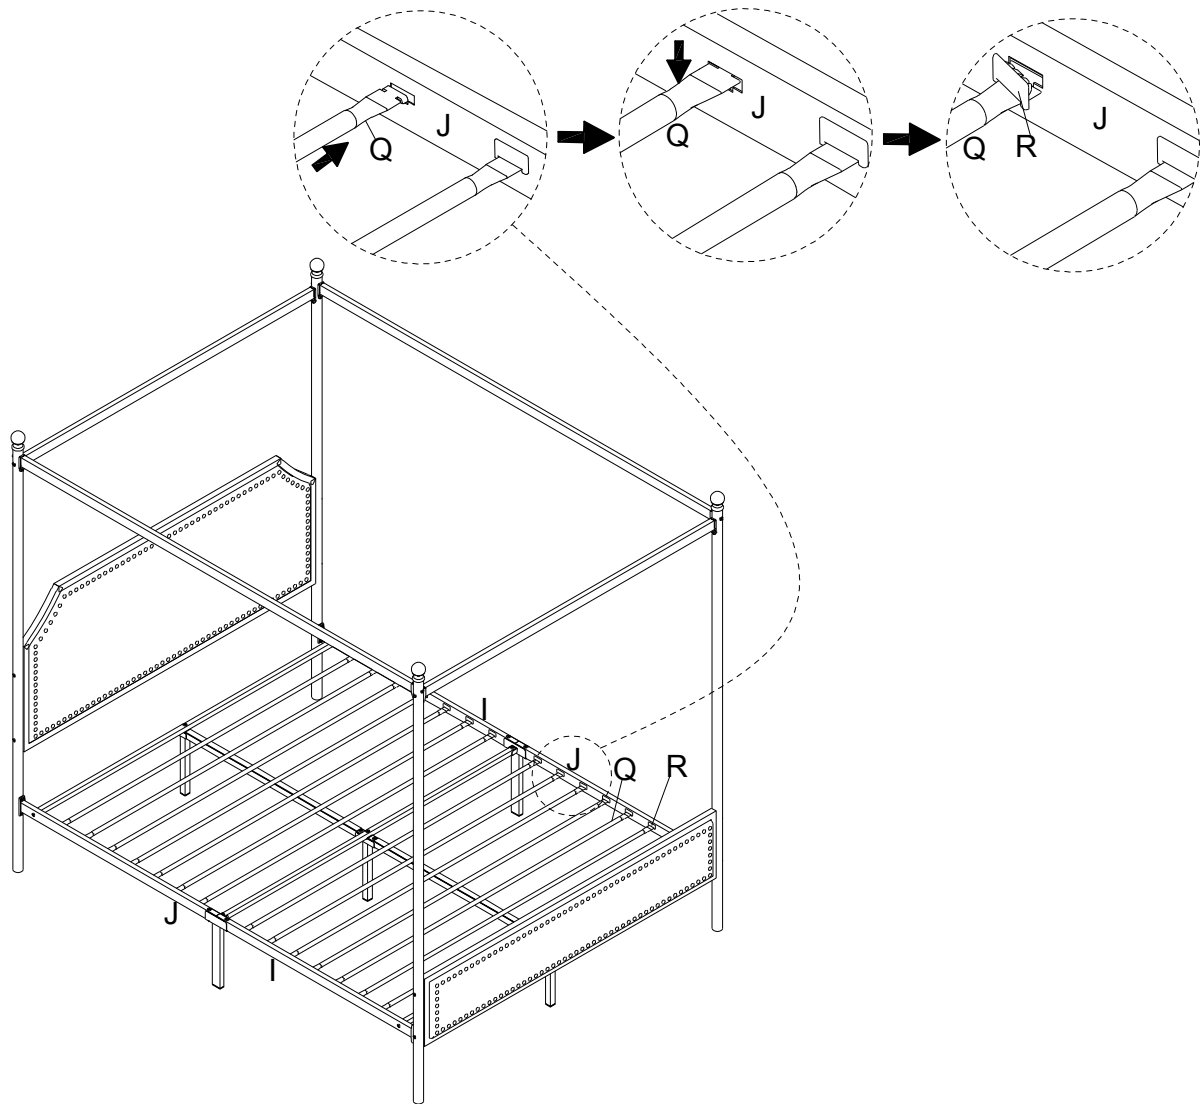

Cleaning & Care

Treat surfaces with care. Surfaces are resistant to scratches but are not scratch resistant. Clean surfaces with a dry or damp soft cloth. Do not use abrasive cleaners. Hardware may loosen over time. Periodically check that all connections are tight.