



888-230-2225 help@manhattancomfort.com






Baxter TV Stand 53.54


Model # 216BMC1, 216BMC12, 216BMC2, 216BMC21, 216BMC6, 216BMC8, 216BMC9, 216BMC94

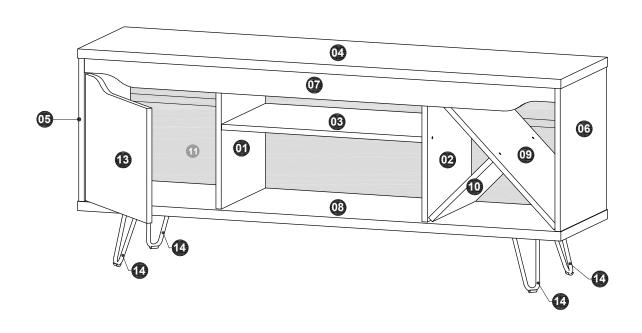

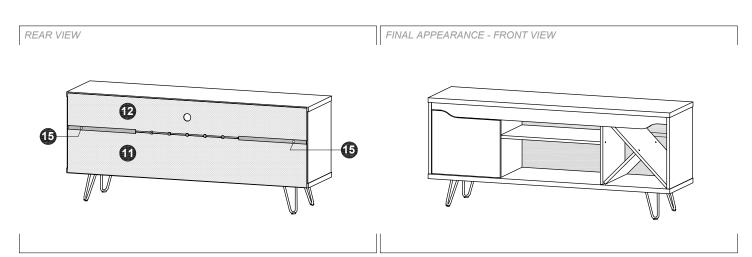


n.° ID	Parts Identification (Description)	Quantity
01	Left Partition	1
02	Right Partition	1
03	Middle Shelf	1
04	Top Panel	1
05	Left Side Panel	1
06	Right Side Panel	1
07	Front Frame	1
08	Base	1
09	Largest Part of the divider "T"	1
10	Smaller Part of the divider "T"	1
11	Lower Back Panel	1
12	Upper Back Panel	1
13	Door	1
14	Metallic Feet	4
15	Plastic Profile "H" 380mm	2


TOOLS NEEDED

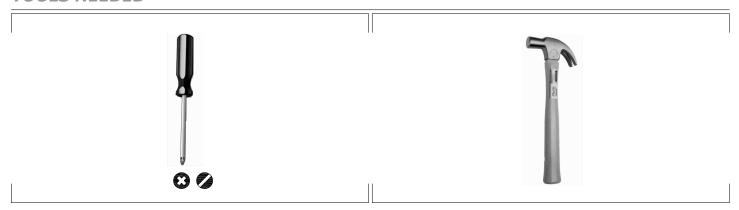

INCLUDED IN THE PACKAGE

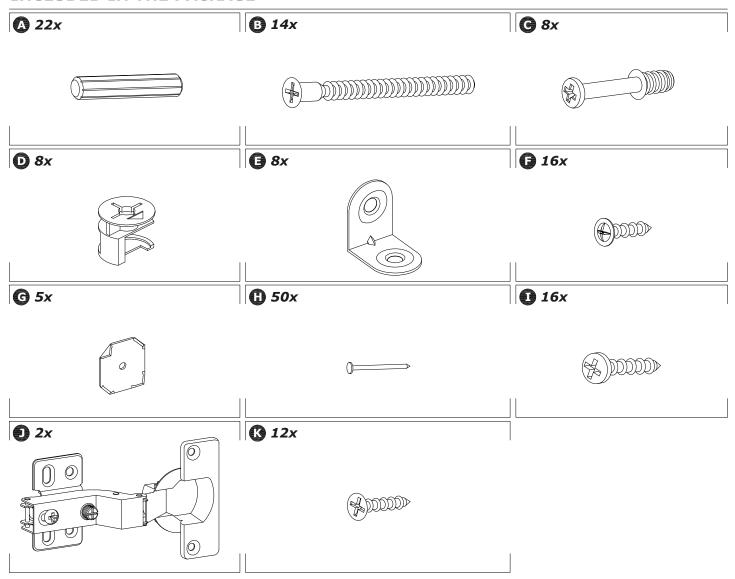


STEP 1

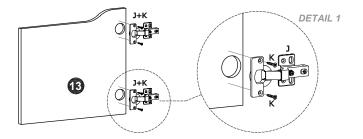


Preparing the door:
• Fix the hinges (J) in the Door (13) with bolts (K), as shown in DETAIL 1.


STEP 2

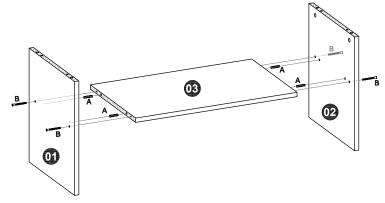

• Connect the Shelf (03) into Partitions (01) and (02) with dowels (A) and bolts (B).

STEP 3

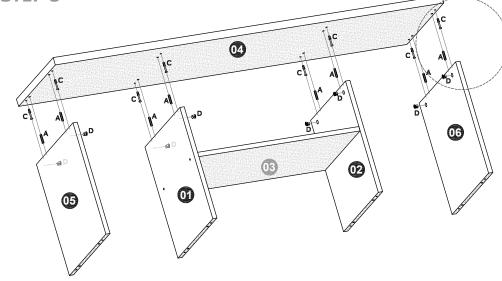





DETAIL 2


• Connect the Top Panel (04) onto the Partitions (01) and (02) and onto the Side Panels (05) and (06) using dowels (A) and the Minifix hardware (C + D), as shown in DETAIL 2.

STEP 4

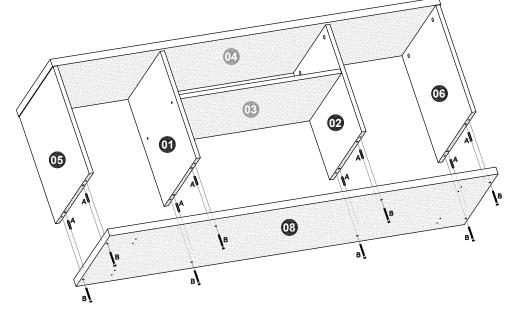



• Connect the Base (08) into the Partitions (01) and (02) and into the Side Panels (05) and (06) with dowels (A) and bolts (B).

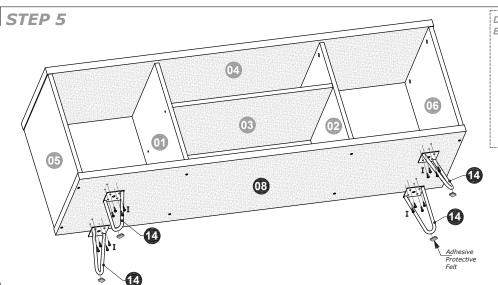




- Fix the metallic feet (14) under the Base (08) with bolts (I).
 Pay attention to the position of the feet, as shown in DETAIL 3.
- Apply the adhesive protective felt to the lower end of the feet (14).

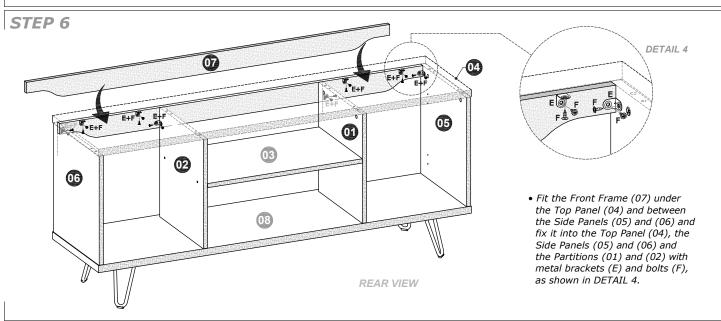

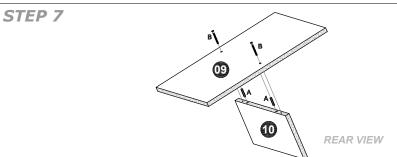

Assembling the divider "T":

• Connect the Largest Part (09) into the Smaller Part (10) with dowels (A) and bolts (B).

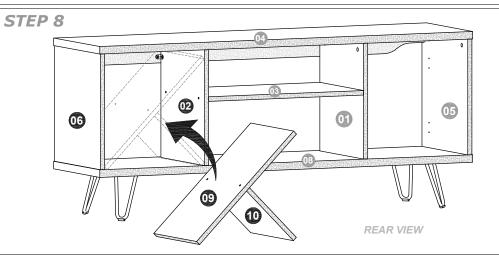


Installing the divider "T":

• Install the divider "T" (already assembled, according to STEP 07), fitting it through the rear of the rack between the Right Partition (02) and the Right Side Panel (06).

ATTENTION! This should always

ATTENTION! This should always be done before fasten the back panels of the rack (see STEP 9), unless you choose not to install the divisor "T" in the furniture.

STEP 9

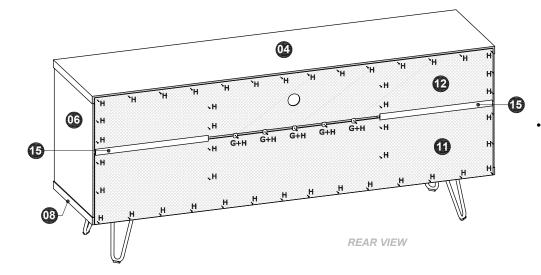

• Connect the Lower Back Panel (11) and the Upper Back Panel (12) with metal plates (G), nails (H) and Plastic Profiles (15), applying them to the positions shown in drawing.

STEP 10

