American WOODCRAFTERS Well Crafted Home Comfort


ASSEMBLY INSTRUCTION 6510-181 GENTLEMAN'S CHEST

High Point, NC 27263


BEFORE YOU START ASSEMBLING, PLEASE MAKE SURE ALL PARTS & HARDWARE ARE INCLUDE IN BOX :

NO	PARTS	QTY
1	GENTLEMAN'S CHEST	1 PC
2	BUNFEET	4 PCS



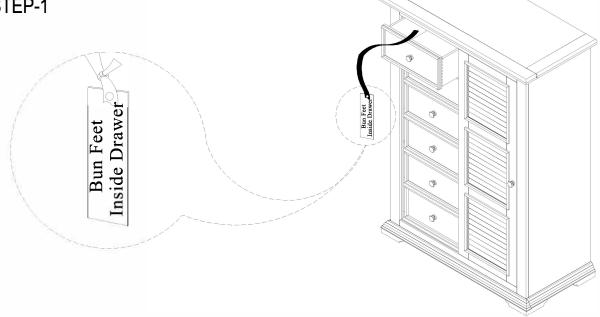

STEP-2

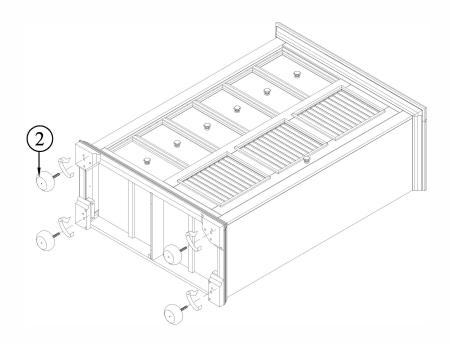

PAGE 1 OF 2

American WOODCRAFTERS Well Crafted Home Comfort

ASSEMBLY INSTRUCTION 6510-181 GENTLEMAN'S CHEST

High Point, NC 27263

BEFORE YOU START ASSEMBLING, PLEASE MAKE SURE ALL PARTS & HARDWARE ARE INCLUDE IN BOX:

NO	PARTS	QTY
1	GENTLEMAN'S CHEST	1 PC

NO	HARDWARE	QTY
Α	SCREW Ø8 x 2"	1 PC
В	SCREW Ø8 x 5/8"	1 PC
С	RESTRAINT STRAP	1 PC
D	BRACKET	2 PCS
Е	PLASTIC ANCHOR	1 PC

