


2800 / 2810 - 040 LANDSCAPE MIRROR

Assembly Instruction


A. Components :	Qty	B. Hardware :	Qty
1. Mirror	: 1 Pc	a. Bolt M6 x 40mm	: 8 Pcs
2. Dresser	: 1 Pc	b. Flat Washer	: 8 Pcs
3. Support Mirror	: 2 Pcs	c. Lock Washer	: 8 Pcs
		d. Allen Key 4mm	: 1 Pc

Part Detail

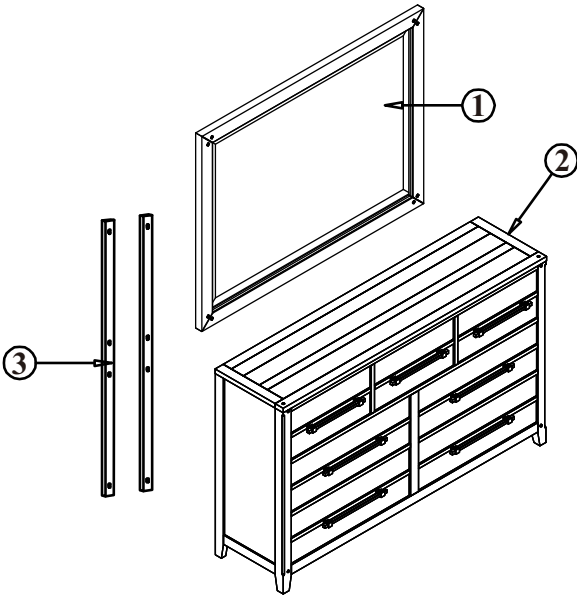


STEP - 1

MANDATORY

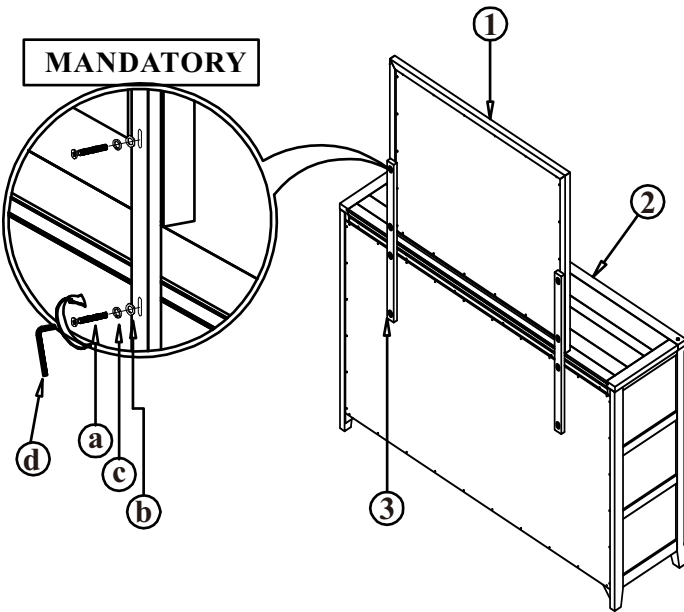

STEP - 2

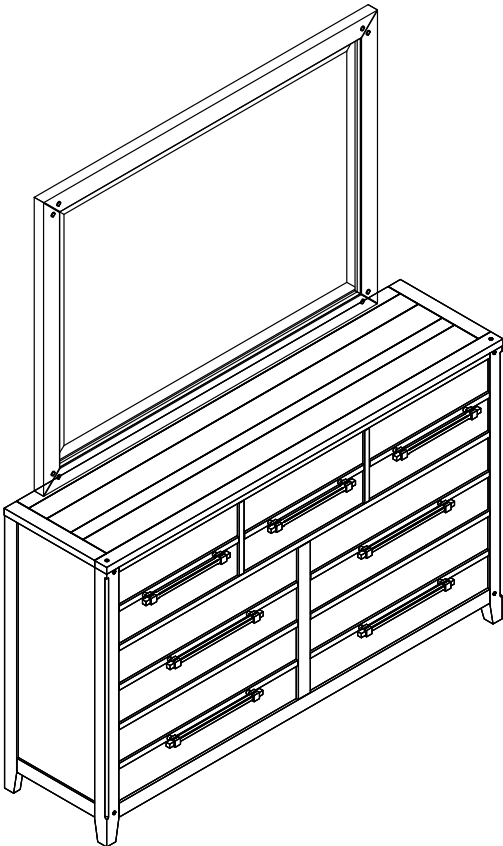

Assembly Completely