



2800 / 2810 Series

2800 / 2810 - 964 6/6 SLEIGH HEADBOARD (HB ONLY)
2800 / 2810 - 966 6/6 SLEIGH STORAGE FOOTBOARD
2800 / 2810 - 882 5/0 - 6/6 SLEIGH RAILS

Assembly Instruction

A. Components :	Qty			B. Hardware :	Qty
1. Sleigh Headboard (HB Only)	: 1 Pc	a	f	a. Bolt M6 x 50mm	: 8 Pcs
2. Sleigh Storage Footboard	: 1 Pc			b. Bolt M6 x 40mm	: 2 Pcs
3. HB Legs	: 2 Pcs	b	g	c. Flat Washer	: 10 Pcs
4. Stretcher	: 1 Pc			d. Lock Washer	: 10 Pcs
5. Bed	: 2 Pcs	c	h	e. Allen Key	: 1 Pc
6. Slat	: 15 Pcs			f. Bolt M8 x 100	: 8 Pcs
7. Slat Support	: 3 Pcs	d	i	g. Halfmoon Washer	: 8 Pcs
				h. Hexa Nut	: 8 Pcs
		e	j	i. Screw	: 8 Pcs
				j. Hexa Wrench	: 1 Pc
				C. Tool Required	
				1. Screw Driver = (not included)	
					

STEP - 1

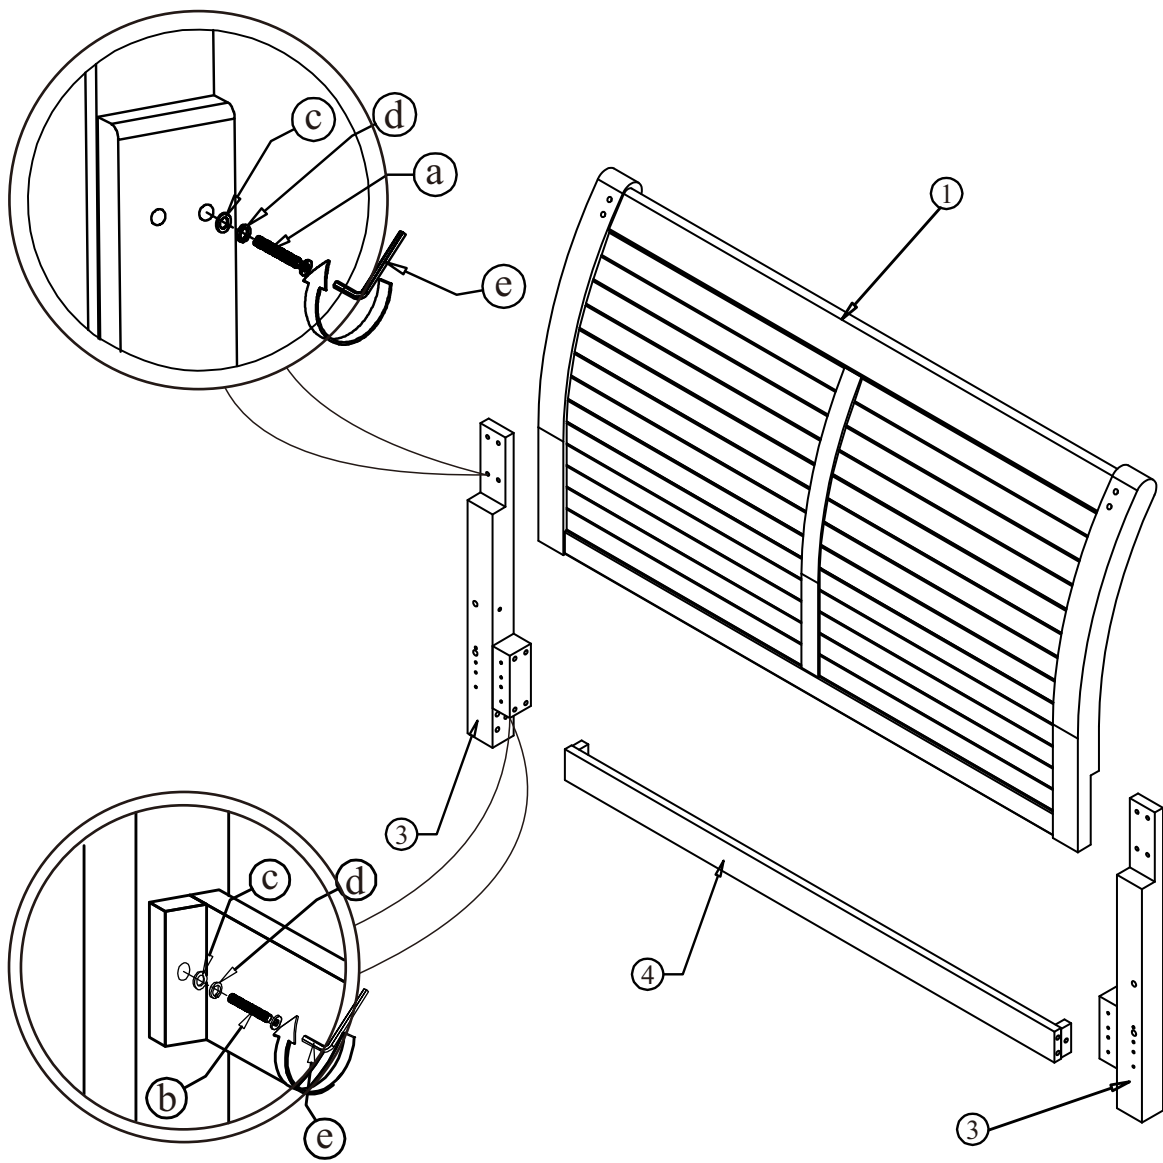


2800 / 2810 Series

American
WOODCRAFTERS
Well Crafted Home Comfort


- 2800 / 2810 - 964 6/6 SLEIGH HEADBOARD (HB ONLY)**
2800 / 2810 - 966 6/6 SLEIGH STORAGE FOOTBOARD
2800 / 2810 - 882 5/0 - 6/6 SLEIGH RAILS

Assembly Instruction

STEP - 2

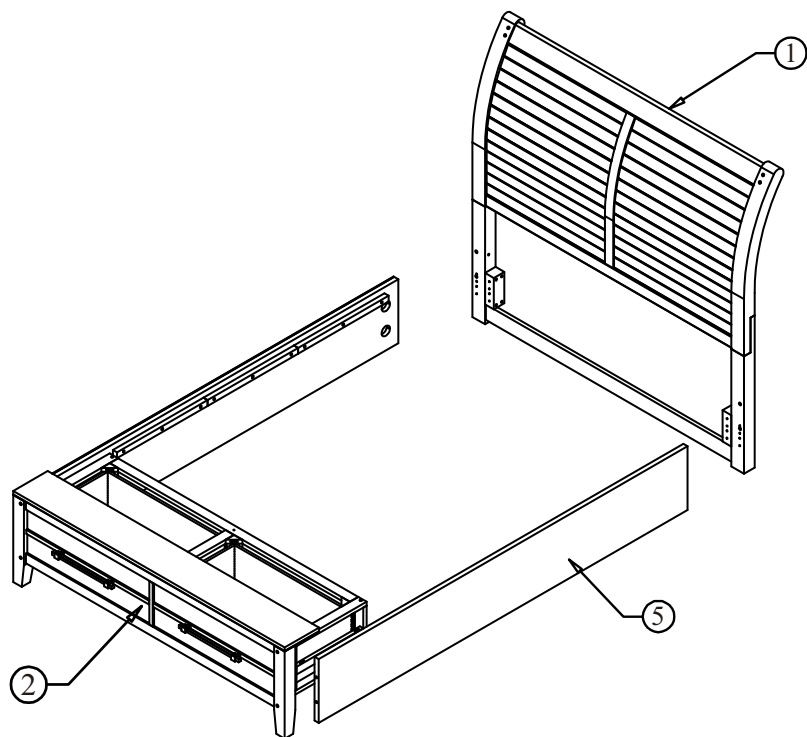


STEP - 3

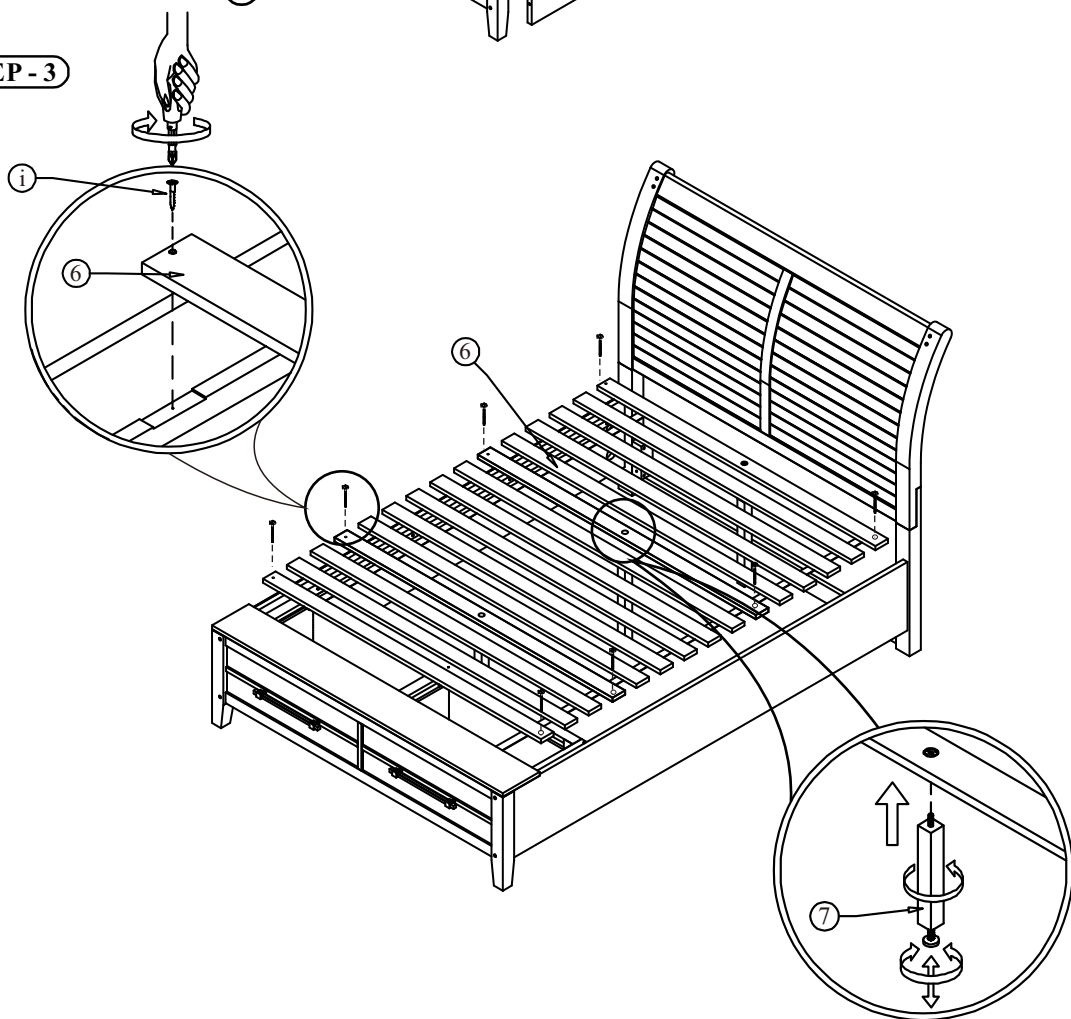

2800 / 2810 Series


- 2800 / 2810 - 964 6/6 SLEIGH HEADBOARD (HB ONLY)**
2800 / 2810 - 966 6/6 SLEIGH STORAGE FOOTBOARD
2800 / 2810 - 882 5/0 - 6/6 SLEIGH RAILS

CARTON 1

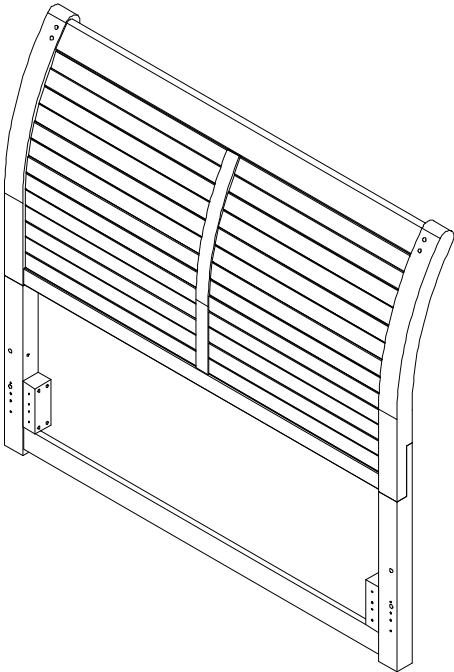

6/6 Sleigh Headboard (HB Only).....1 Pc


CARTON 2

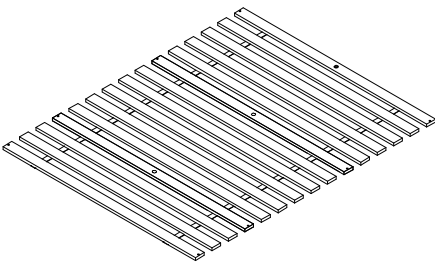

Slat.....15 Pcs




Slat Support.....3 Pcs

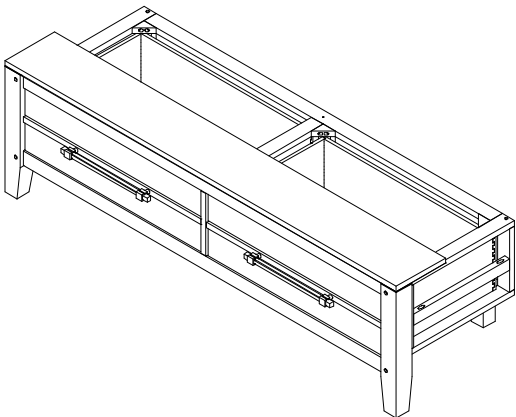

6/6 Storage Footboard.....1 Pc

CARTON 3

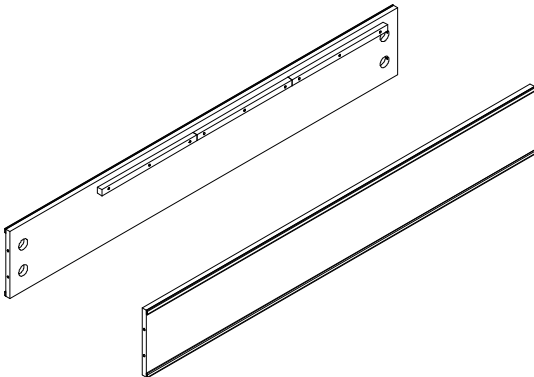

5/0 6/6 Sleigh Rails.....2 Pcs