




MANHATTAN
COMFORT

888-230-2225

help@manhattancomfort.com

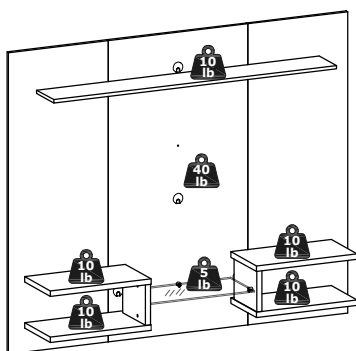

The indicated values consider static weights and evenly distributed over the parts.


Plaza Panel 64.25

Model # 224BMC1, 224BMC12, 224BMC2, 224BMC21, 224BMC6,
224BMC8, 224BMC9, 224BMC94




Ed. 002, 2019/07 - Manhattan Comfort.

INCLUDED IN THE PACKAGE

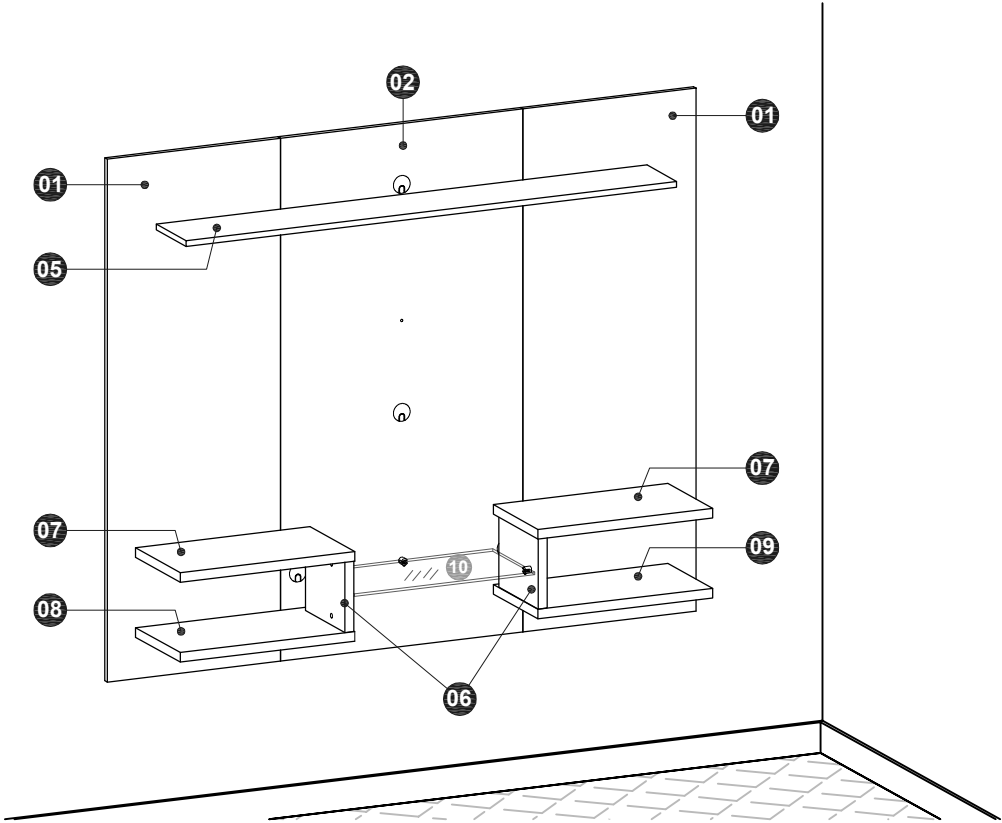



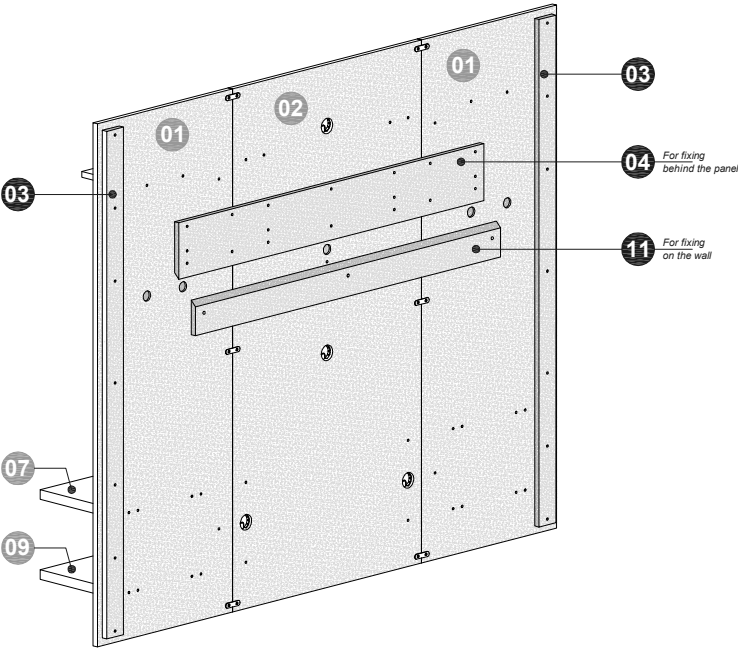

REAR VIEW




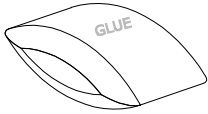

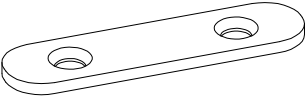

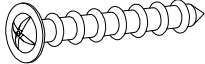
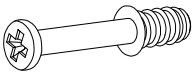
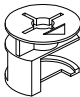
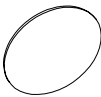

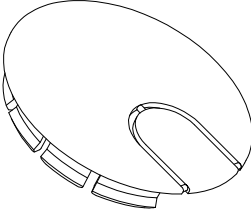
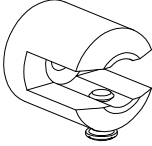

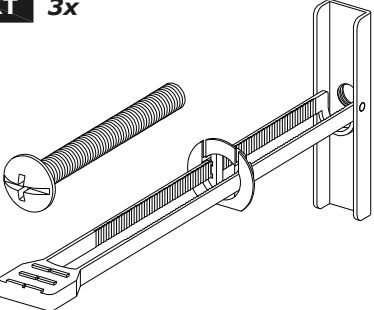
n.° ID	Parts Identification (Description)	Quantity
01	Left and Right Panel	2
02	Middle Panel	1
03	Rear Column	2
04	Upper Rear Bar	1
05	Upper Shelf	1
06	Left and Right Side Panel	2
07	Left and Right Top Panel	2
08	Left Base	1
09	Right Base	1
10	Glass Shelf	1
11	Bar for wall	1

TOOLS NEEDED

Simple and phillips screwdriver.	Simple hammer.	Level indicator.	Drilling machine and electric screwdriver with drill bit Ø1/2 inch and phillips tips.
			


! IMPORTANT! Two people are recommended to assemble this product.

INCLUDED IN THE PACKAGE

CA1 6x	SC 2x	CA2 18x
		
JC 6x	P2 12x	P30 27x
		
P6 4x	TM 4x	TFA1 4x
		
P10 18x	TPF 4x	SV 3x
		
P1 3x	FKT 3x	
		


STEP 1

- Line the floor with the foam mantle of the packing to protect the parts and arrange the Panels (01) and (02) with the rear face upwards, correctly checking the position of each according to the holes and as shown in the drawing.
- Align the edges of the Panels (01) and (02) and fix them together by applying the steel plates (JC) with bolts (P2), as shown in the DETAIL 1.
- Position the Rear Columns (03) behind the Panels (01) with dowels (CA1) according to the drawing, and fix them with bolts (P30).
- Fix Rear Bar (04), positioning it correctly behind the panels with dowels (CA1) and glue (SC) and applying the bolts (P30).

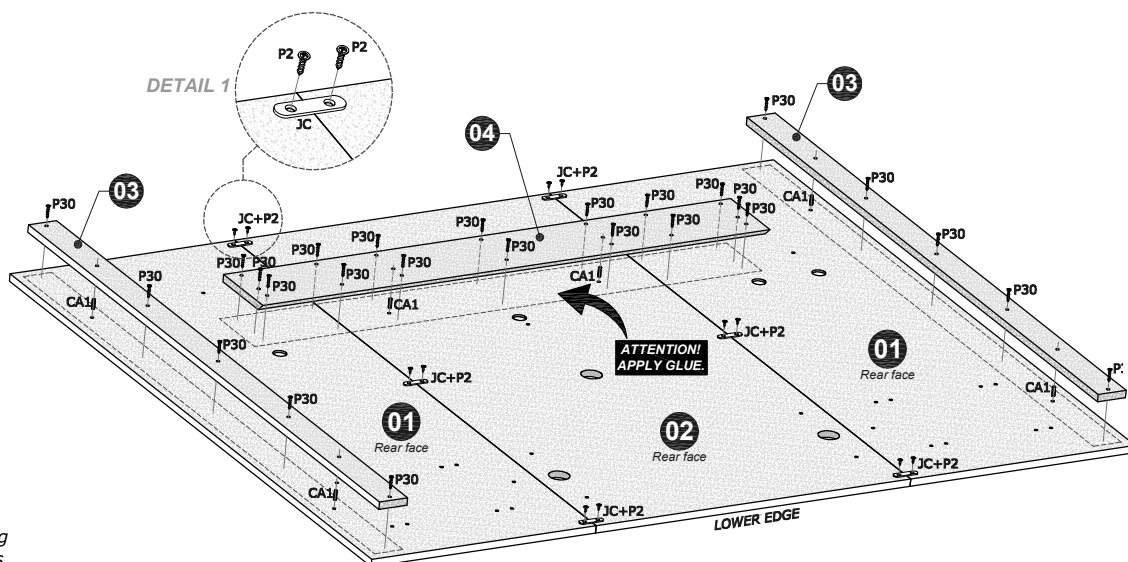


STEP 2

- Fix the Top Panel (07) and the Left Base (08) in the Side Panel (06) with dowels (CA2) and Minifix hardware (P6+TM), as shown in the DETAIL 2.
- Fix the Top Panel (07) and the Right Base (09) in the Side Panel (06) with dowels (CA2) and Minifix hardware (P6+TM).
- Fix the supports for glass (SV) in the Side Panels (06) with bolt (P1).

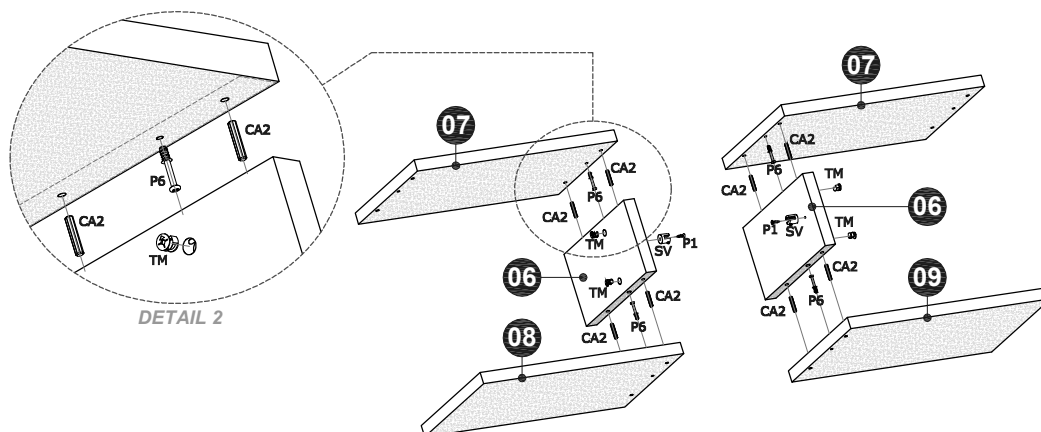

STEP 3


- Fix the Upper Shelf (05) in the Panels (01) and (02), applying dowels (CA2) and bolts (P10) in the indicated positions in the drawing.
- Fix the sets of Top Panel (07), Side Panel (06) and Left Base (08) and of Top Panel (07), Side Panel (06) and Right Base (09) in the Panels (01) and (02), applying dowels (CA2) and bolts (P10) in the indicated positions in the drawing.
- Fix the support for glass (SV) in the Middle Panel (02) with bolt (P1).

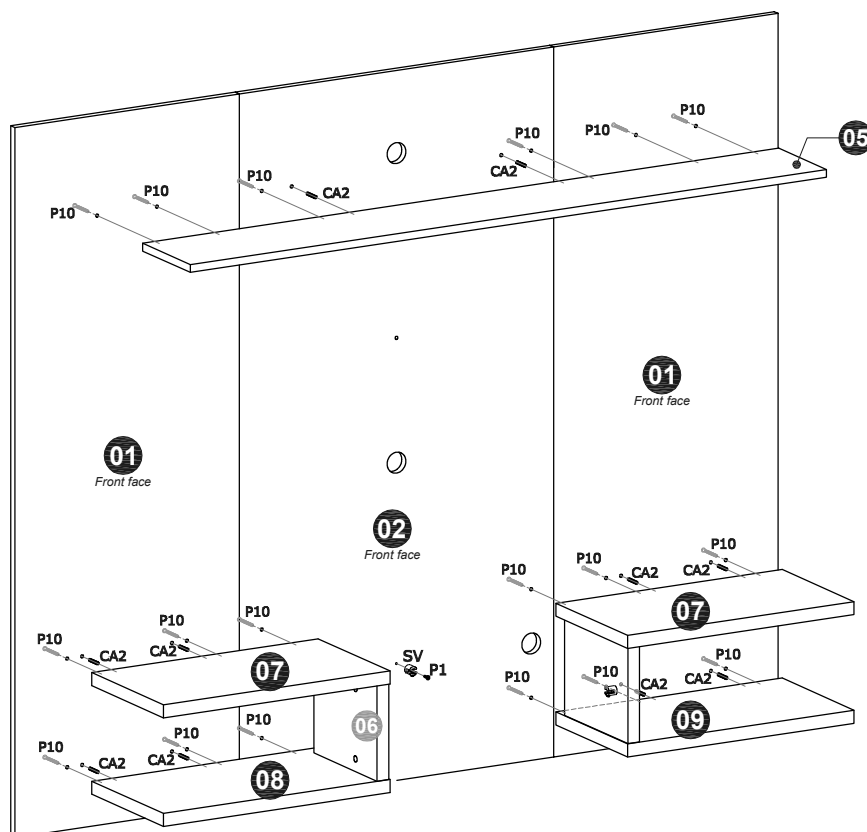


STEP 4

ATTENTION!

Before installing the panel, check the conditions of the wall for strength to properly support and anchor the weight of the suspended furniture, including equipment and objects that may be fixed to the panel. The Kap Toggle bushings (FKT) supplied with the product are for hollow walls or dry wall type. Check the type of wall on which the installation will be made and, if necessary, look for more suitable bushings or fastening systems. To mark the position and fix the Bar (11) on the wall, check the level of the part.

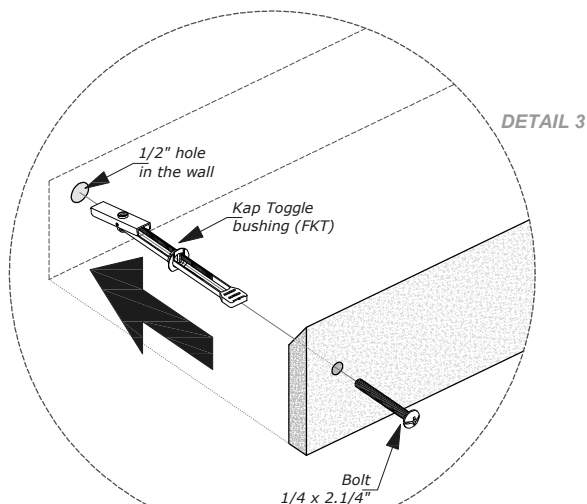

- Mark the position of the holes on the wall to fix the Bar (11), as shown in the drawing and using the bar itself as a reference.
- With drilling machine and drill bit Ø1/2 inch, make the holes in the wall.
- Apply the bushings (FKT) into the holes in the wall and fix the Bar (11) with the bevelled edge facing up and to the wall, applying the bolts 1/4 x 2.1/4" as indicated in the drawing.

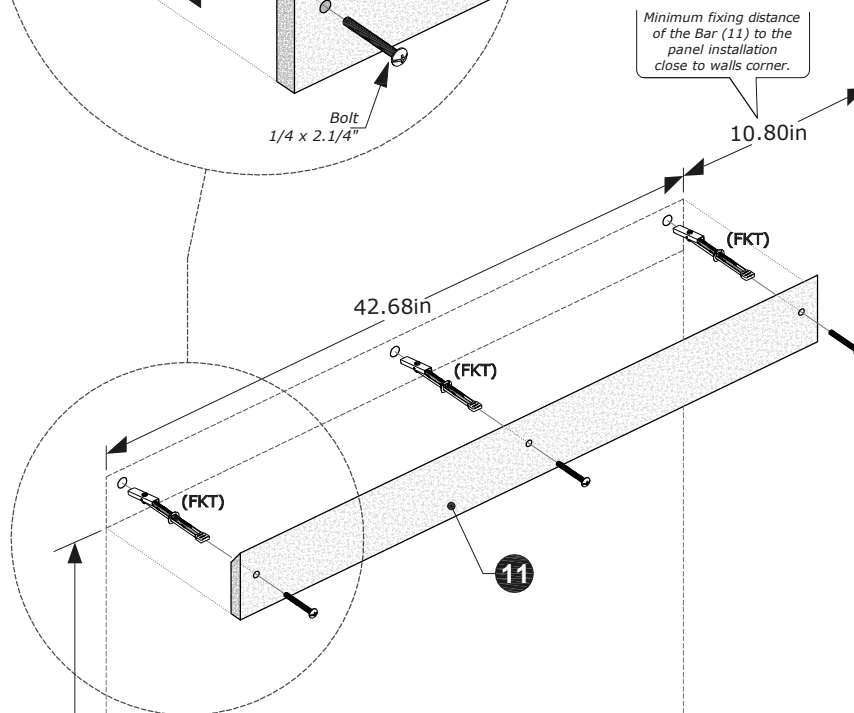


*The height of 50.00 inches (1270mm) indicated in the drawing, between the floor and the lower edge of the Bar (11) is only suggestive to install the Panel with its lower edge at approximately 17.32 inches (440mm) from the floor.

*50.00in

WALL
FLOOR

STEP 5

- With the Panel already assembled, fit the Bar (04) fixed behind the panel in the Bar (11) fixed on the wall.

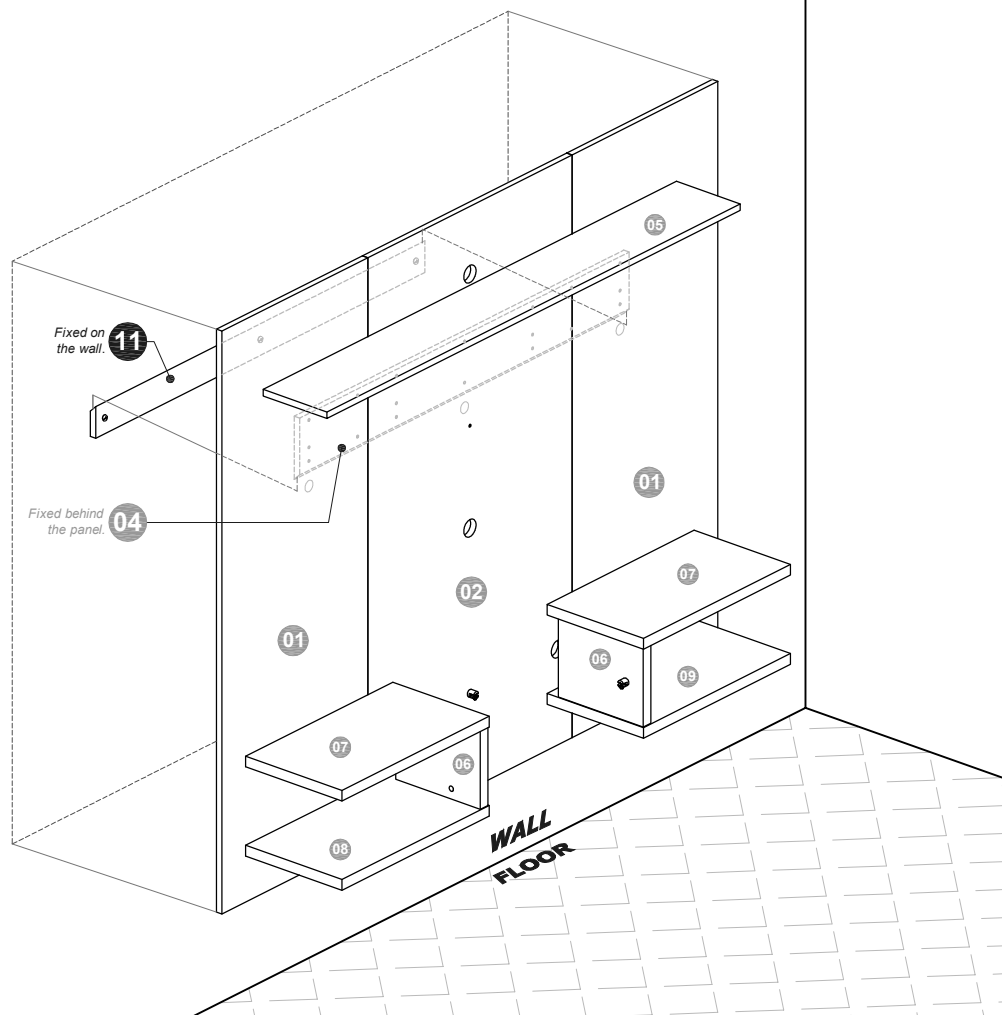

STEP 6

- At the end of the installation, apply the security bolt (P30) in the indicated hole, to fix the Middle Panel (02) in the Bar (11) on the wall and prevent movement and accidentally dropping the panel.
- Insert the plastic covers into the holes for pass wires.
- Insert the Glass Shelf (10) in the supports (SV) already fixed in the Side Panels (06) and in the Middle Panel (02) and tighten the bolt of each support.

IMPORTANT! To remove the panel from the wall, to unscrew the security bolt (P30) applied as in STEP 06 and moving it upwards slightly so as to disengage the chamfered edges of the Bars (04) and (11) fixed behind the panel and on the wall. Before moving the panel, remove TV and other objects that are installed and ensure that the entire set is safe, preventing falls and damage to the panel and equipment.

