




MANHATTAN
COMFORT

108GMC

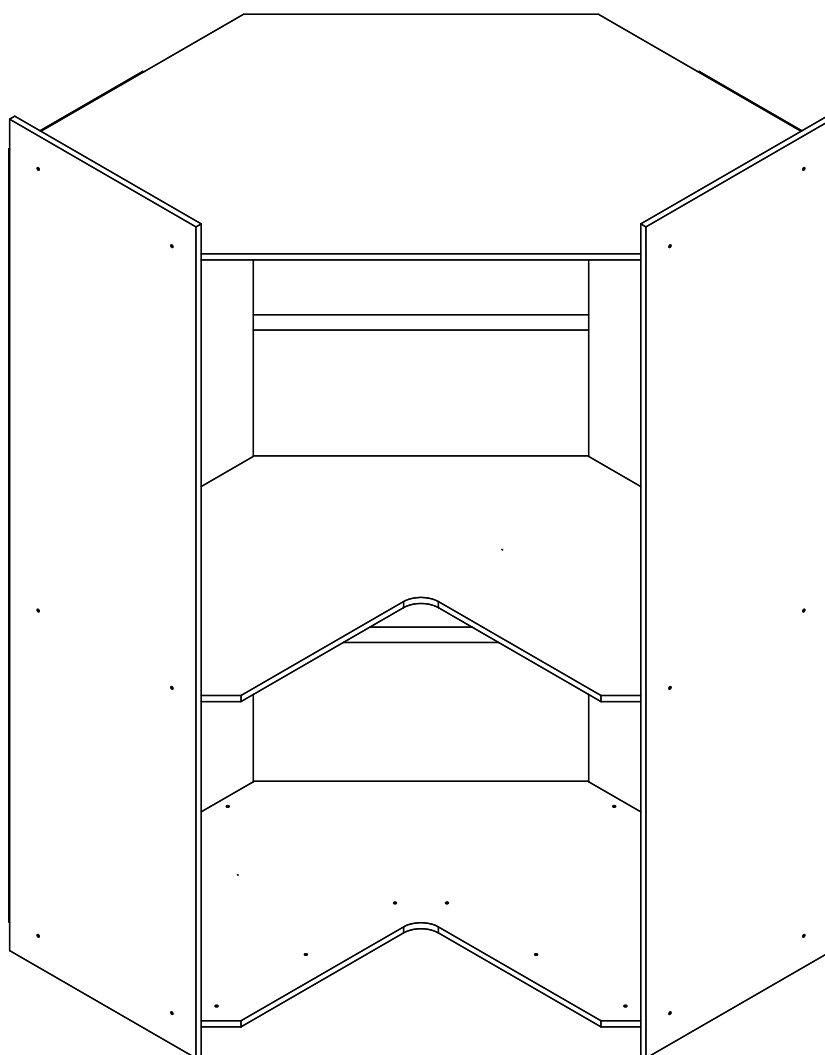

V.09302023







STOP!

Before beginning the assembly process, ensure all boxes and parts have been delivered.


ATTENTION: BEFORE START ASSEMBLING TAKE A PICTURE OF THE LABELS ON THE PACKAGES, THIS WILL BE REQUIRED IN CASE THE PRODUCT HAS ANY ASSISTANCE DEMAND.

FOR BEST RESULTS:

- Do not throw away packaging materials until assembly is complete.
- Assemble item on a soft surface, such as cardboard or carpet, to protect finish.
- Proper assembly requires two people.

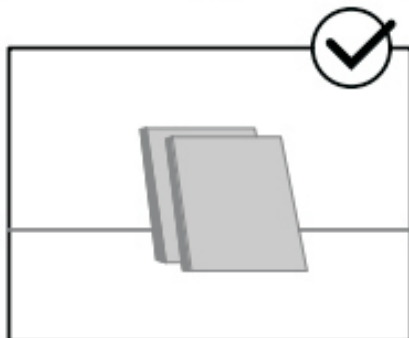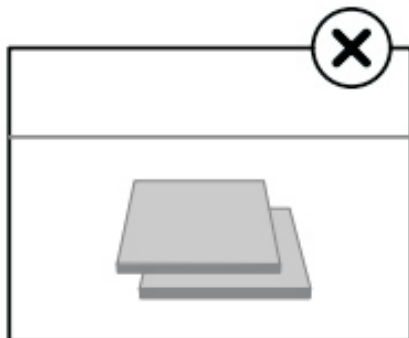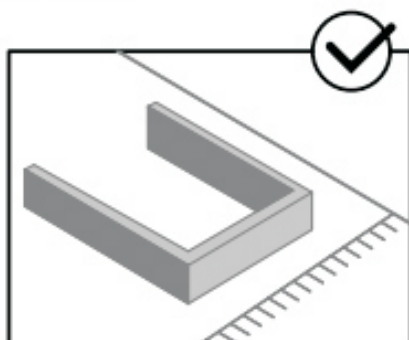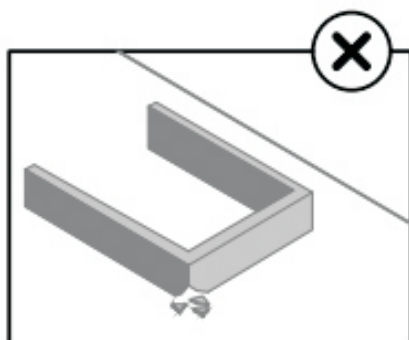

TOOLS REQUIRED

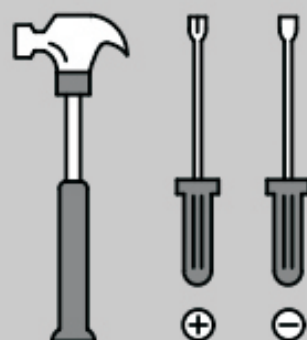

SUPPORT SITE



View our assembly video online
WWW.MANHATTANCOMFORT.COM




Stuck? Question? We are here to help.
tel: **908-888-0818**
e-mail: **help@manhattancomfort.com**





Included in the package

03

- 01 - Base Panel = 01 piece (box 1/2)
- 02 - Shelf Panel = 01 piece (box 1/2)
- 03 - Top Panel = 01 piece (box 1/2)
- 04 - Left Side Panel = 01 piece (box 2/2)
- 05 - Right Side Panel = 01 piece (box 2/2)
- 06 - Lower Bar = 04 pieces (box 2/2)
- 07 - Lower Lateral Panel = 02 pieces (box 2/2)
- 08 - Upper Lateral Panel = 02 pieces (box 1/2)
- 09 - Larger Rear Panel = 02 pieces (box 2/2)
- 10 - Smaller Rear Panel = 05 pieces (box 2/2)
- 11 - Union Plastic Profile = 04 pieces (box 1/2)
- 12 - Aluminum Hanger Bar = 02 pieces (box 1/2)

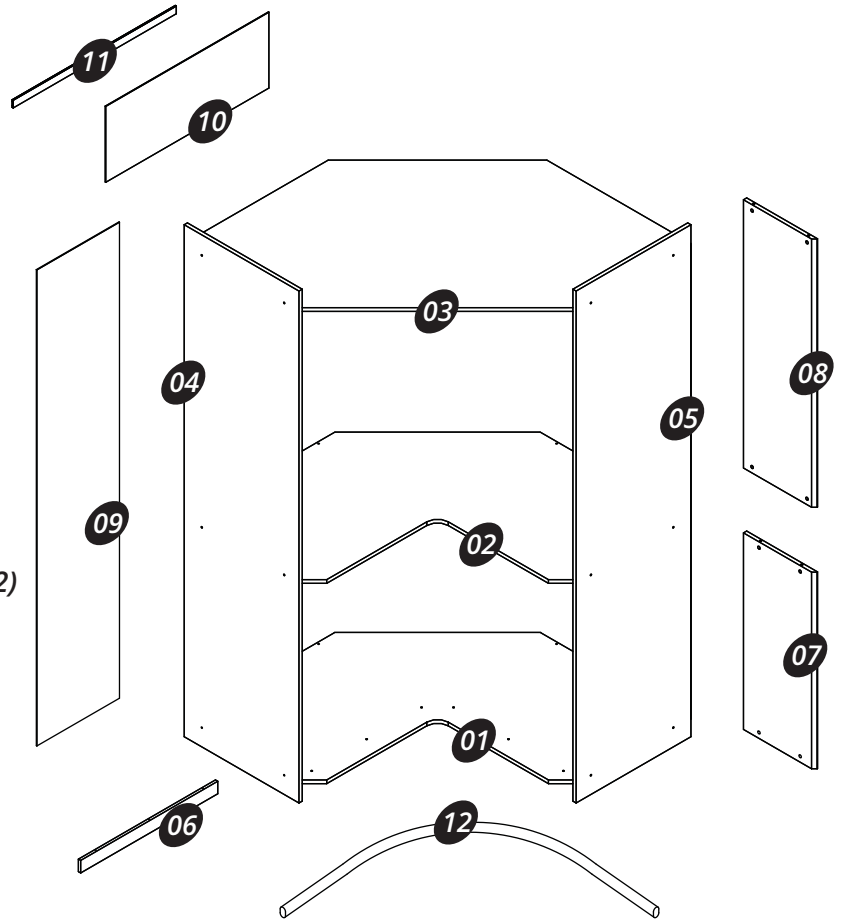

Hardware (box 1/2)

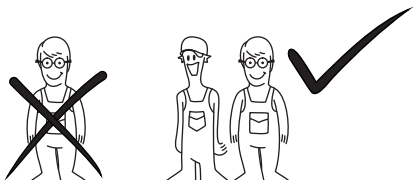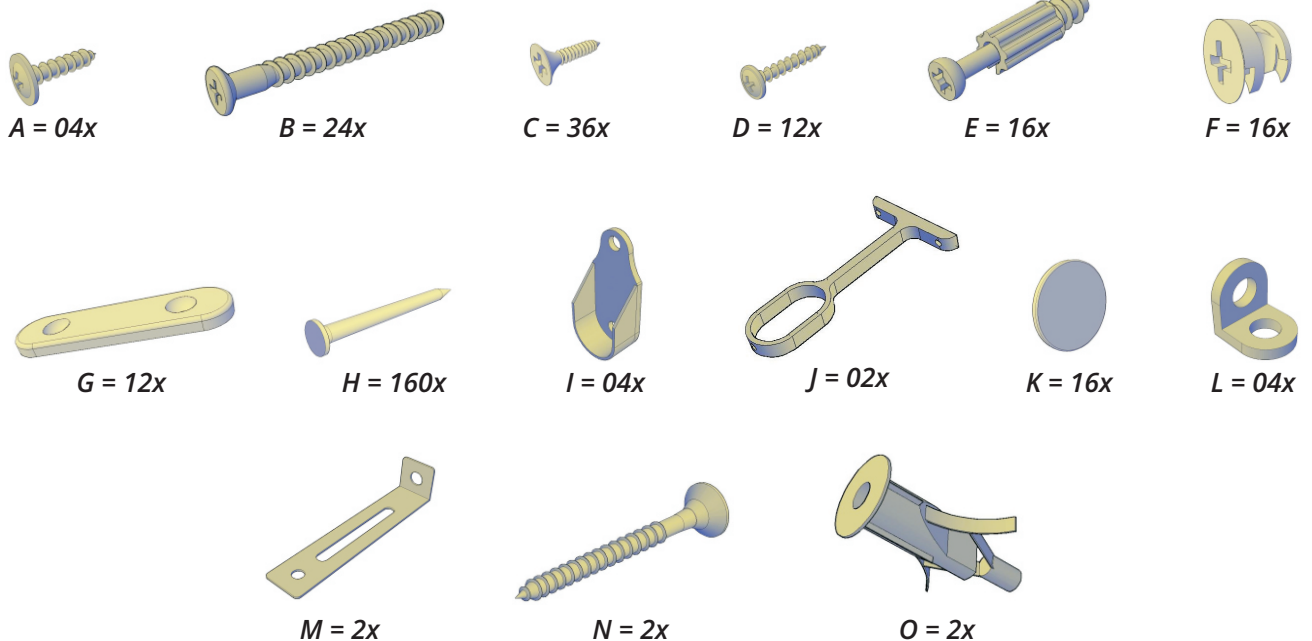


Tools needed
(not included)




Philips screw driver

Screw driver

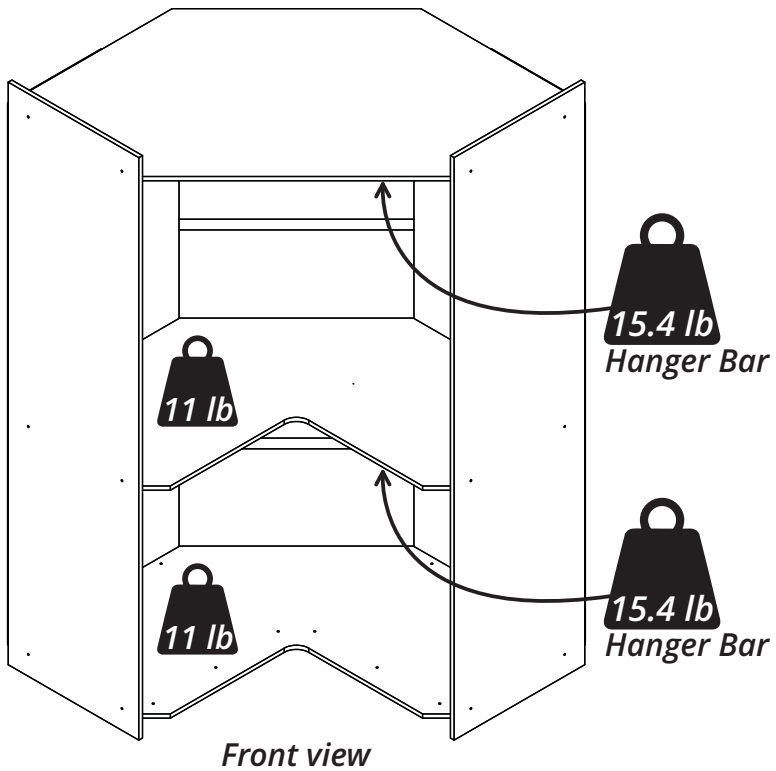


Front view




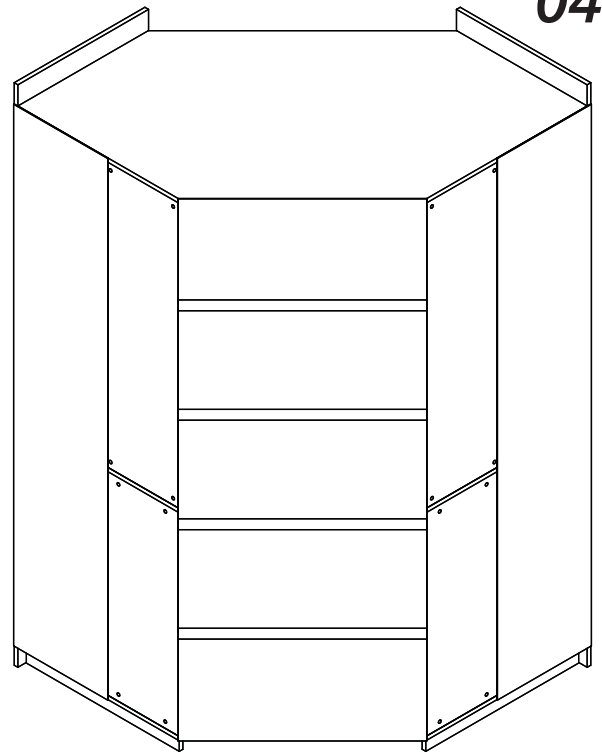


Rear view


Step 01

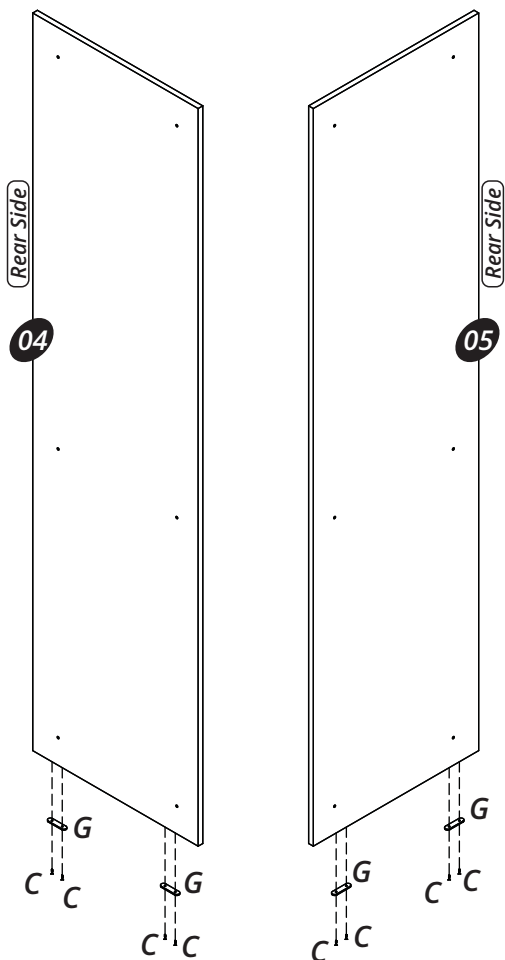

Fix the hardware (G) onto the part (04), onto the part (05) and the part (06) with the hardware (C).

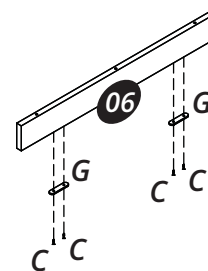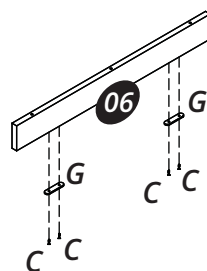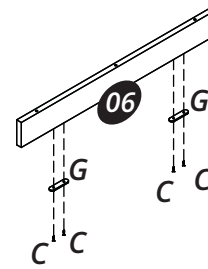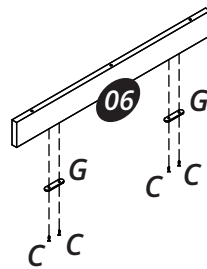


Step 02

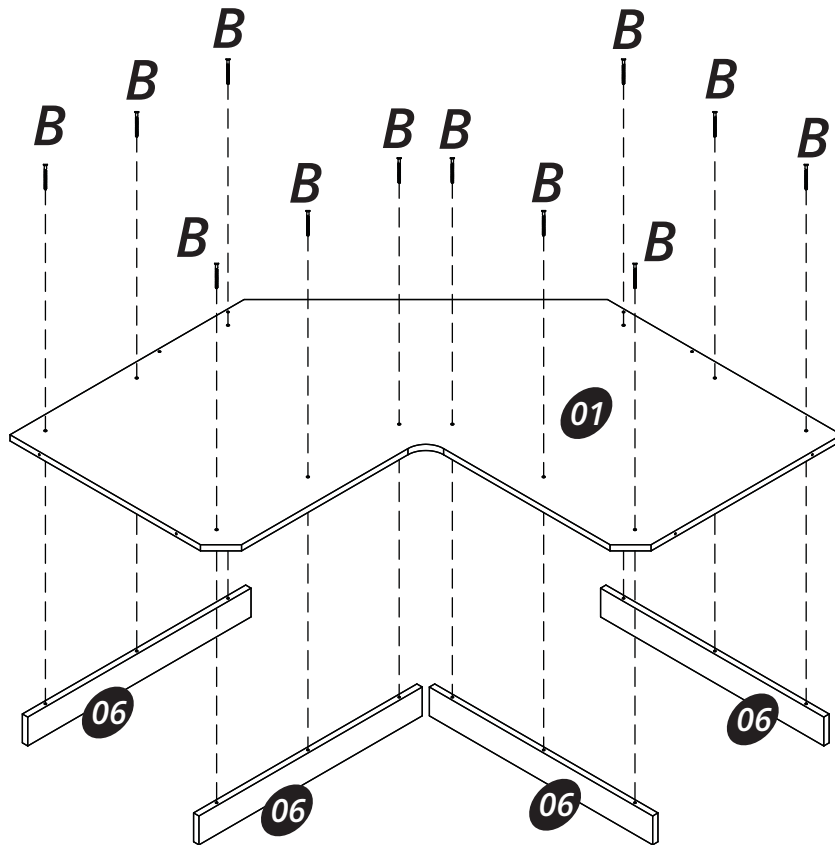


Connect the part (01)
onto the part (06) with
the hardware (B).

Step 03

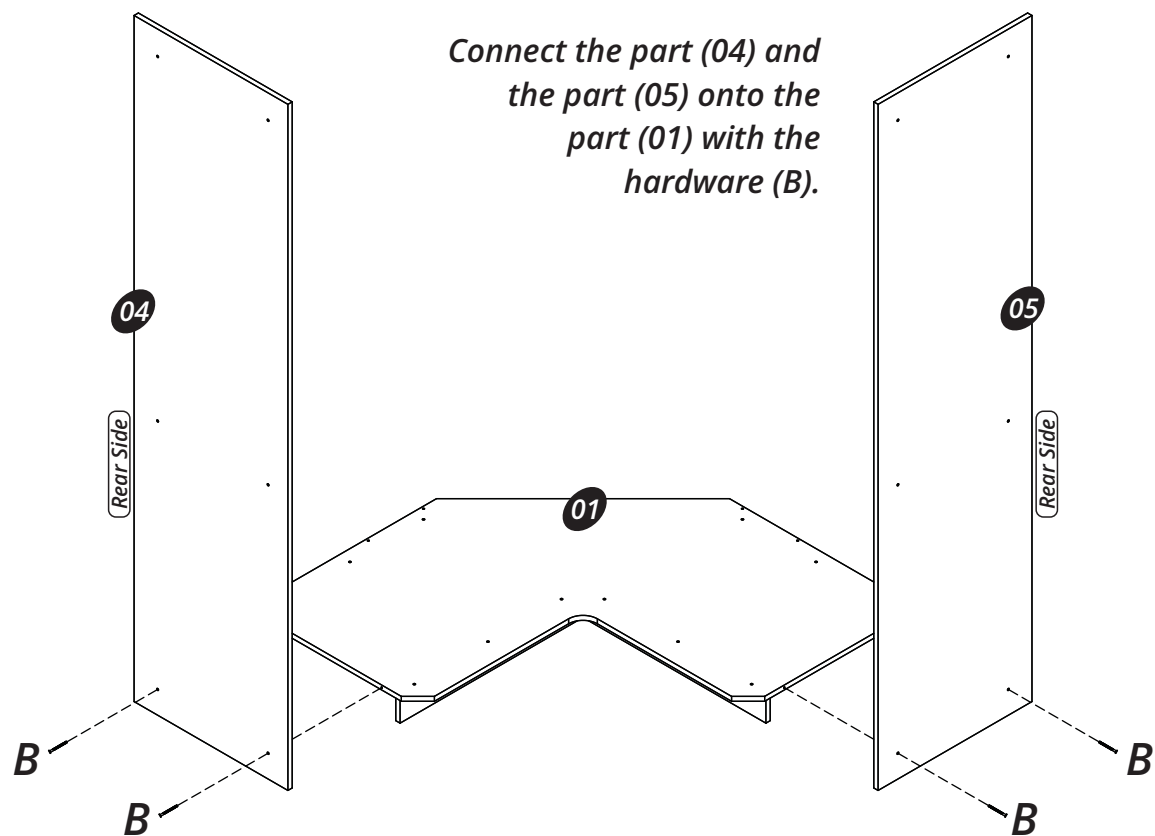


Connect the part (04) and
the part (05) onto the
part (01) with the
hardware (B).

Step 04

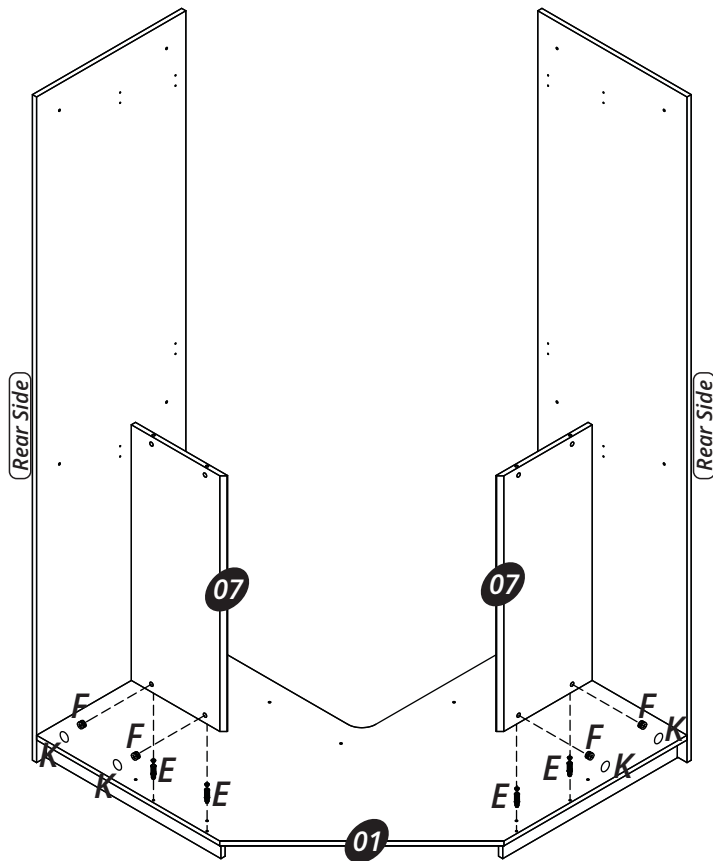


Connect the part (07) onto the part (01) with the hardware (E + F). Apply the hardware (K) on the hardware (F).


Pay attention to the correct position of the edges of the parts (07).

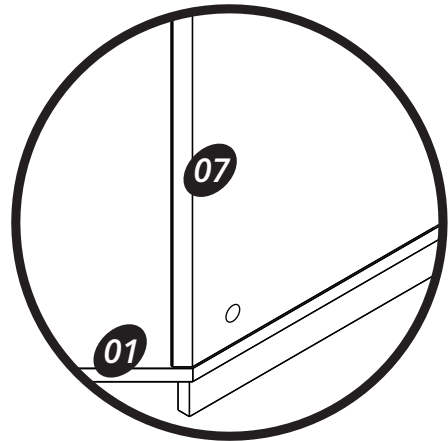


Step 05

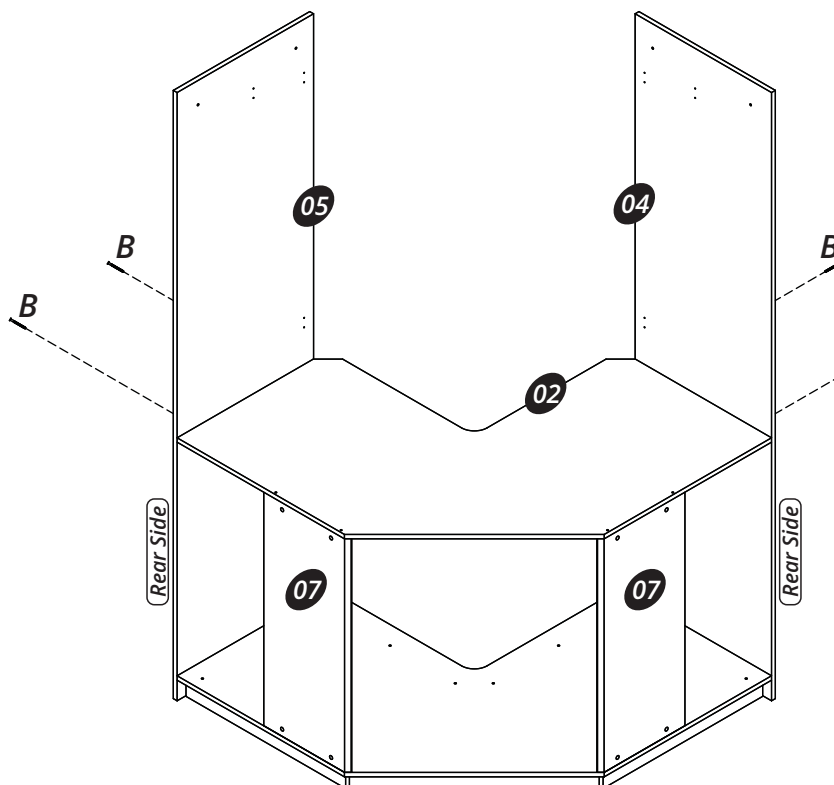


Connect the part (07) onto the part (02) with the hardware (E + F). Apply the hardware (K) on the hardware (F). Connect the part (02) onto the parts (04) and (05) with the hardware (B).

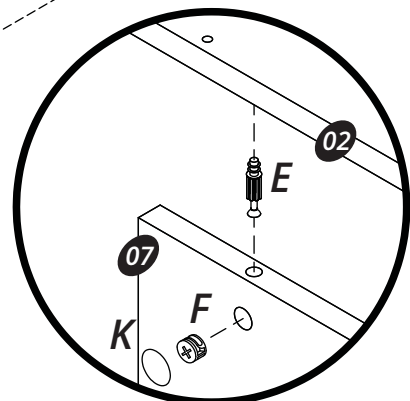

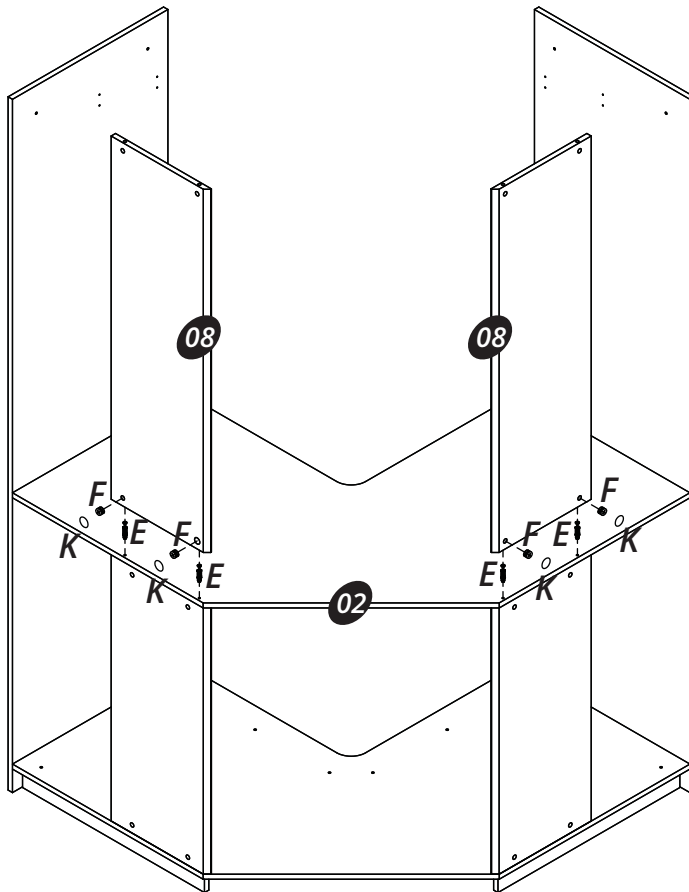


Connect the part (08) onto the part (02) with the hardware (E + F)
Apply the hardware (K) on the hardware (F).


Pay attention to the correct position of the edges of the parts (08).

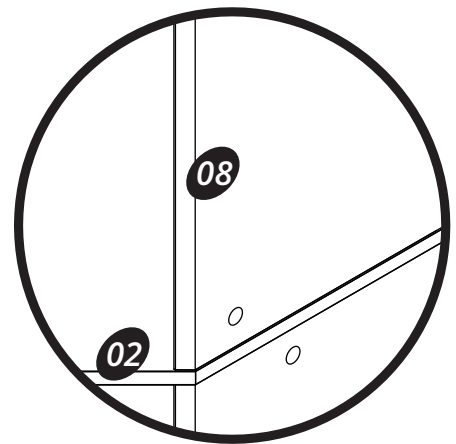


Step 07

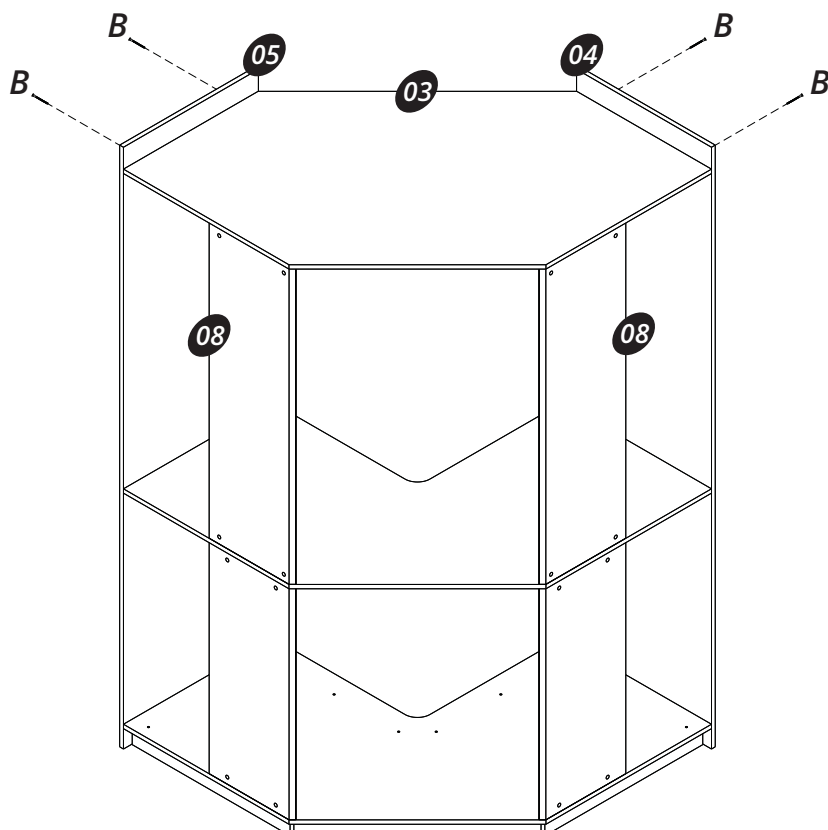


Connect the part (08) onto the part (03) with hardware (E + F). Apply the hardware (K) on the hardware (F).
Connect the part (03) onto the parts (04) and (05) with the hardware (B).

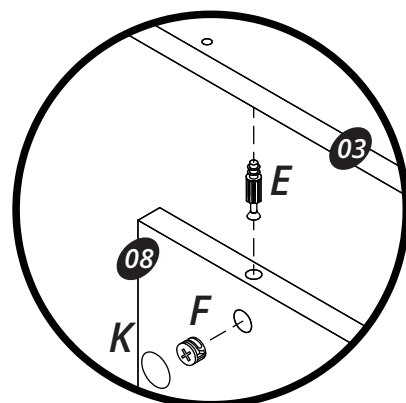

Connect the part (09)
with the hardware (H).

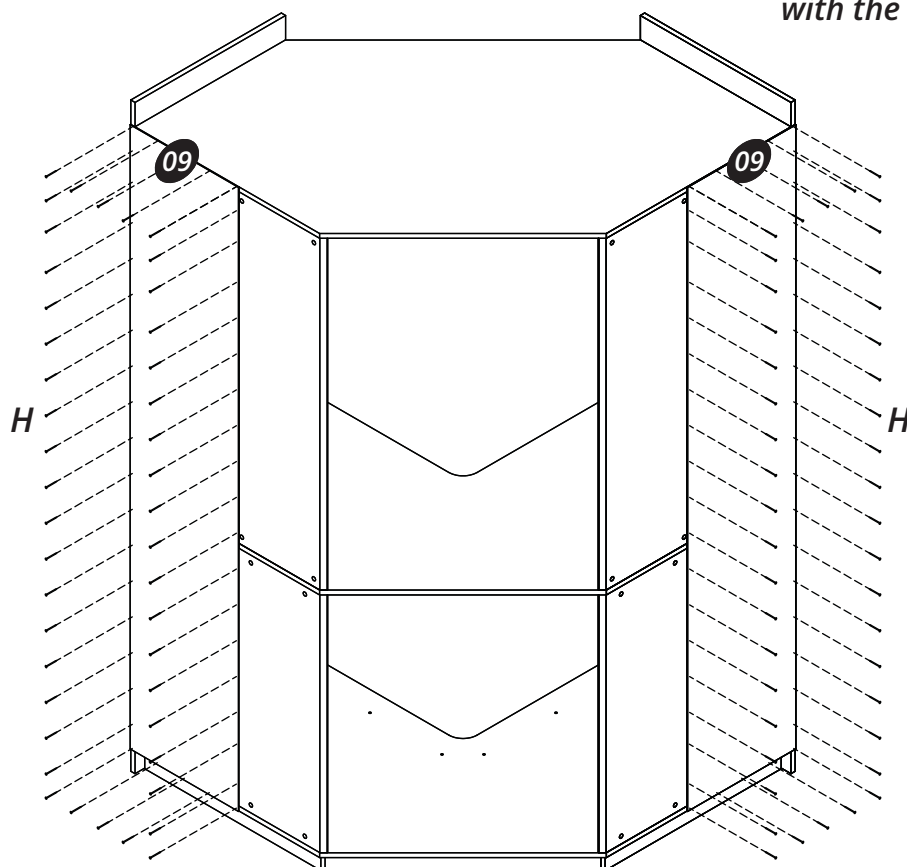


Connect the part (10)
with the part (11)
and the hardware (H).

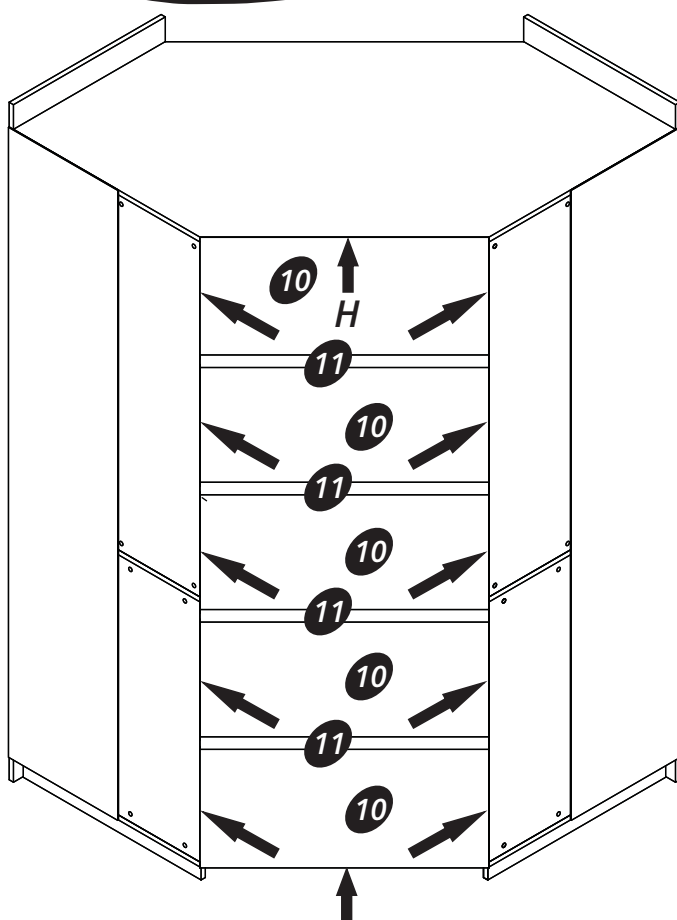

Step 10



Fix the hardware (I) onto the part (04) and the part (05) with the hardware (C).
Remember to fix the hardware (C) only in the hole like in the figure.

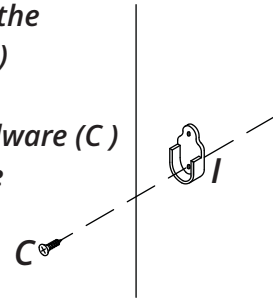

04

05



Insert the hardware (J) through the part (12) before fix the Hardware (J) onto the part (02) and the part (03) with the hardware (A).

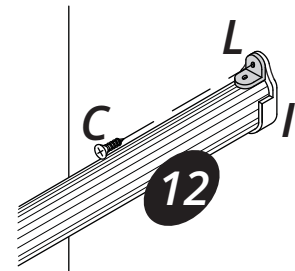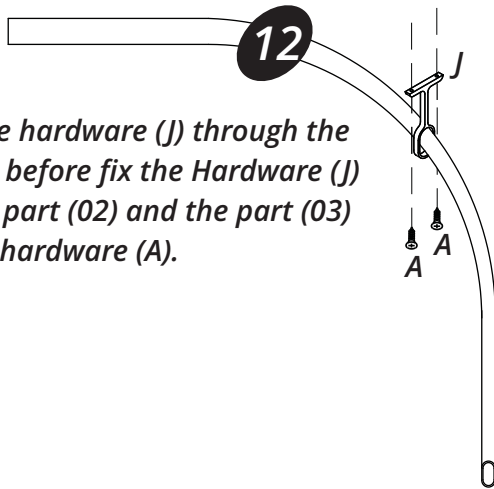


Fix the hardware (L) onto the hardware (I) with the hardware (C) after install the part (12).


Step 11


If you assembly the Mulberry Corner Wardrobe with the Mulberry Side Wardrobe you must have to fit them with screws (D).

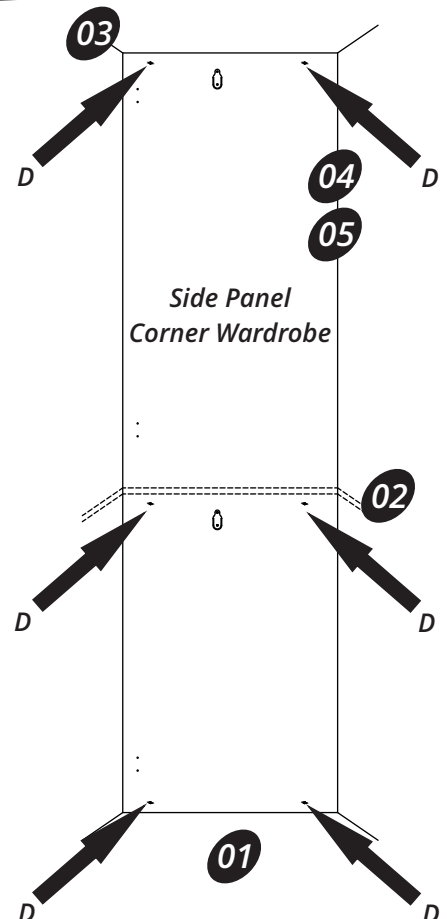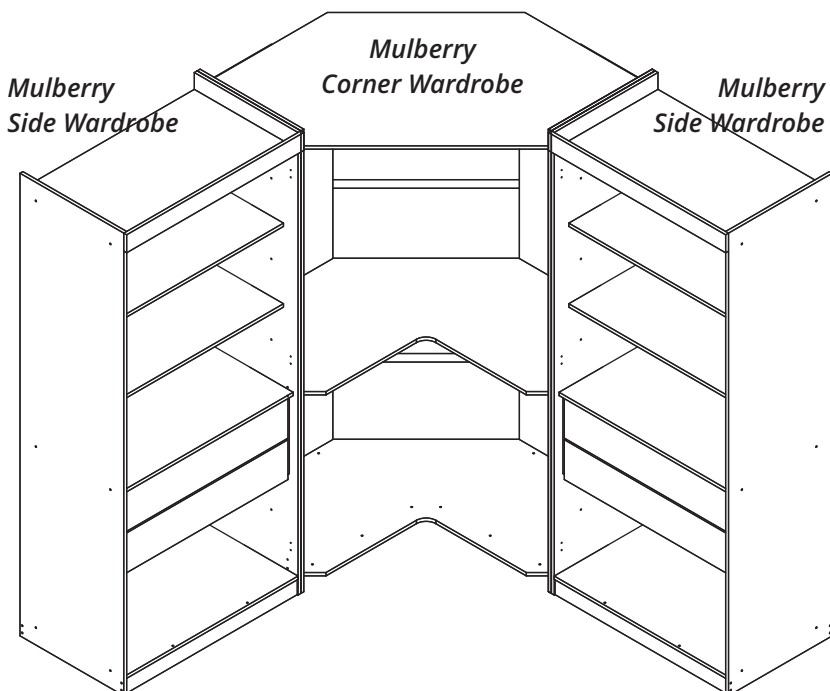


Attention! Tipover System

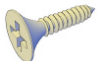

C = 04x

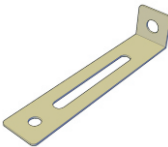
M = 02x

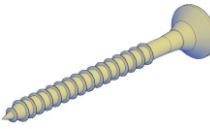

N = 02x

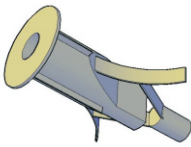
O = 02x

wall

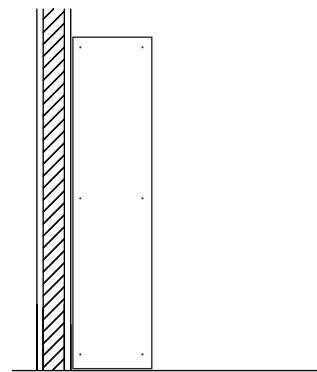


First, approach as close as possible to the wall

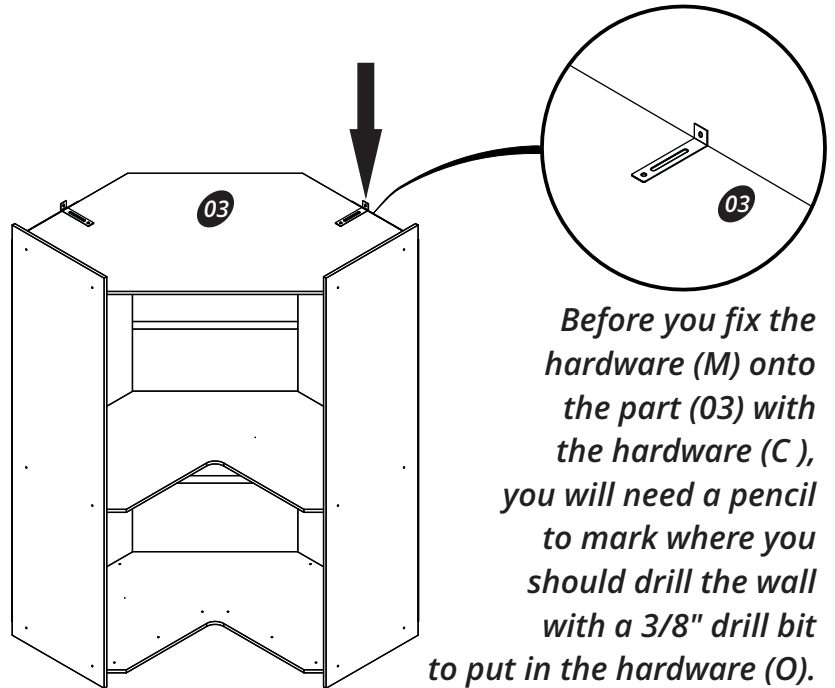


Before you fix the hardware (M) onto the part (03) with the hardware (C), you will need a pencil to mark where you should drill the wall with a 3/8" drill bit to put in the hardware (O).

*press the hardware wings (O) to put in the hole that you drilled in the wall.

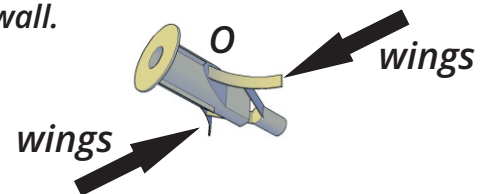

Hardware (O), plugged in the wall.

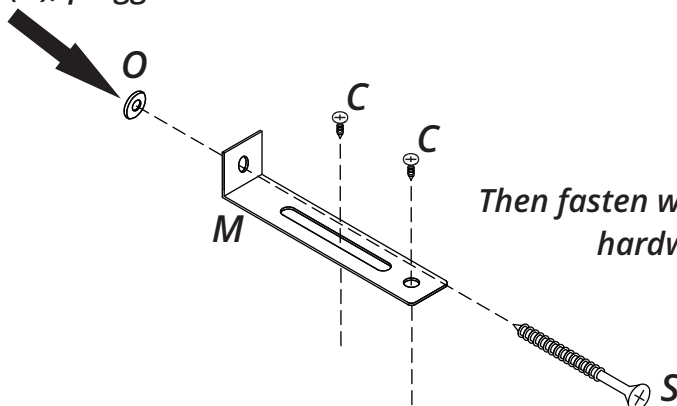

Then fasten with the hardware (C) the hardware (M) on the part (03)



MANHATTAN COMFORT

WARRANTY POLICY

All Manhattan Comfort furniture products are warranted, to the original purchaser at the time of purchase and for a period of 30 days thereafter.

Our warranty is limited to new products purchased in factory sealed cartons. This warranty is valid in the United States of America and Canada.

In order to provide you with timely assistance, please thoroughly inspect your furniture for missing or defective parts immediately after opening the carton.

Manhattan Comfort offers a 30-day parts replacement warranty on all items.

Our furniture products are no intended for outdoor use.

THE WARRANTY DOES NOT COVER:

- Defects/damages by improper assembly or disassembly.
- Defects/damages caused by shipping. Claims for damage during transit should be placed immediately to the transportation company.
- Defects/damages caused by inappropriate use of the furniture.



319 Ridge Rd. Dayton, NJ 08810
908-888-0818